


MD38 Body Camera

Manual v1.1.3

Note: Please read the manual carefully before using.

Please abide by local laws and do not use this product for any illegal purpose. All consequences shall be borne by yourself.

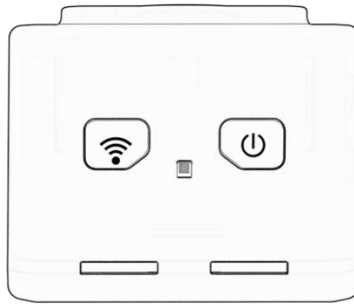

Button introduction:

 -Power button: Press the button 2 seconds to power on or power off

WIFI Switch: Press the button 2 seconds to on or off

R-Reset Button

Indicator Lights:

Blue Light - Recording Indicator Light: When recording, the blue light flashes; when in standby mode, the blue light stays on.

Red Light - Charging Indicator Light: When charging, the red light flashes. The red light turns off when fully charged.

Green Light - WIFI Indicator Light: When the green light is on, WIFI is enabled; when the green light is off, WIFI is disabled.

Note:

- 1) Before using the device, insert a normal memory card (TF card) firstly.
- 2) The device memory card must be 8GB or above. Data can't be saved normally less than 8GB memory .
- 3) After power on, it will automatically enter video mode.
- 4) After the WIFI is turned on, the recording will be paused, and it can be operated within the APP.

Charging:

This device is equipped with a rechargeable lithium battery. When the battery is low, you can connect it to a charger for charging

Note: Please use a 5V 1A charger;

The red light is on when charging, and it goes off when fully charged.

One. Product operation:

1. Video:

Video: Press the power button for 2 seconds to turn on the device. After turning on, the blue light flashes slowly to enter video recording mode.

Save: While recording, click the power button once to stop and save the recording, the blue light will be on, and the device will return to standby mode.

One paragraph, 5 minutes, support loop recording.

2. Record with charging:

When the device is turned off, connect it to a charger. The blue light flashes, the device is recording normally. Press the power button once to stop and save the video.

Note: It is not possible to record while charging when the device is connected to a computer.

3. Reset:

In case of system error or malfunctioning, need to reset the device.

Method:

Press the reset button(R) to reset.

4. Time setting:

When the APP connects to the device, it will synchronize the correct time.

Two. WIFI Hot spot Connection Instructions:

1. APP Download : Scan the QR code below to install, or search for "Viidure" on Google Play or the App Store to download and install.




2. Turn on the WIFI: After the device is powered on, press the Wifi button for 2 seconds. When the green light is on, the WIFI is turned on.

3. Click to add the device: Select the device hotspot: DV-MD38-XXXX, and the initial password is: 12345678.

Note:

If you forget the WIFI password of the device, you can reset it to restore the default password.

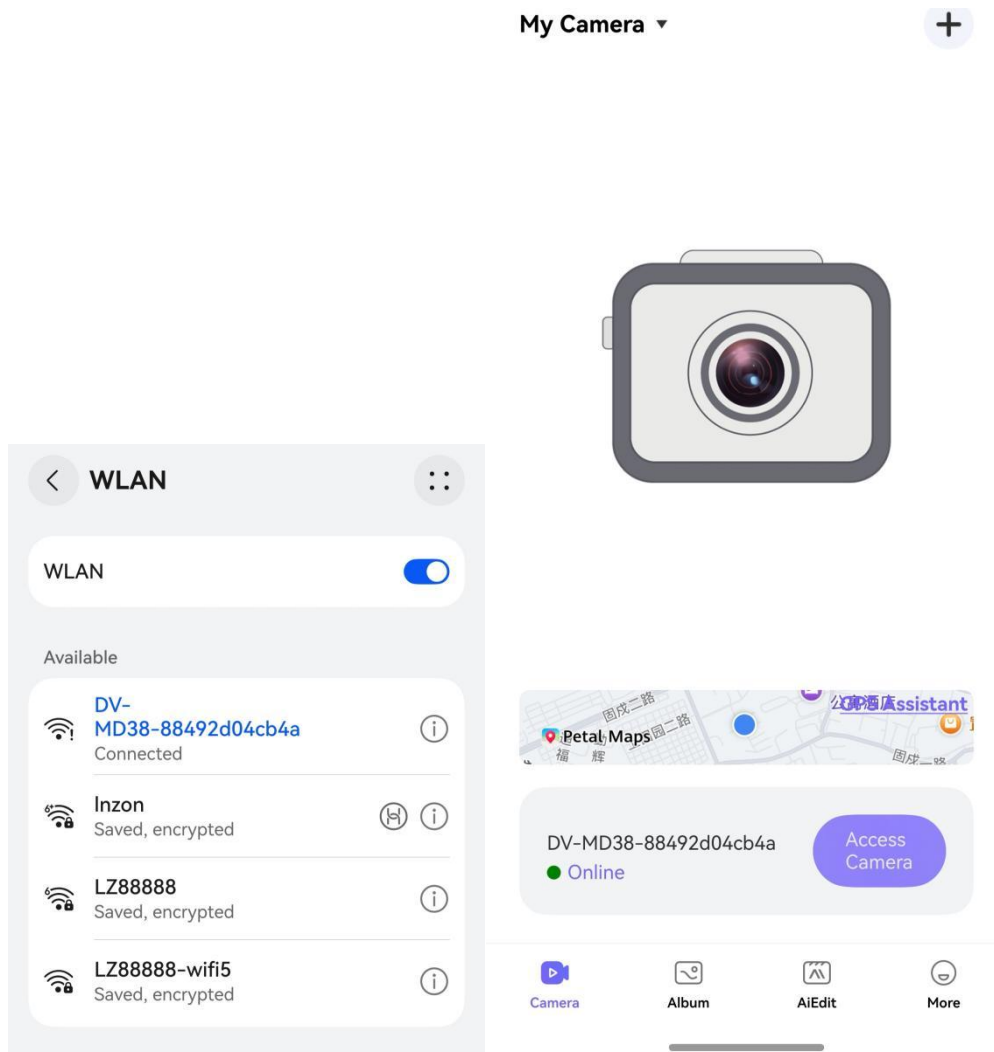

Three. Product parameters:

Video format: AVI
Video coding: M-JPEG
Video resolution: 1920*1080
Video frame rate: 30fps
Motion detection record: Support
Battery capacity: 800mAh
Record time: about 210 minutes
Charge voltage: DC-5V 1A
Storage support: 8GB-128GB
Transmission speed: USB 2.0
Interface type: Type-C
Storage temperature: - 10-40 °C
Working humidity: 15-85% RH9

Disclaimer

1. The usage of this device is subject to the relevant national laws and

regulations, DO NOT use this product for any illegal activities.

2. DO NOT point the camera lens to the direct sun light or permanent damage may occur.
3. Keep away from fire. Never expose the device to any fire source.
4. DO NOT disassemble and modify. Doing so causes the risk of electric shock, burn injury and other health related hazard.
5. DO NOT let water, liquids, or foreign matter get inside the device. Extra precaution is advised where it is raining, snowing, near the ocean or other form of water. In case any of the symptoms are present, turn off the device immediately and contact us for further support.
6. DO NOT drop the device or permanent damage may occur.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.