



SMILE Baby Monitor

Care & Use Instructions for AKEEYO SMILE



We appreciate your purchase of our product. Thank you very much.

Before use, please review this user manual.

If you have any questions, please contact our support center

Contact Us

✉ help@akeeyo.com

🌐 [www.akeeyo.com\(Global\)](http://www.akeeyo.com(Global))



Facebook

Contents

1. Introduction	3
2. Important Safety Information	3-4
3. Package Contents	5
4. Product Specifications	6
5. Product Overview	7-8
6. Installation Guide	9-10
7. Monitor Placement and Operation	11
8. Connect To Power	12
9. Initial Setup	13
10. Monitor Main Page (Portrait)	14
11. Monitor Main Page (Landscape).....	15-17
12. Special Function	18-20
13. AKEEYO APP	21
14. Introduction to WiFi and APP.....	22-26
15. Safety Information	27
16. Reset	28
17. FAQ	29
18. Return packing list	30

INTRODUCTION

Thank you for purchasing the AKEEYO SMILE Baby Monitor. This product is designed by us for your family. AKEEYO is dedicated to creating simplified technology to capture all the wonderful moments of your baby. The car baby monitor is an essential tool for safely monitoring your baby while in the car or at home. Before installing the monitor, please carefully read all installation instructions. Improper installation or use may void the manufacturer's warranty. Welcome to the AKEEYO family!

IMPORTANT SAFETY INFORMATION

- Check local laws and regulations for any restrictions on installation or use, and comply with all legal requirements for safe vehicle operation, including those related to distracted driving.
- Failure to read and follow these warnings and instructions may result in a serious accident, including property damage or serious injury, and even loss of life. Please keep this user manual for future reference.
- The SMILE Baby Monitor is designed to help monitor your baby while driving by allowing quick glances without turning around or taking your eyes off the road. It is not a substitute for responsible adult supervision and should not be used as such.
- Ensure that the SMILE Car Baby Monitor Camera and cables are never within reach of your baby.
- Verify local laws and regulations regarding the use of a monitor with a live video feed while driving. Note that the Monitor will continuously display images captured by the Camera as long as they are connected, the car is running, and the Monitor is powered on.

IMPORTANT SAFETY INFORMATION

- This product can only provide images of objects within the camera's field of view. Therefore, the camera must be kept clean and unobstructed. During installation, ensure its field of view includes the entire area around the car seat.
- Please note that the images in the monitor will be the baby's mirror image.
- The car monitor is intended for indoor or in-car use. It is not suitable for outdoor use.
- Do not wet any parts of the AKEEYO SMILE or expose them to humid environments.
- Do not attempt to open the monitor or camera at any time, and do not use any cables other than those provided in the original packaging.
- During installation, do not leave the baby in the car. The car seat should be properly installed in the car according to legal requirements. It is not necessary to have the baby in the car during the installation of the 5.5-inch car baby monitor. As a precaution, keep the baby away from the car interior.
- Before installing the camera, please consult local laws and regulations to determine the legal installation position of the device.
- The monitor should be securely installed according to the instructions. It must not be loose or unsecured on the dashboard or windshield at any time.
- Do not mount the camera on the car seat.
- Do not place the camera loosely on the car seat.
- Simply insert the adapter into the 12/24V adapter or USB media port in the car to power the system. Do not attempt to use any other power source to operate the system.
- The AKEEYO SMILE Car Baby Monitor is not a toy. Children are not allowed to play with it at any time. Only adults who have read the safety and operating instructions listed in this manual are allowed to operate it.
- This product contains small parts. Adult installation is required. Be careful when unpacking and assembling the product.
- Use only household adapters, USB chargers, or any accessories provided or sold separately by the manufacturer.


Package Contents




Touch Screen Monitor




Camera



Headrest Mount
For Camer

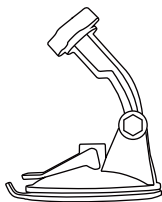


Suction Cup Mount
For Monitor

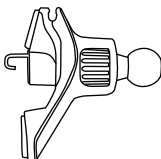


Air-Conditioning
Port Mount



Suction Cup Bracket
Mounting Kit
(17mm side near the monitor
16mm side near the mount)



Separate car charger



Battery Cable




Camera Headrest
Mount Straps

PRODUCT SPECIFICATIONS


Item:	Specification
MCU:	Mstar8826
Case Material:	Plastic
Display:	5.5 inch touch screen 1280*720
Camera	GC2083 AHD Aperture:2.0 D:122°. H:102 .V54°
Video file form:	TS
Photo file format:	JPG
WiFi :	Support
Voice Control:	Support
Air Conditioning Vent:	Support
Suction Cup Stand:	Support
Car charger:	Support
Li-ion Battery:	800mAh
Operating temperature:	-10°C~60
Storage temperature:	-20°C~70
Storage:	Micro SDHC card compatible 8GB -256GB Micro SD card
Child vehicles Reminder:	Support
Screen Rotation:	Support
Mirroring Settings:	Support
Paking Mode:	Support(In the shutdown state, the machine will automatically switch on and record 30S video shutdown when manually bumped)




PRODUCT OVERVIEW

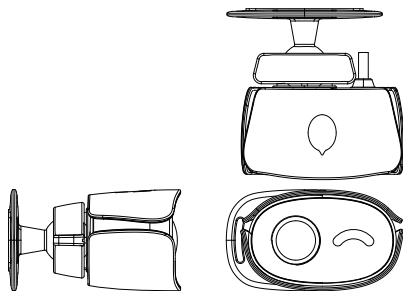

PRODUCT OVERVIEW

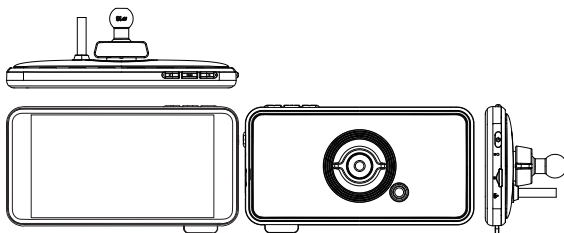

INSTALLATION GUIDE



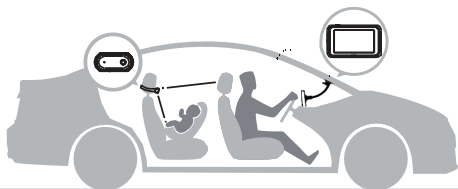





Camera Placement and Operation

Before selecting which camera mount to use, it is best to determine where in the car the Camera will best be placed in order to capture the image of your baby's car seat. Make sure the Camera is not located near the airbag. If your car seat is rear or forward facing you have several options:

Option 1: Headrest Mount with Straps

Use the Headrest Mount with Straps to attach to the headrest of the front or back seat by pulling the vertical and horizontal straps and securing with the plastic ladder lock buckle. The Camera should be mounted tightly to the headrest so that the Camera is stable. The Camera can then be adjusted to angle accordingly to capture the entire car seat. Adjust the angle of the Camera by loosening the nut and rotating to your desired angle.

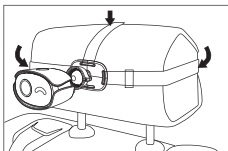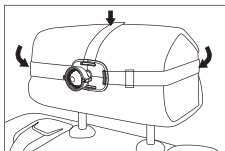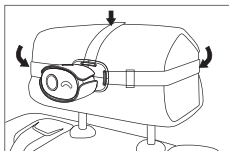

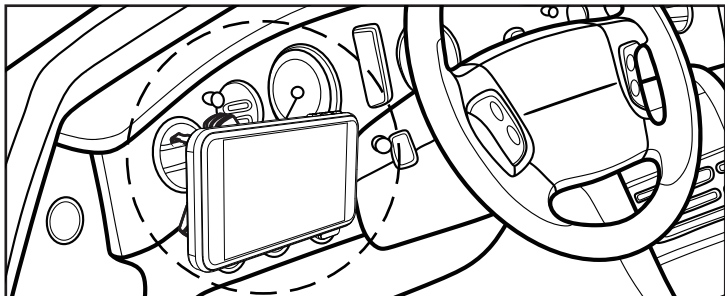
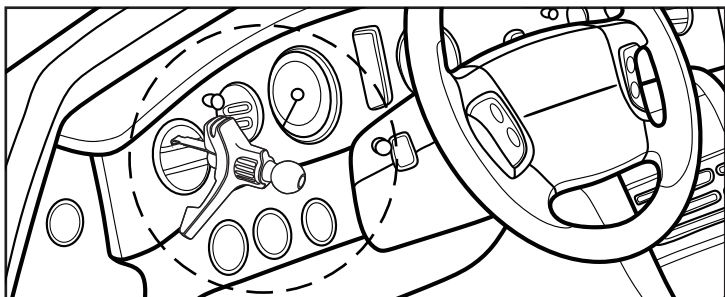
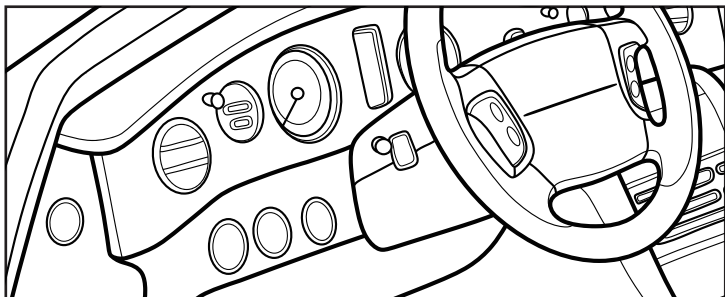


Monitor Placement and Operation

Select a suitable position for the mount and clean the windshield with a dry/clean cloth.

1.Remove the protective plastic film from the suction cup and attach the Windshield Mount to the windshield. Push the lever down to secure the mount while holding the suction cup onto the glass.

2.Attach the Monitor to the Windshield Mount as shown below. For optimal ease of use, we suggest mounting the Monitor low and near the center of your windshield. You should be able to safely glance at your baby and not need to turn your head from facing forward. Adjust the tube of the Windshield Mount so the base of the Monitor is touching the surface of the dashboard in order to reduce rattling vibration. Be sure that the Monitor does not obstruct your view while driving.

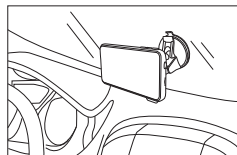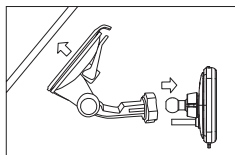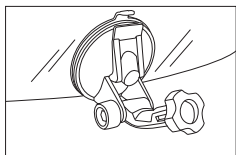


CONNECT TO POWER

Powering the Camera and Monitor

The Smile Car Baby Monitor comes with 2A 3.5m Separate Car Charger which can be plugged into any available sockets in your vehicle. Starting with the power cable at the base of the Camera, run and tuck the cable to the available socket you wish to plug into. Ensure that the cable is not in contact with the car seat or within reaching distance of the baby. It is recommended to tuck the cable behind the seat, lining, rug or panels in order to keep it from tangling or getting caught in any object. Once you have the Camera secure in its mount, and the power cable tucked carefully out of the way, you can plug the power cable into the USB power adapter, and then plug into the socket. Make sure the adapter is pushed all the way into the socket.

NOTE: If your vehicle has USB media ports you can plug the USB cables directly into those ports without the adapters. Once the Camera and Monitor are both plugged in and power on, the Monitor will auto show the image from the Camera.

Pairing is not necessary as the unit has already been paired.

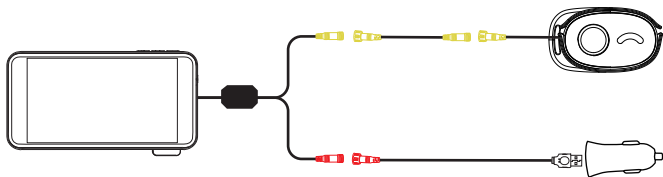


INITIAL SETUP

Select a suitable position for the mount and clean the windshield with a dry/clean cloth.

MicroSD Card (Pre-installed)

NOTE: If you use your own MicroSD card please insert it into the Monitor and use the format function under the system settings page (refer to page 16) before first use. **DO NOT** format the MicroSD card using other devices.

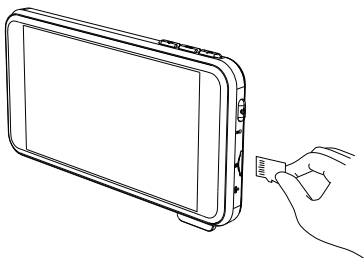




The default settings have been carefully selected to allow you to use your Baby Monitor without the need to change any settings. However, you should set the date and time during your first time using the Baby Monitor as this will affect the time stamp on all recorded media files.

To set the date and time, go to System Settings
> Date & Time.



<  Date&Time Setting



Monitor Mian Page (Portrait)

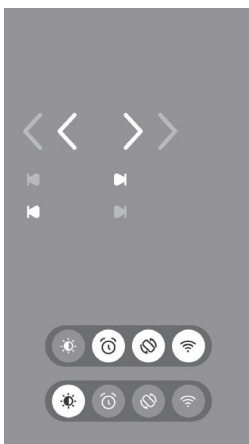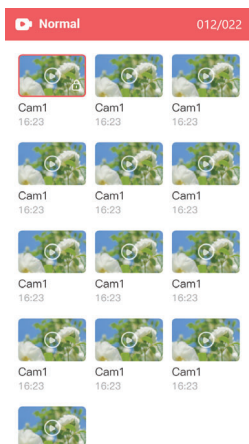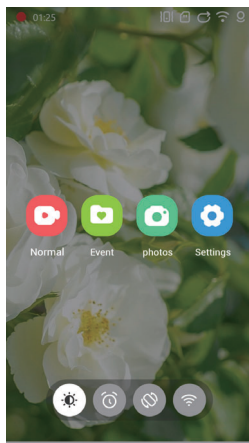


Monitor Mian Page(Landscape)

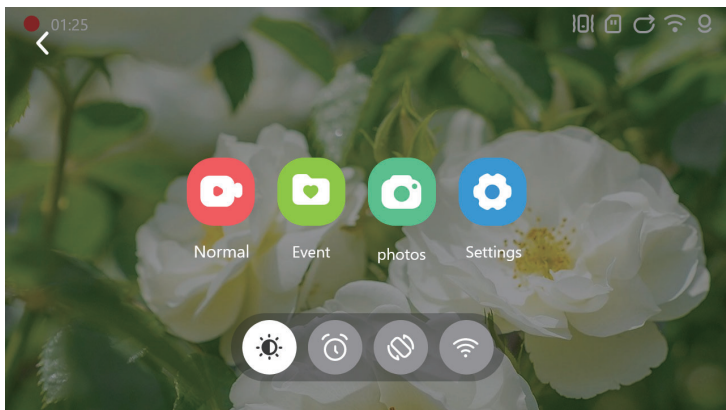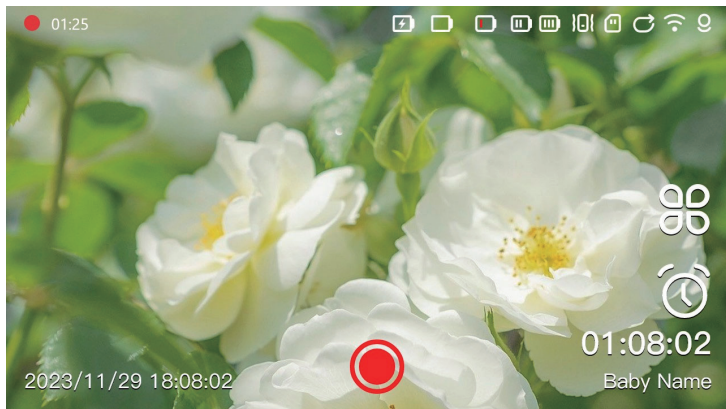


Monitor Mian Page(Landscape)

Alarm clock
can be set to remind nappy change.

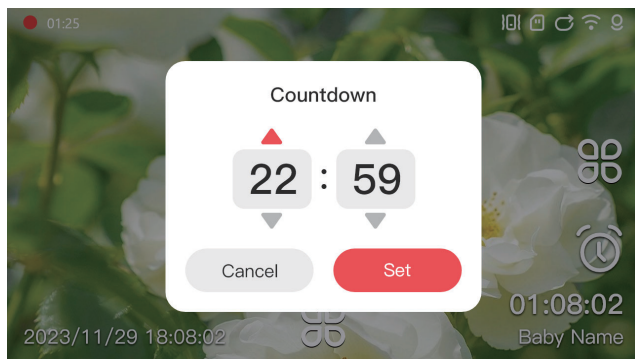


Settings

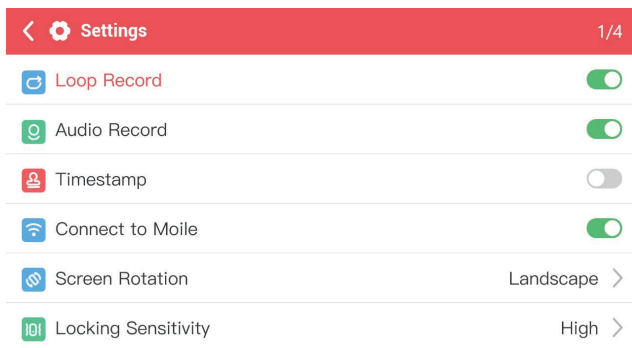


Monitor Mian Page(Landscape)

Camera Error

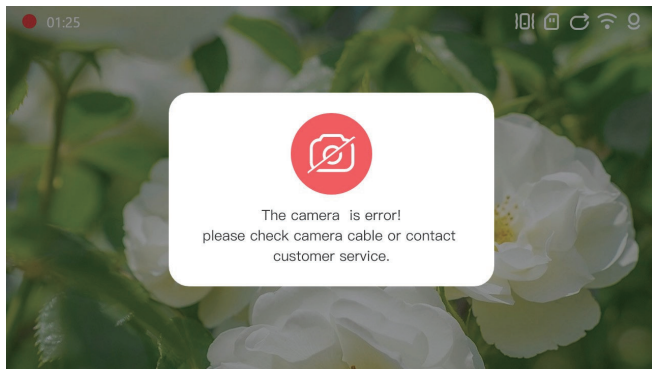

Memory Card Error

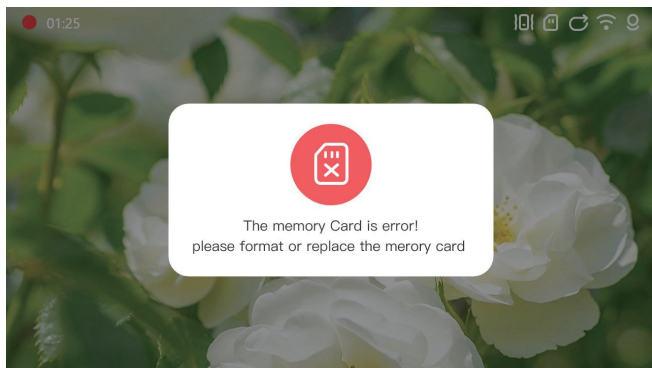

Special Function

Child vehicles Reminder

The AKEEYO BMC-X Smile Car Baby Monitor pioneers the in-car child reminder function, providing thoughtful reminders to parents to never leave their child unattended in the car, thus avoiding painful occurrences like "heatstroke" or "child vehicular heatstroke."

Automatically triggered when the car engine is turned off, it provides a gentle reminder before shutting down automatically.

May every baby grow up healthy !!!

Caution

Please ensure to take you baby away
when leaving the vehicle!

OK(10s)



Special Function

IR Night Vision Mode

For driving safety, when the car system detects insufficient light inside the vehicle, it will automatically switch to Night Vision Mode (screen turns black and white) without manual intervention. When the light becomes adequate again, the Night Vision Mode will automatically deactivate (screen returns to color).

Additionally, it employs 950nm infrared sensing technology in the lens portion, ensuring no visible light is emitted to avoid startling the adorable baby in the darkness!

May every baby grow up happily!!!

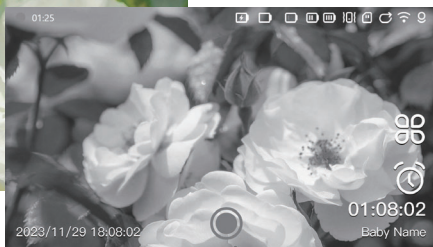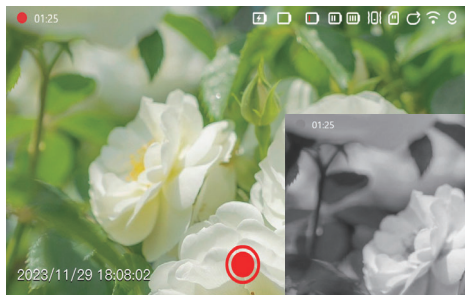

Special Function


Voice Controll Commands

Through voice control, take quick photos and capture the exciting moments of your little baby in a timely manner!

Turn on wifi	Turn off wifi
Take picture	Turn on screen
Turn off the screen	Start recording
Stop recording	Lock the video

***Voice control commands may vary according to the software version update,**

Please check monitor>settings>Voice controll>ON.

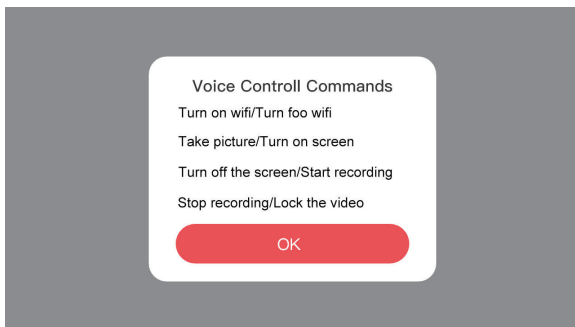

AKEEYO APP

The "AKEEYO" app is a free application that allows you to control the AKY-BMC-X from your smartphone.

To install the app

① Read the QR code

Please install it.



② App Store or


Search from Google Play.



AKEEYO

検索

Post-installation procedures

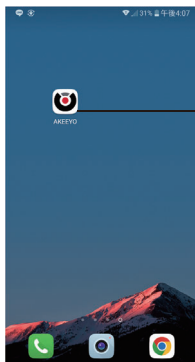


The app appears on the home screen
Make sure it is and click

Introduction to WiFi and APP

Registration steps


1

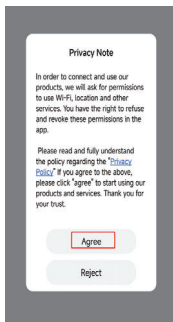

2



3

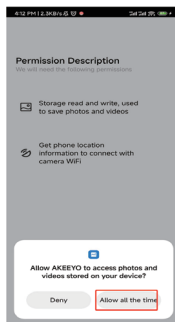


4



5





6

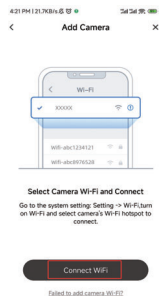

Introduction to WiFi and APP

- ① The WiFi of the machine is turned on by default after it is turned on. When it is turned off, short press 2 times to turn on the WiFi function.
 - ② Open "AKEEYO" APP, click "Add Camera", Search the machine' s WiFi on your phone.
 - ③ After the machine's WiFi is displayed, click the WiFi name and enter the password to connect. The default Wi-Fi name is "BMC-X-****" and the default password is "1234567890".
- *The WIFI name will not be displayed unless the main unit is turned on.

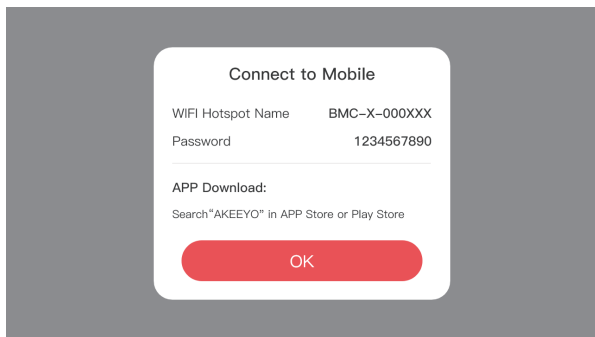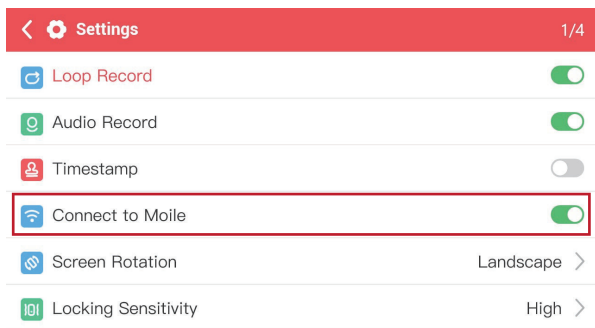

- ④ After WiFi connection, move to the main page

Introduction to WiFi and APP

9

16:07 | 97.6K/s
My Camera +



BMC-X_1587

Recording Started

Access Camera

Camera

Album

More

10

16:07 | 144K/s
< BMC-X_1587 +



16:07



Start recording/
stop recording button



photo button

Camera File


Camera Settings

Introduction to WiFi and APP

After clicking camera file, you can view the recorded videos and photos,
The following operation screens will be slightly different depending on the operating system of the mobile phone or mobile device used. Please understand in advance.

11

Click camera file, the recorded file can be played back

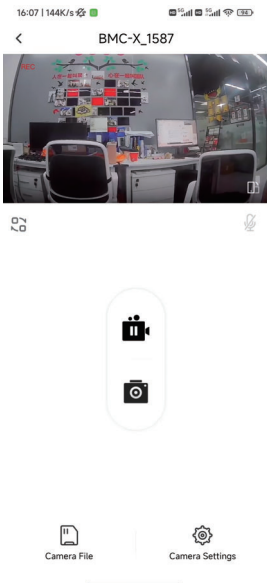

12


Video files are classified according to categories and you can view the files as needed



Introduction to WiFi and APP

Play back and download videos

13

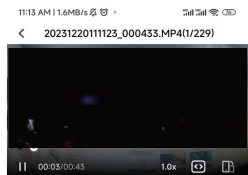

Download



14



- ① Click on the video and confirm the video content on your phone
- ② Click the selection button in the upper right corner to select multiple videos and download multiple videos at the same time
- ③ The downloaded video will be marked as downloaded

SAFETY INFORMATION

- 1. Before using the USB adapter, read all instructions and warning labels on the camera and monitor.**
- 2. Do not expose the charger to rain, moisture, or snow.**
- 3. Using accessories not recommended or sold by the manufacturer may pose a risk of fire, electric shock, or personal injury.**
- 4. To reduce the risk of damage to the cigarette lighter connector and wires, pull the cigarette lighter connector when disconnecting the charger, not the wires.**
- 5. Ensure the position of the wires is not stepped on, tripped over, or subject to damage or pressure.**
- 6. Do not operate the charger if the wires or cigarette lighter connector are damaged - replace them immediately.**
- 7. Do not use the charger if it has been severely impacted, dropped, or otherwise damaged; hand it over to qualified repair personnel.**
- 8. Do not dismantle the charger; when maintenance or repair is required, hand it over to qualified repair personnel. Incorrect reassembly may pose risks of electric shock or fire.**
- 9. To reduce the risk of electric shock, unplug the charger's power plug before attempting any maintenance or cleaning. Turning off the controller does not reduce this risk.**
- 10. Ensure the position of the wires is not stepped on, tripped over, or subject to damage or pressure.**

Warning: Failure to read and comply with these warnings and instructions may result in serious accidents, including property damage or serious injury, including loss of life.