

Keepr[®] Drive

User Guide

USER GUIDE



This User Guide provides instructions on how to use the Keepr Drive ignition interlock system for drivers and vehicle admins.

Version: 2025-10-31

Keepr Drive Instructions, Warnings, and Terms of Use

This User Guide applies to the use of Keepr Drive, which is the Keepr device integrated with a vehicle ignition system. Certain warnings contained in the Keepr documentation (such as on the device packaging, in the Quick Start Guide or in the Keepr User Guide), including but not limited to the warning not to use Keepr to determine fitness to drive, apply only to stand-alone use of the Keepr personal breathalyzer. Please ensure you read and understand the instructions and warnings applicable to each separate use case.

Use of Keepr Drive is also subject to the Keepr Product Purchase Terms, available at [**www.yourkeepr.com/pages/device-purchase-terms**](https://www.yourkeepr.com/pages/device-purchase-terms).

The Keepr Product Purchase Terms contain important information about your rights, responsibilities, and obligations. Please ensure you read them carefully before using Keepr Drive.

Use of Keepr Drive is at your own risk. Driving may be impaired even at BrAC readings below the legal limit. Keepr Drive does not guarantee legal protection against DUI charges or law enforcement acceptance of results.

Contents Include

Specifications and Safety Instructions	Page: 2
What to Expect at Installation	Page: 9
Setting Up Your Keepr	Page: 10
Managing Drivers	Page: 13
Starting Your Vehicle with Keepr Drive	Page: 17
Viewing Live Location	Page: 18
Recording BrAC Samples	Page: 19
Scheduled Downtime	Page: 22
Turning Keepr Drive ON / OFF	Page: 25
Viewing, Understanding and Sharing Results	Page: 28
Troubleshooting Tips	Page: 32
Updating Your Firmware	Page: 35
Keepr Device Cleaning, Maintenance, and Storage	Page: 36
Warranty Information	Page: 37
Disclaimers	Page: 38

The Keepr® Drive User Guide is published and maintained by:
Consumer Safety Technology, LLC
12421 Meredith Drive, Suite 100
Urbandale, IA 50323

Specifications and Safety Instructions

Before using Keepr Drive, please review the following specifications and safety instructions:

Specifications

Keepr Drive uses a combination of the Keepr® personal breathalyzer device, paired mobile app, relay, and harness to integrate with your vehicle's ignition interlock system and require a breath sample before your vehicle will start.

Included in the box for each Keepr Drive is:

-  The Keepr personal breathalyzer, attachable mouthpiece, and Quick Start Guide
-  Keepr Drive Install Kit

 Before using the Keepr personal breathalyzer, charge fully for best results.

Device Specifications

Charging Source (not included)	USB-C Output: 5V/0.5 – 3A IEC/UL 62368-1, or IEC/UL 62368-3, or IEC/UL 60950-1 certified
Operating Range	5 ° - 40 °C
BrAC Range	0 - 0.400 g/210 L
BrAC Accuracy	+/-0.005 g/210L at BrAC level of 0.050 g/210L when tested at room temperature (~25°C).

Key to Understanding Device Symbols and Messages

Below is a key that identifies where on the device each symbol or message will appear.



A



Battery Charge Level

Indicates the battery's current level of charge



Charging

When a bar is flashing, this indicates the device is currently charging using a USB-C cable.



Low Battery

Indicates that the device currently has limited power remaining. When battery is critically low, message will blink in the center of the device display.

B



Pairing Mode

When the Bluetooth® icon is blinking, the device is in pairing mode.

Getting Ready / Calculating

Indicates that you should wait to act until the device has finished preparing. This icon displays both during the device's startup process and also while the device calculates your BrAC level.

pair to app**Pair to App**

Keepr device needs to be paired with phone or tablet before it can be used to measure BrAC.

open app**Open App**

Keepr device is waiting for the app to start. Open the app and wait for Keepr and your phone or tablet to connect.

see app**See App**

Keepr device is waiting for you to initiate a sample from your phone or tablet. Tap "Test Now" in the app to initiate a sample.

sample now**Sample Now**

Indicates that the device is ready to collect your breath sample.

1254966385**Device Number**

When the device is in pairing mode, a device number shows in the display

0.000**Results**

Indicates the BrAC calculated from your sample. This sample displays up to three decimal points. When recording a shared sample through the YourKeepr app, results are automatically logged and shared with your Contacts according to your configured permissions.

EXX**OR****UXX****Error**

Indicates that the device has encountered an error. Refer to the Troubleshooting section. If the error starts with the letter “U”, then this was a user error rather than a device error.

Safety Instructions

This User Guide and all provided instructions, and warnings should be read and fully understood by the user before using Keepr Drive. Failure to follow the instructions, warnings, and safety precautions can result in serious injury or death. Keep all provided manuals, instructions and warnings in a safe location for future reference.

- 01 Use of Keepr Drive is at your own risk. Driving may be impaired even at BrAC readings below the legal limit. Keepr Drive does not guarantee legal protection against DUI charges or law enforcement acceptance of results.
- 02 The Keepr device cannot determine a user's exact BAC and should not be relied upon for such purposes.
- 03 Charge the Keepr device only with a charger that meets the device specifications listed above to avoid damage to the device.
- 04 **DO NOT DRINK AND DRIVE.** Always have a designated driver when alcohol is being consumed.
- 05 **DO NOT** use the Keepr device or app while operating a moving motor vehicle.
- 06 **READ ALL INSTRUCTIONS** prior to use. Failure to do so can result in inaccurate results.
- 07 **DO NOT** take a reading within 20 minutes of eating, drinking, or using products that contain alcohol to avoid inaccurate results. Products containing alcohol include items like alcohol-based mouthwash and hand sanitizer.
- 08 **WAIT** at least 3 minutes between readings to avoid inaccurate results.
- 09 **DO NOT** cover the exhaust to avoid damage to the product and/or inaccurate results.
- 10 **DO NOT USE or STORE** the Keepr device in temperatures below 41° F (5° C) or above 104° F (40° C) to prevent damage to the product and/or inaccurate results.
- 11 **DO NOT** take a sample in areas with strong winds or poor air quality to prevent inaccurate results.
- 12 **DO NOT USE or STORE** the Keepr device in ambient humidity below 10% or above 95% to prevent damage to the product and/or inaccurate results.

- 13 **DO NOT** clean the Keepr Device with alcohol-based products. Residual alcohol can lead to inaccurate results.
- 14 **DO NOT** submerge the Keepr device in water or place in the dishwasher to prevent damage to the product.
- 15 **DO NOT** drop the Keepr device to prevent damage to the product.
- 16 **ELECTRIC SHOCK HAZARD.**
- **DO NOT** use charging cable if it is damaged or frayed.
 - If the enclosure is cracked or damaged, stop using the device and replace it immediately.
 - **DO NOT** insert anything other than a USB-C cable into the USB-C port.
 - **DO NOT USE** Keepr® while in water or submerge in water.
- 17 **FIRE AND EXPLOSION HAZARD**
- The Keepr device uses a lithium-ion battery.
- 18 **CHOKING HAZARD.**
- The Keepr device contains small parts. Not for use by children. Keep out of reach of children.
- 19 **EXPOSURE HAZARD.**
- **DO NOT** inhale while providing a sample to the device to avoid inhaling small amounts of fuel cell chemicals.
 - Clean the mouthpiece of the device before sharing with others to avoid the transmission of illness.
 - Individuals with allergies to plastics should not use the device.
 - The Keepr device uses a lithium-ion battery. Do not allow the liquid from the battery to come in contact with the skin or eyes. If contact has been made, wash with copious amounts of water and seek medical advice.

What to Expect at Installation

When you arrive at the service center, you can simply drop off your vehicle or wait while a technician completes your installation. Installation typically takes 1-2 hours.

When your installation is complete, a technician will walk you through how to enable Keepr Drive and start your vehicle, as well as answer any questions you may have.

Before your installation appointment, complete the following steps to ensure a smooth installation process.

- 01 **Download the YourKeepr mobile app** for iOS or Android.
- 02 **Login and setup a user profile** using the same email address provided at purchase.
- 03 **Pair your Keepr with the mobile app.** The Driver who takes the vehicle for installation must pair the Keepr with the mobile app from their device.
- 04 **Set up additional Drivers from the mobile app.** If Keepr Drive will be used by someone other than the person who purchased it, you will need to set them up as a managed Driver. For detailed instructions, see the section on Managing Drivers.

IMPORTANT: The Vehicle Admin will need to be available via phone or text during the installation appointment. They don't need to be physically present, but they will be asked to enable Keepr Drive from the app.


- 05 **Bring everything inside of the Keepr Drive box with you.** This includes the Keepr breathalyzer with mouthpiece attached, and the Keepr Drive install kit.




Setting Up Your Keepr

Downloading the YourKeepr Mobile App


You must be at least 15 years old to use the YourKeepr Mobile App.

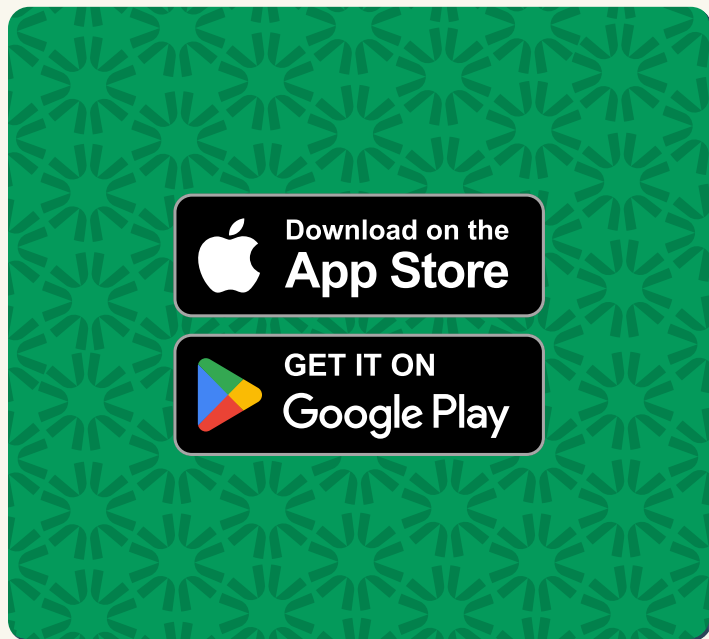

Download the YourKeepr app from either the App Store or Google Play.

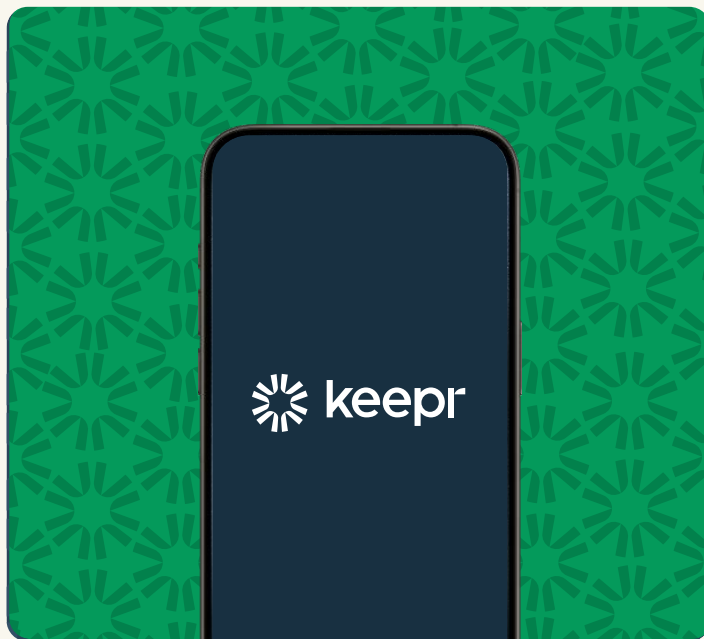


Launch the YourKeepr app.

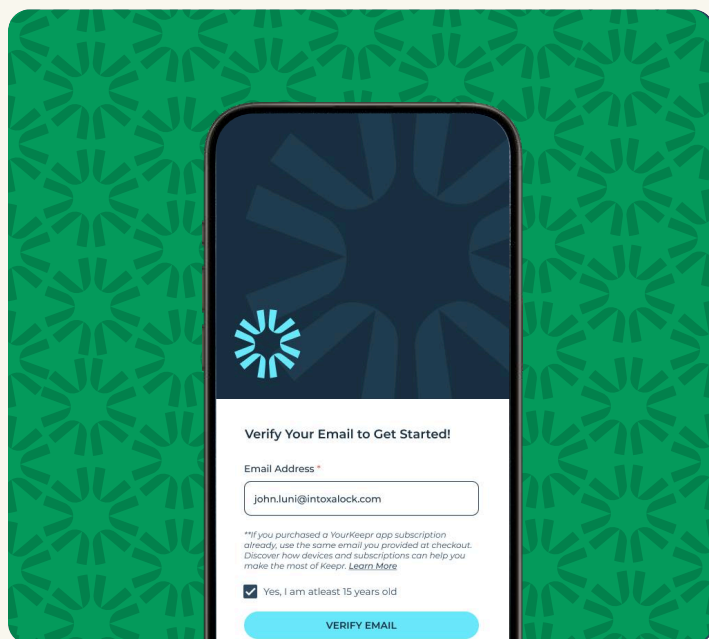

When prompted to verify your email, input the email address. If you are a Vehicle Admin, be sure to use the same email provided at checkout.

Version: 2025-10-31

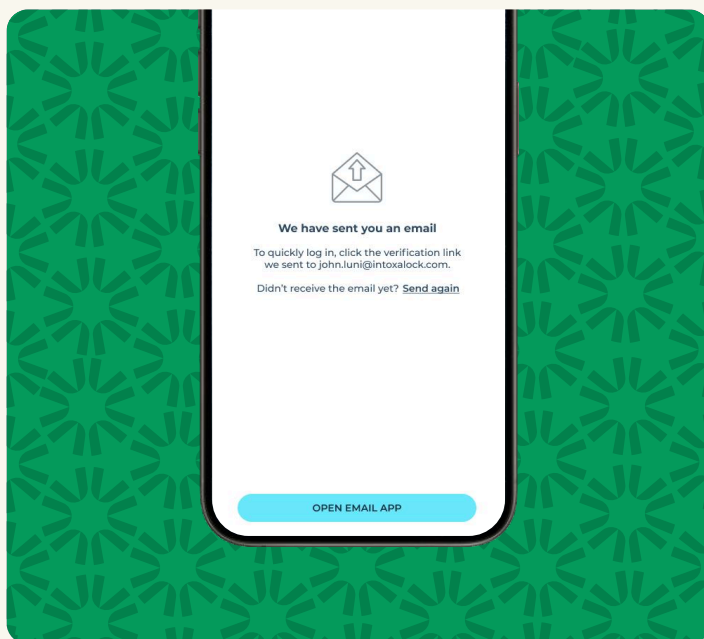


Follow in-app instructions to verify your email address.

Pairing Your Device with the YourKeepr App


Before your installation appointment, the Keepr Device must be paired with your phone or tablet through the YourKeepr app.

1

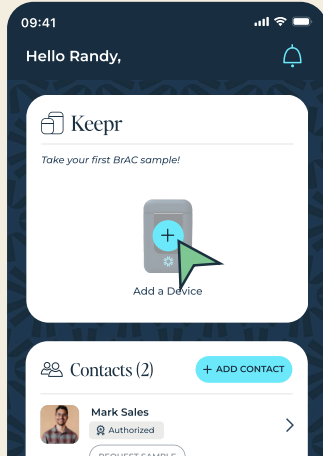


Launch the YourKeepr app and tap on **Pair a Device** to begin the pairing process.

2

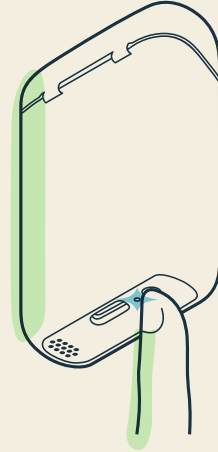


Press and hold the button on the bottom of the Keepr device for 5 seconds to enter pairing mode. The device identification number appears on the screen when the device is in pairing mode.

3

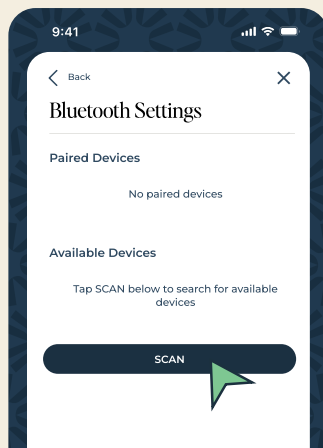


Return to the YourKeepr app and tap on **Scan** to look for your Keepr device.

4

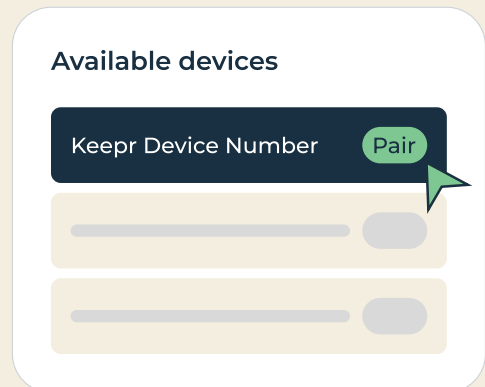

When the device name, “Keepr” followed by the device ID number, appears under available devices, select **Pair** next to the device number.

5

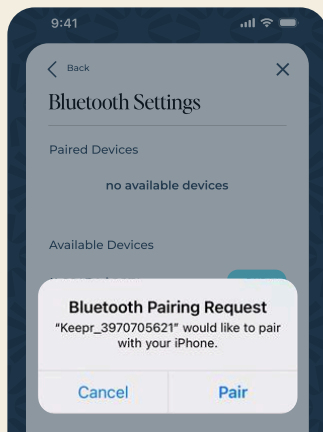


When the pairing request appears on the screen, select **Pair**.

6



Once connected, your Keepr device will display "see app". Return to the app to confirm your device is paired.

6

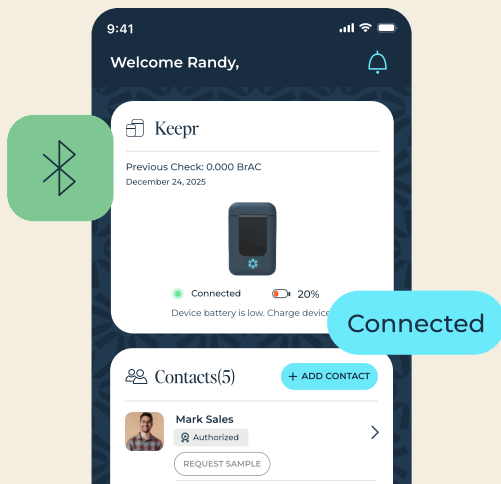

If a Bluetooth® connection is established successfully, the screen on the Keepr device displays the Bluetooth® connected icon and the device is displayed as “Connected” on the app home screen.

Managing Drivers



Available with paid app subscription only.

Contact Types and Definitions

Vehicle Admins

Vehicle Admins have permission to manage the Keepr Drive system including adding Drivers, setting testing schedules (known as “Downtime”), and enabling/disabling Keepr Drive. By default, the person who purchased Keepr Drive will be assigned the Vehicle Admin role.

Note: Vehicle Admins must have an active Keepr Drive subscription.

Contacts

Contacts are users with whom you can share data, including test requests, test results, and live location. You control what information each contact can access by managing the sharing conditions for each individual.

Note: All Drivers of the vehicle must first be added as a Contact. Vehicle Admins can add an unlimited number of Contacts. Contacts will need to download the mobile app but do not need to pay for a Keepr Drive subscription.

Drivers

Drivers are designated by the Vehicle Admin and are required to provide a breath sample to start the vehicle when Keepr Drive is enabled. Vehicle Admins set testing requirements for each Driver individually i.e. days/times when a breath test is required.

Note: Vehicle Admins can add an unlimited number of Drivers. Drivers will need to download the mobile app but do not need to pay for a Keepr Drive subscription.