

Operation

Equipped with a plug, just plug and play

If you accidentally cut off the plug, there are three wires. You just need to connect the LIVEWIRE and the NAUGHT WIRE to the adapter. And then wrap the EARTH WIRE with waterproof tape. The brown/red one is LIVE WIRE, the blue one is the NAUGHT WIRE, and the yellow one is the EARTH WIRE.

Live Wire (L)

Naught Wire (N)

Earth Wire (E)

Product Features

- The shell material is made of aluminum alloy full high pressure die-casting, which is light in weight, strong in structure and corrosion-resistant.
- New silicone rubber sealing ring, high temperature 250 degrees or more, to ensure that the silicone rubber does not age.
- Low calorific value, no heat radiation, no mercury, sodium and other harmful elements.
- LED for all solid luminous body, impact resistance is not easy to break, waste can be :recycled, no pollution, green lighting source.
- Long-term guarantee of protection grade IP65, high temperature resistant, high pressure resistant silicon rubber wire.

Warm Tips

- Keep equipment away from fires to avoid explosions.
- It is not recommended to dismantle the equipment without damaging the electrical equipment.
- It is strictly prohibited to strike the product in order to avoid irreversible damage.

After-Sale Service

We won't repair for the reason such as installed error, break, fire, thunder strike by free.
Please contact our after-sale services department once have quality problem.



LED LIGHTS



USER MANUAL

Specification


Product



Name	LED Lights	
Model	TS-F2020	
Color	Black	
Light Source	SMD5054+SMD3030	
Color Temperature	RGBW	
Material	Aluminum	
Input voltage	AC 85-265V	
Power Factor	PF>0.5	
IP Grade	IP65	
Control Mode	APP+2.4G Remote Control	
Working Mode	Color Change + Fixed Color + Fast Flash + Slow Flash + Gradient Color	
Operating Temperature	-25°C---45°C	
Certification	CE	
Country Of Origin	China	
Switch Attribute	-	Foot Switch

WARNING


EN: KEEP OUT OF THE REACH OF CHILDREN
In case of ingestion, seek medical attention immediately.
DE: AUSSERHALB DER REICHWEITE VON KINDERN AUFBEWAHREN
Im Falle des Verschluckens sofort einen Arzt aufsuchen.
FR: TENIR HORS DE PORTÉE DES ENFANTS
En cas d'ingestion, consulter immédiatement un médecin.
ES: MANTENER FUERA DEL ALCANCE DE LOS NIÑOS
En caso de ingestión, acudir inmediatamente al médico.
IT: TENERE FUORI DALLA PORTATA DEI BAMBINI
In caso di ingestione, consultare immediatamente un medico.
NL: BUITEN BEREIK VAN KINDEREN HOUDEN
In geval van inslikken onmiddellijk een arts raadplegen.

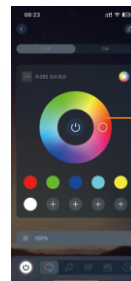



Click to adjust the color

Slide to adjust brightness
Timed (of explosive etc)


Automatic diagnostic equipment
Click on the device to control the light change.

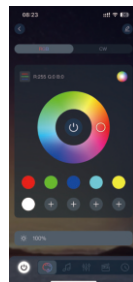


Dimming and color adjustment function
Slide to adjust light brightness, color and color temperature.

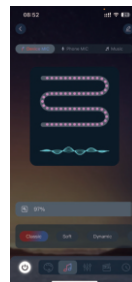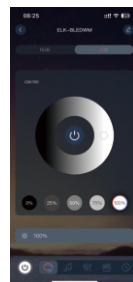


Dynamic mode
Built-in multiple dynamic functions can be switched at will.

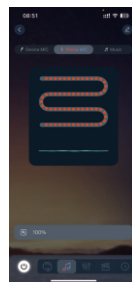

Microphone
It can receive any sound coming from the outside world through.

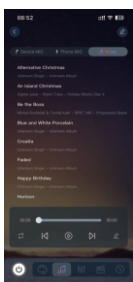


Music
Open music Player, change clothes Colors according to The rhythm of the music Melody.

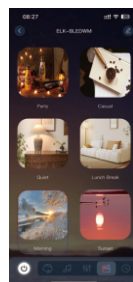

Multiple Scene Selection
Supports one-click setting of various scene modes, such as reading, relaxing, gathering and other night modes.



Mode switching
Can freely switch various LED light control modes.

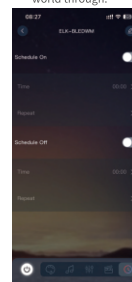

Timer Settings
Customize the lighting runtime settings to ensure that the lighting fixtures can run automatically.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.