

PROSCAN

Smart Ring

Model No.:PSR005



This product has been manufactured and sold under the responsibility of CURTIS INTERNATIONAL LTD.

PROSCAN, and the PROSCAN logo are trademarks used under license by CURTIS INTERNATIONAL LTD. – further information at

www.proscan-brand.com.

All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective own.

Safety warning

Read the safety warnings carefully and only use the product as described in these instructions to avoid accidental injury or damage. Keep these instructions for future reference. If you give this product to another person, remember to also include these instructions. The smart ring contains a rechargeable lithium battery. There is a risk of leakage, gas emissions, explosions and fire.

Danger to children

- Children are not aware of the risks involved in handling electronic devices incorrectly. Therefore, keep children away from the product.
- Keep the packaging materials out of the reach of children. They pose several risks, including the risk of suffocation!

The measurement results of this product are for reference only and are not intended for any medical use or basis. Please follow the doctor's instructions.

Do not self-diagnose and treat according to the measurements taken by this product.

5ATM Water Resistant

The smart ring is dustproof and waterproof and complies with protection class 5ATM. You can wear it for showering, swimming or bathing in shallow water within 30mins. However, use in thermal baths, saunas (steam baths), when diving and in environments with extreme temperature or humidity conditions is not recommended.

- Do not touch the charging case or smart ring with wet hands during the charging process.
- Do not charge the smart ring outdoors.

Intended use

The smart ring is an intelligent finger ring and can be used as compact wearable technology to display heart rate and blood oxygen levels, for fitness tracking or to analyze sleep.


To do so, the ring must be paired with a smartphone (or other mobile device). The data measured are synchronized at regular intervals (every 30 minutes by default) via the “Oplayer Smart Life” app on the connected smartphone. You can change the synchronization interval in the app under Activity & Wellness.

Appearance



- ① Heart Rate Sensor(Green light) and Blood oxygen Sensor(Red light).
- ② Charging Pin

Charging & Power on

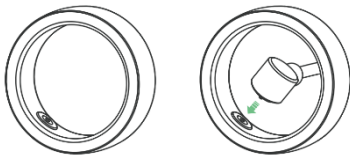

* This product is in an off state when it leaves the factory. Charge the battery fully before using the product for the first time. The charging contacts on the smart ring and the charging cable must be aligned with each other. It will take approximately 1.5 hours to fully charge.

*The indicator light on the smart ring lights up green to active when contact charging cable and the indicator lights up flashes red when charging.


*The indicator light on the smart ring lights up green when fully charged.

How to wear

Remove the smart ring during strength training, when working with heavy tools and when picking up and holding objects made of metal, ceramic or stone. These activities may damage the smart ring.

Slide the smart ring onto your finger (ideally, you should choose your index finger) so that the sensors are in contact with the underside of your finger as shown in the figure. Ensure that the sensors are positioned correctly.

If the smart ring slips while you are wearing it, correct its position immediately to ensure accurate readings.

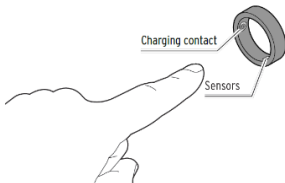

APP installation & connecting

App name:
Oplayer Smart Life



Android/iOS

Android 8.0 and above
IOS 12.0 and above
Bluetooth 5.4 support.

Activate the Bluetooth® function on your mobile device (e.g. smartphone).

Search for “Oplayer Smart Life” in the App Store/Google Play or scan the adjacent QR code and install the app on your smartphone or tablet.

Start the app, tap “Setting” icon from the right bottom, select to “My Smart Devices”, “+Add New Device” to search this device 'Pro PSR005' and tap to connect it.

Working hours (Normal usage): up to 4-6days

Standby time (Disconnected with Bluetooth): up to 12days

The working time and standby time is ideal working hours, it's only for reference.

Operations



Activity: Click it and follow the steps in the APP to check your daily activities by Day/Week/Month.

Exercise records: Click it and there are 120+ sports modes to choose from including walking, running, climbing, playing basketball, cycling, yoga and so on.

Sleep: Sleep with your smart ring on. It will record your sleep time in the APP. The device can detect full day sleeping, but only if it takes more than 30 minutes more.



Heart Health: Click it and follow the steps in the APP to check all your data for Heart Rate and Blood Oxygen by Day/Week/Month. Also, can actively detect by manual measurement.

Emotion Health: Click it and follow the steps in the APP to check all your data for Stress by Day/Week/Month. Also, can actively detect by manual measurement.

Attentions

What should I do if Bluetooth cannot be connected? (Failed to connect / reconnect or slow connection / reconnect)

1. Please confirm whether the mobile phone supports (IOS12.0 or Android 8.0 or above, mobile phones or tablet products with Bluetooth 5.4).
2. Due to the problem of signal interference in the Bluetooth wireless connection, the connection time may be different every time. If you cannot connect for a long time, please make sure to connect in a place where there is no magnetic field or too much Bluetooth device interference.
3. Turn off the phone's Bluetooth and then turn it on.
4. Clear the phone background application or restart the phone.
5. Do not connect your phone to other products of the same type at the same time.
6. Whether the App is still running in the background, if it is not running in the background, it cannot be connected.

Cannot find the smart ring?

Because the Bluetooth radio of the smart ring is not searched by the mobile phone, please make sure that the smart ring is powered on and activated, and it is not connected to other mobile phones, put the smart ring close to the mobile phone and search again. If it is still invalid, turn off the Bluetooth of the mobile phone for 20 seconds then restart Bluetooth and search again.

Should the Bluetooth connection be always on? Will there be any data if it is closed?

Before synchronizing the data, exercise and sleep data will be kept on the smart ring. When the mobile phone and the smart ring Bluetooth are successfully connected, the smart ring will automatically upload data to the mobile phone, but the data stored by the smart ring is limited, about one week of Bluetooth data can be stored. when the space is full. The earliest data will be automatically overwritten to generate the latest data, so please sync the smart ring to your phone in time.

What should I do if the smart ring cannot be charged?

1. Please confirm whether the charging contact is in good contact with the smart ring.
2. When the smart ring power is lower than 3.5V, there will be a period of battery precharge time.
3. To preserve the rechargeable battery's full capacity for as long as possible, you should fully recharge the battery every 2 months, even if you do not use the product.
4. Charge the battery in an environment between +10 and +40 °C. The battery will best hold its charge at room temperature. The lower the ambient temperature, the shorter the period of effective use.

Will wear a smart ring for a long-time cause harm to the human body?

The radiation of the equipment is far lower than the FCC standard of the United States, and it is basically negligible.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2BFD8-PSR005

To make a warranty claim, please email support2@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original delivery to the consumer. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.

For service assistance and product information, please call:
1-800-968-9853. Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15. MISSISSAUGA. ON,
L5S2A3 www.curtisint.com