

MYAI

MYAI Smart Detection Hair fitter

Instruction manual


Contents

01/ Major accessories.....	3
02/ Product composition and structure.....	3
03/ Model and function introduction.....	5
04/ Instructions before use.....	6
05/ Care steps.....	7
06/ Way of care.....	8
07/ somatosensory problems and treatment methods.....	12
08/ Common problems and treatment methods.....	12
09/ Product Specifications.....	13
10 / security considerations for instrument maintenance store...	14
11 / after-sale protection... ..	16

01/ Main accessories


Main engine, spectral macro detection mirror, EMS aurora energy head, glow secondary

polishing small coffee box, Type-C charging cable

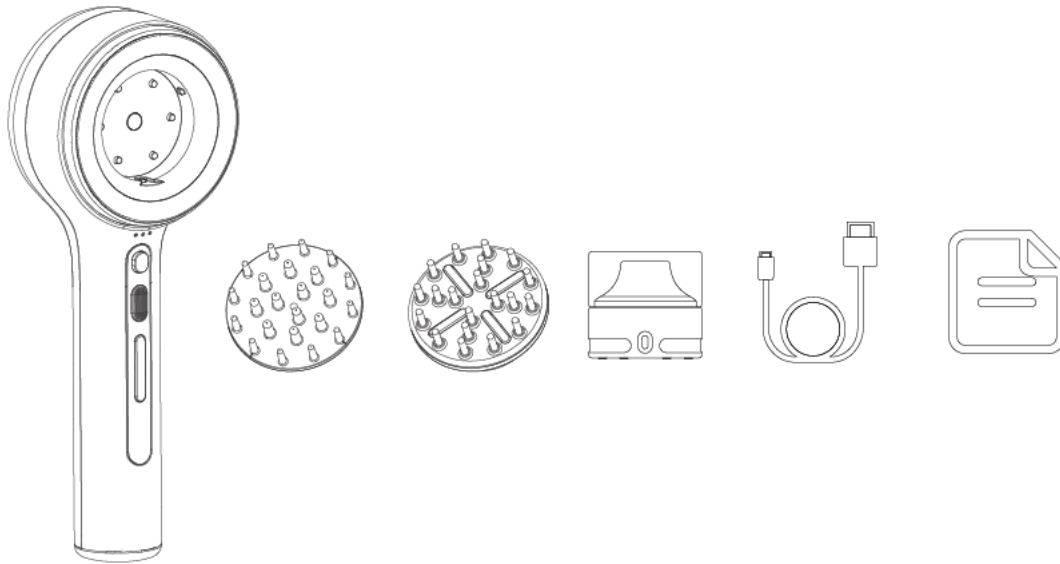


02/ Product composition and structure


Main engine

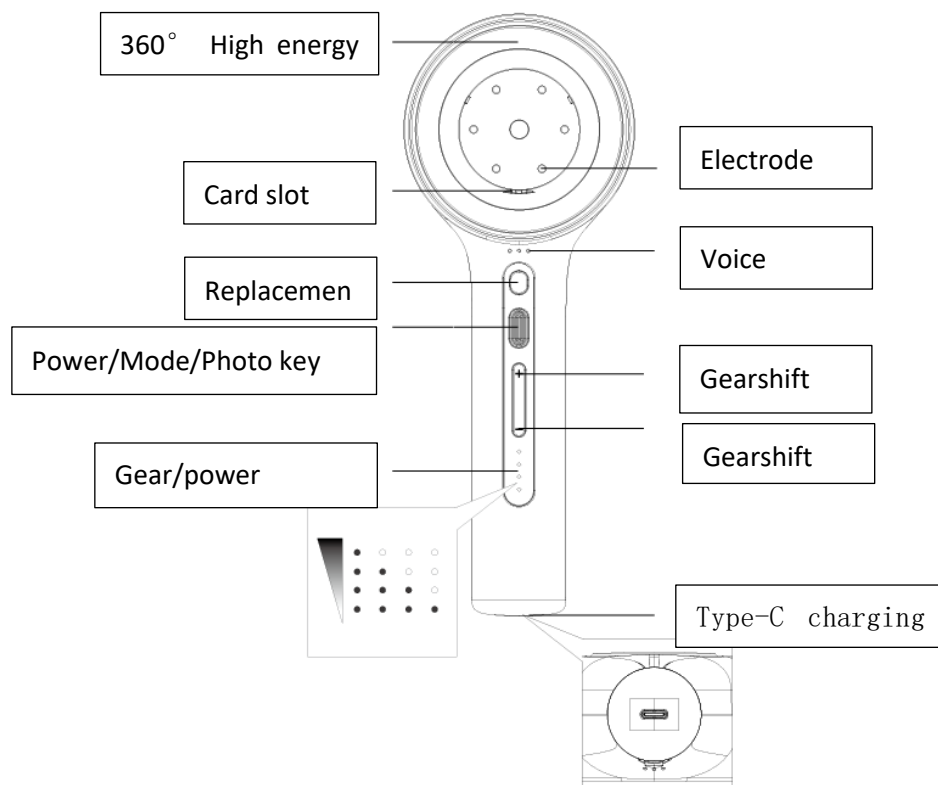


Spectroscopic macro detection mirror

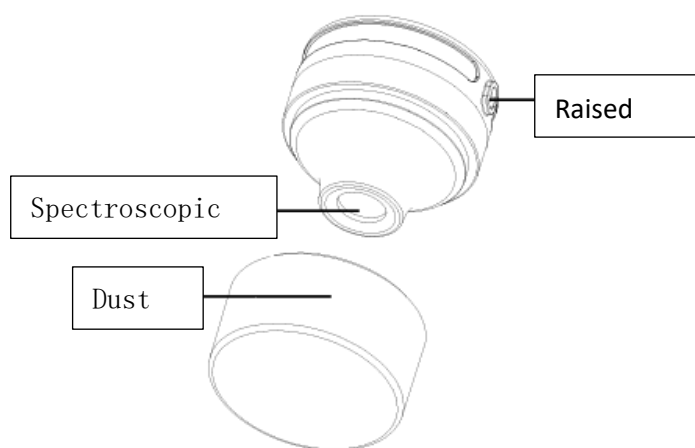

EMS Aurora Energy Head

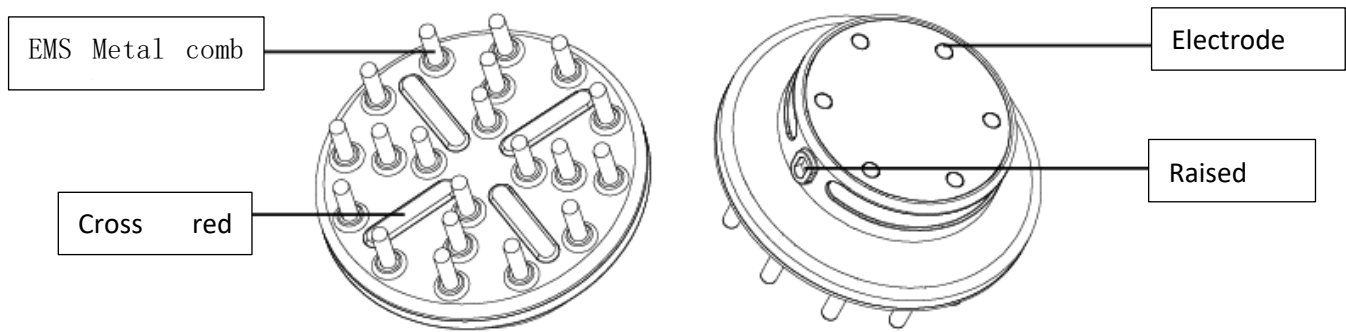

Glow secondary toss small coffee box

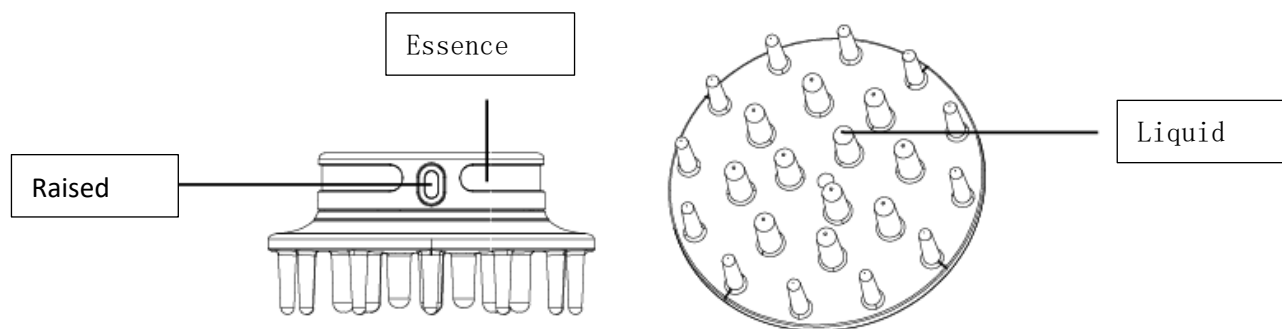

03/ Mode and function introduction


Modes	Hair follicle detection	Light energy activation	Hydrating glow
Matching function head	Spectroscopic macro detection mirror	EMS Aurora Energy Head	Glow secondary Toss small coffee box
Length of single treatment	2 minutes	3 minutes	3 minutes
Suggested care cycle	1 per week	2-3 times a week	2-3 times a week
Gear selection	/	Gears 1 to 4	/

Need-to-know	* Keep scalp clean and fresh before use * Remove metal accessories such as earrings, necklaces, bracelets, watches and contact lenses * After the treatment, please clean the massage head with a dry cotton pad or paper towel * Do not use this product while bathing
----------------------------	--

04/ Notice before use

1. Installation/replacement instructions

- ◆ When installing, long press the replacement key, align the function head with the card slot in the cabin, and gently insert it to install successfully.
- ◆ When replacing the function head, long press the "replacement key" to replace it.

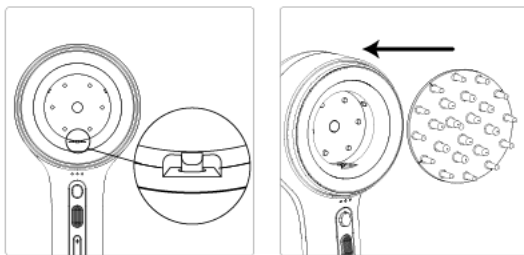

2. Instrument status description

- ◆ Normal power on state: The power indicator is steady on, indicating that the instrument is in the power on state

3. Charging instructions

- ◆ Before using it for the first time or without using it for a long time, fully charge it before using it.
- ◆ Host low power reminder: The instrument is 10-15 minutes away from automatic shutdown alarm, "power indicator" flashes, and accompanied by low power prompt tone reminder.


- ◆ Host charging state: when charging, the "power indicator light" starts to blink one by one from the bottom up. When the 4 lights of the intensity/power indicator light remain steady on, that is, the power is full.
- ◆ In detection mode, when the power is less than 50%, there will be a low power prompt tone to remind you to charge.
- ◆ When the power is too low, the instrument automatically shuts down, and is accompanied by a low power prompt tone reminder.
- ◆ Do not use the instrument when charging.
- ◆ The product should be reclined on its side when charging.

05/ Care steps

01- Clean head and blow dry 02- Hair follicle detection mode




Clean and blow dry your head before use.
Keep your scalp/hair dry. Remove metal accessories such as earrings, necklaces,

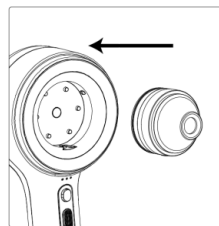


Install the spectral macro detection mirror for hair follicle detection, long press the power button for 2 seconds to turn on the hair follicle detection mode

03- Light Energy Activation Mode 04- Liquid Radiant mode

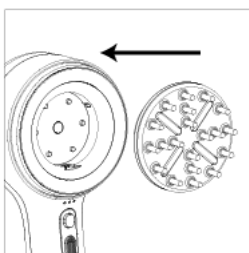

Install the EMS Aurora Energy head for light energy activation, long press the power button for 2 seconds to turn on, short press the power/mode button to turn on the light energy activation mode

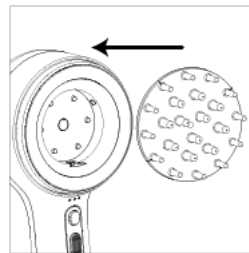


Install the glow secondary blast small coffee box for liquid guiding glow, hold the comb tooth clockwise twist 45° puncture the internal sealing film, long press the power

06/ Care mode

Activating equipment

1) To activate the device for the first time, open wechat to scan the following mini program code and activate the device according to the prompts, or manually search the "MYAI Hair diary" mini program to activate the device.

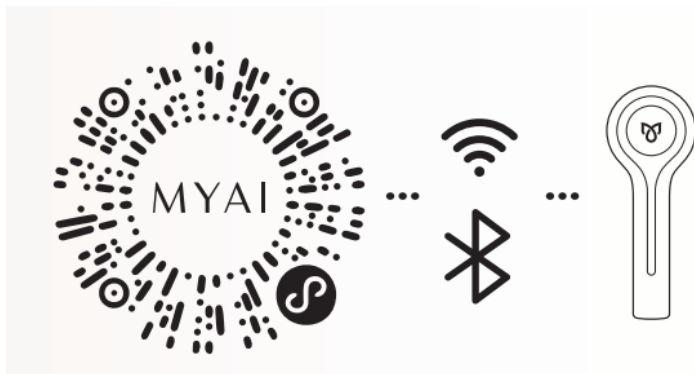

2) Install the corresponding function header and turn on the device, ensure that the Bluetooth of the mobile phone is on, and click the small program to add the device.

Mode 1: Hair follicle detection mode

- 1) Install the spectrum macro detection mirror, long press the power button for 2 seconds to turn on, and the detection light will turn on;
- 2) Connect 【MYAI hair diary 】 mini program, click to start detection;
- 3) Scalp detection can be carried out according to the instructions of the mini program. Image capture can be carried out by short pressing [Power/photo key], or image capture can be carried out by clicking the photo button through the mini program interface;

4) After the image collection is completed, click [Generate hair follicle test report] to view the detailed test results;

5) After the test, long press the power button for 2s to shut down, and then short press the replacement button to remove the spectrum macro detection mirror, and close the dust cover.



☀ Warm tips

1. Brush your hair smoothly before testing, and use your fingers to part the hair, exposing the scalp surface for easy testing.
2. Do not look directly at the lamp for a long time, as this may cause eye damage.
3. The scope itself is not waterproof. After testing, use a wet paper towel or a soft towel to wipe it.
4. Please cover the dust cover after use to avoid exposing the lens for a long time, so as not to affect the detection effect.
5. The spectroscopic macro detection mirror consumes more power. Please fully charge the host before use to avoid interruption in the use process and affect the transmission of detection data.

Mode 2: Light energy activation mode


1) Install the EMS Aurora energy head, long press the power button for 2 seconds to turn on, 360° high energy red light;

2) Short press [power/mode key] to start the nursing, it is recommended to use from the first gear, according to their own scalp tolerance degree to adjust;

This mode can also be started by clicking [Start nursing] through the mini program interface, and the gear adjustment and vibration function can be on/off in the mini program interface;

3) Massage technique: according to the four head meridian lines shown in the figure, massage with point-move technique, each half of 1 minute 30 seconds, a total of 3 minutes, after the use of short press [power/mode key] to end the care, you can also click on the small program [end care] to complete the care.

4) After the end of the massage, long press the power key 2s to shut down, and then short press the replacement key to remove the EMS Aurora energy head.

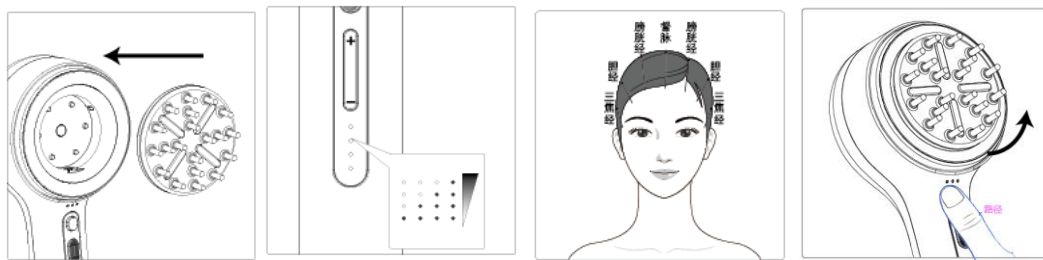

☀ Warm Tips

1. Do not look at the red light for a long time, otherwise your eyes may be damaged;
2. Do not stick the metal comb around the eyes, or it may cause eye damage.
3. The light activation mode is not limited to the use time, the official recommendation is to use at least 3 minutes a single time, and the maximum can be used for 30 minutes.
4. After use, simply wipe with a wet paper towel or soft towel.

Mode 3: Radiant mode

- 1) Install the small coffee box, long press the power button for 2 seconds, 360° high energy red light up; Hold the comb tooth end of the small coffee box and turn clockwise 45° to puncture the internal sealing film;
- 2) Short press [power/mode key] to open the liquid conduction; In this mode, you can also click [Start nursing] to open the fluid through the mini program interface;
- 3) Draining technique: according to the four head meridians shown in the figure, the method of combing the hair is used for draining the fluid, a total of 3 minutes, and the key hair loss area can be strengthened nursing;
- 4) After the end of the drainage, there will be a prompt tone of "liquid medicine is used up". You can short press the [power/mode key] to end the care, or click on the mini program to complete the care;
- 5) After the end of liquid drainage, long press the power key 2s to shut down, and then short press the replacement key to take off the small coffee box.



☀ Warm tips

1. The small coffee box is a disposable product, which can only be used for liquid drainage. Do not disassemble it privately, do not add other substances or corrosive liquids, so as to avoid damaging the host or blocking and corroding the liquid hole.
2. Do not look directly at the red light for a long time, otherwise your eyes may be damaged.
3. If the liquid is not used up, do not place the comb teeth of the small coffee box that glow with the second time face down to avoid wasting the essence.

07/ Body sensation problems and treatment methods

Problems	Speculate on the cause	Solutions
Electrofluid sensitivity is weak/somatosensory	Mode gear is too low	Please adjust to your proper gear
	EMS Aurora Energy head is not in full contact with scalp	Place the EMS Aurora Energy Head comb completely against the scalp and apply slight pressure.
	Different scalp areas have different electrical resistance	Different scalp parts of the current intensity of the feeling is not consistent, it is a normal phenomenon, you can adjust the massage site to see whether the instrument works normally.
Electric fluid sensation is too strong	Mode gear is too high	Turn it down to the right gear for you

08/ Product specifications

Product name	Intelligent detection hair conditioner
--------------	--

Product Model	MT1
Input	5V=1A
Rated voltage	3.7 V = 2 a
Power rating	6W
Battery capacity	1600mAh
enforce standards	GB4706.1-2005 GB4706.15-2008
Product Dimensions	196 * 76.5 * 46.5 mm

09/ Frequently asked questions and solutions

Breakdowns/Problems	Speculating on the cause	Solutions
Unable to boot properly	Battery dead	Once you have charged your device, try turning it on again
	Do not hold down the Power/mode button	Hold down the Power/Mode key for 2 seconds
	Possible host failure	Please contact customer service at the store where you purchased it
	Battery drained	Once you have charged your device, try turning it on again

Automatic shutdown of the device	The host may automatically shut down after being left in a cold environment for a long time	It is recommended to place the host at the recommended ambient temperature (0 ° C to 40 ° C) and press the Power/Mode button to power on the host after confirming that the host is fully charged
	The battery life may be faulty	Please contact the customer service of the store
Unable to charge	The charging cable is not fully plugged into the charging port	Insert the charging cable completely into the charging port and verify that the charging port is not loose.
	Outlet not plugged in	Check that the outlet is powered on and that it is working properly
	The adapter does not match the type-c charging cable	Use the original power adapter with the type-c charging cable
Bluetooth cannot be connected when using the applet	Cell phone Bluetooth or Location is not enabled	Please enable Bluetooth on your phone in Settings
	Bluetooth or Location turned on but not authorized	Authorize in Settings
	A Bluetooth module failure may occur	Please contact customer service at the store where you purchased it
Device without network	The device is not networked or the configured network cannot be connected	Connect applets to reconfigure the network
No graph is displayed in detection mode	Wifi is not connected to the network of the spectral macro detector	Manually connect to the network beginning with MYAI on the Settings page
	The spectral macro detector is not tightly connected to the host computer	Reinstall the spectral macro detector

10/ Safety precautions Instrument maintenance storage

Safety precautions

Before use, please be sure to read all the [Safety Precautions] carefully and use the product in strict accordance with the instructions in this manual. If you do not follow the instructions, it may cause adverse effects.

- 1) Do not use with other products/appliances at will.
- 2) It is not recommended for pregnant women, minors, heart disease patients, and people with head wounds.
- 3) During use, the instrument should avoid contact with water.
- 4) Make sure your hands are dry when charging or pulling out the charging head.
- 5) Do not use this product in a flammable environment.
- 6) Not recommended for people under the age of 18.
- 7) Please do not disassemble and repair this product by yourself. Please contact customer service of MYAI official flagship store for maintenance matters.
- 8) This product has built-in lithium battery, pay attention to the following matters:

- a. Please charge it in time when the power is insufficient.
 - b. It is normal that the charging speed may slow down in an environment below 10 ° C or when charging with a computer.
 - c. Please use and store this product in an environment of 0-40°C.
 - d. If you do not use it for a long time, please charge it every three months to prevent battery damage.
9. If the product is discarded, please dispose of it properly. Remove the battery and wrap the positive and negative terminals separately. Do not throw the battery into the trash can.
10. Do not use this device in places where wireless devices are prohibited, otherwise it will interfere with other electronic devices or cause other dangers.

Cleaning and maintenance

- 1) Make sure to fully charge the MYAI Hair tester before using it for the first time.

2) After each use, please use a soft lint-free cloth slightly wet, wet paper towel, cleaning cloth to wipe the cleaning function of the care head and body in time, do not wash with water, do not immerse the hair tester directly in water to clean.

3) Do not use steel ball, alkaline detergent, abrasive cleaning agent, alcohol, thinner, gasoline, nail polish remover, corrosive liquid to wipe the cleaning products.

4) In order to ensure the service life of the battery, please charge the instrument in time when it is indicated that the power is insufficient.

5) If the battery is completely depleted, it is recommended to fully charge it before the next use.

6) If the battery leakage phenomenon is found, do not turn on the device, and contact the customer service of MYAI official flagship store.

7) Do not repair, disassemble or modify the hair fitness instrument without authorization, and do not use the hair fitness instrument for other purposes.

Product storage and recycling

1) The instrument uses lithium battery. Do not place or store the instrument in humid or high temperature environment for a long time.

2) If it is not used for a long time, please store the product properly after full charge.

3) The internal battery of the instrument may contain substances that pollute the environment.

4) When disposing of the instrument, do not dispose of it with ordinary garbage. Please classify the garbage according to local laws and regulations, and dispose of the product in the recycling station designated by the government to contribute to the environmental protection.

5) Dispose of the waste electronic equipment according to the waste disposal method (applicable in the EU or other European countries with garbage separation treatment system).

11/ After-sale guarantee

Product after-sales service and guarantee

1) This warranty card please keep properly for maintenance proof.

2) We provide a one-year warranty for this product. The warranty period starts from the date of purchase.

3) During the warranty period, due to defects in the material or production process, we will replace the parts or the whole product according to the circumstances.

Non-service warranty scope

1) During the warranty period, if the following events occur, the company has the right to refuse service or charge material service fees at its discretion:

- a. Can not provide this manual and no valid proof of purchase.
- b. Damage caused by improper use, such as: using the wrong power supply, inserting the product into the wrong socket, human damage, etc.
- c. Man-made abnormal external force damage.
- d. Failure and damage caused by maintenance services not authorized by our company.
- e. Failure and damage caused by natural disasters or other force majeure factors.
- f. Other intentional damage.

The company reserves the right to modify and interpret all the above contents.

Warranty Card

Warranty period	Within one year of purchase	Product arrival date: year month day
Receiving information	Purchase ID:	
	Order number:	

	Recipient name:	
	Tel:	
	Delivery address:	
Warranty Reasons		

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.