



VERTU Cor Chain

A large, white, stylized 'X' graphic that serves as a background for the 'User Manual' text. The 'X' is composed of multiple parallel lines, giving it a sense of depth and a mechanical or architectural feel.

User Manual

Product Introduction

Care Smart Bracelet

24/7 tracking of heart rate, SpO_2 & other physiological data for daily health reference only.

WARNING: Not a medical device. Data cannot be used for diagnosis or treatment. Seek medical help promptly if unwell.

Package Contents

② Type-C Magnetic Charging Cable



③ User Manual



① Device



Note: The illustration is for reference only. The product is available in men's and women's versions. Please refer to the actual product for details.


Instructions for Use

Correct Wearing Method

1. First Use and Wearing

First Charge: Before first use, please fully charge the device to activate it. If the device is restored to factory settings through the mobile app, it must also be charged to power on again.

Correct Wearing: Wear the bracelet directly on your wrist. It is recommended to position it approximately 2.5 cm above the wrist bone. The bracelet should fit closely and comfortably, ensuring that the sensors are in full contact with the skin without causing pressure or discomfort. **Simple Fit Test:** If your little finger can easily slide between the bracelet and your wrist, the bracelet is too loose.

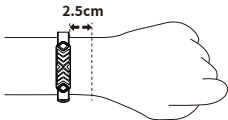


2. Charging and Battery Life

Charging the Device: Connect the charging cable to the bottom of the device to start charging. During charging, the green indicator light will flash. When the device is fully charged, the green indicator light will remain on.

Battery Life: After a full charge, the device can typically be used for more than 7 days under normal use. Actual battery life may vary depending on enabled functions, usage frequency, and environmental conditions.

Charging Indicator

Back View of the Device

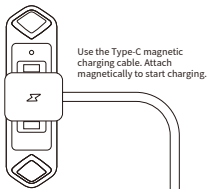



Device Body

Front View



LED Indicator Light

Charging Contacts

**Heart Rate and
Blood Oxygen
Sensor**

Back View

Download the App

Start Your Health Journey

Battery Life: After a full charge, the device can typically be used for more than 7 days under normal use. Actual battery life may vary depending on enabled functions, usage frequency, and environmental conditions. Please make sure Bluetooth is enabled on your mobile device. Select the detected device in the app to connect your smart bracelet.

Android and iOS users can scan the QR code to download the app.



Android Users



iOS Users

Reminder: Please make sure your phone runs Android 9.0 or above or iOS 13.0 or above. This bracelet supports Bluetooth 5.4 connection.

Add Device

1. Open the “METASELF APP” on your phone and register or log in to your account.
2. Tap Add in the upper-right corner of the device page, select the device you want to connect, and complete pairing.

Note: During pairing, please make sure Bluetooth is enabled on your phone and that the distance between the phone and the Care Smart Bracelet is within the effective connection range.

Specifications

Product Name: VERTU Cor Chain

Model: VAC11001

Bluetooth Version: Bluetooth Low Energy 5.4

Bluetooth Connection Distance: 1 meter

Battery Capacity: 21 mAh

Data Storage: 30 days

Water Resistance: 3 ATM daily water resistance

Activity Duration: Up to 99 hours 59 minutes

Calories Burned: Up to 9999.9 kcal

Running & Walking Distance: Up to 999.99 km

Troubleshooting

If the device cannot pair with your phone

1. Make sure the device is powered on.
2. Check your phone and make sure Bluetooth is enabled.
3. Check the app and make sure Bluetooth permission is enabled. You may also confirm this in your phone's Bluetooth settings.
4. Restart the app and return to the app's home screen.
5. At this point, the device battery level should appear on the device page in the app.

If the device cannot measure any data, please contact our customer service team.

If the Device Causes an Allergic Reaction

Stop using the device immediately.

In the rare event of anaphylactic shock, seek medical attention immediately.

If the issue you encounter is not covered above, please contact our customer service team and describe the problem in detail.

Safety Precautions

Failure to follow the safety instructions below may result in fire, electric shock, personal injury, or damage to the device or other property. Please read all safety information carefully before using the device.

Not a Medical Device

This device is not a medical device and is not a substitute for professional medical judgment. It is not designed for the diagnosis of disease or other conditions, nor for the cure, mitigation, treatment, or prevention of any illness or disease. Please consult a medical professional before making any health-related decisions.

Device Use and Maintenance

Please handle this device with care. It contains precision electronic components and may be damaged if dropped, burned, punctured, or crushed. Do not use the device if it is damaged, as this may cause personal injury.

Avoid contact with water whenever possible, and do not expose the device to large amounts of dust or sand for extended periods.

Children should use this device only under adult supervision and should not play with it independently.

Battery Safety

Do not attempt to replace the device battery by yourself. Doing so may damage the battery and may cause overheating or personal injury.

The lithium-ion battery inside the device may only be serviced or replaced by the manufacturer or an authorized service provider. Batteries must be recycled or disposed of separately from household waste. Do not incinerate the battery. Do not dispose of this device as household waste.

If you have any questions, please contact us.

Operating Temperature

This device is designed to operate in an ambient temperature range of 32°F to 113°F / 0°C to 45°C. The storage temperature range is -4°F to 158°F / -20°C to 70°C. Using or storing the device outside the above temperature ranges may damage the device or shorten battery life. Avoid exposing the device to environments with drastic changes in temperature or humidity.

Prolonged Heat Exposure

Do not expose the device to extreme temperatures or rapid temperature fluctuations. Avoid direct sunlight. When the device is charging or when the power plug is connected to a power source, do not sleep with it under your body, nor place it under a blanket, pillow, or your body. Please take extra care if you have a medical condition that affects your ability to sense heat.

Declaration of Electronic Information Products Containing Toxic/Hazardous Substances

Part name	Toxic/Hazardous substance or element					
	Pb	Hydrargyrum (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr6+)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Outer casing	○	○	○	○	○	○
Inner casing	○	○	○	○	○	○
Circuit board	○	○	○	○	○	○
Battery	×	○	○	○	○	○

○ : indicates that the content of this toxic/hazardous substance in all homogeneous materials of this part is below the limit specified in GB/T26572-2011 Requirements of Concentration Limits for Certain Restricted Substances in Electrical and Electronic Products.

×

x : indicates that the content of this toxic/hazardous substance in at least one homogeneous material of this part is higher than the limit specified in GB/T 26572-2011 Requirements of Concentration Limits for Certain Restricted Substances in Electrical and Electronic Products.

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF exposure statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

