

KUMI U5 Pro

# **Instructions Manual**

Thank you for choosing KUMI smartwatch. This manual will give you a complete understanding of how to use the equipment. This device is mainly connected to the mobile phone through Bluetooth function, providing a variety of practical functions and services to facilitate your operation of the mobile phone, and has developed many functions for human sports and health.

This equipment is not a medical device, and the measurement data and results are only for reference, not for diagnosis and treatment.

Due to the continuous improvement, optimization and upgrade of the product, the actual operation may be slightly different from the description in this manual. Please refer to the actual operation.

Based on the principle of continuous improvement and continuous optimization, the company reserves the right to modify and improve any content and product information and functions described in the document without prior notice.

## 1. Packing List



KUMI U5 Pro x1



Magnetic Charging  
Cable x1



User Manual x1




Protective Film x1

## 2. Basic Parameters

|                    |                               |
|--------------------|-------------------------------|
| Product Name       | KUMI U5 Pro<br>GPS Smartwatch |
| Body Material      | Alloy, Nylon, Fiberglass      |
| Wristband Material | Liquid Silicone, Alloy        |
| Wristband Size     | 22mm                          |

|                       |                                |
|-----------------------|--------------------------------|
| Battery Specification | 470mAh Lithium Polymer Battery |
| Charging Method       | Magnetic Seat Charging         |
| Charging Time         | 2-3 hours                      |
| Charging Temperature  | 0-40°C                         |


### 3. Product Introduction

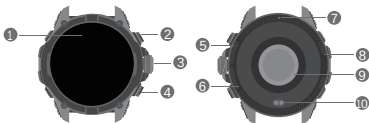

- |                   |                        |
|-------------------|------------------------|
| ① Screen          | ⑥ Pressure Relief Vent |
| ② Power button    | ⑦ Barometer Vent       |
| ③ Digital Crown   | ⑧ Speaker              |
| ④ Shortcut Button | ⑨ Heart Rate Sensor    |
| ⑤ Microphone      | ⑩ Charging Contacts    |

## 4. Watch Charging and Activation

Align the wireless charging dock with the back of the watch until the charging indicator appears on the watch screen. When the watch indicates a low battery, please charge it promptly. The charging power input for the watch is 5V — 2A Max. Do not use a power adapter with an output higher than 5V to charge the watch. The device is an integrated unit; the back cover and battery are not removable.



## 5. App Download

Go to the mobile app store and search for "KUMI Ultra" or scan the QR code below, and follow the prompts to download and install



**App Store**

App Store: KUMI Ultra



**Android**

Android: KUMI Ultra



## 6. Watch Connection Binding App

Note: Before binding the watch, make sure it is not already connected to another phone. If it is, please unbind it first.

Method 1: Open the App > Device > Add Device > Select "KUMI U5 Pro" and follow the prompts to complete the device binding.



Method 2: Open the App > Device > Tap the "+" in the top right corner, scan the QR code on the watch's initialization screen, and follow the prompts to complete the device binding.

## 7. Operating Instructions

### 1、 Button Operations

#### 1) Power button:

Short press: Turn screen on/off

Long press: \*When off, long press to power on  
\*When on, long press to access restart, power off, and factory reset options


#### 2) Digital crown

Short press: Turn screen on/open menu/return

Rotate: Scroll through menu icons in the menu interface

#### 3) Shortcut keys: user-defined

## 2. Touch operation

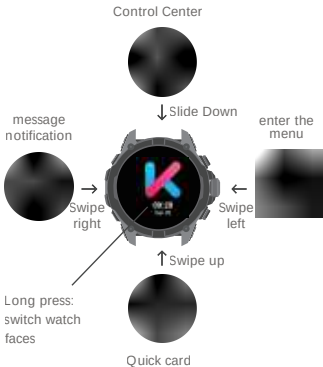

## **8. Frequently Asked Questions**

### **The watch does not turn on**

- 1) Check whether the power is sufficient, use the charging cable to charge the watch, and the charging voltage shall not be higher than 5V;
- 2) Check whether the watch screen is damaged by external forces, such as accidental drop;
- 3) Check whether the watch has water, damp caused by internal circuit short circuit can not be turned on.

### **Bluetooth not connected or unable to connect**

- 1) On the watch face screen, swipe down to access the control center and check if the "📶" icon is in a disconnected state;
- 2) Check whether the Bluetooth of the mobile phone is enabled normally and whether the APP has obtained the location permission;
- 3) Try restarting the device or performing a factory reset

### **Why Android phones are easy to disconnect**

The App should be running in the background continuously, however, Android's memory

management will force the App to close. To fix this, it is needed to manually disable the phone's power saving mode, or add the App to the system management green background. For specific steps to configure this, please refer to the manual of your phone or contact KUMI customer service

For more frequently asked questions, please check the App [My>FAQ] or send an email to our customer service email [service@kumi.top](mailto:service@kumi.top)

## **9.SAFETY WARNING**

Please read all safety information before using this product to ensure safe and proper use.

1. In case of equipment failure or factory reset, if you do not keep the backup file safely, you will not be able to recover the previous data. Be sure to back up all important data stored on the equipment and keep it in a safe place;
2. When using a power-intensive application or using an application on the device for a long time, the device feels hot to the touch, which is normal and does not affect the use or performance of the device;

3. If the touch screen is equipped with protective film or the hands are not clean, or the touch screen reacts slowly and may not work properly, if the touch screen is scratched or damaged, there may be a risk of water ingress and moisture;
4. This product is not suitable for children under the age of 14 to use alone;
5. All packaging materials (such as tape, plastic bags, plastic sheets, labels, binding lines, etc.) and small parts of the machine should not be touched by children under 3 years old to avoid suffocation risk.

Observe the following warnings to prevent personal injury or damage to equipment:

1. Do not allow children or animals to chew or swallow the equipment and accessories;
2. Do not poke eyes, ears or other body parts with the device or put the device in your mouth;
3. Do not store the equipment in an overheated or overcooled environment. It is recommended to use it in an environment with a temperature between -5°C and 40°C;
4. Do not store equipment near or inside heaters, microwave ovens, cooking equipment, or pressure vessels;

5. Do not drop, squeeze, impact or scratch the equipment;
6. Do not use the equipment in thunderstorm weather;
7. Please keep the equipment dry and clean;
8. Please observe all safety warnings and regulations regarding the use of mobile devices while driving;
9. Do not wear or use this product while charging.

## **10.LEGAL STATEMENT**

- Copyright © KUMI Technology Co., Ltd. All rights reserved.
- The company has the right to modify any information in this manual at any time without notifying any third party, and does not assume any responsibility to the third party for such modification;
- Without the written consent of the company, any unit or individual shall not extract, copy or use the contents of this manual in any other way, and shall not transmit it in any form;
- This guide is for reference only and does not constitute any form of commitment. Products (including but not limited to color, size screen display, etc.) shall be subject to the actual product;

- Due to the upgrade of software version, the contents introduced in this guide are for reference only. Please refer to the actual product;
- This equipment is not a medical device. The measurement data and results are for reference only and should not be used as the basis for medical diagnosis. If you feel uncomfortable, please consult a medical institution.

## **11.FCC WARNING**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID: 2BGPH-KUMIU5PRO



KUMI Technology Co., Ltd.

Web: [www.kumi.top](http://www.kumi.top)

Mail: [service@kumi.top](mailto:service@kumi.top)

Address: KUMI Technology, Room 405, Block A, United  
Financial Holdings Building, No.1 Shihua Road, Hetao  
Shenzhen-Hong Kong Science and Technology  
Innovation Cooperation Zone, Futian District, Shenzhen

Made in China

