

FCC Composite Gain Test Report

TP-Link INTERNATIONAL SHENZHEN CO., LTD

<http://www.tp-link.com>

*5/F, Fully Best Building, No.1 Kefa Road,
High-Tech Industry Park, Nanshan District,
ShenZhen, P. R. China*



Copyright © 2022 By TP-Link INTERNATIONAL SHENZHEN CO., LTD. All rights reserved.

The drawings, specifications and the data contained in this document are exclusively the property of TP-Link INTERNATIONAL SHENZHEN CO., LTD. The information is intended for internal use only and is subject to change without any notice.

With no written permission from TP-Link INTERNATIONAL SHENZHEN CO., LTD, this document, in parts or as a whole, shall not be reproduced, copied, or used in any form or by any means to make any derivatives such as translation, transformation, or adaptation, for any purpose whatever.



is a registered trademark of TP-Link INTERNATIONAL SHENZHEN CO., LTD.

Other brands and product names mentioned herein are trademarks or registered trademarks of their respective holders.

Warning

This document is intended for internal use only. A Non-Disclosure Agreement (NDA) approved by Chief Technology Officer (CTO) is required to release this document under any circumstances.

Basic Information

EUT Description:	AX1800 Indoor/Outdoor Wi-Fi 6 Access Point		
Brand Name:	tp-link		
Model Name:	EAP603-Outdoor		
Tested By:	Yang Junyu	Date:	2024/12/2

CONTENTS

1	Operation Mode and Antenna Information	4
1.1	EUT Operation Mode	4
1.2	Antenna Information	4
1.3	Test Frequency	5
2	Test Equipment	5
2.1	Test System	5
2.2	Test Software	5
3	Test Summary	6
3.1	Measurement Environment	6
3.2	Measurement Quantity	8
3.3	Test Method	8
3.4	Directional Gain Calculations	9
3.5	Test Procedure	10
4	Measured Value and Maximum Gain Positions	11
4.1	Antenna Number	11
4.2	6G	11
4.2.1	DG_1SS Max Value Position	11
4.2.2	DG_1SS Max Value Position Calculation	11
5	Test and Calculate Result	11
5.1	Directional Gain Calculate Result	12
5.2	Antenna Test Result	12
6	Test Pattern	14
6.1	Antenna Pattern	14
7	Test Pattern	15


1 Operation Mode and Antenna Information

1.1 EUT Operation Mode

The EAP603-Outdoor is the Dual-Band Outdoor AP with 2 internal antennas and 2 external antennas, of which 2 were 2.4G & 5G Dual-Band antennas, 1 was 2.4G antenna and 1 was 5G antenna.

1.2 Antenna Information

The Locations of Antennas are shown below

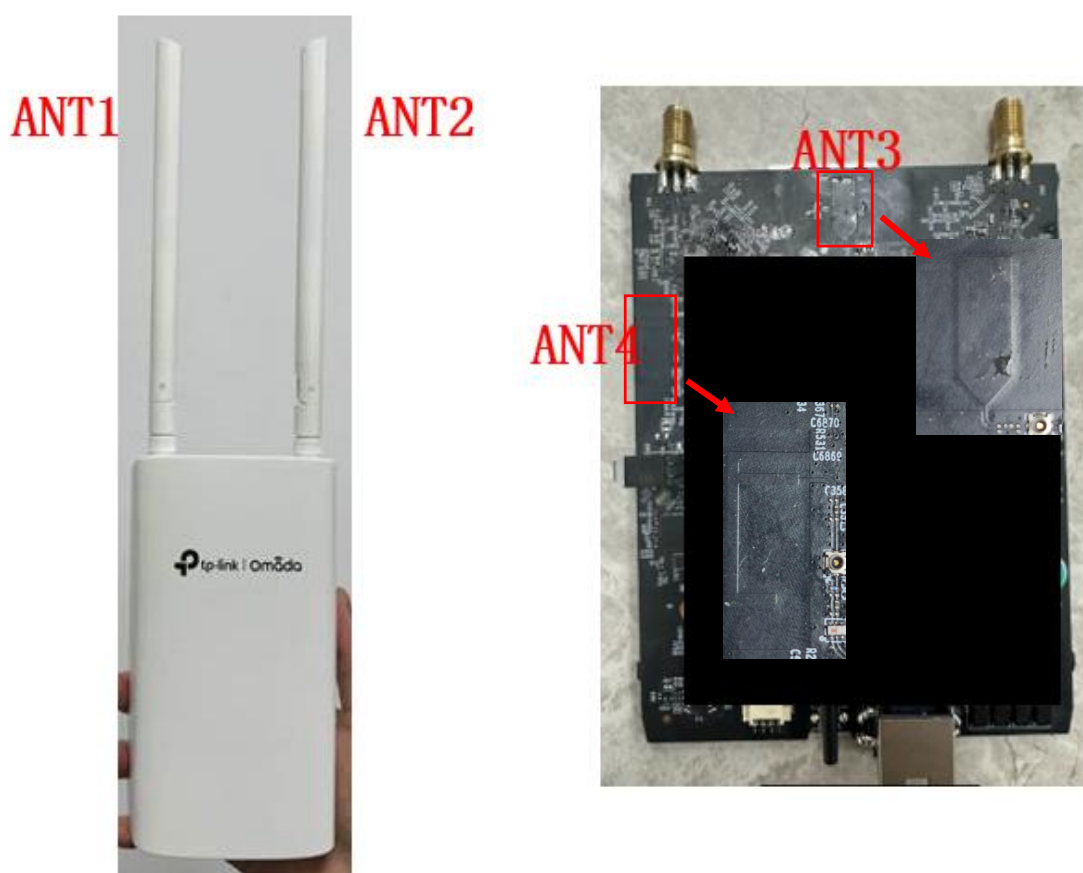

The Antenna Information was shown below:

Antenna Position	Antenna Type	Connector	Mode of operation
ANT1	Dipole	RP-SMA	2.4GHz&5GHz
ANT2	Dipole	RP-SMA	2.4GHz&5GHz
ANT3	Dipole	On-board	5GHz
ANT4	Dipole	On-board	2.4GHz

1.3 Test Frequency

The Listed frequency of each bands are selected to represent each frequency bands.

Frequency Band(MHz)	Test Frequency(MHz)
2400-2500	2450
5150-5250	5200
5250-5350	5300
5470-5725	5600
5725-5895	5800

2 Test Equipment

2.1 Test System

Equipments	Model	Manufacturer	S/N	Cali. Interval	Cali. Due Date
Chamber	Rayzone2800	GTS	MY53470435	12months	2026/06/15
Vector Network Analyzer	E5071C	Keysight	MY46315238	24months	2026/03/13

2.2 Test Software

Software	Version	Function
GTS MaxSign100	V2.1	Passive Antenna Measurements

3 Test Summary

3.1 Measurement Environment

This measurement experiment adopted an antenna near-field measurement system, and the diagram of the measurement system was shown in Figure 2-2. The excitation signal was generated by the Keysight E5071C (300kHz-20GHz). Under the control of the central computer, the probe rotated in the θ direction, and the EUT rotated in the ϕ direction with the turntable. The probe sampling frame received and collected signals in the near-field range of the EUT. The software system which was controlled by the central computer completed the processing, output and display of the test data.

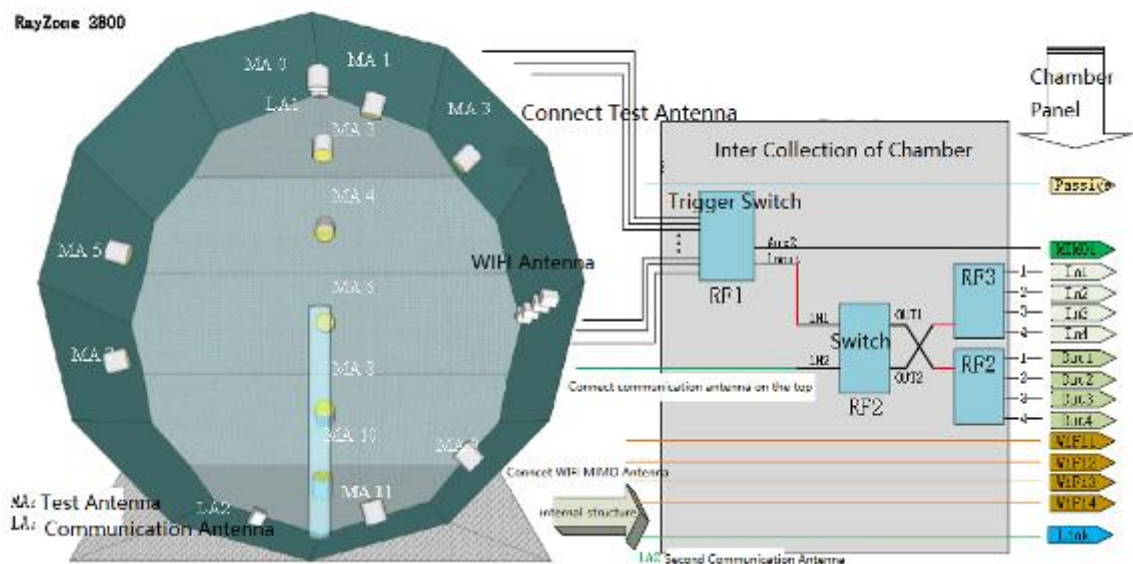


Figure 3-2 Schematic diagram of antenna near-field measurement system

The test site was a full anechoic chamber with a size of 3.0m×3.1m×2.97m, which was built by GTS Rayzone2800. All six surfaces of the anechoic chamber were pasted with absorbing materials. And the chamber was calibrated by the authoritative third-party lab every year. The antenna anechoic chamber measurement system adopted a 13-probe multi-probe system. The probe antennas were evenly distributed on the spherical surface surrounding the EUT, and their operating frequency was 600MHz~8.5GHz.

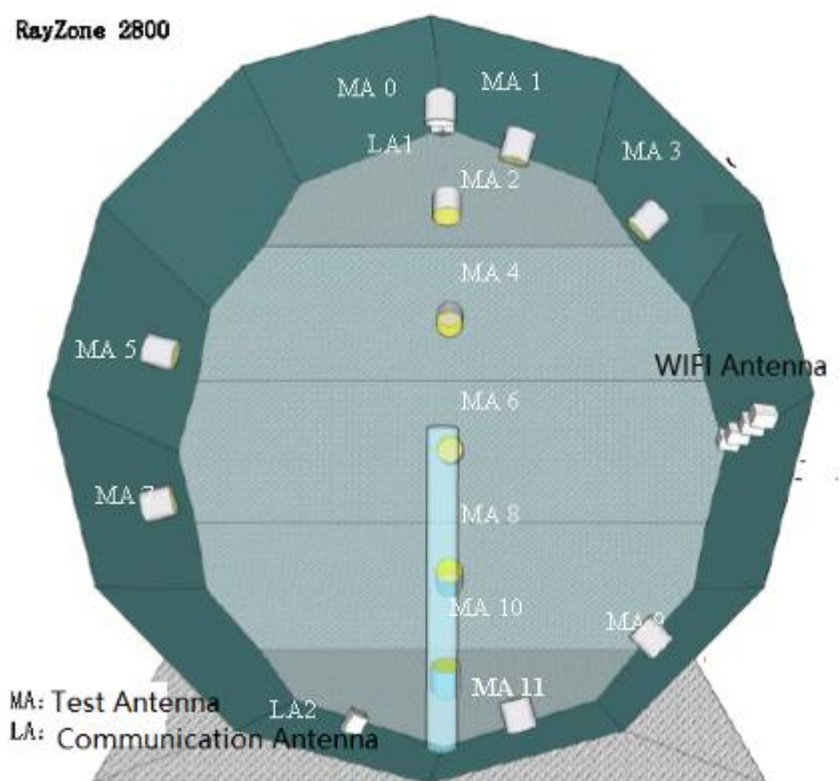


Figure 3-3 Antenna anechoic chamber for near-field measurement

During the measurement, the probe antennas were rotated in the θ direction under the control of the probe holder to sample the near-field data at the θ angle. At the same time, the EUT rotated with the turntable in the ϕ direction to sample the near field data at the ϕ angle. The system diagram was shown in Figure 2-4. From the sampling results, the EUT's near-field test data of θ component, ϕ component and total component could be obtained.

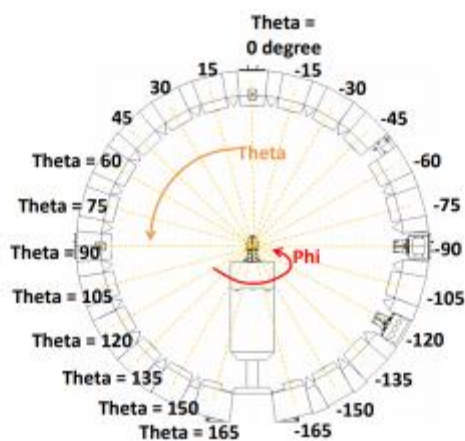


Figure 3-4 System diagram

Before the measurement, calibrated the vector network analyzer, and then connected the input end of each antenna to the output end of the vector network analyzer, and evenly the antennas to be measured. The Calibration information was shown in table 2-1.

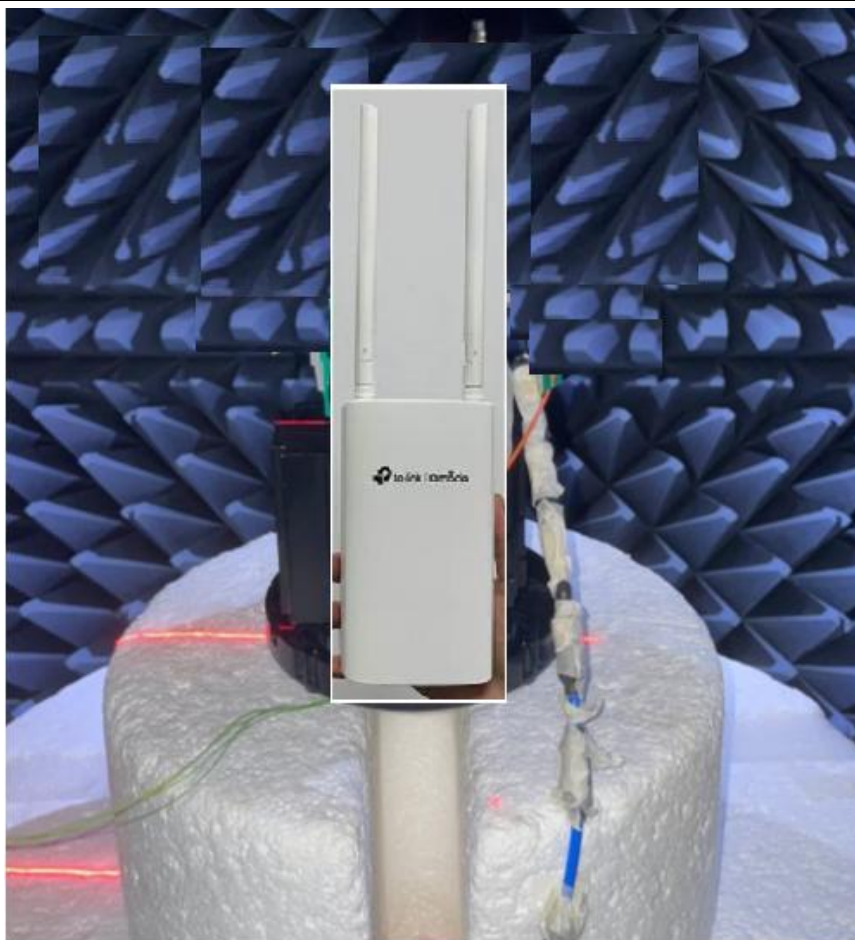


Figure 3- 5 Antennas measurement diagram

Table 3- 2 Calibration information

Measurement Class	Standard
Cal Type	2p/1-2
Cal Kit	N4691B

3.2 Measurement Quantity

In this measurement experiment, the Directional Gain was measured at a certain frequency interval within the whole frequency range. The measurement frequency interval of the 2.4G antennas was 10MHz, while the 5G and 6G antennas was 50MHz,

3.3 Test Method

During the measurement, the probe antennas were rotated in the θ direction under the control of the probe holder to sample the near-field data at the θ angle. At the same time, the EUT rotated with the turntable in the ϕ direction to sample the near field data at the ϕ angle. The sampling accuracy was 15° . The system diagram was shown in Figure 2-6. From the sampling results, the EUT's near-field test data of θ component, ϕ component and total component could be obtained.

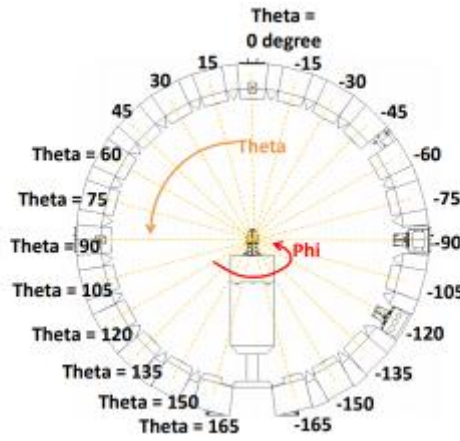


Figure 3-6 Test angle

3.4 Directional Gain Calculations

Multiple antennas system, each of which has one of two (or three) polarizations that are orthogonal to one another (i.e., cross polarized), The total gain—including array gain—is computed separately for each of the two (or three) polarizations using the procedures presented in this document. The highest of the total gains shall apply.

Theoretical Directional Gain represented the theoretical value calculated by formula 2-1. As we all know, the effect of array gain must be included in the calculation of overall directional antenna gain for devices that transmit on multiple outputs simultaneously in the same band, in the same or in overlapping frequency ranges. Therefore, in formula 2-1, the directional gain calculation needs to include all directions and all Frequencies and all Polarizations, and then take the maximum value as the final directional gain value. Therefore, the calculation formula of theoretical directional gain value can be modified as formula 2-2

NSS=1:

$$\text{Directional Gain} = 10\log \left[\frac{\sum_{j=1}^{NSS} \left(\sum_{k=1}^{N_{ANT}} g_{j,k} \right)^2}{N_{ANT}} \right] \quad (2-1)$$

Where

Nss = the number of independent spatial streams of data; NSS =1.

Nant = the total number of antennas: NANT =4 for 6G antennas

$g_{j,k} = 10^{G_k/20}$ if the kth antenna is being fed by spatial stream j, or zero if it is not;

G_k is the gain in dBi of the kth antenna .

$$\text{Directional Gain} = \text{Maximum} \left[10\log \left[\frac{\sum_{j=1}^{NSS} \left(\sum_{k=1}^{N_{ANT}} g_{j,k} \right)^2}{N_{ANT}} \right] \right] \quad (2-2)$$

Maximum function is the max directional gain overall directions and all frequency all polarizations.

NSS=4:

(ii) If all transmit signals are *completely uncorrelated*, then

$$\text{Directional gain} = 10 \log[(10^{G_1/10} + 10^{G_2/10} + \dots + 10^{G_N/10})/N_{\text{ANT}}] \text{ dBi}$$

Where

N_{ss} = the number of independent spatial streams of data;

N_{ant} = the total number of antennas:

$$g_{j,k} = 10^{G_k/20} \text{ if the } k\text{th antenna is being fed by spatial stream } j, \text{ or zero if it is not;}$$

G_k is the gain in dBi of the k th antenna .

$$\text{Direction Gain} = \text{Maximum}[10 \log(10^{G_1/10} + 10^{G_2/10} + \dots + 10^{G_N/10}) / N_{\text{ANT}}] \quad (2-3)$$

Maximum function is the max directional gain overall directions and all frequency all polarizations.

3.5 Test Procedure

The calculation method of DG (Directional Gain) in this scheme is summarized as follows:

- 1) The antenna anechoic chamber is used to measure the gain of each antenna, the gain of each antenna at this angle is taken every 15° to calculate the Directional Gain;
- 2) Use formula below to calculate and the Directional Gain of the system at this angle is obtained

$$\text{Directional Gain} = 10 \log \left[\frac{\sum_{j=1}^{N_{\text{ss}}} \left(\sum_{k=1}^{N_{\text{ANT}}} g_{j,k} \right)^2}{N_{\text{ANT}}} \right] \quad (2-3)$$

- 3) For each frequency point, the Directional Gain value under 24 different angles can be obtained, and finally the maximum value is taken as the system Directional Gain value.

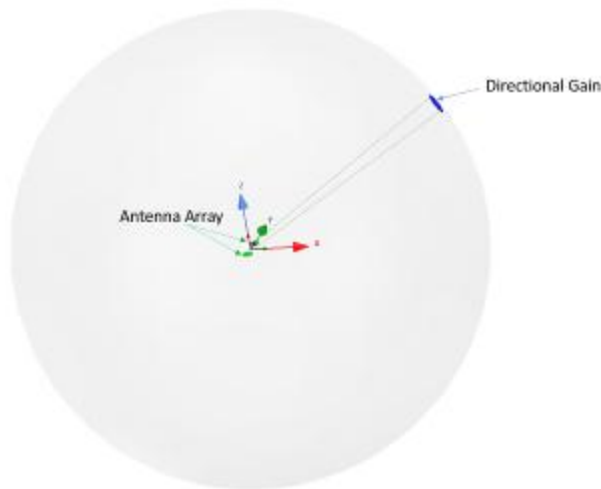


Figure 3- 7 Directional Gain Calculation Sketch Map

4 Measured Value and Maximum Gain Positions

4.1 Antenna Number

Then Antennas' Number for measured in the following section was shown below:

Antenna Number	Antenna Position
	2G&5G
Ant1	ANT1
Ant2	ANT2
Ant3	ANT3
Ant4	ANT4

4.2 2.4G

4.2.1 DG_1SS Max Value Position

Frequency(GHz)	2.5
Ant1(dBi)	4.05
Ant2(dBi)	4.44
Polarization	Theta
Φ (°)	180°
θ (°)	75°

4.2.2 DG_1SS Max Value Position Calculation

Frequency(GHz)	2.5
Ant1[10^(G/20)]	10^(4.05/20)
Ant2[10^(G/20)]	10^(4.44/20)
Ant1[10^(G/20)] value	1.594
Ant2[10^(G/20)] value	1.667
Sum of Ants Value(Antmax)	3.261
DG[10*Log(Antmax^2/Nant)] (dBi)	7.26

4.3 5G

4.3.1 DG_1SS Max Value Position

Frequency(GHz)	5.2	5.3	5.6	5.8
Ant1(dBi)	3.93	1.11	3.04	2.78

Ant2(dBi)	4.26	4.3	2.97	-0.32
Ant3(dBi)	-5.57	0.6	0.13	1.65
Polarization	Theta	Theta	Theta	Theta
Φ (°)	30°	75°	225°	240°
θ (°)	90°	90°	90°	75°

4.3.2 DG_1SS Max Value Position Calculation

Frequency(GHz)	5.2	5.3	5.6	5.8
Ant1[10^(G/20)]	$10^{(3.93/20)}$	$10^{(1.11/20)}$	$10^{(3.04/20)}$	$10^{(2.78/20)}$
Ant2[10^(G/20)]	$10^{(4.26/20)}$	$10^{(4.3/20)}$	$10^{(2.97/20)}$	$10^{(-0.32/20)}$
Ant3[10^(G/20)]	$10^{(-5.57/20)}$	$10^{(0.6/20)}$	$10^{(0.13/20)}$	$10^{(1.65/20)}$
Ant1[10^(G/20)] value	1.572	1.136	1.419	1.377
Ant2[10^(G/20)] value	1.633	1.641	1.408	0.964
Ant3[10^(G/20)] value	0.527	1.072	1.015	1.209
Sum of Ants Value(Antmax)	3.732	3.849	3.842	3.55
DG[10*Log(Antmax^2/Nant)] (dBi)	6.67	6.93	6.92	6.23

5 Test and Calculate Result

5.1 Directional Gain Calculate Result

Table 3-1 Test & Calculate Result

Frequency Band	Max Antenna Gain	Max Directional Gain	NSS	Polarization/ Φ (°) / θ (°)
2.4G (2.45GHz)	4.08dBi	7.26dBi	1	Theta/180/75
5G (5.2GHz)	4.68dBi	6.67dBi	1	Theta/30/90
5G (5.3GHz)	4.68dBi	6.93dBi	1	Theta/75/90
5G (5.6GHz)	5.14dBi	6.92dBi	1	Theta/225/90
5G (5.8GHz)	4.50dBi	6.23dBi	1	Theta/240/75

5.2 Antenna Test Result

Frequency(GHz)	2.45	5.2	5.3	5.6	5.8
Ant1 MaxGain(dBi)	4.08	4.07	4.11	5.14	4.50
Ant2 MaxGain(dBi)	4.08	4.07	4.11	5.14	4.50
Ant3 MaxGain(dBi)	/	4.68	4.68	4.39	4.47
Ant4 MaxGain(dBi)	3.66	/	/	/	/




Ant1 Polarization/ Φ (°) / θ (°)	Theta/90/90	Theta/165/60	Theta/30/45	Theta/105/45	Theta/90/90
Ant2 Polarization/ Φ (°) / θ (°)	Theta/120/45	Phi/30/45	Phi/315/45	Theta/45/60	Theta/120/45
Ant3 Polarization/ Φ (°) / θ (°)	/	Theta/315/60	Theta/135/60	Theta/210/60	Theta/240/60
Ant4 Polarization/ Φ (°) / θ (°)	Theta/240/60	/	/	/	/
Max Gain(dBi)	4.08	4.68	4.68	5.14	4.50



6 Test Pattern

6.1 Antenna Pattern


2.4G_Ant1

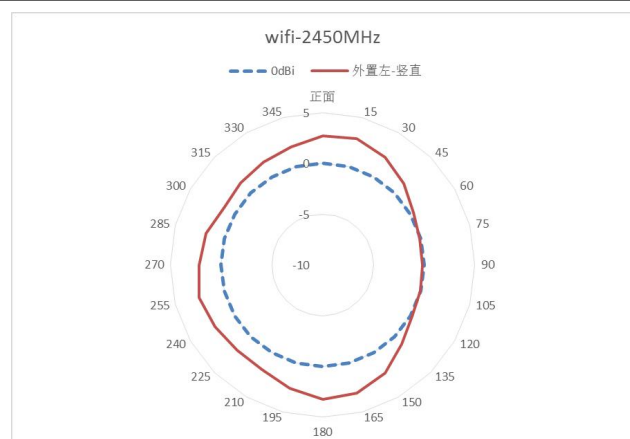



5G_Ant1

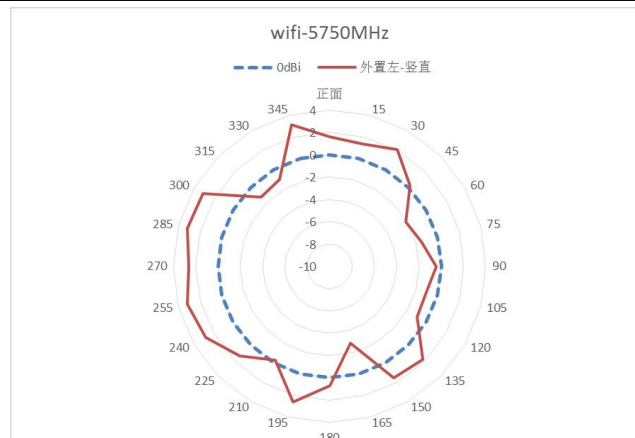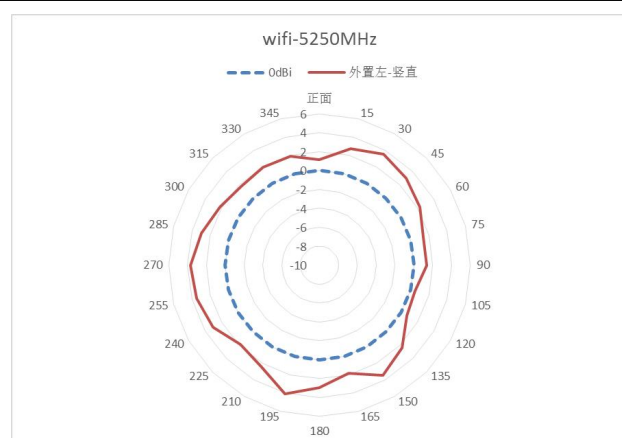



2.4G_Ant2

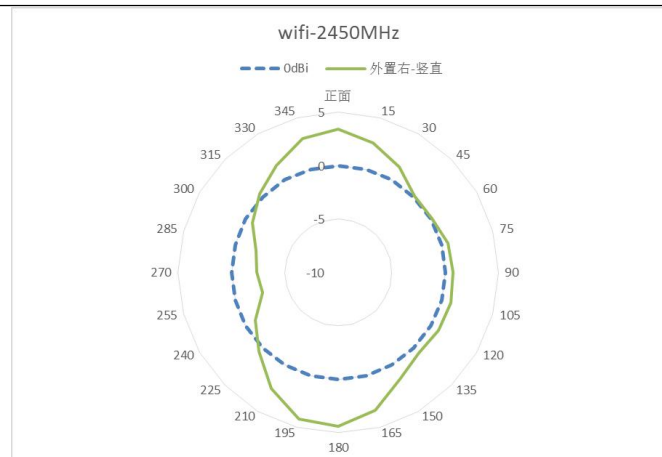


5G_Ant2

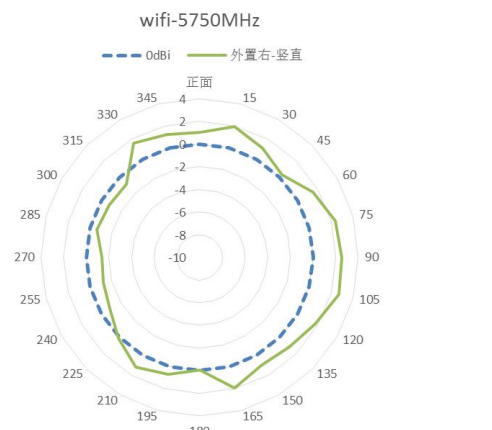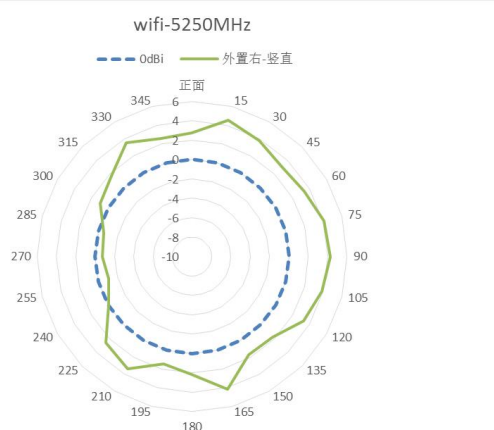

5G_Ant3

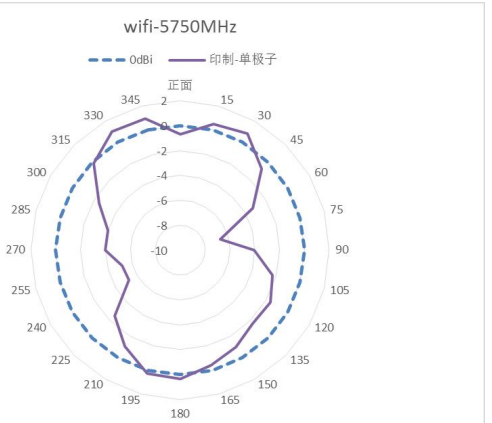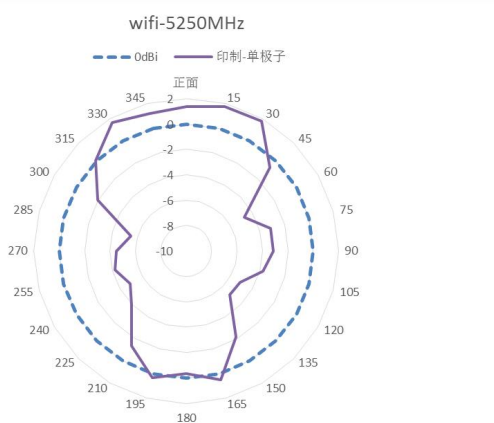

2.4G_Ant4

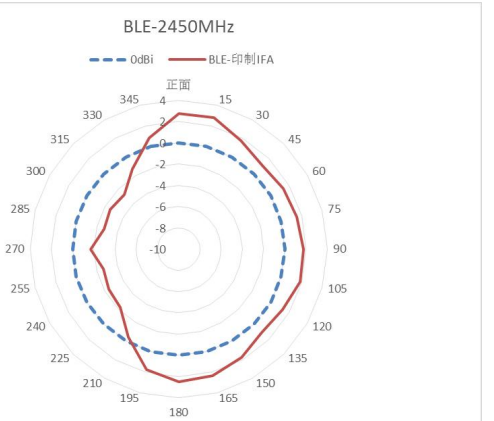

7 Test Pattern

2G1													
Freq	2450												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-19.92	-13.87	-6.19	-1.38	2.35	3.12	2.7	0.82	-5.23	-6.96	-11.07	-8.62	-26.79
15	-20.24	-14.18	-5.87	-1.16	2.28	3.03	2.86	0.56	-4.81	-6.25	-10	-9.11	-26.79



30	-20.77	-14.53	-6.22	-1.64	1.74	2.18	2.26	-0.6	-4.05	-4.79	-8.93	-10.91	-26.79
45	-21.33	-14.79	-7.15	-2.59	0.73	1.18	1.27	-2.64	-4.22	-4.99	-10.05	-14.2	-26.79
60	-21.22	-14.7	-8.6	-3.5	-0.12	0.39	0.3	-4.05	-4.11	-5.61	-11.56	-17.85	-26.79
75	-21.31	-14.33	-10.06	-4.38	-0.28	-0.13	-0.11	-5.13	-4.04	-6.84	-13.61	-23.01	-26.79
90	-20.88	-13.89	-10.82	-5.64	-0.15	-0.16	-0.17	-4.91	-4.41	-7.41	-15.12	-26.79	-26.79
105	-21.14	-13.37	-10.39	-6.79	-0.1	0.04	-0.07	-4.75	-4.55	-7.11	-13.37	-16.26	-26.79
120	-21.25	-12.98	-9.48	-6.65	0.03	0.64	0.16	-3.44	-4.56	-6.07	-11.58	-13.78	-26.79
135	-21.07	-12.87	-8.76	-5.95	0.48	1.67	1.02	-1.16	-4.34	-4.29	-9.54	-10.76	-26.79
150	-20.54	-13.25	-8.77	-5.68	1.09	2.95	2.32	0.72	-3.51	-2.92	-7.35	-8.05	-26.79
165	-20.41	-14.12	-9.63	-6.11	1.36	4.01	3.07	1.92	-2.62	-2.85	-6	-7.37	-26.79
180	-20.56	-15.42	-11.29	-7	1.13	4.05	3.25	1.85	-2	-3.56	-5.93	-7.65	-26.79
195	-20.95	-16.93	-13.32	-8.41	-0.02	3.29	2.58	1.2	-3.08	-5.01	-6.87	-8.16	-26.79
210	-21.07	-18.42	-14.45	-9.83	-1.47	2.34	1.91	0.14	-4.85	-6.46	-8.26	-8.91	-26.79
225	-20.81	-19.75	-14.72	-9.88	-1.97	1.45	1.87	-0.69	-6.36	-7.41	-10.53	-9.75	-26.79
240	-20.13	-20.05	-14.17	-9.35	-1.64	1.31	2.24	-1.44	-6.09	-9.3	-14.37	-9.95	-26.79
255	-19.68	-19.55	-13.25	-8.44	-1.33	1.46	2.57	-1.87	-6.08	-11.37	-17.53	-10.18	-26.79
270	-19.66	-19.48	-12.63	-7.15	-1.45	1.88	2.15	-1.67	-7.14	-12.32	-18.21	-10.33	-26.79
285	-20.09	-18.86	-11.79	-7.69	-0.94	1.51	1.89	-2.17	-7.65	-10.08	-14.17	-9.64	-26.79
300	-20.62	-17.69	-11.23	-8.19	-1.43	1.74	1.23	-3.27	-7.28	-10.63	-12.49	-8.72	-26.79
315	-21.05	-16.31	-10.74	-6.08	-1.31	1.42	1.43	-3.43	-8.04	-12.5	-13.07	-8.29	-26.79
330	-20.74	-14.92	-9.15	-4.15	0.42	1.51	1.64	-2.09	-6.98	-8.57	-12.06	-8.32	-26.79
345	-20.43	-14.13	-7.32	-2.47	1.7	2.54	2	-0.05	-6.02	-6.48	-11.01	-8.51	-26.79

2G2													
Freq	2450												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-17.88	-11.43	-5.72	-0.68	2.76	3.33	3.42	1.27	-4.35	-4.79	-7.83	-8	-18.98
15	-17.71	-11.75	-6.54	-2.28	2.03	3.34	2.56	0.42	-3.52	-4.5	-6.93	-7.29	-18.98
30	-17.46	-12.49	-7.87	-4.71	0.53	2.09	1.38	-1.33	-4.63	-6.08	-7.53	-6.74	-18.98
45	-17.45	-13.7	-10.11	-6.43	-1.94	1.2	0.1	-2.37	-6.87	-7.37	-8.36	-6.78	-18.98
60	-17.35	-15.14	-13.14	-7.02	-3.42	0.79	0.11	-2.54	-8.79	-8.67	-9.64	-7.37	-18.98
75	-17.25	-16.3	-15.55	-7.09	-3.16	0.66	0.62	-2.18	-9.01	-10.86	-10.68	-7.93	-18.98
90	-17.29	-17.02	-16.09	-6.92	-2.85	0.85	0.78	-1.74	-8.83	-13.07	-11.19	-8.2	-18.98
105	-17.17	-17.33	-15.75	-7.17	-2.6	0.62	0.94	-1.9	-9.19	-11.94	-11.32	-8.22	-18.98
120	-17.08	-17.62	-15.3	-7.85	-2.55	0.12	0.87	-2.27	-9.06	-9.84	-11.01	-8.51	-18.98
135	-16.81	-17.31	-13.88	-7.82	-2.4	0.39	0.67	-1.41	-8.65	-7.41	-9.75	-8.65	-18.98
150	-16.42	-16.69	-11.73	-6.61	-1.46	1.95	1.54	0.2	-6.5	-5.23	-8.2	-8.1	-18.98
165	-16.04	-15.96	-9.98	-5.73	0.31	3.55	3.41	1.57	-4.23	-3.5	-6.94	-7.37	-18.98
180	-15.94	-14.94	-9.09	-5.24	1.45	4.44	4.39	2.47	-3.06	-2.66	-6.09	-6.9	-18.98
195	-16.16	-14.07	-9.05	-4.93	1.43	4.36	4.21	2.01	-2.89	-2.77	-5.53	-7.35	-18.98
210	-16.45	-13.32	-9.4	-5.12	0.62	3.36	2.55	0.8	-4.51	-2.96	-5.64	-8.65	-18.98
225	-16.68	-12.67	-9.22	-5.72	-0.24	1.77	0.49	-1.75	-6.23	-3.38	-7.32	-10.24	-18.98
240	-16.76	-12.29	-9.05	-6.52	-0.76	0.45	-1.05	-4.78	-6.27	-5.29	-9.92	-11.53	-18.98



255	-16.51	-12.32	-9.26	-6.17	-1.57	0.51	-2.63	-4.29	-7.34	-7.75	-12.18	-13.34	-18.98
270	-16.37	-12.71	-8.69	-5.86	-1.73	0.22	-2.38	-4.87	-6.64	-7.58	-12.76	-16.46	-18.98
285	-16.58	-13.1	-7.54	-5.69	-2.21	0.02	-2.05	-5.05	-5.57	-6.59	-11.3	-18.98	-18.98
300	-16.78	-13.04	-6.67	-4.19	-2.08	-0.4	-0.73	-5.08	-7.36	-8.04	-12.12	-16.63	-18.98
315	-17.29	-12.6	-6.13	-2.41	-0.12	-0.35	0.43	-3.82	-7.06	-6.61	-11.68	-12.65	-18.98
330	-17.77	-11.99	-5.68	-1.15	1.68	1.05	1.57	-0.75	-6.98	-4.94	-10.17	-10.16	-18.98
345	-17.88	-11.58	-5.44	-0.47	2.82	2.36	2.97	0.89	-6.05	-5.07	-9.22	-8.77	-18.98

2.45GHz Composite Gain NSS=1													
Freq	2450												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-15.83	-9.55	-2.94	1.99	5.57	6.24	6.08	4.06	-1.77	-2.80	-6.29	-5.29	-19.02
15	-15.87	-9.87	-3.19	1.31	5.17	6.20	5.72	3.50	-1.13	-2.32	-5.32	-5.14	-19.02
30	-15.95	-10.44	-4.00	-0.03	4.17	5.15	4.84	2.05	-1.32	-2.40	-5.19	-5.57	-19.02
45	-16.16	-11.22	-5.49	-1.29	2.51	4.20	3.71	0.51	-2.43	-3.09	-6.15	-6.71	-19.02
60	-16.06	-11.91	-7.57	-2.07	1.40	3.60	3.22	-0.25	-3.13	-4.00	-7.54	-8.11	-19.02
75	-16.03	-12.25	-9.37	-2.62	1.41	3.28	3.27	-0.52	-3.16	-5.61	-9.01	-9.53	-19.02
90	-15.89	-12.30	-10.05	-3.25	1.61	3.37	3.33	-0.17	-3.33	-6.78	-9.92	-10.24	-19.02
105	-15.92	-12.12	-9.65	-3.97	1.75	3.35	3.46	-0.20	-3.55	-6.18	-9.27	-8.33	-19.02
120	-15.91	-11.98	-8.90	-4.22	1.85	3.39	3.53	0.17	-3.51	-4.74	-8.28	-7.74	-19.02
135	-15.67	-11.80	-7.94	-3.82	2.17	4.06	3.86	1.73	-3.22	-2.70	-6.63	-6.63	-19.02
150	-15.23	-11.79	-7.11	-3.12	2.92	5.47	4.95	3.47	-1.87	-0.99	-4.75	-5.06	-19.02
165	-14.94	-11.98	-6.79	-2.91	3.86	6.79	6.25	4.76	-0.38	-0.16	-3.45	-4.36	-19.02
180	-14.94	-12.17	-7.11	-3.07	4.30	7.26	6.85	5.18	0.50	-0.09	-3.00	-4.26	-19.02
195	-15.22	-12.37	-7.91	-3.49	3.75	6.85	6.44	4.62	0.03	-0.81	-3.16	-4.74	-19.02
210	-15.45	-12.49	-8.55	-4.15	2.65	5.88	5.25	3.49	-1.67	-1.52	-3.84	-5.77	-19.02
225	-15.49	-12.50	-8.53	-4.54	1.95	4.62	4.22	1.81	-3.28	-2.15	-5.77	-6.98	-19.02
240	-15.27	-12.32	-8.23	-4.81	1.82	3.90	3.76	0.06	-3.17	-4.06	-8.85	-7.69	-19.02
255	-14.94	-12.19	-8.02	-4.22	1.56	4.01	3.36	0.01	-3.68	-6.36	-11.44	-8.61	-19.02
270	-14.85	-12.44	-7.43	-3.47	1.42	4.10	3.19	-0.11	-3.88	-6.62	-12.05	-9.85	-19.02
285	-15.15	-12.50	-6.40	-3.62	1.46	3.81	3.15	-0.48	-3.54	-5.15	-9.61	-10.10	-19.02
300	-15.48	-12.05	-5.64	-2.95	1.26	3.75	3.32	-1.12	-4.31	-6.23	-9.29	-8.79	-19.02
315	-15.96	-11.25	-5.12	-1.04	2.32	3.59	3.95	-0.61	-4.53	-6.05	-9.34	-7.19	-19.02
330	-16.12	-10.32	-4.23	0.49	4.08	4.29	4.62	1.62	-3.97	-3.56	-8.05	-6.18	-19.02
345	-16.05	-9.75	-3.32	1.60	5.29	5.46	5.51	3.44	-3.02	-2.74	-7.06	-5.63	-19.02

5G1													
Freq	5200												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.48	-6.54	-11.01	-5.19	-15.45	0.71	0.91	-1.63	-6.14	-6.86	-7.03	-2.24	-5.69
15	-13.84	-7.81	-8.95	-3.78	-7.69	1.81	2.83	0.92	-5.12	-1.66	-6.71	-2.51	-5.69
30	-13.91	-8.57	-6.34	-1.85	-9.23	3.37	3.93	2.07	-3.88	-3.42	-6.21	-2.94	-5.69
45	-13.73	-8.48	-5.46	-1.28	-10.68	1.72	2.85	-0.51	-5.31	-4.69	-5.24	-3.1	-5.69



60	-13.94	-7.96	-5.91	-2.82	-13.36	0.33	1.25	-1.88	-6.85	-6.44	-5.23	-3.43	-5.69
75	-13.89	-7.39	-7.51	-4.82	-15.34	-0.22	-0.25	-2.39	-8.41	-7.07	-5.97	-4.41	-5.69
90	-13.83	-7.16	-8.47	-5.33	-11.32	-0.3	0.25	-1.02	-8.58	-7.35	-6.77	-5.05	-5.69
105	-13.66	-7.32	-7.6	-6.05	-7.94	-0.4	-0.01	-2.1	-11.24	-8.14	-9.65	-4.38	-5.69
120	-13	-7.78	-6.67	-6.41	-6.22	-1.17	0.44	-1.13	-9.44	-7.63	-16.59	-3.44	-5.69
135	-12.12	-8.48	-6.21	-5.89	-5.97	-2.29	1.46	1.66	-6.07	-3.73	-16.88	-2.92	-5.69
150	-11.64	-9.81	-6.62	-6.88	-6.06	-2.02	2.52	2.16	-9.06	-2.7	-14.7	-2.51	-5.69
165	-11.19	-12.22	-7.28	-8.88	-5.53	-2.1	1.38	0.31	-6.67	-3.17	-7.62	-2.96	-5.69
180	-11.35	-15.17	-7.34	-7.78	-4.87	-3.04	1.48	0.62	-7.83	-1.99	-5.54	-4.15	-5.69
195	-11.27	-14.37	-6.32	-3.83	-2.44	-4.18	3.63	1.62	-5.62	-1.51	-6.78	-5.69	-5.69
210	-11.09	-10.93	-5.87	-2.8	-2.55	-3.1	2.52	-0.33	-8.3	-4.7	-7.71	-4.89	-5.69
225	-11.11	-8.69	-6.02	-2.93	-4.74	-2.26	1.36	-1.35	-8.69	-4.56	-8.98	-3.52	-5.69
240	-11.02	-7.46	-6.41	-3.52	-6.92	-2.08	1.91	0.2	-9.63	-5.72	-11.02	-3.86	-5.69
255	-10.94	-6.3	-6.2	-3.41	-7.83	-1.17	2.13	-0.04	-9.56	-6.01	-12.48	-4.85	-5.69
270	-11.14	-5.07	-5.9	-3.77	-8.31	-1.44	2.8	0.1	-8.97	-5.03	-15.07	-5.32	-5.69
285	-11.37	-4.18	-6.22	-5.01	-7.17	-0.33	2.5	-1.9	-9.04	-4.93	-11.73	-4.38	-5.69
300	-11.66	-3.74	-7.13	-6.09	-6.15	0.61	1.59	-4.73	-7.88	-5.37	-8.85	-3.65	-5.69
315	-12.33	-3.81	-7.81	-5.08	-5.29	0.35	1.06	-3.64	-6.19	-6.37	-10.43	-3.41	-5.69
330	-12.93	-4.46	-8.97	-5.13	-8.91	1.2	1.47	-0.7	-7.59	-7.69	-8.3	-3.05	-5.69
345	-13.43	-5.46	-10.31	-5.48	-18.29	1.08	1.98	0.19	-8.1	-5.98	-7.75	-2.68	-5.69

5G2													
Freq	5200												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-11.99	-11.22	-9.87	-3.69	-19	0.73	1.91	-2.09	-5.92	-6.08	-11.53	-5.8	-10.41
15	-11.76	-9.63	-7.49	-3.11	-14.75	1.64	4.36	-0.37	-5.5	-5.61	-12.83	-6.34	-10.41
30	-11.65	-9.17	-5.31	-2.27	-12.25	1.56	4.26	-0.58	-5.85	-6.08	-17.41	-6.42	-10.41
45	-11.23	-9.45	-3.98	-2.6	-13.02	-0.8	2.53	-2.46	-6.1	-5.53	-16.27	-7.67	-10.41
60	-10.69	-10.01	-3.79	-4.05	-17.59	-1.28	2.92	-4.11	-6.26	-5.74	-15.96	-8.57	-10.41
75	-10.74	-10.82	-5.02	-5.74	-12.98	-0.63	3.82	-3.13	-5.71	-6.83	-10.72	-8.9	-10.41
90	-10.82	-11.44	-5.55	-6.37	-11.34	0.33	3.83	-1.57	-6.41	-6.62	-11.88	-10.41	-10.41
105	-10.95	-12.35	-4.87	-5.44	-12.57	-0.41	3.05	-1.72	-8.36	-6.75	-13.58	-8.74	-10.41
120	-11.22	-13.29	-4.07	-4.74	-11.71	-1.15	2.33	-2.91	-7.1	-6.59	-10.2	-5.41	-10.41
135	-11.29	-12.88	-3.18	-4.93	-6.59	-1.41	2.1	-1.67	-6.02	-5.35	-8.12	-4.36	-10.41
150	-10.73	-11.4	-3.13	-4.97	-3.61	-1.42	2.8	0.51	-5.8	-5.56	-5.98	-4.22	-10.41
165	-10.79	-9.89	-4.92	-6.1	-3.01	-0.07	3.82	2.67	-6.27	-4.19	-6.67	-4.46	-10.41
180	-10.78	-8.73	-7.49	-11.17	-6.51	-1.69	0.89	-0.36	-10.41	-3.87	-8.83	-5.08	-10.41
195	-11.05	-8.25	-6.7	-7.13	-4.66	-0.14	1.87	1.49	-7.55	-5.63	-11.43	-4.91	-10.41
210	-11.47	-8.33	-5.72	-4.26	-3.1	-0.36	3.23	3.35	-5.48	-5.62	-12.85	-4.96	-10.41
225	-11.99	-8.3	-5.87	-4.17	-6.25	-1.81	1.25	1.36	-6.77	-5.7	-11.3	-5.97	-10.41
240	-11.9	-8.49	-5.66	-5.55	-11.01	-1.16	-0.66	-1.92	-11.65	-7.77	-12.21	-6.82	-10.41
255	-12.03	-9.1	-6.46	-5.35	-12.65	-0.85	-0.62	-3.05	-14	-8.39	-9.11	-6.46	-10.41
270	-11.95	-9.86	-7.18	-5.22	-11	-1	-0.65	-2.64	-12.43	-10.37	-10.32	-6.67	-10.41



285	-11.88	-10.34	-6.47	-4.92	-12.48	-0.08	-0.54	-3.45	-8.46	-12.05	-8.23	-7.01	-10.41
300	-11.92	-11.14	-6.27	-4.93	-16.21	0.38	0.5	-3.45	-9.07	-7.5	-11.72	-6.87	-10.41
315	-11.93	-11.97	-6.36	-3.62	-15.5	0.35	1.58	-2.23	-6.12	-10.36	-11.08	-6.12	-10.41
330	-11.85	-12.78	-6.43	-1.11	-12.74	2.16	4.19	0.28	-4.59	-9.53	-15.06	-5.25	-10.41
345	-11.98	-12.84	-7.98	-1.89	-12.74	1.86	3.38	-1.28	-6.24	-8.69	-12.07	-4.9	-10.41

5G3													
Freq	5200												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-16.48	-5.87	-3.81	-4.5	-7.72	-6.79	-3.56	-4.52	-3.33	-0.04	-7.95	-6.79	-7.23
15	-15.7	-6.05	-2.87	-4.93	-9.18	-5.35	-4.09	-4.59	-1.92	-0.19	-4.6	-6.18	-7.23
30	-14.95	-5.49	-3.36	-5.59	-8.15	-5.98	-5.57	-2.94	-0.4	1.47	-0.03	-4.67	-7.23
45	-14.23	-5.8	-2.69	-5.4	-4.31	-3.21	-4.49	-0.25	-0.13	1.81	2.28	-3.02	-7.23
60	-13.88	-7.35	-3.28	-4.12	-1.92	0.84	-1.43	1.3	-0.23	3.27	2.49	-1.85	-7.23
75	-13.65	-8.61	-3.97	-2.5	-1.14	0.02	1.14	1.55	-0.05	1.54	4.57	0.18	-7.23
90	-13.35	-8.92	-5.79	-3.62	-0.37	-1.03	-0.37	-0.42	-1.29	1.6	2.59	0.39	-7.23
105	-13.27	-8.58	-6.02	-3.37	-0.75	-0.01	0.96	0.54	-0.24	1.08	0.57	-1.02	-7.23
120	-13.25	-7.99	-3.69	-2.65	-1.22	-1.31	-1.33	-0.37	-0.18	0.9	-0.03	-3.14	-7.23
135	-13.58	-7.11	-2.9	-3.4	-6.49	-2.75	-3.88	-0.62	-2.12	2.14	-1.95	-7.23	-7.23
150	-13.94	-6.42	-4.09	-5.58	-10.37	-5.61	-4.62	-2.14	-0.83	1.24	-4.75	-6.79	-7.23
165	-13.73	-6.26	-5.31	-7.75	-8.03	-5.91	-3.85	-3.68	-2.09	-1.23	-6.68	-6.79	-7.23
180	-13.46	-5.96	-4.66	-6.82	-6.28	-4.44	-4.2	-5.42	-3.81	-2.66	-7.88	-5.58	-7.23
195	-13.29	-5.66	-3.91	-7.62	-5.5	-4.48	-5.56	-3.97	-2.52	-1	-3.84	-4.59	-7.23
210	-13.47	-5.73	-2.98	-4.75	-4.89	-4.96	-2.05	-2.42	-0.92	0.51	-2.45	-3.1	-7.23
225	-14.09	-5.88	-2.7	-3.15	-3.98	-1.28	0.27	-0.11	-1.23	1.28	1.14	-1.74	-7.23
240	-15.74	-6.65	-2.93	-1.99	-1.3	-0.24	2.06	1.21	0.76	1.48	2.38	0.66	-7.23
255	-16.36	-8.58	-3.26	-0.88	-0.9	-0.91	1.45	-0.16	2.11	1.08	2.68	1.43	-7.23
270	-16.73	-9.09	-4.02	-2.12	-2.52	-1.24	1.7	-0.28	0.99	2.54	3.82	1.53	-7.23
285	-15.74	-7.2	-2.27	-1.9	-1.57	0.1	1.7	0.21	1.57	0.5	3.86	1.78	-7.23
300	-15.29	-5.71	-2.44	-1.84	-1.78	0.64	1.82	2.79	-3.63	2.77	0.86	1.03	-7.23
315	-14.82	-5.06	-2.2	-1.66	-1.64	-1.39	-0.75	1.02	-5.73	2.78	0.85	-0.7	-7.23
330	-15.66	-4.9	-2.18	-2.99	-5.22	-6.29	-5.2	-2.98	-4.4	0.03	-1.13	-3.41	-7.23
345	-16.2	-5.18	-3.18	-3.6	-6.37	-7.72	-3.21	-3.36	-4.94	-0.2	-2.45	-6.59	-7.23

5.2GHz Composite Gain NSS=1													
Freq	5200												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-9.02	-2.80	-2.85	0.33	-7.97	3.63	4.83	2.11	-0.26	1.01	-3.86	0.06	-2.79
15	-8.85	-2.94	-1.26	0.86	-5.28	4.71	6.50	3.72	0.75	2.57	-2.63	-0.05	-2.79
30	-8.62	-2.82	-0.14	1.69	-4.94	5.26	6.67	4.53	1.69	2.67	-0.58	0.21	-2.79
45	-8.19	-3.00	0.80	1.84	-3.75	4.24	5.66	3.75	1.35	2.63	1.25	0.43	-2.79
60	-7.93	-3.60	0.52	1.13	-3.57	4.78	5.86	3.49	0.87	3.01	1.42	0.59	-2.79
75	-7.87	-4.06	-0.61	0.53	-2.68	4.50	6.51	3.70	0.77	1.64	3.14	1.17	-2.79

90	-7.79	-4.23	-1.74	-0.26	-1.24	4.46	6.21	3.78	-0.10	1.66	1.51	0.83	-2.79
105	-7.77	-4.40	-1.32	-0.10	-0.95	4.50	6.20	3.76	-0.53	1.18	-0.65	0.61	-2.79
120	-7.67	-4.57	0.06	0.31	-0.60	3.56	5.38	3.37	0.13	1.22	-1.52	0.83	-2.79
135	-7.51	-4.39	0.80	0.09	-1.57	2.64	5.05	4.67	0.24	3.08	-2.26	0.11	-2.79
150	-7.23	-4.18	0.28	-1.00	-1.48	1.94	5.61	5.12	0.21	2.88	-2.73	0.44	-2.79
165	-7.04	-4.33	-1.01	-2.73	-0.51	2.40	5.77	4.92	0.02	2.00	-2.21	0.17	-2.79
180	-7.02	-4.40	-1.63	-3.63	-1.08	1.79	4.51	3.42	-2.15	1.97	-2.53	-0.15	-2.79
195	-7.04	-3.95	-0.78	-1.25	0.67	2.07	5.56	4.84	-0.21	2.29	-2.04	-0.28	-2.79
210	-7.18	-3.30	0.02	0.87	1.31	2.17	6.30	5.31	0.41	1.94	-1.89	0.50	-2.79
225	-7.54	-2.76	0.05	1.37	-0.17	3.00	5.74	4.81	-0.19	2.35	0.18	1.20	-2.79
240	-7.89	-2.73	-0.10	1.21	-0.73	3.64	5.96	4.70	-0.25	1.72	0.53	1.98	-2.79
255	-8.04	-3.13	-0.41	1.75	-1.02	3.80	5.83	3.79	0.37	1.31	1.03	2.18	-2.79
270	-8.18	-2.97	-0.83	1.16	-1.76	3.55	6.17	3.91	-0.08	2.09	1.39	2.07	-2.79
285	-8.02	-2.11	0.01	0.95	-1.19	4.67	6.08	3.19	0.93	0.69	2.10	2.38	-2.79
300	-8.04	-1.57	-0.26	0.67	-1.47	5.32	6.09	3.63	-1.76	2.60	-0.04	2.22	-2.79
315	-8.16	-1.51	-0.35	1.43	-1.02	4.58	5.46	3.38	-1.24	1.92	-0.25	1.64	-2.79
330	-8.57	-1.87	-0.63	1.85	-3.65	4.52	5.74	3.74	-0.64	0.09	-1.61	0.92	-2.79
345	-8.93	-2.41	-1.86	1.24	-6.36	4.12	5.92	3.41	-1.56	0.56	-1.77	0.20	-2.79

5G1													
Freq	5300												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-11.7	-5.32	-9.75	-9.73	-13.19	1.12	0.38	-3.75	-7.99	-9.37	-8.79	-3.05	-7.06
15	-11.58	-6.6	-9.7	-7.48	-9.27	1.99	2.6	-0.66	-9.19	-3.82	-10.19	-3.74	-7.06
30	-11.91	-7.83	-8.22	-5.5	-11.39	3.61	3.32	1.14	-8.11	-4.81	-10.4	-5.06	-7.06
45	-12.33	-8.71	-6.98	-3.91	-9.33	2.89	2.43	-0.98	-8.12	-5.8	-8.47	-6.06	-7.06
60	-12.76	-9.36	-6.84	-4.37	-9.54	2.24	1.87	-1.28	-7.06	-6.81	-7.58	-6.21	-7.06
75	-12.36	-9.76	-8	-5.05	-11.47	1.37	1.11	-1.55	-7.96	-6.3	-6.93	-6.25	-7.06
90	-11.54	-10.17	-8.57	-6.26	-12.14	0.89	1.02	-0.8	-9.6	-6.71	-8.92	-4.97	-7.06
105	-10.83	-10.43	-8.3	-7	-9.1	0.71	1.05	-2.26	-13.11	-8.39	-15.01	-3.37	-7.06
120	-10.49	-11.12	-7.41	-6.88	-7.94	-0.2	1.03	-1.13	-11.87	-8.5	-21.95	-2.73	-7.06
135	-10.14	-12.28	-7.02	-6.98	-11.09	-1.53	1.84	0.77	-11.41	-5.38	-21.27	-2.87	-7.06
150	-9.94	-14.28	-7.48	-7.12	-10.12	-0.86	3.12	0.85	-9.68	-3.6	-15.27	-3.17	-7.06
165	-10.07	-16	-8.24	-6.78	-5.53	0.04	2.79	-0.06	-7.95	-2.71	-8.5	-4.4	-7.06
180	-10	-16.89	-7.87	-4.25	-3.98	-1.62	2.82	-0.04	-10.45	-2.83	-7.87	-5.74	-7.06
195	-10	-14.23	-6.3	-1.74	-5.02	-2.26	3.17	-0.6	-13.49	-4.46	-10.05	-6.12	-7.06
210	-9.79	-11.06	-6.35	-1.34	-5.11	-0.29	2.79	-0.98	-14.56	-7.75	-12.84	-5.56	-7.06
225	-9.62	-9.07	-6.42	-2.62	-7.37	0.07	3.19	0.12	-9.7	-7.08	-10.71	-4.87	-7.06
240	-9.51	-7.8	-6.72	-4.14	-9.07	0.02	3.69	0.77	-9.91	-6.5	-13.15	-4.91	-7.06
255	-9.75	-7.27	-6.94	-4.59	-8.79	1	3.95	-0.57	-8.79	-4.71	-10.3	-5.8	-7.06
270	-10.11	-6.85	-6.37	-4.18	-9.18	0.55	4	-0.84	-9.88	-3.91	-10.24	-7.06	-7.06
285	-10.6	-6.21	-6.02	-4.92	-8.15	0.64	3.21	-3.26	-11.7	-7.15	-14.82	-6.93	-7.06
300	-10.95	-5.51	-6.09	-5.52	-7.42	1.52	1.97	-5.98	-10.09	-6.43	-7.72	-5.86	-7.06



315	-11.5	-4.94	-5.58	-5.47	-5.63	2.43	1.51	-6.83	-7.71	-8.01	-7.9	-4.72	-7.06
330	-11.96	-4.62	-6.24	-6.59	-6.69	2.65	2.08	-2.61	-7.17	-8.59	-7.74	-4.11	-7.06
345	-11.83	-4.72	-8.2	-9.06	-12.26	1.88	1.42	-2.82	-10.28	-7.23	-8.35	-3.61	-7.06

5G2													
Freq	5300												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-10.65	-9.47	-10.25	-6.25	-12.99	1.93	2.13	-3.06	-6.68	-6.01	-11.99	-6.45	-13.51
15	-10.24	-9.24	-7.8	-5.81	-12.8	2.68	4.11	-1.95	-6.74	-4.52	-10.88	-6.59	-13.51
30	-10	-9.62	-6.47	-5.54	-11.93	1.37	3.37	-4.3	-8.41	-6.05	-14.01	-7.26	-13.51
45	-9.95	-9.95	-5.47	-6.69	-13.79	0.73	2.25	-5.24	-7.17	-6.66	-16.06	-9.32	-13.51
60	-10.12	-10.22	-5.95	-6.66	-15.64	1.49	3.3	-4.6	-7.37	-6.96	-18.23	-11.11	-13.51
75	-10.02	-10.9	-6.71	-6.84	-12.44	1.59	4.3	-3.59	-7.8	-6.96	-13.15	-12.86	-13.51
90	-9.97	-11.62	-6.83	-6.84	-11.49	1.69	4.06	-2.57	-8.81	-6.52	-14.16	-13.51	-13.51
105	-9.85	-12.5	-6.47	-5.6	-11.54	1.28	3.67	-2.61	-9.3	-6.29	-15.67	-9.31	-13.51
120	-9.69	-13.05	-5.54	-5.46	-8.92	1.23	3.61	-1.95	-8.35	-6.01	-11.22	-5.73	-13.51
135	-9.78	-12.68	-4.32	-6.54	-6.94	0.32	2.26	-1.91	-9.95	-5.7	-8.89	-4.63	-13.51
150	-9.91	-10.74	-3.84	-6.34	-5.28	0.72	1.28	-0.7	-7.61	-6.24	-6.57	-5.03	-13.51
165	-9.77	-9.1	-5.21	-5.87	-4.39	1.68	3.53	1.77	-6.99	-3.6	-7.58	-5.41	-13.51
180	-9.73	-7.97	-6.66	-8.86	-7.56	0.11	2.72	0.02	-12.62	-4.69	-8.15	-5.35	-13.51
195	-9.81	-7.38	-8.32	-8.69	-5.92	0.22	1.29	-0.04	-9.98	-5.34	-9.28	-4.75	-13.51
210	-9.82	-7.76	-7.42	-7.14	-5.97	0.2	2.77	1.7	-9.28	-4.61	-13	-4.29	-13.51
225	-10.09	-8.75	-8.05	-6.11	-8.07	0.18	2.7	0.76	-11.22	-4.63	-12.22	-4.3	-13.51
240	-10.39	-9.69	-7.64	-7.06	-10.61	0.25	0.98	-1.44	-17.36	-6.95	-11.75	-5.03	-13.51
255	-10.44	-10.08	-8.33	-6.68	-12.12	0.14	-0.79	-3.19	-19.79	-6.83	-9.31	-5.16	-13.51
270	-10.37	-10.22	-8.84	-6.5	-12.77	-0.25	-1.77	-3.66	-18.54	-8.08	-10.28	-5.72	-13.51
285	-10.2	-9.94	-7.79	-5.29	-13.5	0.14	-1.98	-4.38	-10.54	-9.56	-8.3	-6.35	-13.51
300	-10.13	-9.7	-7.64	-5.3	-12.62	1.02	0.14	-2.85	-8.85	-7.86	-11.62	-7.09	-13.51
315	-10.27	-9.44	-8.04	-6.5	-15.64	2.42	1.54	-2.91	-9.13	-11.08	-10.86	-7.42	-13.51
330	-10.62	-9.66	-8.99	-4.73	-12.8	2.98	3.18	-0.98	-7.56	-11.92	-14	-6.12	-13.51
345	-10.72	-9.86	-10.7	-5.32	-10.54	2.43	2.22	-3.01	-8.45	-9.51	-14.11	-5.66	-13.51

5G3													
Freq	5300												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.96	-7.6	-4.43	-3.71	-5.77	-7.15	-4.14	-4.05	-5.02	-0.63	-8.93	-6.67	-7.2
15	-14.31	-6.7	-3.22	-5.33	-7.96	-6.78	-4.74	-5.48	-2.94	-0.55	-5.3	-6.47	-7.2
30	-15.13	-5.96	-4.15	-4.62	-8.78	-5.96	-5.35	-4.59	-1.33	1.16	-0.4	-5.27	-7.2
45	-16.08	-6.35	-3.18	-5.67	-4.88	-3.53	-4.97	-1.03	-0.51	1.76	2.06	-3.25	-7.2
60	-16.81	-7.76	-4.19	-3.5	-3.73	-0.02	-2.11	0.87	-0.03	3.37	2.05	-1.89	-7.2
75	-16.95	-8.86	-4.8	-2.02	-1.04	0.45	0.6	1.05	-0.02	1.28	4.01	0.13	-7.2
90	-16.74	-9.2	-4.41	-2.17	-1.07	-0.98	0.52	-0.32	-0.43	1.65	2.12	0.39	-7.2
105	-16.56	-9.23	-3.34	-1.19	-1.16	0.16	0.46	0.02	-0.53	0.95	0.1	-1.16	-7.2



120	-16.06	-9.05	-2.75	-0.87	-2.22	-1.22	-1.15	0.27	-0.39	0.44	-0.29	-3.07	-7.2
135	-16.14	-9.33	-2.98	-1.94	-8.34	-2.5	-3.9	-0.4	-2.11	1.62	-2.25	-6.73	-7.2
150	-17.3	-9.28	-4.27	-4.89	-10.76	-6.46	-4.57	-1.74	-0.96	0.83	-5.04	-6.15	-7.2
165	-18.89	-8.64	-6.15	-7.68	-9.41	-5.75	-4.47	-3.78	-2.17	-1.47	-6.66	-5.67	-7.2
180	-19.16	-7.74	-6.69	-11.08	-7.19	-4.11	-4.77	-5.67	-4.01	-2.53	-7.75	-5.16	-7.2
195	-19.59	-6.87	-6.09	-9.9	-6.41	-4.22	-5.34	-4.29	-2.4	-0.27	-3.73	-4.43	-7.2
210	-18.78	-7.19	-4.59	-5.22	-6.04	-4.11	-2.39	-2.44	-1.01	0.75	-2.69	-2.79	-7.2
225	-18.18	-7.45	-3.2	-3.26	-4.1	-0.24	-0.43	0.05	-0.92	1.68	0.88	-1.78	-7.2
240	-16.63	-7.2	-3.8	-0.26	-0.87	0.79	1.29	1.61	1.16	1.86	1.76	0.12	-7.2
255	-15.77	-7.94	-3.5	0.48	0.15	-0.42	0.93	0.65	2.27	1.17	2.13	1.2	-7.2
270	-15.06	-9.6	-5.02	-0.58	-0.92	-1.86	0.93	0.17	1.37	2.22	3.26	1.37	-7.2
285	-15.86	-10.45	-4.5	-0.87	-0.76	-0.56	1.37	1.2	1.68	0.03	3.29	1.42	-7.2
300	-17.18	-9.46	-3.34	0.17	-1.74	0.2	1.3	3.2	-2.56	2.68	-0.04	0.59	-7.2
315	-18.08	-7.96	-2.91	-1.36	-2.9	-1.41	-1.41	1.61	-4.69	2.49	-0.18	-1.54	-7.2
330	-16.21	-7.12	-3.1	-2.93	-4.68	-5.14	-5.74	-2.08	-4.19	-0.92	-2.64	-4.58	-7.2
345	-14.72	-7.37	-4.72	-4.11	-5.17	-7.89	-4.05	-2.51	-5.19	-0.91	-3.59	-7.2	-7.2

5.3GHz Composite Gain NSS=1													
Freq	5300												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-7.23	-2.53	-2.95	-1.45	-5.15	4.25	4.61	1.16	-1.71	0.19	-5.01	-0.45	-4.01
15	-7.11	-2.66	-1.70	-1.39	-5.01	4.99	6.19	2.30	-1.13	1.99	-3.65	-0.73	-4.01
30	-7.33	-2.90	-1.35	-0.44	-5.82	5.30	6.06	2.61	-0.52	2.14	-1.51	-1.04	-4.01
45	-7.66	-3.43	-0.30	-0.58	-3.82	5.19	5.28	2.57	0.21	2.09	0.34	-1.09	-4.01
60	-8.04	-4.28	-0.82	0.03	-3.56	6.06	6.08	3.38	0.66	2.76	0.37	-0.84	-4.01
75	-7.89	-5.03	-1.63	0.37	-1.89	5.92	6.93	3.62	0.36	1.64	2.30	-0.01	-4.01
90	-7.53	-5.50	-1.66	-0.06	-1.86	5.38	6.78	3.59	-0.45	1.85	0.48	0.44	-4.01
105	-7.18	-5.85	-1.02	0.54	-1.30	5.50	6.61	3.23	-1.22	1.17	-2.14	0.78	-4.01
120	-6.88	-6.15	-0.25	0.76	-1.06	4.77	6.15	3.88	-0.72	0.93	-2.35	1.03	-4.01
135	-6.80	-6.53	0.16	-0.07	-3.85	3.61	5.25	4.33	-2.03	2.32	-3.06	0.17	-4.01
150	-6.99	-6.42	-0.28	-1.30	-3.59	3.07	5.28	4.31	-0.48	2.27	-3.18	0.08	-4.01
165	-7.25	-5.89	-1.67	-1.97	-1.42	3.96	6.06	4.38	-0.55	2.22	-2.78	-0.37	-4.01
180	-7.24	-5.19	-2.28	-2.81	-1.32	3.07	5.67	3.25	-3.45	1.47	-3.15	-0.64	-4.01
195	-7.34	-4.14	-2.08	-1.21	-0.99	2.88	5.17	3.32	-2.58	1.71	-2.43	-0.30	-4.01
210	-7.13	-3.74	-1.27	0.55	-0.93	3.57	6.14	4.37	-1.72	1.62	-3.29	0.63	-4.01
225	-7.08	-3.62	-0.88	0.90	-1.56	4.78	6.73	5.09	-1.24	2.24	-0.46	1.23	-4.01
240	-6.88	-3.40	-1.12	1.40	-0.96	5.13	6.84	5.18	-0.70	1.92	-0.15	1.85	-4.01
255	-6.83	-3.58	-1.24	1.71	-0.53	5.03	6.36	3.88	0.16	2.00	0.92	2.13	-4.01
270	-6.80	-3.99	-1.83	1.36	-1.38	4.31	6.14	3.47	-0.64	2.55	1.55	1.80	-4.01
285	-7.10	-3.88	-1.23	1.32	-1.14	4.86	5.89	2.97	0.19	0.21	1.36	1.71	-4.01
300	-7.46	-3.23	-0.73	1.64	-1.38	5.70	5.94	3.75	-1.73	2.25	-0.32	1.34	-4.01
315	-7.90	-2.47	-0.49	0.62	-1.82	6.10	5.42	2.74	-2.20	1.29	-0.32	0.54	-4.01
330	-7.85	-2.12	-1.01	0.15	-2.66	5.65	5.41	2.91	-1.40	-1.11	-2.18	-0.12	-4.01

345	-7.49	-2.29	-2.75	-1.15	-4.00	4.68	5.05	1.99	-2.94	-0.32	-2.90	-0.59	-4.01
-----	-------	-------	-------	-------	-------	------	------	------	-------	-------	-------	-------	-------

5G1													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-6.99	-4.28	-10.37	-12.15	-4.62	3.58	1.51	-4.95	-4.24	-5.82	-5.84	-4.39	-15.38
15	-7	-3.88	-14	-12.03	-4.48	1.53	-0.44	-4.74	-4.03	-3.26	-6.8	-3.75	-15.38
30	-7.46	-4.02	-18.54	-9.15	-7.95	2.67	2.21	-3.27	-6.1	-6.53	-9.44	-3.8	-15.38
45	-7.54	-4.43	-16.54	-9.98	-8.85	3.56	2.64	-4.57	-8.05	-8.91	-10.64	-5.52	-15.38
60	-8.15	-5.23	-11.75	-6.27	-7.78	3.29	1.39	-4.23	-8.64	-6.36	-10.32	-5.62	-15.38
75	-8.09	-5.97	-9.14	-7.06	-6.17	2.08	0.7	-3.09	-8.37	-6.43	-11.52	-5.31	-15.38
90	-7.52	-6.93	-9.25	-7.61	-11.24	0.95	0.44	-4.51	-8.44	-7.11	-11.46	-5.29	-15.38
105	-7.27	-7.86	-9.11	-7.12	-10.88	0.3	-0.49	-4	-8.19	-6.2	-7.33	-7.02	-15.38
120	-7.38	-9.13	-9.11	-8.83	-9.63	0.5	-0.47	-2	-8.97	-5.35	-8.63	-7.81	-15.38
135	-7.06	-10.45	-9.26	-9.17	-11.22	1.72	2.46	-0.97	-7.28	-3.39	-14.66	-6.22	-15.38
150	-7.11	-11.54	-8.06	-9.39	-7.72	1.51	2.67	-0.05	-8.56	-2.4	-13.68	-5	-15.38
165	-7.19	-12.69	-6.62	-7.59	-6.03	-0.8	-0.61	-2.48	-9.17	-3.39	-16.32	-4.11	-15.38
180	-7.21	-12.16	-7.03	-3.46	-8.49	0.52	1.2	-1.36	-3.63	-4.05	-11.47	-5.23	-15.38
195	-6.93	-11.25	-9.5	-5.33	-8.37	2.21	2.99	1.05	-2.96	-4.52	-8.49	-4.96	-15.38
210	-6.42	-11.12	-10.91	-8.81	-8.25	2.05	2.37	-0.05	-4.13	-3.74	-9.74	-4.24	-15.38
225	-6.48	-11.58	-13.21	-11.86	-8.29	2.63	3.04	-2.13	-5.44	-3.65	-10.61	-4.65	-15.38
240	-6.44	-11.7	-12.47	-11.82	-8.07	3.26	3.31	-2.57	-5.45	-3.88	-11.54	-6.55	-15.38
255	-6.61	-11.09	-9.57	-10.99	-7.06	3.43	3.82	-3.69	-5.57	-4.16	-12.23	-8.14	-15.38
270	-6.72	-9.77	-8.21	-8.86	-8.03	3.69	3.83	-2.99	-6.32	-2.71	-13.09	-9.78	-15.38
285	-6.68	-8.95	-7.84	-6.22	-7.91	2.95	4.15	-1.73	-4.81	-2.5	-12.97	-12.23	-15.38
300	-6.48	-8.53	-7.89	-7.45	-7.59	1.89	3.71	-3.34	-4.02	-4.33	-12.61	-15.38	-15.38
315	-6.89	-8.05	-10.17	-6.03	-7.78	0.84	0.77	-4.25	-3.54	-6.92	-10.43	-15.36	-15.38
330	-7.31	-6.73	-8.43	-7.93	-4.87	2.22	1.28	-5.33	-6.52	-8.5	-13.26	-11.85	-15.38
345	-7.38	-5.19	-7.63	-9.65	-4.22	4.5	3.29	-0.82	-5.7	-6.78	-7.12	-7.81	-15.38

5G2													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-10.01	-8.69	-9.44	-10.39	-6.84	2.73	2.04	-4.72	-7.35	-5.87	-8.04	-6.73	-10.81
15	-10.04	-8.41	-9.79	-10.28	-6.57	4.38	3.2	-3.75	-6.45	-7.55	-9.17	-6.52	-10.81
30	-9.97	-8.84	-10.84	-12.6	-9.12	1.78	0.76	-5.12	-6.84	-5.83	-11.11	-8.54	-10.81
45	-9.86	-10.25	-13.06	-11.37	-8.42	1.68	1.63	-5.83	-7.44	-4.67	-14.91	-10.47	-10.81
60	-9.88	-12.43	-11.39	-9.42	-6.5	3.23	3.15	-5.23	-7.15	-6.33	-15.42	-10.17	-10.81

75	-9.64	-14.72	-12.17	-7.45	-7.13	3.39	3.03	-4.89	-5.49	-6.3	-15.27	-8.92	-10.81
90	-9.42	-15.3	-12.92	-5.09	-7.95	3.08	2.83	-4.15	-3.88	-6.12	-14.68	-7.31	-10.81
105	-9.21	-14.06	-11.91	-5.3	-8.8	3.37	3.27	-2.77	-3.87	-5.67	-15.37	-6.45	-10.81
120	-9.22	-12.06	-10.56	-6.84	-10.66	3.01	3.26	-1.75	-5.36	-5.25	-14.07	-6.35	-10.81
135	-9.31	-10.13	-8.42	-10.14	-9.14	2.4	1.6	-3.08	-4.12	-4.72	-13.88	-6.42	-10.81
150	-9.55	-8.71	-7.17	-10.71	-6.86	2.47	1.02	-2.53	-4.28	-4.35	-19.45	-6.88	-10.81
165	-9.49	-8.32	-6.61	-9.49	-8.71	2.97	2.79	-0.04	-3.7	-4.41	-13.85	-5.94	-10.81
180	-9.35	-8.47	-5.6	-10.07	-9.75	2.55	3.1	0.22	-5.11	-3.24	-10.44	-5.5	-10.81
195	-9.19	-8.93	-5.51	-14.09	-8.78	1.23	0.14	-2.72	-6.35	-2.96	-9.67	-6.23	-10.81
210	-9.22	-9.61	-7.99	-15.89	-9.12	3.08	3.07	0.18	-4.77	-5.2	-10.7	-7.62	-10.81
225	-9.36	-10.04	-10.35	-11.91	-10.1	2.77	2.97	-0.49	-5.86	-4.99	-12.59	-8.67	-10.81
240	-9.54	-10.16	-11.35	-11.38	-8.87	1.13	0.16	-3.63	-8.28	-6.83	-13.46	-9.95	-10.81
255	-9.67	-10.22	-10.97	-12.35	-8.32	0.57	-1.04	-5.26	-8.71	-6.38	-12.97	-10.06	-10.81
270	-9.93	-10.31	-11.42	-11.56	-7.95	0.63	-0.98	-4.86	-9.26	-7.29	-11.42	-9.7	-10.81
285	-10.02	-10.15	-12.2	-10.96	-8.95	0.89	-0.57	-4.52	-6.98	-9	-8.8	-10.14	-10.81
300	-9.97	-9.92	-13.4	-8.2	-7.62	0.54	-0.38	-5.44	-6.76	-8.27	-12.4	-10.81	-10.81
315	-9.92	-9.16	-17.75	-7.77	-5.41	3.49	2.02	-3.82	-5.1	-12.61	-15.52	-10.73	-10.81
330	-9.88	-8.66	-17.82	-11.55	-6.67	4.08	2.67	-4.13	-7.03	-10.19	-11.65	-9.67	-10.81
345	-9.83	-8.65	-11.12	-10.5	-8.78	1.96	0.26	-4.84	-6.77	-7.98	-7.96	-8.29	-10.81

5G3													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-9.91	-8.78	-5.22	-5.76	-5.71	-4.09	-3.67	-4.21	-4.93	-2.16	-6.33	-4.98	-10.77
15	-9.54	-12.58	-6.24	-4.42	-5.19	-4.67	-2.8	-6.41	-3.57	-2.24	-6.24	-7.88	-10.77
30	-9.25	-15.53	-5.08	-5.57	-7.63	-4.94	-2.1	-4.49	-2.96	-0.18	-3.89	-10.77	-10.77
45	-9.3	-14.86	-7.1	-4.65	-9.91	-3.02	-2.15	-1.86	-1.55	0.88	-0.51	-8.34	-10.77
60	-9.4	-16.36	-7.55	-5.79	-5.5	-1.6	-1.17	0.44	-0.39	1.47	-1.15	-5.04	-10.77
75	-9.6	-13.4	-6.64	-4.68	-2.2	0.14	-0.65	0.57	-0.72	-1.01	1.87	-1.71	-10.77
90	-9.86	-10.86	-6.51	-5.23	-0.54	-0.73	-0.45	-1.45	-1.45	-0.41	0.82	-1.11	-10.77
105	-10.2	-10.35	-6.61	-3.42	-2.15	0.07	0.38	0.77	-0.81	-1.08	-0.54	-2.38	-10.77
120	-10.12	-10.86	-6.82	-2.54	-5.36	-0.32	-1.65	1.52	-1.37	-1.36	-1.26	-3.32	-10.77
135	-9.56	-12.38	-7.61	-4.33	-9.53	-3.51	-4.45	0.22	-2.38	-0.31	-3.71	-6.51	-10.77
150	-9.67	-14.16	-9.44	-8.38	-10.73	-7.49	-6.43	-1.99	-2.59	-0.19	-5.17	-8.31	-10.77
165	-9.53	-13.54	-9.51	-11	-7.81	-5.71	-5.36	-3.93	-5.18	-1.06	-7.17	-6.29	-10.77
180	-9.78	-11.68	-7.61	-8.61	-6.51	-4.71	-3.92	-3.65	-5.3	-1.69	-5.68	-4.92	-10.77
195	-10.14	-9.86	-5.89	-6.48	-7.33	-4.22	-3.53	-2.88	-3.72	-1.53	-3.04	-3.62	-10.77
210	-10.37	-8.74	-6.01	-4.45	-5.97	-3.74	-2.29	-1.47	-1.81	-1.51	-1.42	-1.54	-10.77



225	-9.95	-8.76	-4.32	-1.34	-3.17	-0.7	0.13	0.25	-0.24	1.31	0.87	0.08	-10.77
240	-10.33	-8.01	-3.61	-0.42	-1.74	1.71	1.09	2.74	1.56	2.01	2.12	1.41	-10.77
255	-9.95	-6.63	-4.32	-0.42	-1.48	0.99	0.73	1.43	1.67	1.15	2.59	2.73	-10.77
270	-9.82	-5.99	-3.41	-0.47	-1.46	-0.67	-0.37	-0.22	0.33	2.47	4.15	3.12	-10.77
285	-9.49	-6.41	-3.13	0.46	-1.6	0.53	0.76	0.65	1.71	0.47	3.9	2.66	-10.77
300	-9.46	-6.86	-3.59	-1.01	-1.85	1.5	0.91	2.92	-2.1	2.74	1.37	1.61	-10.77
315	-9.67	-6.87	-5	-2.51	-4.64	-0.32	-1.35	1.34	-3.21	2.88	0.67	-0.35	-10.77
330	-10.02	-6.82	-5.81	-4.93	-6.11	-3.44	-3.32	-1.59	-2.67	-1.8	-1.97	-2.95	-10.77
345	-10.04	-7.28	-4.85	-5.45	-7.94	-5.95	-6.05	-3.82	-4.26	-1.43	-2	-4.29	-10.77

5.6GHz Composite Gain NSS=1													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-4.08	-2.21	-3.27	-4.23	-0.90	6.12	5.08	0.15	-0.64	0.34	-1.92	-0.54	-7.30
15	-3.98	-2.80	-4.68	-3.50	-0.60	5.94	5.11	-0.13	0.18	0.71	-2.54	-1.11	-7.30
30	-4.06	-3.50	-5.10	-3.87	-3.44	5.20	5.24	0.51	-0.36	1.08	-2.80	-2.43	-7.30
45	-4.07	-4.04	-6.57	-3.39	-4.27	5.93	5.71	0.85	-0.38	1.46	-1.75	-3.10	-7.30
60	-4.34	-5.32	-5.24	-2.25	-1.77	6.69	6.07	2.13	0.16	1.87	-2.16	-1.89	-7.30
75	-4.31	-5.68	-4.26	-1.54	-0.12	6.74	5.93	2.61	0.49	0.58	-0.28	-0.05	-7.30
90	-4.10	-5.60	-4.40	-1.13	-0.61	6.01	5.82	1.51	0.64	0.75	-0.96	0.60	-7.30
105	-4.04	-5.62	-4.17	-0.38	-1.67	6.15	5.98	3.01	0.99	0.77	-1.02	-0.26	-7.30
120	-4.06	-5.83	-3.92	-0.89	-3.46	5.95	5.41	4.18	0.09	0.99	-1.65	-0.85	-7.30
135	-3.80	-6.16	-3.63	-2.72	-5.15	5.34	5.14	3.60	0.41	2.17	-4.43	-1.61	-7.30
150	-3.92	-6.41	-3.40	-4.67	-3.51	4.60	4.66	3.31	-0.03	2.62	-6.03	-1.85	-7.30
165	-3.89	-6.43	-2.71	-4.48	-2.67	4.29	4.33	2.77	-0.95	1.93	-6.78	-0.62	-7.30
180	-3.93	-5.84	-1.93	-2.12	-3.38	4.73	5.37	3.32	0.12	1.83	-4.04	-0.44	-7.30
195	-3.88	-5.19	-2.02	-3.09	-3.37	4.93	5.04	3.45	0.55	1.85	-1.79	-0.10	-7.30
210	-3.74	-5.00	-3.30	-3.77	-2.91	5.71	6.12	4.35	1.30	1.42	-1.44	0.65	-7.30
225	-3.69	-5.28	-3.71	-2.06	-1.90	6.48	6.92	4.04	1.32	2.77	-0.50	1.09	-7.30
240	-3.83	-5.05	-3.42	-1.37	-0.83	6.85	6.39	4.09	1.74	2.67	0.11	1.09	-7.30
255	-3.84	-4.32	-3.02	-1.39	-0.31	6.53	6.18	2.76	1.70	2.24	0.41	1.57	-7.30
270	-3.92	-3.70	-2.28	-0.84	-0.46	6.19	5.87	2.29	0.65	3.16	1.68	1.61	-7.30
285	-3.83	-3.59	-2.17	0.46	-0.74	6.29	6.45	3.16	2.23	1.92	1.90	0.87	-7.30
300	-3.72	-3.58	-2.64	-0.14	-0.47	6.10	6.36	3.58	0.68	2.70	-0.45	-0.36	-7.30
315	-3.94	-3.21	-4.75	-0.38	-1.07	6.26	5.36	2.92	0.86	1.58	-0.97	-1.71	-7.30
330	-4.21	-2.59	-4.60	-2.95	-1.08	6.27	5.33	1.23	-0.41	-1.26	-2.66	-2.52	-7.30
345	-4.23	-2.15	-2.73	-3.47	-1.97	5.95	4.74	1.78	-0.74	-0.13	-0.50	-1.84	-7.30

5G1													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-7.06	-3.25	-8.31	-11.82	-5.31	2.47	1.32	-5.28	-5.87	-11.22	-5.88	-9.68	-18.19
15	-7.18	-2.42	-8.86	-14.22	-3.72	1.74	0.89	-4.82	-5.03	-3.74	-3.95	-7.76	-18.19
30	-7.6	-2.33	-8.34	-15.32	-4.88	2.12	2.01	-3.57	-2.78	-2.64	-4.65	-7.46	-18.19
45	-7.46	-2.4	-7.17	-12.75	-8.53	1.22	-0.04	-6.75	-4.22	-4.16	-5.47	-9.52	-18.19
60	-7.8	-2.65	-6.96	-7.53	-7.83	0.89	-4.48	-11.34	-5.27	-4.58	-6.74	-11.42	-18.19
75	-7.47	-2.91	-6.42	-6.74	-9.51	-0.15	-4.31	-7.17	-5.15	-5.18	-7.79	-12.9	-18.19
90	-7.25	-3.57	-5.22	-8.61	-9.81	0.29	-1.91	-5.46	-5.84	-5.57	-6.18	-11.49	-18.19
105	-7	-5.14	-4.95	-9.84	-9.58	-0.99	-1.39	-2.79	-8.89	-6.15	-6.24	-10.1	-18.19
120	-6.93	-7.39	-4.95	-8.17	-8.45	-0.4	-0.48	-5.09	-8.46	-4.41	-10.02	-8.19	-18.19
135	-6.6	-10	-4.09	-8.02	-8.76	1.86	1.07	-2.92	-4.7	-2.69	-8.35	-7.98	-18.19
150	-6.64	-11.46	-3.93	-8.13	-9.12	1.53	0.32	-1.08	-4.38	-3.47	-6.88	-8.08	-18.19
165	-6.43	-11.37	-5.24	-4.54	-14	-1.92	-4.3	-1.35	-1.8	-4.64	-9.28	-7.19	-18.19
180	-6.46	-10.48	-6.88	-4.19	-15.93	1.37	0.03	-0.21	-0.62	-2.78	-9.45	-8.13	-18.19
195	-6.23	-9.28	-7.57	-6.35	-7.03	4.16	1.64	-0.64	-2.13	-2.56	-11.81	-9.96	-18.19
210	-5.69	-8.51	-7.5	-5.7	-7.85	1.46	-1.4	-4.65	-4.32	-5.81	-14.48	-10.55	-18.19
225	-5.86	-8.52	-7.65	-8.31	-8.58	2.56	0.72	-6.18	-3.84	-7.51	-15.61	-7.14	-18.19
240	-6.06	-8.69	-7.39	-12.36	-6	2.78	1.92	-3.14	-2.32	-6.87	-11.56	-7.07	-18.19
255	-6.08	-8.49	-5.96	-13.57	-5.6	2.85	1.95	-2.29	-2.45	-6.41	-12.01	-7.17	-18.19
270	-6.3	-8.13	-4.47	-11.49	-4.92	3.09	1	-2.43	-2.57	-7.63	-12.09	-7.58	-18.19
285	-6.38	-7.83	-4.01	-9.45	-5.53	3.25	1.82	-4.29	-5.7	-4.19	-11.89	-12.84	-18.19
300	-6.18	-7.19	-3.55	-6.85	-7.46	2.21	2.49	-6.74	-6.42	-7.37	-6.79	-18.19	-18.19
315	-6.57	-6.71	-4.02	-6.7	-9.3	-1.62	-1.55	-4.27	-4	-6.05	-10.5	-16.12	-18.19
330	-7.06	-6.08	-6.18	-9.49	-5.5	-2.7	-3.31	-4.67	-2.8	-7.21	-15.98	-16	-18.19
345	-7.03	-4.83	-7.83	-11.42	-4.31	3.53	1.93	-3.29	-5.03	-7.99	-13.66	-15.16	-18.19

5G2													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-11.2	-6.86	-6.38	-8.73	-8.1	1.27	-0.44	-6.51	-6.82	-5.75	-8.24	-7.79	-12.58
15	-11.21	-7.97	-7.55	-10.41	-6.51	3.04	2.13	-4.11	-6.15	-6.4	-10.14	-8.46	-12.58
30	-11.19	-9.02	-8.73	-12.55	-6.9	0.85	-0.31	-3.5	-5.85	-4.77	-15.19	-10.03	-12.58
45	-11.09	-9.05	-6.54	-8.94	-7.53	0.15	-0.35	-4.37	-7.85	-4.97	-17.49	-9.47	-12.58
60	-10.71	-9.08	-6.65	-5.94	-7.2	1.89	1.97	-4.31	-8.51	-7.55	-17.47	-7.9	-12.58
75	-10.63	-9.42	-6.48	-5.3	-7.56	2.17	2.06	-3.27	-5.67	-8.57	-18.25	-7.04	-12.58
90	-10.54	-9.95	-6.54	-5.58	-7.43	2.39	1.69	-2.86	-3.69	-8.73	-22.46	-6.53	-12.58

105	-10.52	-10.62	-6.7	-5.46	-8.76	2.77	1.9	-3.06	-3.6	-8.02	-17.72	-7.27	-12.58
120	-10.57	-10.84	-5.67	-5.85	-10.07	3.03	0.91	-3.99	-3.09	-6.48	-13.22	-7.04	-12.58
135	-10.53	-10.36	-4.4	-6.84	-11.24	2.66	0.15	-5.16	-3.14	-4.64	-13.74	-7.26	-12.58
150	-10.39	-9.62	-4.88	-8.95	-12.04	2.05	-0.63	-5.48	-2.71	-4.37	-15.83	-8.18	-12.58
165	-10.57	-8.87	-4.75	-12	-8.35	3.58	1.57	-1.67	-0.5	-3.94	-16.46	-8.45	-12.58
180	-10.88	-8.71	-3.59	-9.4	-8.17	2.2	-1.35	-3.3	-2.7	-5.79	-12.5	-7.6	-12.58
195	-11.18	-8.25	-3.52	-8.12	-12.07	1.71	-0.85	-3.36	-1.97	-5.52	-9.67	-8.05	-12.58
210	-11.33	-7.46	-3.98	-12.23	-7.72	3.21	0.89	-1.67	-1.83	-3.91	-9.1	-9.25	-12.58
225	-11.34	-6.98	-6.19	-17.44	-8.5	0.98	-0.86	-2.78	-3.97	-4.71	-12.9	-9.57	-12.58
240	-11.37	-6.8	-7.35	-13.26	-11.05	-0.32	-2.33	-4.33	-5.62	-7.93	-13.05	-10.81	-12.58
255	-11.18	-6.5	-9.27	-12.06	-11.31	0.31	-2.01	-4.82	-5.66	-9.22	-15.48	-12.58	-12.58
270	-11.61	-6.03	-9.42	-12.96	-10.04	0.61	-2.46	-4.9	-6.67	-8.32	-15.34	-11.35	-12.58
285	-11.98	-5.59	-8.63	-11.57	-7.83	0.38	-2.6	-6.07	-5.08	-9.61	-12.54	-11.37	-12.58
300	-12.08	-5.31	-8.09	-10.49	-9	0.34	-2.96	-6.12	-6.37	-8.18	-11.07	-12.15	-12.58
315	-12.03	-5.28	-7.47	-10.05	-7.17	0.47	-1.37	-7.77	-6.06	-11.75	-13.83	-10.75	-12.58
330	-11.78	-5.56	-7.06	-13.43	-5.11	3.02	2.19	-4.75	-4.4	-6.95	-15.23	-8.81	-12.58
345	-11.25	-6.04	-6.16	-12.57	-6.76	1.1	0.45	-5.84	-5.45	-6.2	-9.71	-7.98	-12.58

5G3													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.91	-14.07	-9.44	-7.28	-5.9	-5.45	-4.24	-5.12	-4.75	-2.18	-8.5	-8.12	-10.02
15	-14.37	-12.86	-7.45	-6.44	-5.09	-6.42	-2.39	-5.88	-3.3	-1.14	-7.26	-10.02	-10.02
30	-13.78	-15.39	-10.16	-4.87	-6.25	-6.07	-1.89	-3.47	-2.17	0.42	-3.39	-6.48	-10.02
45	-13.12	-19.81	-8.55	-3.7	-10.26	-3.82	-1.39	-1.85	-0.67	1.92	1.12	-4.8	-10.02
60	-12.34	-16.02	-7.74	-4.21	-6.35	-0.55	-0.32	0.03	0.34	2.45	0.84	-1.93	-10.02
75	-11.6	-11.96	-4.71	-1.15	-4.87	0.8	0.21	0.09	0.61	1.14	3.45	-0.09	-10.02
90	-10.96	-11.19	-2.84	-0.79	-0.98	-1.09	0.86	-1.39	0.01	1.48	2.82	-0.03	-10.02
105	-10.63	-11.63	-1.85	-0.38	-0.69	0.01	-0.03	-0.05	0.18	0.93	0.4	-1.38	-10.02
120	-10.77	-12.67	-2.58	-0.82	-2.18	-0.8	-1.47	0.28	-0.42	0.08	-0.6	-2.44	-10.02
135	-11.22	-14.42	-4.81	-3.2	-5.42	-4.39	-2.78	-0.96	-1.94	0.5	-2.47	-5.2	-10.02
150	-11.97	-15.02	-7.81	-6.64	-11.12	-6.33	-5.7	-1.27	-1.97	0.29	-3.96	-9.21	-10.02
165	-12.03	-14.44	-9.68	-7.36	-9.48	-5.03	-5.61	-2.41	-4.04	-1.18	-7.78	-9.91	-10.02
180	-11.29	-14.33	-9.64	-6.9	-8.09	-3.54	-4.64	-3.36	-4.53	-1.51	-6.6	-8.15	-10.02
195	-10.75	-12.97	-10.3	-6.12	-7.44	-4.1	-4.33	-4.76	-4.6	-2.25	-5	-5.64	-10.02
210	-10.65	-10.69	-8.46	-4.11	-7.1	-2.61	-2.86	-2.69	-1.87	-0.81	-0.75	-2.35	-10.02
225	-11.04	-8.21	-7.19	-2.32	-4.15	-0.15	-0.52	0.98	-0.33	1.88	0.73	0.09	-10.02
240	-12.27	-7.67	-4.7	-0.6	-2.11	1.65	1.03	3	2.08	1.39	2.19	1.44	-10.02



255	-13.92	-8.18	-3.65	0.4	-1.5	0.9	1.24	1.37	1.91	1.11	2.03	2.57	-10.02
270	-14.59	-8.19	-3.29	0.79	-1.67	-0.98	-0.54	-1.29	0.26	2.23	4.19	2.99	-10.02
285	-14.65	-7.58	-3.74	-0.38	-1.24	0.33	0.66	1.32	1.11	0.39	3.43	2.51	-10.02
300	-13.53	-8.12	-5.9	-1.51	-2.52	1.25	1.13	2.71	-2.23	2.68	0.56	1.42	-10.02
315	-12.85	-10.07	-7.29	-3.07	-3.39	-0.04	-0.39	1.26	-2.82	2.79	-0.58	-0.98	-10.02
330	-12.67	-12.95	-7.22	-6.27	-7.49	-3.74	-3.26	-1.25	-2.12	-2.36	-2.88	-4.31	-10.02
345	-13.27	-15.21	-8.48	-7.29	-7.8	-4.66	-6.82	-5.24	-4.73	-1.76	-3.27	-5.91	-10.02

5.8GHz Composite Gain NSS=1													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-5.49	-2.23	-3.18	-4.31	-1.58	4.83	3.95	-0.84	-1.00	-0.86	-2.69	-3.72	-8.20
15	-5.65	-1.95	-3.16	-5.01	-0.26	5.11	5.18	-0.14	0.02	1.27	-1.98	-3.92	-8.20
30	-5.71	-2.57	-4.27	-4.96	-1.20	4.41	4.86	1.26	1.31	2.70	-1.63	-3.09	-8.20
45	-5.46	-3.09	-2.61	-2.90	-3.93	4.21	4.20	0.68	1.01	2.94	0.35	-2.86	-8.20
60	-5.31	-2.86	-2.33	-1.02	-2.33	5.57	4.22	0.73	1.08	2.60	-0.18	-1.41	-8.20
75	-4.94	-2.45	-1.06	0.71	-2.33	5.76	4.48	1.82	1.86	1.52	1.33	-0.36	-8.20
90	-4.65	-2.79	0.04	0.38	-0.47	5.42	5.12	1.69	1.94	1.58	1.03	0.01	-8.20
105	-4.44	-3.87	0.51	0.39	-0.58	5.52	5.04	2.91	1.43	1.26	-0.34	-0.70	-8.20
120	-4.47	-5.25	0.47	0.38	-1.43	5.56	4.48	2.16	1.38	1.61	-1.44	-0.75	-8.20
135	-4.43	-6.60	0.34	-1.00	-3.37	5.33	4.40	1.93	1.58	2.76	-2.23	-1.96	-8.20
150	-4.60	-6.98	-0.62	-3.08	-5.90	4.60	3.14	2.38	1.81	2.50	-2.84	-3.70	-8.20
165	-4.57	-6.50	-1.52	-2.68	-5.52	4.39	2.58	2.97	2.78	1.65	-5.67	-3.67	-8.20
180	-4.48	-6.10	-1.58	-1.80	-5.27	5.12	3.00	2.61	2.30	1.59	-4.42	-3.19	-8.20
195	-4.31	-5.17	-1.91	-2.05	-3.80	6.00	3.93	2.02	1.95	1.45	-3.58	-2.93	-8.20
210	-4.07	-4.01	-1.65	-1.93	-2.78	5.78	3.79	1.85	2.17	1.51	-1.50	-1.82	-8.20
225	-4.26	-3.11	-2.22	-2.60	-2.05	5.97	4.58	2.60	2.23	2.25	-1.37	0.25	-8.20
240	-4.67	-2.91	-1.61	-1.90	-0.88	6.23	5.16	3.91	3.39	1.37	0.21	0.86	-8.20
255	-5.00	-2.91	-1.22	-1.21	-0.48	6.19	5.33	3.23	3.26	1.08	-0.25	1.32	-8.20
270	-5.37	-2.62	-0.58	-0.76	-0.12	5.84	4.22	2.02	2.23	1.64	1.42	1.67	-8.20
285	-5.53	-2.17	-0.42	-0.92	0.34	6.20	4.92	2.36	2.13	1.22	1.14	0.49	-8.20
300	-5.21	-2.02	-0.88	-0.72	-1.10	6.07	5.28	2.54	0.00	2.00	0.35	-0.98	-8.20
315	-5.24	-2.36	-1.34	-1.37	-1.50	4.42	3.68	1.98	0.58	1.82	-1.62	-2.23	-8.20
330	-5.37	-2.84	-2.04	-4.48	-1.20	4.17	3.72	1.37	1.72	-0.44	-4.35	-3.71	-8.20
345	-5.35	-2.86	-2.66	-5.35	-1.39	5.39	4.04	0.05	-0.29	-0.14	-3.04	-4.10	-8.20