

FCC Composite Gain Test Report

TP-Link Systems Inc.

10 Mauchly, Irvine, CA 926187



Copyright © 2024 By TP-Link Systems Inc. All rights reserved.

The drawings, specifications and the data contained in this document are exclusively the property of TP-Link Systems Inc. The information is intended for internal use only and is subject to change without any notice.

With no written permission from TP-Link Systems Inc. this document, in parts or as a whole, shall not be reproduced, copied, or used in any form or by any means to make any derivatives such as translation, transformation, or adaptation, for any purpose whatever.




is a registered trademark of TP-Link Systems Inc. Other brands and product names mentioned herein are trademarks or registered trademarks of their respective holders.

Warning

This document is intended for internal use only. A Non-Disclosure Agreement (NDA) approved by Chief Technology Officer (CTO) is required to release this document under any circumstances.

Basic Information

EUT Description:	BE5000 Indoor/Outdoor Dual-Band Wi-Fi 7 Access Point		
Brand Name:	tp-link		
Model Name:	EAP725 Outdoor		
Tested By:	Chen Xuemeng 	Date:	2025/06/12

CONTENTS

1	Operation Mode and Antenna Information	5
1.1	EUT Operation Mode	5
1.2	Antenna Information	5
1.3	Test Frequency	5
2	Test System.....	6
2.1	Test Equipment.....	6
2.2	Test Software.....	6
3	Test Summary.....	7
3.1	Measurement Environment	7
3.2	Measurement Quantity	9
3.3	Test Method.....	9
3.4	Directional Gain Calculations	10
3.5	Directional Gain ($N_{ss}=N_{ant}$) Calculations	11
3.6	Test Procedure	11
4	Measured Value and Maximum Gain Positions.....	13
4.1	Antenna Number	13
4.2	2G	13
4.2.1	DG_1SS Max Value Position	13
4.2.2	DG_1SS Max Value Position Calculation	13
4.2.3	DG_NSSmax Max Value Position.....	13
4.2.4	DG_NSSmax Max Value Position Calculation	14
4.3	5G.....	14
4.3.1	DG_1SS Max Value Position	14
4.3.2	DG_1SS Max Value Position Calculation	14
4.3.3	DG_NSSmax Max Value Position.....	15
4.3.4	DG_NSSmax Max Value Position Calculation	15
5	Test and Calculate Result	15
5.1	Peak Antenna Gain (Single)	15
5.2	DG_1SS Calculate Result	15
5.3	DG_NSSmax Calculate Result.....	16
6	Test Pattern	17
6.1	Antenna Pattern.....	17

7	Test Pattern.....	17
7.1	DG_1SS Test Data.....	17
7.2	DG_NSSmax Test Data.....	28

1 Operation Mode and Antenna Information

1.1 EUT Operation Mode

The EAP725 Outdoor is the Dual-band wireless AP consisted of 2 external antennas, of which 2 were 2.4G & 5G Dual-Band antennas.

1.2 Antenna Information

The Antennas are external , the Locations of Antennas are shown below:



Figure 1-1 Locations of Antennas

The Antenna Information was shown below:

Table 1-1 Antenna Information

Antenna Position	Antenna Type	Connector	Mode of operation
Ant1	Dipole	RP-SMA	2.4G&5G
Ant2	Dipole	RP-SMA	2.4G&5G

1.3 Test Frequency

Test frequency bands are shown in *Table 1-2*.

Table 1-2 Test Frequency

Frequency Band(MHz)
2400-2500
5150-5250
5250-5350
5470-5725
5725-5925

2 Test System

2.1 Test Equipment

Table 2-1 Test System

Equipment	Model	Manufacturer	S/N	Cali. Interval	Cali. Due Date
Chamber	Rayzone2800	GTS	MY53470435	12months	2026/04/15
Vector Network Analyzer	E5071C	Keysight	MY46315238	24months	2026/05/27

2.2 Test Software

Table 2-2 Test Software

Software	Version	Function
GTS MaxSign100	V2.1	Passive Antenna Measurements

3 Test Summary

3.1 Measurement Environment

This measurement experiment adopted an antenna near-field measurement system, and the diagram of the measurement system was shown in Figure 3-1. The excitation signal was generated by the Keysight E5071C (300kHz-20GHz). Under the control of the central computer, the probe rotated in the θ direction, and the EUT rotated in the ϕ direction with the turntable. The probe sampling frame received and collected signals in the near-field range of the EUT. The software system which was controlled by the central computer completed the processing, output and display of the test data.

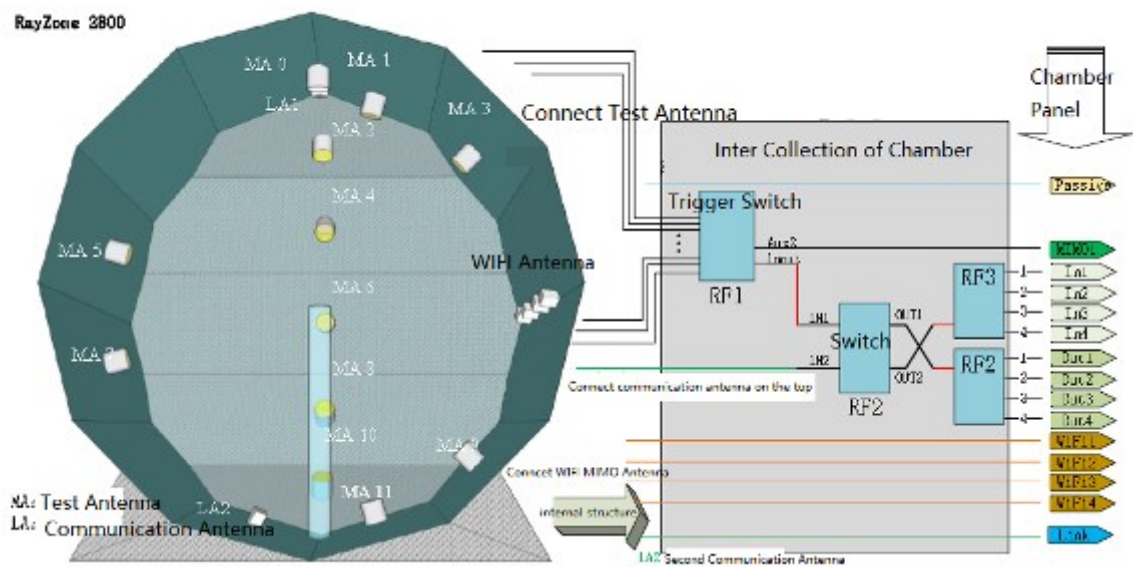


Figure 3-1 Schematic diagram of antenna near-field measurement system

The test site was a full anechoic chamber with a size of 3.0m×3.1m×2.97m, which was built by GTS Rayzone2800. All six surfaces of the anechoic chamber were pasted with absorbing materials. And the chamber was calibrated by the authoritative third-party lab every year. The antenna anechoic chamber measurement system adopted a 13-probe multi-probe system. The probe antennas were evenly distributed on the spherical surface surrounding the EUT, and their operating frequency was 600MHz~8.5GHz.

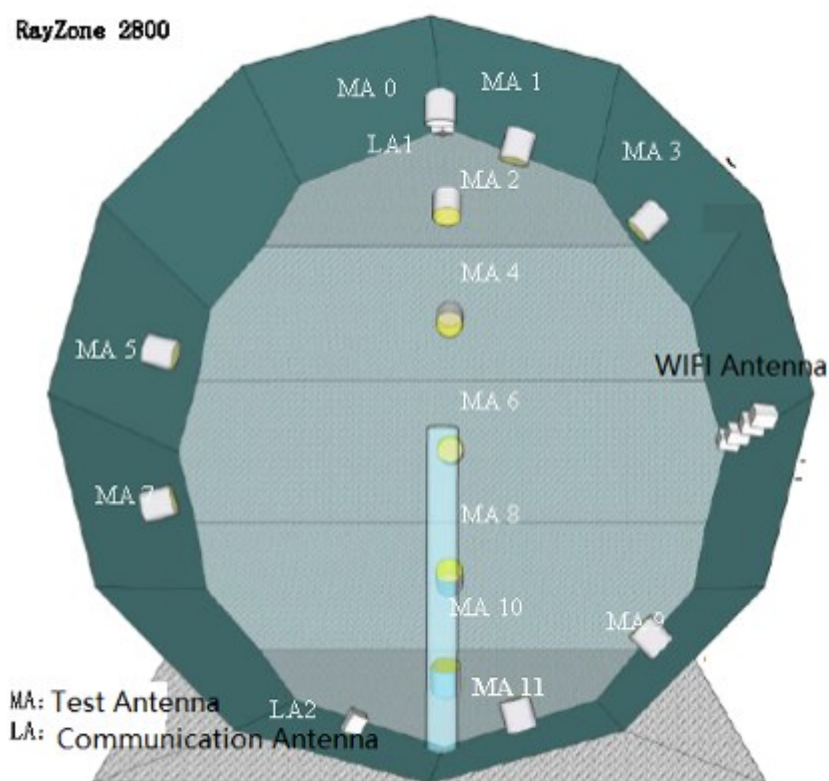


Figure 3-2 Antenna anechoic chamber for near-field measurement

During the measurement, the probe antennas were rotated in the θ direction under the control of the probe holder to sample the near-field data at the θ angle. At the same time, the EUT rotated with the turntable in the ϕ direction to sample the near field data at the ϕ angle. The system diagram was shown in Figure 3-3. From the sampling results, the EUT's near-field test data of θ component, ϕ component and total component could be obtained.

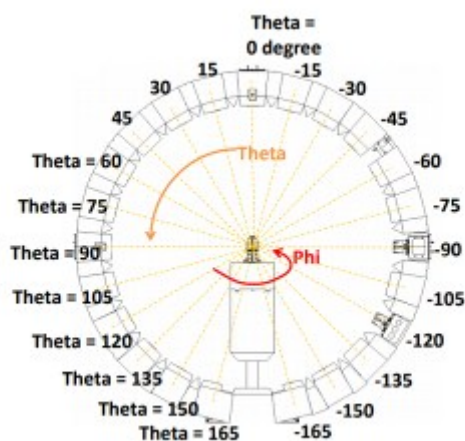


Figure 3-3 System diagram

Before the measurement, calibrated the vector network analyzer, and then connected the input end of each antenna to the output end of the vector network analyzer, and evenly the antennas to be measured. The Calibration information was shown in table 2-1.

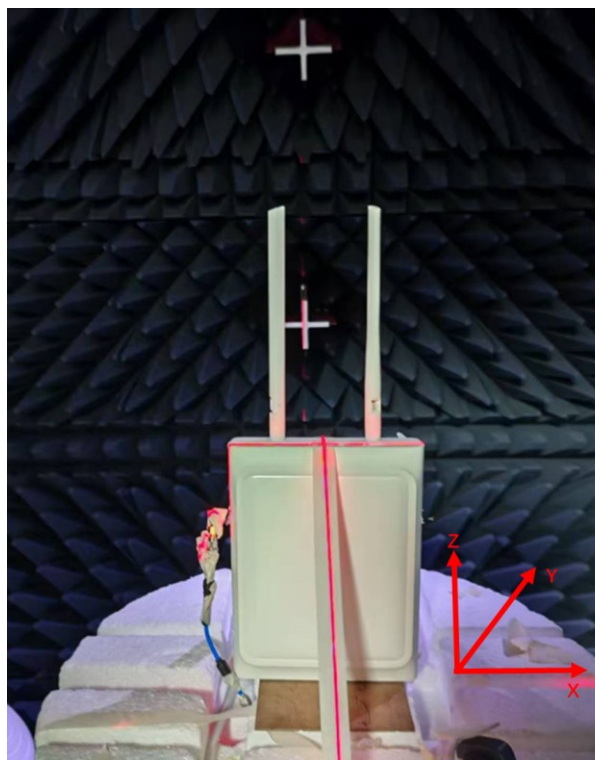


Figure 3-4 Antennas measurement diagram

Table 3-1 Calibration information

Measurement Class	Standard
Cal Type	2p/1-2
Cal Kit	N4691B

3.2 Measurement Quantity

In this measurement experiment, the Directional Gain was measured at a certain frequency interval within the whole frequency range. The measurement frequency interval of the 2.4G antennas was 10MHz, while the 5GL and 5GU and 6G antennas was 50MHz.

3.3 Test Method

During the measurement, the probe antennas were rotated in the θ direction under the control of the probe holder to sample the near-field data at the θ angle. At the same time, the EUT rotated with the turntable in the φ direction to sample the near field data at the φ angle. The sampling accuracy was 15° . The system diagram was shown in Figure 2-6. From the sampling results, the EUT's near-field test data of θ component, φ component and total component could be obtained.

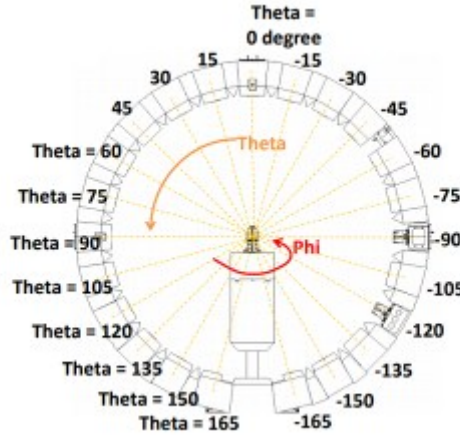


Figure 3-5 Test angle

3.4 Directional Gain Calculations

Multiple antennas system, each of which has one of two (or three) polarizations that are orthogonal to one another (i.e., cross polarized), The total gain—including array gain—is computed separately for each of the two (or three) polarizations using the procedures presented in this document. The highest of the total gains shall apply.

Theoretical Directional Gain represented the theoretical value calculated by formula 2-1. As we all know, the effect of array gain must be included in the calculation of overall directional antenna gain for devices that transmit on multiple outputs simultaneously in the same band, in the same or in overlapping frequency ranges. Therefore, in formula 2-1, the directional gain calculation needs to include all directions and all Frequencies and all Polarizations, and then take the maximum value as the final directional gain value. Therefore, the calculation formula of theoretical directional gain value can be modified as formula 2-2

$$\text{Directional Gain} = 10\log \left[\frac{\sum_{j=1}^{N_{SS}} \left(\sum_{k=1}^{N_{ANT}} g_{j,k} \right)^2}{N_{ANT}} \right] \quad (2-1)$$

Where

Nss = the number of independent spatial streams of data; NSS =1.

Nant = the total number of antennas: NANT =4 for 2.4G & 5G antennas

$g_{j,k} = 10^{G_k/20}$ if the kth antenna is being fed by spatial stream j, or zero if it is not;

G_k is the gain in dBi of the kth antenna .

$$\text{Directional Gain} = \text{Maximum} \left[10\log \left[\frac{\sum_{j=1}^{N_{SS}} \left(\sum_{k=1}^{N_{ANT}} g_{j,k} \right)^2}{N_{ANT}} \right] \right] \quad (2-2)$$

Maximum function is the max directional gain overall directions and all frequency all polarizations.

3.5 Directional Gain (Nss=N_{ant}) Calculations

Multiple antennas system, each of which has one of two (or three) polarizations that are orthogonal to one another (i.e., cross polarized), The total gain—including array gain—is computed separately for each of the two (or three) polarizations using the procedures presented in this document. The highest of the total gains shall apply.

Theoretical Directional Gain represented the theoretical value calculated by formula 2-1. As we all know, the effect of array gain must be included in the calculation of overall directional antenna gain for devices that transmit on multiple outputs simultaneously in the same band, in the same or in overlapping frequency ranges. Therefore, in formula 2-1, the directional gain calculation needs to include all directions and all Frequencies and all Polarizations, and then take the maximum value as the final directional gain value. Therefore, the calculation formula of theoretical combined gain value can be modified as formula 2-2

$$\text{Directional Gain} = 10\log \left[\frac{\sum_{j=1}^{N_{ANT}} g_{j,k}}{N_{ANT}} \right] \quad (2-3)$$

Where

Nss = the number of independent spatial streams of data; NSS =Nant.

Nant = the total number of antennas: NANT =4 for 2.4G & 5G & 6G antennas

$$g_{j,k} = 10^{G_k/10} \quad \text{if the } k\text{th antenna is being fed by spatial stream } j, \text{ or zero if it is not;}$$

G_k is the gain in dBi of the kth antenna .

$$\text{Directional Gain} = \text{Maximum} \left[10\log \left[\frac{\sum_{j=1}^{N_{ANT}} g_{j,k}}{N_{ANT}} \right] \right] \quad (2-4)$$

Maximum function is the max directional gain overall directions and all frequency all polarizations.

3.6 Test Procedure

The calculation method of DG (Directional Gain) in this scheme is summarized as follows:

- 1) The antenna anechoic chamber is used to measure the gain of each antenna, the gain of each antenna at this angle is taken every 15° to calculate the Directional Gain;
- 2) Use formula below to calculate and the DG_Nss=1 of the system at this angle is obtained

$$\text{Directional Gain} = 10\log \left[\frac{\sum_{j=1}^{N_{SS}} \left(\sum_{k=1}^{N_{ANT}} g_{j,k} \right)^2}{N_{ANT}} \right] \quad (2-5)$$

- 3) Use formula below to calculate and the DG_Nssmax of the system at this angle is obtained

$$\text{Directional Gain} = 10\log\left[\frac{\sum_{j=1}^{N_{ANT}} g_{j,k}}{N_{ANT}}\right] \quad (2-6)$$

- 4) For each frequency point, the Directional Gain value under 24 different angles can be obtained, and finally the maximum value is taken as the system Directional Gain value.

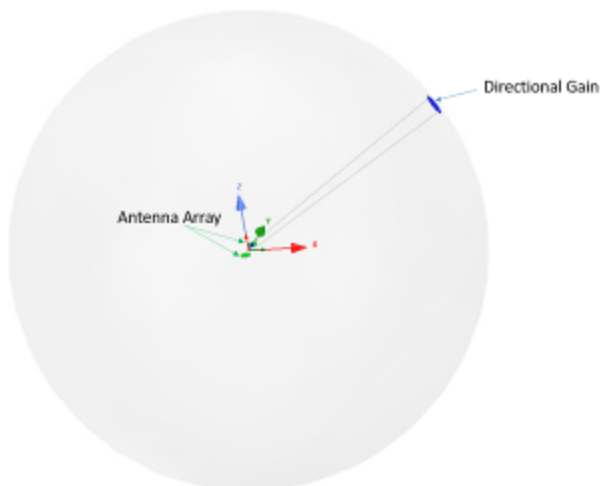


Figure 3-6 Directional Gain Calculation Sketch Map

4 Measured Value and Maximum Gain Positions

4.1 Antenna Number

The Antennas number for measured in the following section was shown below:

Table 4-1 Antennas number

Antenna Number	Antenna Position	
	2G	5G
Ant1	Ant1	Ant1
Ant2	Ant2	Ant2

4.2 2G

4.2.1 DG_1SS Max Value Position

Table 4-2 DG_1SS Max Value Position

Frequency(GHz)	2.40~2.50
Ant1(dBi)	4.37
Ant2(dBi)	4.50
Polarization	Theta
Φ (°)	90
θ (°)	90

4.2.2 DG_1SS Max Value Position Calculation

Table 4-3 DG_1SS Max Value Position Calculation

Frequency(GHz)	2.40~2.50
Ant1[$10^{(G/20)}$]	$10^{(4.37/20)}$
Ant2[$10^{(G/20)}$]	$10^{(4.50/20)}$
Ant1[$10^{(G/20)}$] value	1.654
Ant2[$10^{(G/20)}$] value	1.679
Sum of Ants Value(Antmax)	3.333
DG[$10 * \text{Log}(\text{Antmax}^2 / \text{Nant})$] (dBi)	7.45

4.2.3 DG_NSSmax Max Value Position

Table 4-4 DG_NSSmax Max Value Position

Frequency(GHz)	2.40~2.50
Ant1(dBi)	4.37

Ant2(dBi)	4.50
Polarization	Theta
Φ (°)	90
θ (°)	90

4.2.4 DG_NSSmax Max Value Position Calculation

Table 4-5 DG_NSSmax Max Value Position Calculation

Frequency(GHz)	2.40~2.50
Ant1[10^{^(G/10)}]	10 ^{^(4.37/10)}
Ant2[10^{^(G/10)}]	10 ^{^(4.50/10)}
Ant1[10^{^(G/10)}] value	2.735
Ant2[10^{^(G/10)}] value	2.818
Sum of Ants Value(Antmax)	5.554
DG[10*Log₁₀(Antmax/Nant)] (dBi)	4.44

4.3 5G

4.3.1 DG_1SS Max Value Position

Table 4-6 DG_1SS Max Value Position

Frequency(GHz)	5.15~5.25	5.25~5.35	5.47~5.725	5.725~5.925
Ant1(dBi)	5.07	5.12	4.27	4.25
Ant2(dBi)	3.67	4.28	4.81	4.68
Polarization	Theta	Theta	Theta	Theta
Φ (°)	75	45	90	90
θ (°)	90	90	90	90

4.3.2 DG_1SS Max Value Position Calculation

Table 4-7 DG_1SS Max Value Position Calculation

Frequency(GHz)	5.15~5.25	5.25~5.35	5.47~5.725	5.725~5.925
Ant1[10^{^(G/20)}]	10 ^{^(5.07/20)}	10 ^{^(5.12/20)}	10 ^{^(4.27/20)}	10 ^{^(4.25/20)}
Ant2[10^{^(G/20)}]	10 ^{^(3.67/20)}	10 ^{^(4.28/20)}	10 ^{^(4.81/20)}	10 ^{^(4.68/20)}
Ant1[10^{^(G/20)}] value	1.793	1.803	1.635	1.631
Ant2[10^{^(G/20)}] value	1.526	1.637	1.74	1.714
Sum of Ants Value(Antmax)	3.318	3.44	3.375	3.345
DG[10*Log(Antmax²/Nant)] (dBi)	7.41	7.72	7.55	7.48

4.3.3 DG_NSSmax Max Value Position

Table 4-8 DG_NSSmax Max Value Position

Frequency(GHz)	5.15~5.25	5.25~5.35	5.47~5.725	5.725~5.925
Ant1(dBi)	5.07	5.12	4.27	4.25
Ant2(dBi)	3.67	4.28	4.81	4.68
Polarization	Theta	Theta	Theta	Theta
Φ (°)	75	45	90	90
θ (°)	90	90	90	90

4.3.4 DG_NSSmax Max Value Position Calculation

Table 4-9 DG_NSSmax Max Value Position Calculation

Frequency(GHz)	5.15~5.25	5.25~5.35	5.47~5.725	5.725~5.925
Ant1[10^(G/10)]	$10^{(5.07/10)}$	$10^{(5.12/10)}$	$10^{(4.27/10)}$	$10^{(4.25/10)}$
Ant2[10^(G/10)]	$10^{(3.67/10)}$	$10^{(4.28/10)}$	$10^{(4.81/10)}$	$10^{(4.68/10)}$
Ant1[10^(G/10)] value	3.214	3.251	2.673	2.661
Ant2[10^(G/10)] value	2.328	2.679	3.027	2.938
Sum of Ants Value(Antmax)	5.542	5.93	5.7	5.598
DG[10*Log ₁₀ (Antmax/Nant)] (dBi)	4.43	4.72	4.55	4.47

5 Test and Calculate Result

5.1 Peak Antenna Gain (Single)

Table 5-1 Antenna Test Result

Frequency Band(MHz)	Ant1	Ant2
2400-2500	4.37dBi	4.50dBi
5150-5250	5.30dBi	5.33dBi
5250-5350	5.30dBi	5.33dBi
5470-5725	4.75dBi	4.81dBi
5725-5925	4.25dBi	4.68dBi

5.2 DG_1SS Calculate Result

Table 5-2 Test & Calculate Result

Frequency Band(MHz)	Max Combined Gain	Polarization/ Φ (°) / θ (°)
2400-2450	7.45dBi	Theta/90/90

5150-5250	7.41dBi	Theta/75/90
5250-5350	7.72dBi	Theta/45/90
5470-5725	7.55dBi	Theta/90/90
5725-5925	7.48dBi	Theta/90/90


5.3 DG_NSSmax Calculate Result

Table 5-3Test & Calculate Result

Frequency Band(MHz)	Max Combined Gain	Polarization/ Φ (°) / θ (°)
2400-2450	4.44dBi	Theta/90/90
5150-5250	4.43dBi	Theta/75/90
5250-5350	4.72dBi	Theta/45/90
5470-5725	4.55dBi	Theta/90/90
5725-5925	4.47dBi	Theta/90/90

6 Test Pattern

6.1 Antenna Pattern

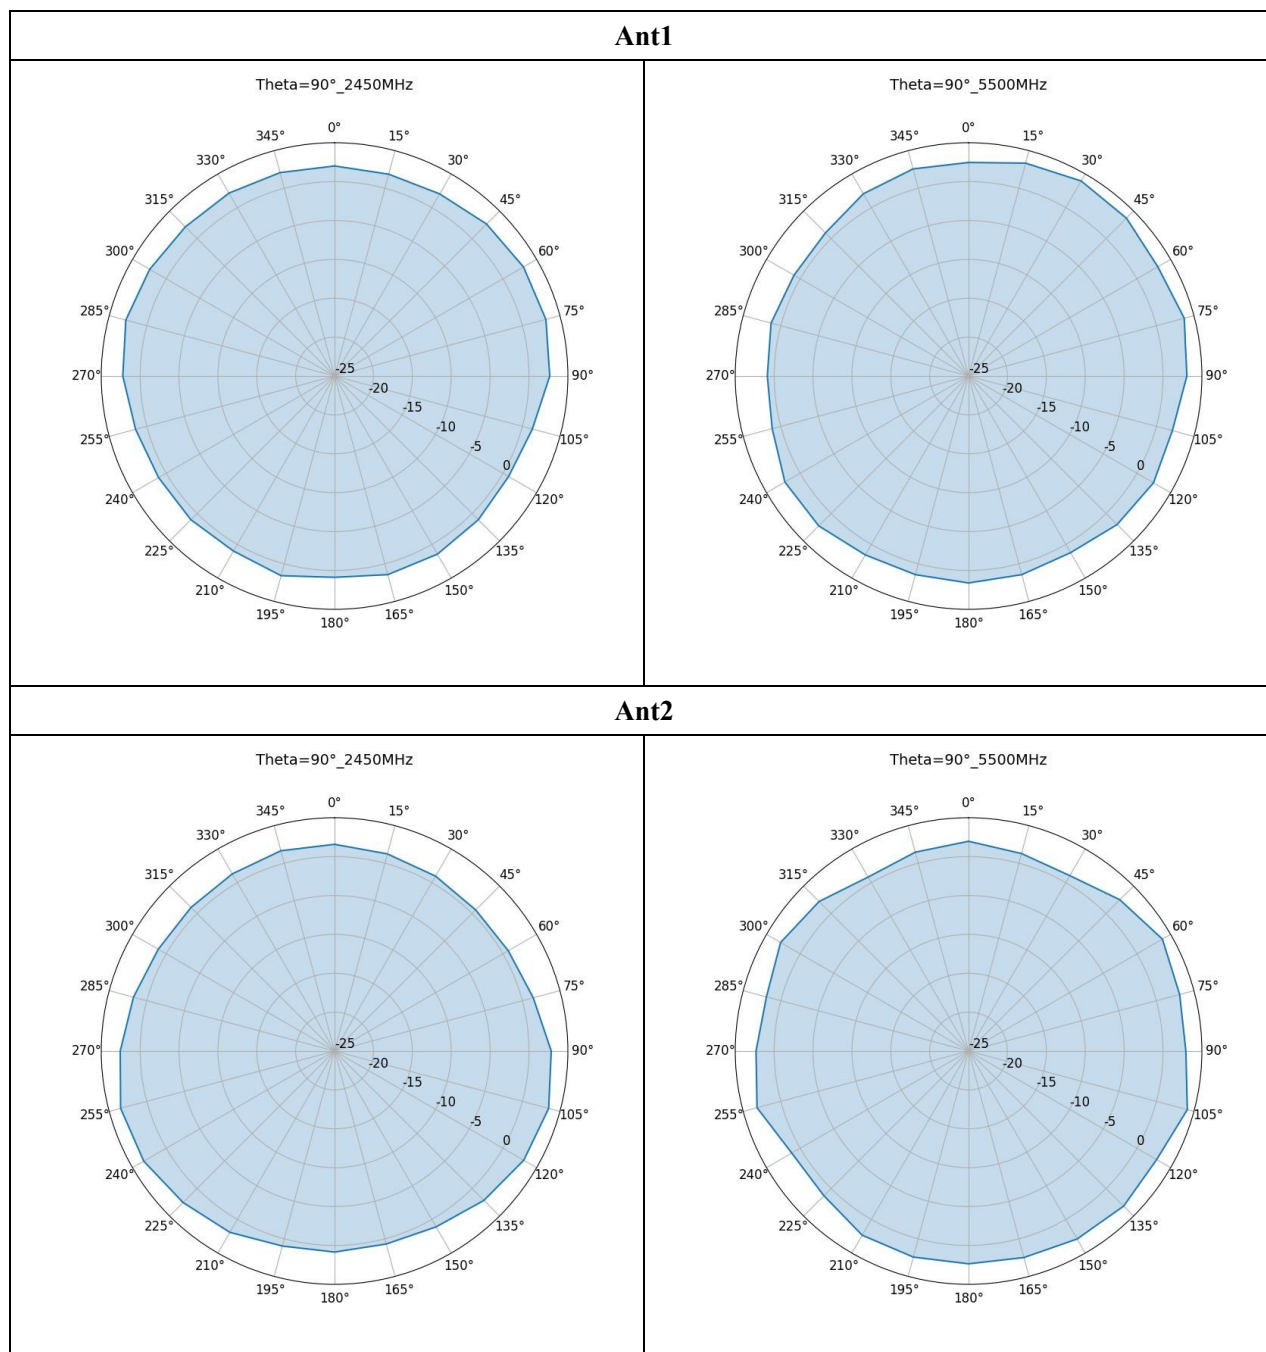

7 Test Pattern

7.1 DG_1SS Test Data

Ant1



Freq	2500												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-26.59	-15.03	-11.26	-8.49	-5.14	-0.68	0.72	-1.06	-7.89	-11.78	-12.3	-16.96	-17.93
15	-26.3	-15.03	-11.06	-8.49	-5.32	-0.5	0.59	-1.01	-7.07	-11.94	-11.3	-13.1	-17.93
30	-25.02	-15.26	-10.17	-7.68	-4.34	-0.41	0.81	-1.06	-6.79	-9.93	-10.45	-9.89	-17.93
45	-23.72	-15.45	-9.26	-6.32	-2.64	1.06	1.36	-0.8	-4.32	-8.14	-8.22	-8.39	-17.93
60	-23.7	-15.65	-8.83	-4.21	-0.78	2.85	2.79	1.05	-2.02	-5.63	-7.19	-8.33	-17.93
75	-24.52	-15.65	-8.94	-2.9	0.8	4.02	4.06	2.95	-0.65	-3.13	-7.54	-9.48	-17.93
90	-25.34	-15.34	-9.63	-3.18	0.73	4.05	4.37	3.77	0.07	-2.55	-8.22	-10.84	-17.93
105	-26.09	-15.07	-10.54	-4.74	-1.04	2.25	2.99	3.26	-0.66	-3.28	-8.81	-11.03	-17.93
120	-25.48	-14.96	-11.99	-6.9	-3.89	-0.71	0.32	1.22	-2.69	-5.81	-9.76	-11.37	-17.93
135	-24.25	-15.01	-14.22	-7.41	-5.73	-2.02	-0.97	-1.61	-5.57	-9.17	-11.73	-11.64	-17.93
150	-24.35	-15.27	-15.28	-6.6	-5.03	-0.49	0.17	-2.69	-7.42	-10.54	-12.73	-10.92	-17.93
165	-25.35	-15.48	-15.22	-6.8	-3.06	0.44	1.17	-1.87	-7.38	-9.37	-12.28	-11.17	-17.93
180	-26.5	-15.48	-16.35	-6.55	-2.56	0.9	0.9	-0.57	-7.16	-9.42	-11.47	-12.45	-17.93
195	-26.66	-15.5	-16.19	-7.13	-2.75	0.79	0.89	-1.57	-6.8	-10.91	-11.91	-14.55	-17.93
210	-25.97	-15.47	-14.52	-8.93	-3.45	-0.12	-0.42	-2.06	-8.92	-11.14	-12.77	-16.94	-17.93
225	-25.82	-15.37	-12.84	-8.96	-5.52	-1.11	-0.75	-2.66	-7.62	-9.75	-13.3	-17	-17.93
240	-26.11	-15.25	-11.06	-6.23	-4.83	-1.42	0.32	-0.7	-3.74	-8.5	-12.93	-15.22	-17.93
255	-27.33	-15.23	-9.14	-3.26	-1.57	0.82	2.18	1.86	-1.7	-6.17	-9.69	-13.56	-17.93
270	-28.21	-15.85	-7.92	-1.39	0.76	2.85	3.56	3.07	-0.98	-4.3	-7.01	-11.87	-17.93
285	-26.9	-16.97	-7.44	-0.74	1.54	3.46	3.68	2.76	-1.5	-3.47	-5.45	-10.8	-17.93
300	-25.46	-17.6	-7.85	-1.52	0.64	2.72	2.66	1.28	-2.36	-4.65	-5.77	-10.85	-17.93
315	-25.09	-17.01	-9.17	-3.07	-0.93	1.67	1.17	-0.76	-3.85	-6.8	-8	-12.57	-17.93
330	-25.16	-16.05	-10.53	-4.91	-3.18	0.48	0.34	-2.35	-4.95	-10.59	-10.44	-15.49	-17.93
345	-26.09	-15.45	-10.95	-7.35	-4.38	-0.21	0.08	-1.62	-6.89	-11.55	-13.06	-17.93	-17.93

Ant2													
Freq	2500												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.64	-13.87	-14.81	-6.45	-2.2	0.93	0.62	-1.33	-6.76	-9.21	-11.29	-12.34	-14.94
15	-17.93	-14.1	-15.6	-6.75	-2.91	0.41	0.46	-1.17	-8.23	-8.4	-10.86	-9.73	-14.94
30	-17.64	-13.96	-13.58	-8.23	-5.02	-0.24	-0.28	-2.31	-7.24	-9.73	-10.36	-7.81	-14.94
45	-17.88	-13.56	-11.07	-8.6	-6.02	-2.01	-0.34	-1.68	-5.04	-8.21	-8.72	-7.18	-14.94
60	-18.69	-13.42	-9.72	-6.14	-3.84	-1.31	0.43	1.06	-2.08	-4.85	-8.35	-7.73	-14.94
75	-19.23	-13.74	-9.47	-3.85	-0.72	1.71	2.75	3.55	-0.32	-2.35	-8.35	-8.47	-14.94
90	-18.93	-14.45	-10.27	-3.05	0.82	3.78	4.5	4.27	0.65	-1.53	-7.55	-8.93	-14.94
105	-18.36	-15.57	-11.73	-3.53	0.58	4.12	4.31	3.52	0.42	-2.01	-6.91	-9.63	-14.94
120	-17.93	-17.12	-13.33	-5.17	-1.01	2.96	2.76	1.62	-0.92	-3.6	-7.24	-10.52	-14.94
135	-17.33	-19.17	-15	-7.54	-3.16	0.82	1.07	-0.38	-2.98	-5.65	-8.41	-10.79	-14.94
150	-16.67	-21.51	-16.07	-9.33	-5.07	-0.75	0.29	-1.22	-5.2	-7.26	-9.01	-10.87	-14.94
165	-16.47	-22.52	-14.81	-10.06	-6.23	-0.68	0.62	-1.02	-6.17	-9.92	-9.49	-11.47	-14.94



180	-16.41	-20.84	-13.92	-11.39	-5.68	-0.34	0.61	-1.58	-6.36	-11.2	-10.12	-12.42	-14.94
195	-16.56	-18.54	-14.54	-9.63	-5.03	-0.69	0.08	-1.81	-7.21	-9.92	-10.17	-14.56	-14.94
210	-16.74	-16.78	-13.17	-6.27	-3.7	0.18	-0.64	-2.69	-5.79	-8.56	-9.39	-14.86	-14.94
225	-16.6	-15.56	-9.91	-3.76	-0.88	1.06	0.34	-1.16	-4.38	-5.45	-8.03	-12.68	-14.94
240	-16.29	-14.58	-7.73	-1.72	0.96	2.71	2.87	1.04	-2.16	-4.11	-7.75	-11.78	-14.94
255	-16.25	-13.42	-6.66	-0.55	1.92	3.57	4.24	2.88	-1.01	-3.85	-7.63	-12.07	-14.94
270	-16.24	-12.58	-6.52	-0.65	1.61	3.55	4.07	3.53	-0.92	-3.95	-7.74	-13.08	-14.94
285	-16.28	-12.26	-7.03	-1.93	-0.18	2.25	2.67	2.6	-1.95	-4.98	-8.21	-14.24	-14.94
300	-16.52	-12.28	-7.81	-4.39	-3.07	-0.1	0.37	0.18	-4.5	-8.37	-9.16	-14.39	-14.94
315	-17.06	-12.44	-9.09	-7.08	-4.56	-1.19	-1.06	-2.46	-8.03	-12.16	-10.94	-14.45	-14.94
330	-18.11	-12.89	-10.99	-7.49	-3.29	-0.4	-0.66	-2.79	-9.58	-11.64	-12.05	-14.94	-14.94
345	-18.82	-13.41	-13.05	-6.76	-2.42	0.37	0.48	-1.96	-7.29	-10.83	-11.98	-14.67	-14.94

Composite Gain													
Freq	2500												
Phi\Theta eta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.73	-11.42	-9.84	-4.4	-0.54	3.17	3.68	1.82	-4.3	-7.39	-8.77	-11.34	-13.3
15	-18.13	-11.54	-10.03	-4.57	-1.02	2.98	3.54	1.92	-4.62	-6.98	-8.07	-8.24	-13.3
30	-17.56	-11.58	-8.7	-4.94	-1.66	2.69	3.29	1.35	-4	-6.82	-7.39	-5.78	-13.3
45	-17.31	-11.44	-7.11	-4.38	-1.16	2.67	3.56	1.78	-1.66	-5.16	-5.46	-4.75	-13.3
60	-17.83	-11.45	-6.25	-2.11	0.83	4.03	4.7	4.07	0.96	-2.22	-4.74	-5.01	-13.3
75	-18.47	-11.63	-6.19	-0.35	3.08	5.95	6.44	6.27	2.53	0.28	-4.93	-5.95	-13.3
90	-18.55	-11.87	-6.93	-0.1	3.79	6.93	7.45	7.03	3.38	0.99	-4.87	-6.82	-13.3
105	-18.38	-12.31	-8.1	-1.1	2.82	6.25	6.69	6.4	2.91	0.39	-4.8	-7.29	-13.3
120	-17.9	-12.96	-9.62	-2.98	0.68	4.33	4.64	4.43	1.25	-1.62	-5.4	-7.92	-13.3
135	-17.11	-13.83	-11.59	-4.46	-1.34	2.53	3.12	2.04	-1.17	-4.22	-6.9	-8.19	-13.3
150	-16.68	-14.83	-12.66	-4.85	-2.04	2.39	3.24	1.09	-3.23	-5.74	-7.66	-7.88	-13.3
165	-16.81	-15.3	-12	-5.27	-1.49	2.91	3.91	1.58	-3.74	-6.63	-7.76	-8.31	-13.3
180	-17.06	-14.74	-12.04	-5.63	-0.97	3.31	3.77	1.95	-3.74	-7.25	-7.76	-9.42	-13.3
195	-17.21	-13.88	-12.32	-5.28	-0.81	3.09	3.5	1.32	-3.99	-7.39	-7.99	-11.54	-13.3
210	-17.17	-13.09	-10.81	-4.49	-0.56	3.04	2.48	0.64	-4.2	-6.74	-7.91	-12.83	-13.3
225	-17.03	-12.45	-8.24	-2.97	0.12	3.05	2.82	1.13	-2.84	-4.33	-7.26	-11.56	-13.3
240	-16.87	-11.9	-6.23	-0.68	1.55	3.9	4.7	3.22	0.1	-3.02	-6.95	-10.32	-13.3
255	-17.12	-11.27	-4.8	1.21	3.36	5.31	6.28	5.4	1.66	-1.92	-5.59	-9.77	-13.3
270	-17.3	-11.05	-4.18	2	4.21	6.22	6.83	6.31	2.06	-1.11	-4.36	-9.44	-13.3
285	-17.05	-11.29	-4.22	1.7	3.73	5.89	6.2	5.69	1.29	-1.18	-3.71	-9.34	-13.3
300	-16.88	-11.53	-4.82	0.17	1.99	4.43	4.6	3.76	-0.35	-3.3	-4.29	-9.43	-13.3
315	-17.17	-11.42	-6.12	-1.84	0.45	3.37	3.14	1.44	-2.68	-6.06	-6.34	-10.45	-13.3
330	-17.93	-11.32	-7.75	-3.09	-0.22	3.06	2.86	0.44	-3.95	-8.09	-8.2	-12.2	-13.3
345	-18.71	-11.36	-8.93	-4.04	-0.33	3.1	3.29	1.22	-4.08	-8.17	-9.49	-13.14	-13.3

Ant1													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-12.13	-10.33	-6.36	-6.4	-7.86	1.64	4.63	1.26	-12.29	-14.06	-11.61	-8.2	-22.89
15	-12.35	-10.03	-6.4	-6.63	-7.27	1.5	4.96	1.94	-14.07	-14.31	-12.28	-6.88	-22.89
30	-12.48	-10.23	-6.78	-7.09	-8.28	1.02	5.3	1.88	-14.16	-15.15	-12.3	-5.89	-22.89
45	-12.19	-10.78	-7.71	-7.45	-9.3	0.07	4.35	0.11	-16.46	-14.95	-12.8	-5.6	-22.89
60	-11.96	-10.92	-10.2	-6.7	-7.92	-0.08	3.49	-0.73	-14.09	-12.52	-11.5	-5.52	-22.89
75	-11.85	-10.96	-13.52	-6.45	-7.55	-0.05	5.07	2.27	-10.28	-13.27	-9.64	-6	-22.89
90	-12.08	-11.18	-15.51	-7.61	-11.25	-2.02	3.72	1.3	-11.27	-11.96	-9.56	-7.01	-22.89
105	-12.42	-11.77	-13.67	-8.87	-8.7	-2.16	1.88	-1.65	-12.67	-11.4	-11.7	-9.41	-22.89
120	-12.63	-12.87	-12.77	-8.11	-7.46	-1.79	4.2	2.36	-6.66	-13.64	-13.95	-13.98	-22.89
135	-12.39	-14.37	-13.76	-7.69	-11.39	-2.47	3.05	2.7	-6.01	-17.03	-13.59	-18.32	-22.89
150	-12.45	-15.03	-14.48	-9.16	-15.91	-2.57	1.21	-0.41	-8.37	-16.69	-11.5	-17.54	-22.89
165	-12.54	-15.08	-13.02	-9.9	-12.34	-1.8	1.34	-1.36	-8.16	-12.98	-11.43	-15.01	-22.89
180	-12.61	-15.4	-11.85	-9.02	-13.37	-1.21	1.35	-1.19	-7.59	-13.53	-16.9	-16.67	-22.89
195	-12.78	-15.38	-11.09	-8.37	-15.33	-0.98	1.38	-1.4	-8.5	-12.53	-22.51	-20.2	-22.89
210	-12.79	-15.22	-9.43	-7.74	-15.7	-1.31	1.87	-0.23	-9.24	-11.02	-15.52	-22.89	-22.89
225	-12.46	-15.78	-7.9	-6.86	-10.29	-1.23	3.63	2.47	-7.59	-16.32	-15.84	-21.41	-22.89
240	-12.45	-16.58	-6.34	-6.3	-7.16	-0.39	4.11	2.65	-7.96	-18.38	-19.18	-16.86	-22.89
255	-12.65	-16.76	-5.08	-7.15	-8.57	-0.7	2.16	-1.76	-12.83	-15.59	-14.93	-13.88	-22.89
270	-12.68	-16.63	-5.05	-7.11	-9.21	-1.96	2.37	-0.32	-9.79	-15.56	-15.54	-11.58	-22.89
285	-12.7	-17.28	-5.43	-5.53	-6.63	-0.16	3.26	0.88	-9.14	-18.46	-25.59	-10.21	-22.89
300	-12.62	-17.06	-5.51	-5.46	-6.9	-0.09	1.73	-3.12	-22.58	-17.69	-18.85	-9.09	-22.89
315	-12.26	-14.96	-5.94	-6.62	-10.63	-0.66	1.36	-2.55	-17.11	-18.29	-17.22	-8.46	-22.89
330	-11.96	-12.9	-6.29	-7.05	-11.6	0.48	3.42	-0.08	-15.14	-18.05	-13.37	-8.18	-22.89
345	-11.95	-11.39	-6.09	-6.65	-8.78	1.35	4.65	0.64	-13.46	-14.53	-12.4	-8.67	-22.89

ANT2													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-15.52	-11.03	-9.3	-11.72	-9.01	-0.85	2.53	-1.61	-10.57	-22.33	-15.22	-13.33	-14.31
15	-15.51	-12.24	-9.5	-12.16	-12.25	-1.79	2	-2.07	-8.64	-14.48	-11.76	-14.31	-14.31
30	-15.63	-13	-8.95	-11.51	-11.2	-2.99	1.28	-0.78	-9.18	-12.45	-8.62	-12.96	-14.31
45	-16.09	-12.89	-10.48	-8.65	-8.02	-3.43	3.82	2.23	-6.14	-11.68	-9.89	-10.91	-14.31
60	-15.87	-12.15	-13.42	-7.02	-6.86	-1.54	4.91	2.94	-5.45	-12.26	-12.5	-9.51	-14.31
75	-15.5	-11.65	-21.16	-7.55	-8.28	-2.42	3.67	0.06	-12.21	-12.51	-13.28	-8.15	-14.31
90	-15.21	-11.42	-18.73	-7.07	-9.87	-2.41	3.64	2.16	-8.96	-14.91	-12.92	-8.26	-14.31
105	-15.06	-11.65	-16.52	-5.47	-6.75	-0.44	5.05	3.37	-7.05	-24.37	-11.85	-7.89	-14.31
120	-15.02	-12.63	-15.58	-5.76	-7.42	-1.72	3.58	-0.07	-10.52	-17.39	-12.73	-6.91	-14.31



135	-15.5	-14.4	-13.92	-7.27	-8.95	-2.02	4.05	0.02	-13.2	-17.02	-11.33	-5.61	-14.31
150	-15.89	-15.77	-12.93	-7.67	-7.42	-0.7	5.02	1.92	-11.32	-25.64	-10.33	-5.9	-14.31
165	-15.85	-16.32	-13.1	-6.91	-6.48	0.16	4.9	1.78	-10.68	-15.78	-10.8	-7.7	-14.31
180	-15.51	-15.61	-12.68	-6.69	-6.52	0.55	4.66	1.49	-10.93	-12.93	-11.94	-9.42	-14.31
195	-15.26	-14.25	-12.47	-6.98	-8.33	0.77	4.67	1.57	-11.51	-11.68	-11.21	-10.33	-14.31
210	-15.2	-13.13	-10.17	-7.87	-10.46	0.8	3.95	0.51	-14.6	-14.06	-11.19	-9.9	-14.31
225	-15.2	-12.4	-9.17	-7.63	-7.29	0.32	1.93	-2.88	-18.55	-19.34	-14.75	-9.12	-14.31
240	-15.5	-11.99	-9.49	-5.82	-6.6	0.26	2.82	-1.24	-19.12	-19.36	-16.63	-9.52	-14.31
255	-15.88	-11.65	-11.27	-5.62	-8.24	2.61	4.94	2.37	-13.22	-13.22	-13.07	-9.46	-14.31
270	-15.84	-11.85	-11.23	-7.73	-7.82	1.77	3.01	-0.09	-19.46	-10.28	-10.59	-7.79	-14.31
285	-15.74	-12.14	-12.02	-7.23	-6.8	1.86	3.43	-0.89	-16.65	-13.7	-13.14	-7.21	-14.31
300	-15.84	-12.38	-11.53	-5.48	-7.03	2.28	5.33	2.34	-9.22	-12.84	-13.58	-7.43	-14.31
315	-15.75	-12.03	-9.72	-7.22	-9.48	0.73	3.59	1.38	-10.24	-13.42	-13.16	-7.99	-14.31
330	-15.48	-11.29	-9.22	-9.83	-10.46	-0.32	1.1	-1.33	-12.72	-11.33	-10.93	-9.35	-14.31
345	-15.52	-10.83	-9.36	-11.51	-9.11	-0.3	1.45	-2.19	-13.45	-14.9	-11.7	-11.61	-14.31

Composite Gain													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-10.65	-7.66	-4.7	-5.65	-5.41	3.49	6.65	2.95	-8.38	-14.24	-10.22	-7.38	-14.57
15	-10.78	-8.05	-4.8	-5.95	-6.4	3.02	6.62	3.17	-7.93	-11.38	-9.01	-6.81	-14.57
30	-10.9	-8.49	-4.79	-6.01	-6.61	2.25	6.53	3.66	-8.31	-10.69	-7.26	-5.71	-14.57
45	-10.91	-8.76	-5.97	-5.02	-5.63	1.51	7.1	4.24	-6.84	-10.15	-8.21	-4.85	-14.57
60	-10.69	-8.5	-8.65	-3.85	-4.36	2.23	7.24	4.31	-5.73	-9.38	-8.98	-4.28	-14.57
75	-10.47	-8.29	-13.52	-3.97	-4.9	1.86	7.41	4.25	-8.18	-9.87	-8.26	-4	-14.57
90	-10.49	-8.29	-13.96	-4.33	-7.52	0.8	6.69	4.75	-7.03	-10.3	-8.07	-4.6	-14.57
105	-10.63	-8.7	-11.97	-3.99	-4.66	1.75	6.62	4.23	-6.4	-12.65	-8.76	-5.61	-14.57
120	-10.73	-9.74	-11.05	-3.85	-4.43	1.26	6.91	4.24	-5.37	-12.3	-10.31	-6.73	-14.57
135	-10.8	-11.37	-10.83	-4.47	-7.07	0.77	6.57	4.47	-5.87	-14.01	-9.38	-6.81	-14.57
150	-10.99	-12.38	-10.66	-5.37	-7.66	1.43	6.33	3.84	-6.71	-17.05	-7.89	-6.89	-14.57
165	-11.03	-12.67	-10.05	-5.27	-5.91	2.25	6.31	3.36	-6.32	-11.26	-8.1	-7.6	-14.57
180	-10.93	-12.49	-9.24	-4.77	-6.28	2.72	6.17	3.26	-6.09	-10.21	-11.06	-9.3	-14.57
195	-10.92	-11.79	-8.74	-4.64	-8.13	2.95	6.19	3.22	-6.86	-9.08	-12.13	-10.92	-14.57
210	-10.9	-11.1	-6.78	-4.79	-9.68	2.82	5.98	3.16	-8.5	-9.4	-10.08	-11.15	-14.57
225	-10.71	-10.92	-5.5	-4.23	-5.65	2.59	5.83	3.21	-8.43	-14.69	-12.27	-10.24	-14.57
240	-10.83	-10.97	-4.76	-3.05	-3.87	2.95	6.5	3.93	-8.85	-15.85	-14.8	-9.43	-14.57
255	-11.11	-10.82	-4.62	-3.34	-5.39	4.12	6.67	3.56	-10.01	-11.31	-10.94	-8.38	-14.57
270	-11.11	-10.9	-4.59	-4.4	-5.48	3.11	5.71	2.81	-10.33	-9.51	-9.71	-6.47	-14.57
285	-11.08	-11.32	-5.1	-3.33	-3.7	3.92	6.36	3.05	-9.1	-12.75	-14.29	-5.57	-14.57
300	-11.07	-11.4	-5	-2.46	-3.95	4.19	6.73	3.04	-10.54	-11.92	-12.81	-5.21	-14.57
315	-10.82	-10.36	-4.62	-3.9	-7.03	3.07	5.56	2.65	-10	-12.51	-11.94	-5.21	-14.57



330	-10.53	-9.05	-4.62	-5.32	-8	3.1	5.35	2.33	-10.84	-11.05	-9.05	-5.74	-14.57
345	-10.54	-8.1	-4.56	-5.73	-5.93	3.57	6.21	2.35	-10.44	-11.7	-9.03	-7.01	-14.57

Ant1													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.14	-10.32	-7.89	-4.01	-7.85	2.76	3.92	-1.44	-27.23	-11.78	-10.43	-9.61	-20.89
15	-13.08	-9.94	-8.49	-4.44	-8.12	2.79	3.98	-0.39	-22.13	-11.72	-10.77	-9.09	-20.89
30	-12.89	-9.83	-8.64	-4.86	-7.75	2.94	4.95	0.53	-18.94	-10.91	-10.85	-8.84	-20.89
45	-12.8	-9.97	-8.58	-4.85	-7.29	2.41	5.12	-0.54	-17.33	-9.96	-11.53	-9.07	-20.89
60	-12.89	-10.11	-9	-4.26	-8.71	0.76	3.31	-3.11	-18.47	-10.57	-10.9	-8.05	-20.89
75	-13.14	-10.5	-11.06	-4.68	-10.03	0.99	3.78	-0.31	-17.14	-12.03	-9.52	-6.17	-20.89
90	-13.25	-10.84	-14.71	-5.25	-9.97	0.95	4.5	1.05	-19.17	-8.59	-8.29	-5.51	-20.89
105	-13.36	-11.11	-18.08	-6.09	-9.67	-1.61	1.51	-3.4	-16.45	-8.51	-9.23	-6.09	-20.89
120	-13.34	-11.94	-15.56	-6.62	-10.68	-0.2	3.52	0.03	-11.06	-11.74	-11.53	-7.85	-20.89
135	-13.35	-12.81	-14.77	-6.83	-12.35	0.34	3.65	1.55	-10.89	-15.56	-13.49	-10.19	-20.89
150	-13.63	-13.24	-13.96	-7.52	-12.6	-0.93	1.72	-1	-12.91	-14.3	-13.67	-13.73	-20.89
165	-13.52	-13.96	-10.85	-7.33	-12.44	-1.13	0.79	-2.38	-10.45	-12.04	-14.15	-16.18	-20.89
180	-13.06	-14.26	-9.67	-6.78	-14.74	-1.06	0.54	-2.22	-10.2	-15.67	-19.47	-18.23	-20.89
195	-12.89	-13.93	-8.6	-6.53	-13.23	-1	0.82	-1.94	-12.89	-19.08	-17.96	-20.89	-20.89
210	-13.19	-13.66	-7.82	-6.31	-11.13	-0.15	1.81	-0.71	-15.6	-14.01	-14.28	-18.55	-20.89
225	-13.5	-14.12	-6.83	-5.9	-9.07	1.43	3.24	1.31	-13.28	-20.18	-15.34	-16.63	-20.89
240	-13.81	-15.73	-6.39	-5.58	-8.74	1.3	2.66	0.56	-12.13	-18.47	-15.1	-12.6	-20.89
255	-13.6	-17.46	-6.14	-5.7	-7.42	-0.6	0.57	-3.89	-20.85	-14.04	-13.14	-10.57	-20.89
270	-12.96	-17.61	-5.79	-5.61	-5.08	0.77	2.89	-1.29	-15.72	-11.1	-17.28	-9.85	-20.89
285	-12.64	-15.6	-5.06	-4.66	-6.51	0.99	2.71	-1.94	-15.07	-19.36	-18.68	-9.5	-20.89
300	-12.75	-13.5	-4.77	-3.92	-9.09	-0.46	0.24	-4.93	-16.81	-20.67	-16.28	-9.22	-20.89
315	-12.94	-11.85	-5.26	-4.07	-7.71	1.13	2.49	-3.13	-16.92	-17.42	-19.93	-9.67	-20.89
330	-13.04	-11.01	-6.27	-4.42	-7.48	2.52	3.47	-2.08	-24.18	-15.61	-14.55	-10.21	-20.89
345	-13.22	-10.75	-7.31	-4.14	-7.5	2.69	3.99	-2.28	-26.36	-12.54	-11.68	-10.34	-20.89

Ant2													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-14.16	-12.92	-9.21	-8.97	-9.02	-0.46	1.31	-3.16	-17.41	-15.55	-14.29	-16.05	-18.5
15	-13.92	-13.56	-9.63	-9.95	-9.83	-1.19	1.59	-2.75	-12.05	-14.47	-12.87	-18.5	-18.5
30	-13.81	-13.36	-9.78	-10.03	-8.9	-1.01	1.52	-1.22	-10.79	-12.1	-8.83	-13.66	-18.5
45	-13.58	-12.64	-12.6	-8.11	-6.77	0.05	4.28	1.08	-11.39	-9.87	-9.83	-9.36	-18.5
60	-13.38	-11.49	-16.22	-5.04	-9.75	0.49	4.48	0.93	-10.88	-10.31	-11.68	-7.09	-18.5
75	-13.43	-11.01	-18.09	-5.48	-9.6	-1.52	2.79	-1.09	-16.24	-10.25	-10.8	-6.32	-18.5



90	-13.24	-11.85	-16.76	-4.91	-10.45	0.97	4.56	2.12	-12.86	-11.06	-11	-6.91	-18.5
105	-12.99	-14	-15.81	-3.45	-10.86	0.91	4.08	1.35	-11.96	-16.04	-10.95	-7.31	-18.5
120	-13.28	-15.95	-13.96	-3.93	-8.54	-0.77	3.29	-1.75	-15.63	-13	-12.05	-7.23	-18.5
135	-13.04	-17.14	-13.86	-5.7	-7.43	0.97	5.1	0.4	-16.25	-13.16	-10.01	-7.01	-18.5
150	-12.65	-15.98	-13.64	-5.76	-7.3	1.74	5.02	0.88	-17.95	-16.53	-9.19	-7.6	-18.5
165	-12.72	-14.74	-13.04	-4.92	-7.27	1.63	3.98	-0.4	-18.13	-13.34	-9.76	-9.06	-18.5
180	-12.93	-14.37	-12.86	-4.36	-7.22	1.65	3.56	-1.1	-19.34	-11.44	-10.23	-9.87	-18.5
195	-12.97	-13.87	-13.94	-4.55	-7.21	1.97	3.93	-0.65	-17.17	-9.53	-9.56	-10.3	-18.5
210	-13.48	-13.25	-12.89	-4.88	-7.47	2.8	4.16	-0.59	-15.35	-10.68	-9.74	-10.61	-18.5
225	-13.42	-12.25	-9.78	-5.38	-6.46	2.77	2.77	-2.71	-12.28	-13.58	-13.48	-9.77	-18.5
240	-13.16	-11.16	-8.59	-5.07	-5.6	0.86	1.2	-5.09	-14.71	-14.96	-16.67	-9.34	-18.5
255	-13.33	-10.54	-9.85	-4.75	-4.98	3.56	4.44	-0.82	-25.34	-10.25	-11.98	-8.33	-18.5
270	-13.78	-10.5	-11.01	-5.59	-4.43	3.72	3.39	-0.96	-14	-6.55	-9.58	-6.83	-18.5
285	-13.9	-10.81	-11.67	-5.76	-5.55	2.11	2.1	-3.73	-12.83	-8.23	-11.38	-6.4	-18.5
300	-14.04	-11.59	-11.39	-5.25	-5.34	3.45	4.55	-0.33	-11.35	-8.3	-11.51	-6.38	-18.5
315	-14	-12.21	-9.45	-6.53	-6.07	2.85	3.79	-0.7	-12.36	-11.1	-13.73	-6.86	-18.5
330	-13.99	-12.15	-8.69	-7.85	-7.68	1.36	1.13	-2.34	-17.08	-10.69	-10.4	-8.99	-18.5
345	-14.15	-12.36	-8.55	-8.75	-8.7	0.15	0.51	-3.46	-19.55	-12.78	-10.38	-12.7	-18.5

Composite Gain													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-10.62	-8.51	-5.51	-3.13	-5.41	4.31	5.72	0.75	-17.99	-10.45	-9.14	-9.24	-16.6
15	-10.48	-8.55	-6.03	-3.75	-5.92	4.04	5.88	1.52	-12.69	-9.98	-8.75	-9.57	-16.6
30	-10.33	-8.41	-6.18	-4.06	-5.3	4.2	6.41	2.71	-10.93	-8.47	-6.77	-7.91	-16.6
45	-10.17	-8.19	-7.35	-3.32	-4.02	4.32	7.72	3.32	-10.85	-6.9	-7.63	-6.2	-16.6
60	-10.12	-7.76	-8.87	-1.63	-6.2	3.64	6.92	2.15	-10.86	-7.43	-8.27	-4.55	-16.6
75	-10.27	-7.74	-10.87	-2.06	-6.8	2.84	6.31	2.32	-13.67	-8.08	-7.13	-3.23	-16.6
90	-10.23	-8.32	-12.66	-2.07	-7.2	3.97	7.54	4.61	-12.44	-6.73	-6.53	-3.17	-16.6
105	-10.16	-9.43	-13.86	-1.66	-7.23	2.75	5.9	2.31	-10.91	-8.47	-7.04	-3.67	-16.6
120	-10.3	-10.71	-11.71	-2.16	-6.53	2.53	6.42	2.2	-10.04	-9.34	-8.78	-4.52	-16.6
135	-10.18	-11.7	-11.29	-3.24	-6.54	3.67	7.42	4	-10.15	-11.27	-8.57	-5.44	-16.6
150	-10.12	-11.49	-10.79	-3.59	-6.54	3.52	6.54	3	-12.06	-12.33	-8.13	-7.12	-16.6
165	-10.1	-11.33	-8.87	-3.03	-6.47	3.37	5.54	1.68	-10.46	-9.66	-8.67	-8.9	-16.6
180	-9.98	-11.3	-8.11	-2.48	-7.18	3.41	5.19	1.37	-10.61	-10.29	-10.66	-10.07	-16.6
195	-9.92	-10.89	-7.86	-2.47	-6.7	3.62	5.52	1.74	-11.76	-10.04	-9.77	-11.06	-16.6
210	-10.32	-10.44	-6.98	-2.56	-6.1	4.46	6.07	2.36	-12.46	-9.18	-8.71	-10.69	-16.6
225	-10.45	-10.12	-5.17	-2.63	-4.66	5.14	6.02	2.54	-9.76	-13.26	-11.35	-9.53	-16.6
240	-10.47	-10.14	-4.41	-2.31	-4.02	4.09	4.97	1.2	-10.31	-13.53	-12.84	-7.81	-16.6
255	-10.45	-10.32	-4.79	-2.2	-3.1	4.74	5.73	0.79	-19.8	-8.93	-9.53	-6.37	-16.6
270	-10.35	-10.34	-5	-2.59	-1.74	5.38	6.15	1.89	-11.81	-5.52	-9.59	-5.2	-16.6



285	-10.24	-9.87	-4.74	-2.18	-3.01	4.58	5.42	0.22	-10.87	-9.11	-11.27	-4.8	-16.6
300	-10.36	-9.48	-4.45	-1.55	-4	4.72	5.67	0.68	-10.65	-9.44	-10.56	-4.67	-16.6
315	-10.44	-9.02	-4.09	-2.2	-3.84	5.04	6.17	1.18	-11.33	-10.69	-13.28	-5.14	-16.6
330	-10.49	-8.55	-4.39	-2.96	-4.57	4.97	5.39	0.8	-16.91	-9.8	-9.22	-6.57	-16.6
345	-10.66	-8.51	-4.9	-3.13	-5.07	4.52	5.43	0.16	-19.29	-9.65	-8	-8.43	-16.6

Ant1													
Freq	5700												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.8	-13.24	-14.6	-6.96	-4.16	2.39	1.22	-9.96	-7.96	-6.28	-8.54	-8.8	-18.21
15	-13.71	-12.69	-14.75	-7.05	-4.57	2.69	1.55	-8.59	-7.5	-5.82	-9.12	-8.26	-18.21
30	-14.11	-12.74	-14.59	-8.42	-4.54	3.44	3.38	-5.68	-7.17	-6.28	-8.78	-8.49	-18.21
45	-14.06	-12.09	-16.66	-11.16	-4.06	4.34	4.75	-3.86	-7.35	-6.57	-9.88	-9.44	-18.21
60	-13.97	-10.92	-16.1	-12.55	-3.98	3.03	3.55	-6.27	-8.09	-6.1	-9.12	-11.76	-18.21
75	-14.04	-10.33	-15.95	-10.16	-4.65	1.3	2.22	-6.96	-8.46	-6.38	-8.87	-12.07	-18.21
90	-13.98	-10.84	-17.87	-10.69	-5.14	3.19	4.27	-2.6	-9.95	-4.93	-8.76	-11.34	-18.21
105	-13.95	-11.51	-15.42	-15.99	-4.57	0.27	1.07	-5.67	-10.06	-4.39	-9.66	-12.63	-18.21
120	-14.5	-11.36	-14.75	-13.01	-6.25	1.45	2.68	-4.18	-12.87	-6.4	-9.95	-13.88	-18.21
135	-14.86	-10.72	-15.72	-10.64	-7.3	2.62	3.57	-1.85	-12.42	-8.15	-11.73	-14.53	-18.21
150	-14.67	-10.34	-18.41	-11.09	-7.58	1.14	1.32	-4.36	-12.16	-9.44	-12.81	-16.49	-18.21
165	-14.28	-10.38	-17.4	-10.03	-7.82	0.31	0.18	-4.66	-14.81	-10.03	-12.18	-18.21	-18.21
180	-13.68	-10.7	-14.3	-10.14	-7.11	0.14	0.36	-4.22	-16.96	-11.47	-12.81	-17.83	-18.21
195	-13.69	-10.95	-15.18	-10.98	-6.43	0.11	0.53	-4.38	-12.26	-10.07	-14.87	-17.49	-18.21
210	-13.56	-11.69	-14.77	-10.87	-6.16	1.17	1.5	-4.35	-9.53	-7.55	-15.19	-13.44	-18.21
225	-13.72	-12.53	-14.61	-9.73	-5.34	2.98	3.43	-3.47	-10.48	-6.1	-11.03	-13.58	-18.21
240	-13.84	-13.62	-14.77	-11.29	-6.12	2.64	2.29	-4.87	-11.86	-8.14	-10.17	-13.55	-18.21
255	-13.87	-15.02	-12.89	-14.38	-4.35	-0.25	-0.53	-9.78	-9.34	-7.44	-13.88	-12.98	-18.21
270	-13.52	-15.99	-10.37	-12.17	-2.67	2.46	2.96	-7.2	-7.73	-9.08	-13.54	-13.3	-18.21
285	-13.46	-14.34	-9.71	-9.62	-4.1	1.09	1.2	-9.52	-10.35	-9.26	-14.4	-14.37	-18.21
300	-13.24	-12.13	-10.87	-9.04	-4.21	0.25	-0.35	-13.21	-8.33	-14.56	-15.46	-12.69	-18.21
315	-13.09	-11.37	-13.95	-9.13	-3.4	3.18	2.33	-8.9	-8.59	-9.26	-12.26	-10.69	-18.21
330	-13.25	-12.07	-16.52	-9.07	-3.61	3.3	1.4	-7.48	-10.43	-6.74	-11.58	-9.94	-18.21
345	-13.64	-13.19	-16.01	-7.47	-4.86	2.5	0.96	-8.8	-8.29	-6.74	-8.91	-8.98	-18.21

Ant2													
Freq	5700												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-16.3	-11.71	-17.64	-10.12	-5.33	0.54	-0.35	-5.02	-13.98	-12.07	-10.11	-16.84	-18.04
15	-16.01	-11.9	-17.43	-10.68	-5.19	0.31	0.08	-4.85	-12.04	-12.2	-11.14	-14.49	-18.04
30	-15.92	-11.71	-14.98	-10.67	-5.78	0.88	1.05	-4.29	-9.73	-8.49	-10.07	-12.02	-18.04
45	-16.69	-11.53	-14.82	-8.41	-6.8	2.46	3.52	-2.04	-10.29	-7.89	-10.46	-11.85	-18.04



60	-17.19	-12.18	-13.72	-11.12	-7.01	1.76	3.79	-2.68	-11.57	-7.12	-9.75	-10.9	-18.04
75	-17.06	-13.59	-16.49	-15	-6.97	0.74	1.98	-2.96	-13.49	-6.44	-9.94	-11.1	-18.04
90	-16.61	-13.86	-24.53	-8.8	-7.42	2.81	4.81	-1.07	-14.82	-7.51	-10.16	-13.15	-18.04
105	-16.09	-13.36	-16.1	-7.79	-8.58	1.13	2.85	-3.32	-13.42	-7.22	-10.95	-13.55	-18.04
120	-15.72	-13.78	-14.91	-11.24	-6.46	1.75	3.5	-3.54	-13.18	-7.21	-12.71	-10.95	-18.04
135	-15.68	-15.25	-16.46	-10.52	-7.24	3.17	4.55	-2.65	-12.27	-8.01	-12.42	-9.65	-18.04
150	-16.25	-18.27	-17.98	-8.6	-7.77	2.28	3	-4.61	-10.52	-8.14	-10.46	-9.73	-18.04
165	-16.44	-20.3	-17.2	-6.63	-6.76	1.46	1.15	-6.97	-9.01	-7.93	-11.19	-10.05	-18.04
180	-16.65	-19.4	-14.43	-6.6	-6.15	1.27	0.42	-9.53	-9.61	-8.18	-10.98	-10.97	-18.04
195	-16.92	-18.54	-15.42	-7	-5.73	1.74	0.92	-9.29	-9.59	-7.82	-9.9	-10.48	-18.04
210	-16.99	-18.51	-15.47	-8.33	-4.37	3.1	1.51	-6.68	-10.64	-8.79	-9.6	-10.73	-18.04
225	-16.29	-19.08	-22.55	-8.52	-3.04	3.86	2.63	-7.63	-9.45	-8.17	-9.85	-12.39	-18.04
240	-16.08	-18.42	-19.88	-8.24	-3.72	2.17	-0.06	-12.95	-7.83	-8.06	-14.53	-12.28	-18.04
255	-16.39	-15.79	-16.05	-7.16	-2.6	2.97	2.54	-9.65	-5.34	-8.07	-12.79	-18.04	-18.04
270	-16.34	-13.4	-16.51	-9.03	-1.66	4.04	3.03	-8.27	-6.24	-4.64	-11.22	-10.06	-18.04
285	-16.82	-12.16	-17.43	-9.86	-2.34	2.42	0.75	-9.13	-6.06	-7.16	-16.02	-7.45	-18.04
300	-17.26	-11.71	-17.43	-8.61	-3.59	3.84	2.97	-5.01	-9.19	-4.25	-12.8	-7.92	-18.04
315	-17.48	-11.47	-19.57	-7.88	-3.55	3.91	3.38	-4.94	-8.14	-7.28	-13.76	-8.99	-18.04
330	-16.97	-11.27	-20.51	-8.81	-3.81	2.25	0.88	-5.33	-10.06	-7.73	-9.87	-12.3	-18.04
345	-17.01	-11.25	-23.86	-9.51	-4.45	0.94	-0.18	-5.55	-13.57	-10.02	-10.3	-17.35	-18.04

Composite Gain													
Freq	5700												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-11.95	-9.43	-12.98	-5.39	-1.72	4.52	3.48	-4.13	-7.45	-5.69	-6.28	-8.91	-15.11
15	-11.77	-9.28	-12.98	-5.67	-1.86	4.59	3.86	-3.51	-6.47	-5.43	-7.06	-7.82	-15.11
30	-11.96	-9.2	-11.77	-6.46	-2.13	5.26	5.3	-1.95	-5.35	-4.3	-6.39	-7.07	-15.11
45	-12.27	-8.8	-12.68	-6.67	-2.31	6.46	7.17	0.11	-5.69	-4.19	-7.15	-7.55	-15.11
60	-12.42	-8.52	-11.82	-8.8	-2.35	5.43	6.68	-1.28	-6.65	-3.58	-6.42	-8.31	-15.11
75	-12.41	-8.8	-13.21	-9.24	-2.72	4.03	5.11	-1.72	-7.61	-3.4	-6.38	-8.56	-15.11
90	-12.19	-9.21	-17.57	-6.68	-3.2	6.01	7.55	1.21	-9.04	-3.11	-6.42	-9.19	-15.11
105	-11.94	-9.38	-12.74	-7.95	-3.34	3.72	5.02	-1.41	-8.57	-2.68	-7.27	-10.07	-15.11
120	-12.08	-9.48	-11.82	-9.07	-3.34	4.61	6.11	-0.84	-10.01	-3.79	-8.21	-9.28	-15.11
135	-12.25	-9.68	-13.07	-7.57	-4.26	5.91	7.08	0.77	-9.33	-5.07	-9.06	-8.74	-15.11
150	-12.41	-10.42	-15.18	-6.75	-4.66	4.74	5.21	-1.47	-8.29	-5.76	-8.55	-9.46	-15.11
165	-12.28	-10.98	-14.29	-5.15	-4.26	3.91	3.69	-2.73	-8.42	-5.91	-8.66	-10.19	-15.11
180	-12.03	-10.99	-11.35	-5.18	-3.61	3.73	3.4	-3.47	-9.52	-6.66	-8.84	-10.73	-15.11
195	-12.15	-10.93	-12.29	-5.75	-3.06	3.97	3.74	-3.48	-7.81	-5.86	-9.02	-10.29	-15.11
210	-12.1	-11.44	-12.1	-6.5	-2.21	5.2	4.52	-2.43	-7.06	-5.14	-8.94	-8.97	-15.11
225	-11.9	-12.19	-14.69	-6.09	-1.1	6.44	6.05	-2.29	-6.94	-4.06	-7.41	-9.95	-15.11
240	-11.88	-12.68	-13.94	-6.62	-1.83	5.42	4.2	-4.99	-6.6	-5.09	-9.07	-9.88	-15.11



255	-12.03	-12.39	-11.32	-7.03	-0.42	4.52	4.15	-6.7	-4.1	-4.74	-10.31	-12.14	-15.11
270	-11.81	-11.59	-9.9	-7.45	0.86	6.3	6.01	-4.71	-3.94	-3.57	-9.29	-8.52	-15.11
285	-11.97	-10.17	-9.73	-6.73	-0.17	4.79	3.99	-6.31	-4.93	-5.14	-12.16	-7.23	-15.11
300	-12.01	-8.91	-10.53	-5.81	-0.88	5.24	4.48	-5.17	-5.74	-4.95	-11.02	-6.97	-15.11
315	-12	-8.41	-13.3	-5.47	-0.46	6.56	5.88	-3.69	-5.35	-5.2	-9.97	-6.79	-15.11
330	-11.9	-8.65	-15.28	-5.93	-0.7	5.8	4.15	-3.33	-7.23	-4.21	-7.67	-8.03	-15.11
345	-12.15	-9.16	-16.07	-5.42	-1.64	4.77	3.42	-4.01	-7.52	-5.22	-6.57	-9.18	-15.11

Ant1													
Freq	5750												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.57	-15.05	-13.97	-7.13	-3.92	2.31	1.16	-9.77	-6.07	-6.11	-8.85	-9.12	-17.92
15	-14.18	-14.54	-12.66	-7.47	-3.81	2.67	2.06	-8.85	-5.15	-5.7	-9.29	-9.07	-17.92
30	-13.81	-13.75	-11.97	-9.14	-3.27	3.3	3.15	-6.19	-5.64	-5.82	-8.74	-9.79	-17.92
45	-13.27	-11.8	-13.23	-12.31	-2.98	4.14	4.19	-4.47	-6.39	-6.09	-9.59	-10.17	-17.92
60	-13.14	-9.81	-13.26	-14.05	-2.75	3.47	3.41	-5.8	-6.68	-5.88	-9.13	-12.9	-17.92
75	-13.11	-8.96	-13.09	-12.49	-3.31	1.58	2.26	-6.85	-6.74	-6.09	-9.52	-14.85	-17.92
90	-13.81	-9.29	-13.76	-13.4	-4.64	3.14	4.25	-2.93	-7.73	-4.86	-9.6	-13.72	-17.92
105	-14.46	-10.08	-13.1	-16.3	-3.84	1.2	1.99	-5.33	-7.8	-3.81	-10.11	-13.93	-17.92
120	-14.31	-10.45	-13.53	-15.8	-5.52	1.23	2.32	-4.4	-9.21	-5.98	-9.91	-16.52	-17.92
135	-14.06	-10.31	-15.03	-12.05	-6.6	2.74	3.46	-1.96	-10.65	-7.18	-11.46	-17.19	-17.92
150	-13.86	-10.02	-16.17	-11.77	-6.45	1.69	2.01	-4.12	-10.57	-9.23	-13.38	-16.43	-17.92
165	-13.39	-9.93	-18.19	-11.45	-6.58	1	0.44	-4.44	-12.27	-9.79	-12.63	-17.92	-17.92
180	-13.26	-9.82	-16.74	-10.45	-5.97	0.83	0.8	-3.76	-14.85	-10.68	-13.08	-17.41	-17.92
195	-12.93	-10.1	-15.36	-11.26	-5.23	0.85	1.02	-3.73	-10.99	-10.18	-15.88	-16.91	-17.92
210	-12.91	-10.66	-14.69	-12.57	-4.62	1.86	2.29	-4.41	-8.87	-8.68	-16.54	-13.64	-17.92
225	-13	-11.64	-14.82	-11.76	-4.42	3	4.03	-4.5	-8.7	-6.47	-12.02	-15.03	-17.92
240	-13.16	-12.78	-15.56	-13.56	-5.05	2.17	3.02	-5.72	-9.7	-7.97	-10.31	-15.04	-17.92
255	-13.11	-14.58	-14.29	-14.54	-2.59	-0.09	1.25	-9.63	-8.91	-6.73	-13.63	-15.2	-17.92
270	-13.05	-15.02	-11.48	-12.92	-2.3	2.57	2.61	-7.76	-6.91	-8.04	-14.32	-16.34	-17.92
285	-12.73	-12.92	-10.75	-10.53	-3.98	0.87	0.33	-9.46	-8.12	-8.61	-14.32	-15.03	-17.92
300	-12.54	-11.71	-11.53	-8.91	-2.88	1.05	0.57	-14.92	-6.9	-13.28	-16.13	-12.64	-17.92
315	-12.37	-11.78	-15.13	-9.83	-2.87	3.42	1.69	-9.75	-7.57	-8.05	-12.43	-11	-17.92
330	-12.54	-13.16	-19.01	-10.52	-3.83	2.93	1.23	-7.97	-7.21	-6.74	-12	-10.44	-17.92
345	-12.85	-14.81	-16.4	-8.12	-3.93	2.19	1.02	-9.14	-7.12	-7.08	-9.12	-9.12	-17.92

Ant2													
Freq	5750												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.3	-9.43	-17.02	-10.66	-3.52	1.21	0.74	-4.56	-13.6	-11.9	-9.92	-15.56	-21.86
15	-13.21	-9.29	-18.41	-10.44	-4.04	1.06	0.29	-4.26	-10.71	-11.49	-11.11	-15.31	-21.86



30	-13.65	-9.6	-14.22	-10.59	-5.07	1.22	1.46	-4.31	-8.12	-8.24	-10.08	-13.11	-21.86
45	-13.82	-10.87	-14.87	-8.88	-6.07	2.49	3.36	-2.78	-9.48	-7.87	-10	-12.74	-21.86
60	-13.94	-12.12	-11.89	-11.1	-6.55	1.72	3.51	-2.89	-9.81	-6.25	-9.11	-12.24	-21.86
75	-14.08	-12.52	-16.08	-16.65	-6.19	1.4	2.54	-3.08	-10.75	-5.93	-9.42	-12.4	-21.86
90	-13.7	-11.99	-18.29	-9.3	-7.98	2.72	4.68	-1.53	-11.93	-6.59	-10.94	-13.71	-21.86
105	-13.59	-11.89	-13.19	-9.88	-6.56	1.45	3.3	-3.4	-10.19	-7.1	-11.64	-13.42	-21.86
120	-13.66	-12.66	-12.82	-12.69	-5.58	2.36	3.19	-3.61	-11.79	-6.92	-12.6	-11.27	-21.86
135	-13.82	-14.73	-14.38	-11.02	-8.13	2.91	3.76	-3.14	-11.36	-7.25	-11.96	-10.32	-21.86
150	-13.89	-17.68	-16.24	-9.47	-8.36	2.09	2.28	-5.23	-9.79	-7.52	-9.97	-10.41	-21.86
165	-14.35	-20.46	-17.99	-7.59	-6.61	1.74	0.86	-7.56	-7.84	-7.78	-10.57	-10.34	-21.86
180	-14.63	-21.28	-16.52	-7.52	-5.25	1.79	0.58	-10.43	-7.7	-8.29	-10.35	-11.28	-21.86
195	-14.86	-19.12	-17.23	-7.56	-4.67	1.78	0.74	-10.22	-8.07	-7.49	-9.81	-10.6	-21.86
210	-14.64	-17.57	-16.55	-9.48	-3.99	2.55	1.73	-7.83	-7.41	-7.86	-9.91	-11.23	-21.86
225	-14.51	-17.35	-20.13	-9.7	-2.75	3.63	2.08	-8.78	-7.55	-7.58	-9.99	-15.04	-21.86
240	-14.18	-16.73	-21.2	-8.89	-2.3	2.49	1.19	-13.21	-6.05	-7.2	-13.47	-13.05	-21.86
255	-13.94	-15.3	-20.6	-8.09	-2.14	2.74	1.8	-9.27	-4.8	-8.21	-14.64	-21.86	-21.86
270	-14.14	-13.27	-22.03	-9.62	-1.29	3.72	3.06	-9.74	-4.71	-4.29	-11.34	-11.48	-21.86
285	-14.35	-11.29	-16.97	-10.02	-1.32	2.71	1.31	-9.26	-3.86	-7.15	-15.41	-8.02	-21.86
300	-14.64	-10.07	-14.63	-9.28	-3.12	3.58	2.9	-5.11	-7.41	-3.89	-11.96	-8.02	-21.86
315	-14.5	-9.4	-16.17	-8.47	-3.87	3.63	3.11	-5.21	-6.15	-6.81	-13.46	-8.73	-21.86
330	-14.24	-8.99	-18.82	-8.97	-3.47	2.44	0.86	-5.09	-7.5	-7.79	-9.82	-11.89	-21.86
345	-13.7	-9.19	-19.39	-9.38	-3.48	1.42	0.5	-5.42	-10.95	-9.45	-10.4	-15.76	-21.86

Composite Gain													
Freq	5750												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-10.42	-8.78	-12.35	-5.71	-0.71	4.79	3.96	-3.77	-6.03	-5.52	-6.36	-8.75	-16.66
15	-10.67	-8.51	-12.06	-5.82	-0.91	4.91	4.23	-3.24	-4.48	-5.11	-7.14	-8.63	-16.66
30	-10.72	-8.42	-10.01	-6.82	-1.11	5.33	5.36	-2.19	-3.78	-3.94	-6.37	-8.28	-16.66
45	-10.53	-8.31	-11	-7.42	-1.38	6.36	6.8	-0.57	-4.79	-3.92	-6.78	-8.35	-16.66
60	-10.52	-7.88	-9.54	-9.44	-1.43	5.65	6.47	-1.21	-5.09	-3.05	-6.11	-9.55	-16.66
75	-10.57	-7.55	-11.45	-11.31	-1.62	4.5	5.41	-1.75	-5.51	-3	-6.46	-10.53	-16.66
90	-10.74	-7.53	-12.72	-8.1	-3.14	5.94	7.48	0.81	-6.57	-2.67	-7.23	-10.7	-16.66
105	-11	-7.93	-10.13	-9.5	-2.08	4.34	5.68	-1.3	-5.9	-2.29	-7.83	-10.66	-16.66
120	-10.97	-8.47	-10.16	-11.1	-2.54	4.82	5.78	-0.99	-7.39	-3.43	-8.14	-10.49	-16.66
135	-10.93	-9.23	-11.69	-8.51	-4.32	5.84	6.62	0.48	-7.99	-4.2	-8.7	-10.08	-16.66
150	-10.86	-10.02	-13.19	-7.53	-4.34	4.9	5.16	-1.65	-7.16	-5.32	-8.5	-9.9	-16.66
165	-10.85	-10.68	-15.08	-6.3	-3.58	4.39	3.66	-2.85	-6.77	-5.72	-8.53	-10.32	-16.66
180	-10.91	-10.77	-13.62	-5.85	-2.59	4.33	3.7	-3.46	-7.55	-6.39	-8.6	-10.8	-16.66
195	-10.83	-10.48	-13.23	-6.2	-1.94	4.34	3.89	-3.37	-6.4	-5.72	-9.31	-10.18	-16.66
210	-10.72	-10.43	-12.56	-7.88	-1.29	5.22	5.02	-2.94	-5.1	-5.25	-9.6	-9.34	-16.66



225	-10.71	-11.02	-14.07	-7.66	-0.53	6.33	6.12	-3.37	-5.1	-4	-7.94	-12.02	-16.66
240	-10.64	-11.52	-14.92	-7.9	-0.56	5.34	5.16	-5.67	-4.67	-4.57	-8.74	-10.98	-16.66
255	-10.5	-11.92	-13.87	-7.72	0.65	4.45	4.54	-6.44	-3.6	-4.43	-11.11	-14.9	-16.66
270	-10.57	-11.09	-12.23	-8.1	1.23	6.17	5.85	-5.68	-2.73	-2.95	-9.69	-10.56	-16.66
285	-10.49	-9.06	-10.3	-7.26	0.46	4.85	3.84	-6.35	-2.72	-4.84	-11.84	-7.83	-16.66
300	-10.52	-7.84	-9.93	-6.08	0.01	5.42	4.82	-5.69	-4.14	-4.36	-10.79	-7.02	-16.66
315	-10.36	-7.5	-12.62	-6.11	-0.35	6.54	5.44	-4.18	-3.82	-4.4	-9.92	-6.78	-16.66
330	-10.34	-7.82	-15.9	-6.7	-0.64	5.7	4.06	-3.4	-4.34	-4.24	-7.83	-8.12	-16.66
345	-10.25	-8.54	-14.76	-5.72	-0.69	4.82	3.77	-4.07	-5.82	-5.17	-6.73	-8.81	-16.66

7.2 DG_NSSmax Test Data

Ant1													
Freq	2500												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-26.59	-15.03	-11.26	-8.49	-5.14	-0.68	0.72	-1.06	-7.89	-11.78	-12.3	-16.96	-17.93
15	-26.3	-15.03	-11.06	-8.49	-5.32	-0.5	0.59	-1.01	-7.07	-11.94	-11.3	-13.1	-17.93
30	-25.02	-15.26	-10.17	-7.68	-4.34	-0.41	0.81	-1.06	-6.79	-9.93	-10.45	-9.89	-17.93
45	-23.72	-15.45	-9.26	-6.32	-2.64	1.06	1.36	-0.8	-4.32	-8.14	-8.22	-8.39	-17.93
60	-23.7	-15.65	-8.83	-4.21	-0.78	2.85	2.79	1.05	-2.02	-5.63	-7.19	-8.33	-17.93
75	-24.52	-15.65	-8.94	-2.9	0.8	4.02	4.06	2.95	-0.65	-3.13	-7.54	-9.48	-17.93
90	-25.34	-15.34	-9.63	-3.18	0.73	4.05	4.37	3.77	0.07	-2.55	-8.22	-10.84	-17.93
105	-26.09	-15.07	-10.54	-4.74	-1.04	2.25	2.99	3.26	-0.66	-3.28	-8.81	-11.03	-17.93
120	-25.48	-14.96	-11.99	-6.9	-3.89	-0.71	0.32	1.22	-2.69	-5.81	-9.76	-11.37	-17.93
135	-24.25	-15.01	-14.22	-7.41	-5.73	-2.02	-0.97	-1.61	-5.57	-9.17	-11.73	-11.64	-17.93
150	-24.35	-15.27	-15.28	-6.6	-5.03	-0.49	0.17	-2.69	-7.42	-10.54	-12.73	-10.92	-17.93
165	-25.35	-15.48	-15.22	-6.8	-3.06	0.44	1.17	-1.87	-7.38	-9.37	-12.28	-11.17	-17.93
180	-26.5	-15.48	-16.35	-6.55	-2.56	0.9	0.9	-0.57	-7.16	-9.42	-11.47	-12.45	-17.93
195	-26.66	-15.5	-16.19	-7.13	-2.75	0.79	0.89	-1.57	-6.8	-10.91	-11.91	-14.55	-17.93
210	-25.97	-15.47	-14.52	-8.93	-3.45	-0.12	-0.42	-2.06	-8.92	-11.14	-12.77	-16.94	-17.93
225	-25.82	-15.37	-12.84	-8.96	-5.52	-1.11	-0.75	-2.66	-7.62	-9.75	-13.3	-17	-17.93
240	-26.11	-15.25	-11.06	-6.23	-4.83	-1.42	0.32	-0.7	-3.74	-8.5	-12.93	-15.22	-17.93
255	-27.33	-15.23	-9.14	-3.26	-1.57	0.82	2.18	1.86	-1.7	-6.17	-9.69	-13.56	-17.93
270	-28.21	-15.85	-7.92	-1.39	0.76	2.85	3.56	3.07	-0.98	-4.3	-7.01	-11.87	-17.93
285	-26.9	-16.97	-7.44	-0.74	1.54	3.46	3.68	2.76	-1.5	-3.47	-5.45	-10.8	-17.93
300	-25.46	-17.6	-7.85	-1.52	0.64	2.72	2.66	1.28	-2.36	-4.65	-5.77	-10.85	-17.93
315	-25.09	-17.01	-9.17	-3.07	-0.93	1.67	1.17	-0.76	-3.85	-6.8	-8	-12.57	-17.93
330	-25.16	-16.05	-10.53	-4.91	-3.18	0.48	0.34	-2.35	-4.95	-10.59	-10.44	-15.49	-17.93
345	-26.09	-15.45	-10.95	-7.35	-4.38	-0.21	0.08	-1.62	-6.89	-11.55	-13.06	-17.93	-17.93

Ant2



Freq	2500												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.64	-13.87	-14.81	-6.45	-2.2	0.93	0.62	-1.33	-6.76	-9.21	-11.29	-12.34	-14.94
15	-17.93	-14.1	-15.6	-6.75	-2.91	0.41	0.46	-1.17	-8.23	-8.4	-10.86	-9.73	-14.94
30	-17.64	-13.96	-13.58	-8.23	-5.02	-0.24	-0.28	-2.31	-7.24	-9.73	-10.36	-7.81	-14.94
45	-17.88	-13.56	-11.07	-8.6	-6.02	-2.01	-0.34	-1.68	-5.04	-8.21	-8.72	-7.18	-14.94
60	-18.69	-13.42	-9.72	-6.14	-3.84	-1.31	0.43	1.06	-2.08	-4.85	-8.35	-7.73	-14.94
75	-19.23	-13.74	-9.47	-3.85	-0.72	1.71	2.75	3.55	-0.32	-2.35	-8.35	-8.47	-14.94
90	-18.93	-14.45	-10.27	-3.05	0.82	3.78	4.5	4.27	0.65	-1.53	-7.55	-8.93	-14.94
105	-18.36	-15.57	-11.73	-3.53	0.58	4.12	4.31	3.52	0.42	-2.01	-6.91	-9.63	-14.94
120	-17.93	-17.12	-13.33	-5.17	-1.01	2.96	2.76	1.62	-0.92	-3.6	-7.24	-10.52	-14.94
135	-17.33	-19.17	-15	-7.54	-3.16	0.82	1.07	-0.38	-2.98	-5.65	-8.41	-10.79	-14.94
150	-16.67	-21.51	-16.07	-9.33	-5.07	-0.75	0.29	-1.22	-5.2	-7.26	-9.01	-10.87	-14.94
165	-16.47	-22.52	-14.81	-10.06	-6.23	-0.68	0.62	-1.02	-6.17	-9.92	-9.49	-11.47	-14.94
180	-16.41	-20.84	-13.92	-11.39	-5.68	-0.34	0.61	-1.58	-6.36	-11.2	-10.12	-12.42	-14.94
195	-16.56	-18.54	-14.54	-9.63	-5.03	-0.69	0.08	-1.81	-7.21	-9.92	-10.17	-14.56	-14.94
210	-16.74	-16.78	-13.17	-6.27	-3.7	0.18	-0.64	-2.69	-5.79	-8.56	-9.39	-14.86	-14.94
225	-16.6	-15.56	-9.91	-3.76	-0.88	1.06	0.34	-1.16	-4.38	-5.45	-8.03	-12.68	-14.94
240	-16.29	-14.58	-7.73	-1.72	0.96	2.71	2.87	1.04	-2.16	-4.11	-7.75	-11.78	-14.94
255	-16.25	-13.42	-6.66	-0.55	1.92	3.57	4.24	2.88	-1.01	-3.85	-7.63	-12.07	-14.94
270	-16.24	-12.58	-6.52	-0.65	1.61	3.55	4.07	3.53	-0.92	-3.95	-7.74	-13.08	-14.94
285	-16.28	-12.26	-7.03	-1.93	-0.18	2.25	2.67	2.6	-1.95	-4.98	-8.21	-14.24	-14.94
300	-16.52	-12.28	-7.81	-4.39	-3.07	-0.1	0.37	0.18	-4.5	-8.37	-9.16	-14.39	-14.94
315	-17.06	-12.44	-9.09	-7.08	-4.56	-1.19	-1.06	-2.46	-8.03	-12.16	-10.94	-14.45	-14.94
330	-18.11	-12.89	-10.99	-7.49	-3.29	-0.4	-0.66	-2.79	-9.58	-11.64	-12.05	-14.94	-14.94
345	-18.82	-13.41	-13.05	-6.76	-2.42	0.37	0.48	-1.96	-7.29	-10.83	-11.98	-14.67	-14.94

Composite Gain													
Freq	2500												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-21	-14.41	-12.68	-7.35	-3.43	0.2	0.67	-1.19	-7.29	-10.31	-11.77	-14.06	-16.18
15	-20.35	-14.54	-12.76	-7.53	-3.95	-0.02	0.53	-1.09	-7.61	-9.82	-11.07	-11.1	-16.18
30	-19.92	-14.56	-11.55	-7.95	-4.67	-0.32	0.3	-1.64	-7.01	-9.83	-10.4	-8.73	-16.18
45	-19.88	-14.4	-10.07	-7.31	-4.01	-0.21	0.59	-1.22	-4.67	-8.17	-8.46	-7.74	-16.18
60	-20.51	-14.39	-9.25	-5.07	-2.05	1.25	1.77	1.06	-2.05	-5.22	-7.73	-8.02	-16.18
75	-21.11	-14.59	-9.2	-3.35	0.11	3.02	3.45	3.26	-0.48	-2.72	-7.93	-8.95	-16.18
90	-21.05	-14.87	-9.94	-3.11	0.78	3.92	4.44	4.03	0.37	-2.01	-7.87	-9.78	-16.18
105	-20.69	-15.31	-11.09	-4.09	-0.15	3.28	3.7	3.39	-0.09	-2.6	-7.76	-10.27	-16.18
120	-20.24	-15.91	-12.61	-5.95	-2.22	1.5	1.71	1.42	-1.72	-4.57	-8.32	-10.92	-16.18
135	-19.54	-16.61	-14.59	-7.47	-4.26	-0.37	0.17	-0.95	-4.08	-7.06	-9.76	-11.19	-16.18
150	-19	-17.35	-15.66	-7.75	-5.05	-0.62	0.23	-1.89	-6.17	-8.6	-10.48	-10.89	-16.18



165	-18.95	-17.71	-15.01	-8.13	-4.36	-0.08	0.9	-1.42	-6.73	-9.64	-10.66	-11.32	-16.18
180	-19.01	-17.38	-14.97	-8.33	-3.85	0.32	0.76	-1.05	-6.74	-10.22	-10.74	-12.43	-16.18
195	-19.17	-16.76	-15.29	-8.2	-3.74	0.11	0.5	-1.69	-7	-10.39	-10.95	-14.55	-16.18
210	-19.26	-16.08	-13.79	-7.4	-3.57	0.03	-0.53	-2.36	-7.08	-9.66	-10.76	-15.78	-16.18
225	-19.12	-15.46	-11.13	-5.62	-2.61	0.11	-0.17	-1.85	-5.7	-7.09	-9.91	-14.32	-16.18
240	-18.87	-14.9	-9.08	-3.41	-1.03	1.12	1.78	0.26	-2.88	-5.77	-9.61	-13.17	-16.18
255	-18.93	-14.23	-7.73	-1.7	0.52	2.41	3.33	2.4	-1.34	-4.86	-8.54	-12.75	-16.18
270	-18.98	-13.91	-7.16	-1	1.21	3.21	3.82	3.31	-0.95	-4.12	-7.36	-12.43	-16.18
285	-18.93	-14.01	-7.23	-1.29	0.76	2.9	3.2	2.68	-1.72	-4.16	-6.61	-12.19	-16.18
300	-19.01	-14.17	-7.83	-2.72	-0.83	1.53	1.66	0.76	-3.3	-6.12	-7.14	-12.27	-16.18
315	-19.44	-14.15	-9.13	-4.63	-2.38	0.47	0.2	-1.53	-5.46	-8.7	-9.23	-13.41	-16.18
330	-20.34	-14.19	-10.75	-6.01	-3.23	0.06	-0.13	-2.56	-6.68	-11.08	-11.17	-15.21	-16.18
345	-21.08	-14.31	-11.87	-7.04	-3.29	0.09	0.28	-1.79	-7.09	-11.18	-12.49	-16	-16.18

Ant1													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-12.13	-10.33	-6.36	-6.4	-7.86	1.64	4.63	1.26	-12.29	-14.06	-11.61	-8.2	-22.89
15	-12.35	-10.03	-6.4	-6.63	-7.27	1.5	4.96	1.94	-14.07	-14.31	-12.28	-6.88	-22.89
30	-12.48	-10.23	-6.78	-7.09	-8.28	1.02	5.3	1.88	-14.16	-15.15	-12.3	-5.89	-22.89
45	-12.19	-10.78	-7.71	-7.45	-9.3	0.07	4.35	0.11	-16.46	-14.95	-12.8	-5.6	-22.89
60	-11.96	-10.92	-10.2	-6.7	-7.92	-0.08	3.49	-0.73	-14.09	-12.52	-11.5	-5.52	-22.89
75	-11.85	-10.96	-13.52	-6.45	-7.55	-0.05	5.07	2.27	-10.28	-13.27	-9.64	-6	-22.89
90	-12.08	-11.18	-15.51	-7.61	-11.25	-2.02	3.72	1.3	-11.27	-11.96	-9.56	-7.01	-22.89
105	-12.42	-11.77	-13.67	-8.87	-8.7	-2.16	1.88	-1.65	-12.67	-11.4	-11.7	-9.41	-22.89
120	-12.63	-12.87	-12.77	-8.11	-7.46	-1.79	4.2	2.36	-6.66	-13.64	-13.95	-13.98	-22.89
135	-12.39	-14.37	-13.76	-7.69	-11.39	-2.47	3.05	2.7	-6.01	-17.03	-13.59	-18.32	-22.89
150	-12.45	-15.03	-14.48	-9.16	-15.91	-2.57	1.21	-0.41	-8.37	-16.69	-11.5	-17.54	-22.89
165	-12.54	-15.08	-13.02	-9.9	-12.34	-1.8	1.34	-1.36	-8.16	-12.98	-11.43	-15.01	-22.89
180	-12.61	-15.4	-11.85	-9.02	-13.37	-1.21	1.35	-1.19	-7.59	-13.53	-16.9	-16.67	-22.89
195	-12.78	-15.38	-11.09	-8.37	-15.33	-0.98	1.38	-1.4	-8.5	-12.53	-22.51	-20.2	-22.89
210	-12.79	-15.22	-9.43	-7.74	-15.7	-1.31	1.87	-0.23	-9.24	-11.02	-15.52	-22.89	-22.89
225	-12.46	-15.78	-7.9	-6.86	-10.29	-1.23	3.63	2.47	-7.59	-16.32	-15.84	-21.41	-22.89
240	-12.45	-16.58	-6.34	-6.3	-7.16	-0.39	4.11	2.65	-7.96	-18.38	-19.18	-16.86	-22.89
255	-12.65	-16.76	-5.08	-7.15	-8.57	-0.7	2.16	-1.76	-12.83	-15.59	-14.93	-13.88	-22.89
270	-12.68	-16.63	-5.05	-7.11	-9.21	-1.96	2.37	-0.32	-9.79	-15.56	-15.54	-11.58	-22.89
285	-12.7	-17.28	-5.43	-5.53	-6.63	-0.16	3.26	0.88	-9.14	-18.46	-25.59	-10.21	-22.89
300	-12.62	-17.06	-5.51	-5.46	-6.9	-0.09	1.73	-3.12	-22.58	-17.69	-18.85	-9.09	-22.89
315	-12.26	-14.96	-5.94	-6.62	-10.63	-0.66	1.36	-2.55	-17.11	-18.29	-17.22	-8.46	-22.89
330	-11.96	-12.9	-6.29	-7.05	-11.6	0.48	3.42	-0.08	-15.14	-18.05	-13.37	-8.18	-22.89
345	-11.95	-11.39	-6.09	-6.65	-8.78	1.35	4.65	0.64	-13.46	-14.53	-12.4	-8.67	-22.89

ANT2													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-15.52	-11.03	-9.3	-11.72	-9.01	-0.85	2.53	-1.61	-10.57	-22.33	-15.22	-13.33	-14.31
15	-15.51	-12.24	-9.5	-12.16	-12.25	-1.79	2	-2.07	-8.64	-14.48	-11.76	-14.31	-14.31
30	-15.63	-13	-8.95	-11.51	-11.2	-2.99	1.28	-0.78	-9.18	-12.45	-8.62	-12.96	-14.31
45	-16.09	-12.89	-10.48	-8.65	-8.02	-3.43	3.82	2.23	-6.14	-11.68	-9.89	-10.91	-14.31
60	-15.87	-12.15	-13.42	-7.02	-6.86	-1.54	4.91	2.94	-5.45	-12.26	-12.5	-9.51	-14.31
75	-15.5	-11.65	-21.16	-7.55	-8.28	-2.42	3.67	0.06	-12.21	-12.51	-13.28	-8.15	-14.31
90	-15.21	-11.42	-18.73	-7.07	-9.87	-2.41	3.64	2.16	-8.96	-14.91	-12.92	-8.26	-14.31
105	-15.06	-11.65	-16.52	-5.47	-6.75	-0.44	5.05	3.37	-7.05	-24.37	-11.85	-7.89	-14.31
120	-15.02	-12.63	-15.58	-5.76	-7.42	-1.72	3.58	-0.07	-10.52	-17.39	-12.73	-6.91	-14.31
135	-15.5	-14.4	-13.92	-7.27	-8.95	-2.02	4.05	0.02	-13.2	-17.02	-11.33	-5.61	-14.31
150	-15.89	-15.77	-12.93	-7.67	-7.42	-0.7	5.02	1.92	-11.32	-25.64	-10.33	-5.9	-14.31
165	-15.85	-16.32	-13.1	-6.91	-6.48	0.16	4.9	1.78	-10.68	-15.78	-10.8	-7.7	-14.31
180	-15.51	-15.61	-12.68	-6.69	-6.52	0.55	4.66	1.49	-10.93	-12.93	-11.94	-9.42	-14.31
195	-15.26	-14.25	-12.47	-6.98	-8.33	0.77	4.67	1.57	-11.51	-11.68	-11.21	-10.33	-14.31
210	-15.2	-13.13	-10.17	-7.87	-10.46	0.8	3.95	0.51	-14.6	-14.06	-11.19	-9.9	-14.31
225	-15.2	-12.4	-9.17	-7.63	-7.29	0.32	1.93	-2.88	-18.55	-19.34	-14.75	-9.12	-14.31
240	-15.5	-11.99	-9.49	-5.82	-6.6	0.26	2.82	-1.24	-19.12	-19.36	-16.63	-9.52	-14.31
255	-15.88	-11.65	-11.27	-5.62	-8.24	2.61	4.94	2.37	-13.22	-13.22	-13.07	-9.46	-14.31
270	-15.84	-11.85	-11.23	-7.73	-7.82	1.77	3.01	-0.09	-19.46	-10.28	-10.59	-7.79	-14.31
285	-15.74	-12.14	-12.02	-7.23	-6.8	1.86	3.43	-0.89	-16.65	-13.7	-13.14	-7.21	-14.31
300	-15.84	-12.38	-11.53	-5.48	-7.03	2.28	5.33	2.34	-9.22	-12.84	-13.58	-7.43	-14.31
315	-15.75	-12.03	-9.72	-7.22	-9.48	0.73	3.59	1.38	-10.24	-13.42	-13.16	-7.99	-14.31
330	-15.48	-11.29	-9.22	-9.83	-10.46	-0.32	1.1	-1.33	-12.72	-11.33	-10.93	-9.35	-14.31
345	-15.52	-10.83	-9.36	-11.51	-9.11	-0.3	1.45	-2.19	-13.45	-14.9	-11.7	-11.61	-14.31

Composite Gain													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.5	-10.67	-7.59	-8.29	-8.4	0.57	3.71	0.06	-11.35	-16.47	-13.05	-10.05	-16.76
15	-13.65	-11	-7.68	-8.57	-9.08	0.16	3.73	0.38	-10.56	-14.39	-12.01	-9.17	-16.76
30	-13.78	-11.4	-7.73	-8.76	-9.5	-0.54	3.74	0.75	-10.99	-13.59	-10.08	-8.12	-16.76
45	-13.72	-11.71	-8.88	-8.01	-8.61	-1.34	4.09	1.3	-8.76	-13.01	-11.11	-7.49	-16.76
60	-13.49	-11.49	-11.52	-6.86	-7.36	-0.75	4.26	1.48	-7.9	-12.39	-11.97	-7.07	-16.76
75	-13.3	-11.29	-15.84	-6.97	-7.9	-1.08	4.43	1.3	-11.14	-12.87	-11.09	-6.94	-16.76
90	-13.37	-11.3	-16.83	-7.33	-10.51	-2.21	3.68	1.75	-9.96	-13.19	-10.92	-7.59	-16.76
105	-13.54	-11.71	-14.87	-6.85	-7.62	-1.22	3.75	1.55	-9.01	-14.2	-11.77	-8.58	-16.76



120	-13.66	-12.75	-13.95	-6.78	-7.44	-1.75	3.9	1.31	-8.17	-15.12	-13.3	-9.14	-16.76
135	-13.67	-14.38	-13.84	-7.47	-10	-2.24	3.58	1.56	-8.26	-17.02	-12.31	-8.39	-16.76
150	-13.84	-15.38	-13.64	-8.35	-9.86	-1.54	3.52	0.91	-9.6	-19.18	-10.88	-8.62	-16.76
165	-13.89	-15.66	-13.06	-8.15	-8.49	-0.71	3.47	0.49	-9.24	-14.16	-11.1	-9.97	-16.76
180	-13.82	-15.5	-12.25	-7.7	-8.71	-0.24	3.31	0.35	-8.95	-13.22	-13.75	-11.68	-16.76
195	-13.85	-14.78	-11.73	-7.62	-10.55	-0.02	3.33	0.33	-9.75	-12.08	-13.91	-12.91	-16.76
210	-13.83	-14.05	-9.78	-7.8	-12.33	-0.13	3.03	0.16	-11.14	-12.28	-12.84	-12.7	-16.76
225	-13.62	-13.77	-8.49	-7.23	-8.54	-0.39	2.86	0.57	-10.27	-17.57	-15.26	-11.88	-16.76
240	-13.71	-13.7	-7.64	-6.05	-6.87	-0.05	3.51	1.13	-10.65	-18.84	-17.72	-11.79	-16.76
255	-13.97	-13.49	-7.15	-6.32	-8.4	1.26	3.77	0.78	-13.02	-14.25	-13.9	-11.13	-16.76
270	-13.98	-13.61	-7.12	-7.41	-8.46	0.29	2.7	-0.2	-12.36	-12.16	-12.39	-9.28	-16.76
285	-13.96	-13.99	-7.58	-6.3	-6.71	0.97	3.35	0.08	-11.44	-15.46	-15.91	-8.46	-16.76
300	-13.94	-14.12	-7.55	-5.47	-6.96	1.25	3.89	0.42	-12.03	-14.62	-15.46	-8.18	-16.76
315	-13.66	-13.25	-7.43	-6.91	-10.02	0.09	2.62	-0.15	-12.44	-15.21	-14.73	-8.22	-16.76
330	-13.37	-12.02	-7.51	-8.22	-10.99	0.1	2.41	-0.66	-13.76	-13.5	-11.98	-8.73	-16.76
345	-13.38	-11.1	-7.42	-8.43	-8.94	0.6	3.34	-0.55	-13.45	-14.71	-12.04	-9.9	-16.76

Ant1													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.14	-10.32	-7.89	-4.01	-7.85	2.76	3.92	-1.44	-27.23	-11.78	-10.43	-9.61	-20.89
15	-13.08	-9.94	-8.49	-4.44	-8.12	2.79	3.98	-0.39	-22.13	-11.72	-10.77	-9.09	-20.89
30	-12.89	-9.83	-8.64	-4.86	-7.75	2.94	4.95	0.53	-18.94	-10.91	-10.85	-8.84	-20.89
45	-12.8	-9.97	-8.58	-4.85	-7.29	2.41	5.12	-0.54	-17.33	-9.96	-11.53	-9.07	-20.89
60	-12.89	-10.11	-9	-4.26	-8.71	0.76	3.31	-3.11	-18.47	-10.57	-10.9	-8.05	-20.89
75	-13.14	-10.5	-11.06	-4.68	-10.03	0.99	3.78	-0.31	-17.14	-12.03	-9.52	-6.17	-20.89
90	-13.25	-10.84	-14.71	-5.25	-9.97	0.95	4.5	1.05	-19.17	-8.59	-8.29	-5.51	-20.89
105	-13.36	-11.11	-18.08	-6.09	-9.67	-1.61	1.51	-3.4	-16.45	-8.51	-9.23	-6.09	-20.89
120	-13.34	-11.94	-15.56	-6.62	-10.68	-0.2	3.52	0.03	-11.06	-11.74	-11.53	-7.85	-20.89
135	-13.35	-12.81	-14.77	-6.83	-12.35	0.34	3.65	1.55	-10.89	-15.56	-13.49	-10.19	-20.89
150	-13.63	-13.24	-13.96	-7.52	-12.6	-0.93	1.72	-1	-12.91	-14.3	-13.67	-13.73	-20.89
165	-13.52	-13.96	-10.85	-7.33	-12.44	-1.13	0.79	-2.38	-10.45	-12.04	-14.15	-16.18	-20.89
180	-13.06	-14.26	-9.67	-6.78	-14.74	-1.06	0.54	-2.22	-10.2	-15.67	-19.47	-18.23	-20.89
195	-12.89	-13.93	-8.6	-6.53	-13.23	-1	0.82	-1.94	-12.89	-19.08	-17.96	-20.89	-20.89
210	-13.19	-13.66	-7.82	-6.31	-11.13	-0.15	1.81	-0.71	-15.6	-14.01	-14.28	-18.55	-20.89
225	-13.5	-14.12	-6.83	-5.9	-9.07	1.43	3.24	1.31	-13.28	-20.18	-15.34	-16.63	-20.89
240	-13.81	-15.73	-6.39	-5.58	-8.74	1.3	2.66	0.56	-12.13	-18.47	-15.1	-12.6	-20.89
255	-13.6	-17.46	-6.14	-5.7	-7.42	-0.6	0.57	-3.89	-20.85	-14.04	-13.14	-10.57	-20.89
270	-12.96	-17.61	-5.79	-5.61	-5.08	0.77	2.89	-1.29	-15.72	-11.1	-17.28	-9.85	-20.89
285	-12.64	-15.6	-5.06	-4.66	-6.51	0.99	2.71	-1.94	-15.07	-19.36	-18.68	-9.5	-20.89



300	-12.75	-13.5	-4.77	-3.92	-9.09	-0.46	0.24	-4.93	-16.81	-20.67	-16.28	-9.22	-20.89
315	-12.94	-11.85	-5.26	-4.07	-7.71	1.13	2.49	-3.13	-16.92	-17.42	-19.93	-9.67	-20.89
330	-13.04	-11.01	-6.27	-4.42	-7.48	2.52	3.47	-2.08	-24.18	-15.61	-14.55	-10.21	-20.89
345	-13.22	-10.75	-7.31	-4.14	-7.5	2.69	3.99	-2.28	-26.36	-12.54	-11.68	-10.34	-20.89

Ant2													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-14.16	-12.92	-9.21	-8.97	-9.02	-0.46	1.31	-3.16	-17.41	-15.55	-14.29	-16.05	-18.5
15	-13.92	-13.56	-9.63	-9.95	-9.83	-1.19	1.59	-2.75	-12.05	-14.47	-12.87	-18.5	-18.5
30	-13.81	-13.36	-9.78	-10.03	-8.9	-1.01	1.52	-1.22	-10.79	-12.1	-8.83	-13.66	-18.5
45	-13.58	-12.64	-12.6	-8.11	-6.77	0.05	4.28	1.08	-11.39	-9.87	-9.83	-9.36	-18.5
60	-13.38	-11.49	-16.22	-5.04	-9.75	0.49	4.48	0.93	-10.88	-10.31	-11.68	-7.09	-18.5
75	-13.43	-11.01	-18.09	-5.48	-9.6	-1.52	2.79	-1.09	-16.24	-10.25	-10.8	-6.32	-18.5
90	-13.24	-11.85	-16.76	-4.91	-10.45	0.97	4.56	2.12	-12.86	-11.06	-11	-6.91	-18.5
105	-12.99	-14	-15.81	-3.45	-10.86	0.91	4.08	1.35	-11.96	-16.04	-10.95	-7.31	-18.5
120	-13.28	-15.95	-13.96	-3.93	-8.54	-0.77	3.29	-1.75	-15.63	-13	-12.05	-7.23	-18.5
135	-13.04	-17.14	-13.86	-5.7	-7.43	0.97	5.1	0.4	-16.25	-13.16	-10.01	-7.01	-18.5
150	-12.65	-15.98	-13.64	-5.76	-7.3	1.74	5.02	0.88	-17.95	-16.53	-9.19	-7.6	-18.5
165	-12.72	-14.74	-13.04	-4.92	-7.27	1.63	3.98	-0.4	-18.13	-13.34	-9.76	-9.06	-18.5
180	-12.93	-14.37	-12.86	-4.36	-7.22	1.65	3.56	-1.1	-19.34	-11.44	-10.23	-9.87	-18.5
195	-12.97	-13.87	-13.94	-4.55	-7.21	1.97	3.93	-0.65	-17.17	-9.53	-9.56	-10.3	-18.5
210	-13.48	-13.25	-12.89	-4.88	-7.47	2.8	4.16	-0.59	-15.35	-10.68	-9.74	-10.61	-18.5
225	-13.42	-12.25	-9.78	-5.38	-6.46	2.77	2.77	-2.71	-12.28	-13.58	-13.48	-9.77	-18.5
240	-13.16	-11.16	-8.59	-5.07	-5.6	0.86	1.2	-5.09	-14.71	-14.96	-16.67	-9.34	-18.5
255	-13.33	-10.54	-9.85	-4.75	-4.98	3.56	4.44	-0.82	-25.34	-10.25	-11.98	-8.33	-18.5
270	-13.78	-10.5	-11.01	-5.59	-4.43	3.72	3.39	-0.96	-14	-6.55	-9.58	-6.83	-18.5
285	-13.9	-10.81	-11.67	-5.76	-5.55	2.11	2.1	-3.73	-12.83	-8.23	-11.38	-6.4	-18.5
300	-14.04	-11.59	-11.39	-5.25	-5.34	3.45	4.55	-0.33	-11.35	-8.3	-11.51	-6.38	-18.5
315	-14	-12.21	-9.45	-6.53	-6.07	2.85	3.79	-0.7	-12.36	-11.1	-13.73	-6.86	-18.5
330	-13.99	-12.15	-8.69	-7.85	-7.68	1.36	1.13	-2.34	-17.08	-10.69	-10.4	-8.99	-18.5
345	-14.15	-12.36	-8.55	-8.75	-8.7	0.15	0.51	-3.46	-19.55	-12.78	-10.38	-12.7	-18.5

Composite Gain													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.62	-11.43	-8.5	-5.82	-8.4	1.44	2.81	-2.22	-19.99	-13.27	-11.94	-11.73	-19.53
15	-13.48	-11.38	-9.02	-6.37	-8.89	1.24	2.95	-1.41	-14.65	-12.88	-11.69	-11.63	-19.53
30	-13.33	-11.25	-9.17	-6.72	-8.29	1.4	3.57	-0.26	-13.18	-11.46	-9.72	-10.61	-19.53
45	-13.17	-11.1	-10.14	-6.18	-7.02	1.39	4.72	0.35	-13.41	-9.91	-10.6	-9.21	-19.53



60	-13.13	-10.75	-11.26	-4.63	-9.2	0.63	3.93	-0.64	-13.19	-10.44	-11.27	-7.54	-19.53
75	-13.28	-10.75	-13.29	-5.06	-9.81	-0.09	3.31	-0.68	-16.67	-11.05	-10.11	-6.24	-19.53
90	-13.24	-11.32	-15.62	-5.08	-10.2	0.96	4.53	1.62	-14.96	-9.65	-9.44	-6.15	-19.53
105	-13.17	-12.32	-16.8	-4.57	-10.22	-0.17	2.98	-0.41	-13.65	-10.81	-10.01	-6.66	-19.53
120	-13.31	-13.5	-14.69	-5.07	-9.48	-0.48	3.41	-0.77	-12.77	-12.32	-11.78	-7.53	-19.53
135	-13.19	-14.46	-14.29	-6.23	-9.23	0.67	4.44	1.01	-12.79	-14.2	-11.41	-8.32	-19.53
150	-13.11	-14.4	-13.8	-6.55	-9.19	0.61	3.68	0.04	-14.74	-15.27	-10.88	-9.66	-19.53
165	-13.1	-14.33	-11.81	-5.96	-9.13	0.47	2.67	-1.28	-12.78	-12.64	-11.42	-11.3	-19.53
180	-12.99	-14.31	-10.98	-5.4	-9.52	0.5	2.31	-1.62	-12.71	-13.06	-12.75	-12.29	-19.53
195	-12.93	-13.9	-10.5	-5.43	-9.25	0.73	2.65	-1.25	-14.52	-12.08	-11.98	-12.95	-19.53
210	-13.33	-13.45	-9.65	-5.54	-8.93	1.57	3.14	-0.65	-15.47	-12.03	-11.44	-12.97	-19.53
225	-13.46	-13.09	-8.06	-5.63	-7.57	2.15	3.01	-0.25	-12.75	-15.73	-14.31	-11.97	-19.53
240	-13.47	-12.87	-7.35	-5.32	-6.89	1.09	1.99	-1.4	-13.23	-16.37	-15.81	-10.67	-19.53
255	-13.46	-12.75	-7.61	-5.2	-6.03	1.96	2.92	-2.09	-22.54	-11.74	-12.52	-9.31	-19.53
270	-13.35	-12.74	-7.66	-5.6	-4.74	2.49	3.15	-1.12	-14.78	-8.25	-11.91	-8.08	-19.53
285	-13.22	-12.58	-7.21	-5.18	-6	1.59	2.42	-2.74	-13.81	-10.92	-13.65	-7.68	-19.53
300	-13.35	-12.44	-6.92	-4.53	-6.82	1.92	2.91	-2.05	-13.27	-11.07	-13.27	-7.57	-19.53
315	-13.44	-12.03	-6.87	-5.13	-6.81	2.07	3.19	-1.75	-14.07	-13.2	-15.81	-8.04	-19.53
330	-13.49	-11.54	-7.31	-5.8	-7.58	1.98	2.46	-2.21	-19.32	-12.49	-12	-9.56	-19.53
345	-13.66	-11.48	-7.89	-5.86	-8.06	1.6	2.59	-2.83	-21.74	-12.66	-10.98	-11.36	-19.53

Ant1													
Freq	5700												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.8	-13.24	-14.6	-6.96	-4.16	2.39	1.22	-9.96	-7.96	-6.28	-8.54	-8.8	-18.21
15	-13.71	-12.69	-14.75	-7.05	-4.57	2.69	1.55	-8.59	-7.5	-5.82	-9.12	-8.26	-18.21
30	-14.11	-12.74	-14.59	-8.42	-4.54	3.44	3.38	-5.68	-7.17	-6.28	-8.78	-8.49	-18.21
45	-14.06	-12.09	-16.66	-11.16	-4.06	4.34	4.75	-3.86	-7.35	-6.57	-9.88	-9.44	-18.21
60	-13.97	-10.92	-16.1	-12.55	-3.98	3.03	3.55	-6.27	-8.09	-6.1	-9.12	-11.76	-18.21
75	-14.04	-10.33	-15.95	-10.16	-4.65	1.3	2.22	-6.96	-8.46	-6.38	-8.87	-12.07	-18.21
90	-13.98	-10.84	-17.87	-10.69	-5.14	3.19	4.27	-2.6	-9.95	-4.93	-8.76	-11.34	-18.21
105	-13.95	-11.51	-15.42	-15.99	-4.57	0.27	1.07	-5.67	-10.06	-4.39	-9.66	-12.63	-18.21
120	-14.5	-11.36	-14.75	-13.01	-6.25	1.45	2.68	-4.18	-12.87	-6.4	-9.95	-13.88	-18.21
135	-14.86	-10.72	-15.72	-10.64	-7.3	2.62	3.57	-1.85	-12.42	-8.15	-11.73	-14.53	-18.21
150	-14.67	-10.34	-18.41	-11.09	-7.58	1.14	1.32	-4.36	-12.16	-9.44	-12.81	-16.49	-18.21
165	-14.28	-10.38	-17.4	-10.03	-7.82	0.31	0.18	-4.66	-14.81	-10.03	-12.18	-18.21	-18.21
180	-13.68	-10.7	-14.3	-10.14	-7.11	0.14	0.36	-4.22	-16.96	-11.47	-12.81	-17.83	-18.21
195	-13.69	-10.95	-15.18	-10.98	-6.43	0.11	0.53	-4.38	-12.26	-10.07	-14.87	-17.49	-18.21
210	-13.56	-11.69	-14.77	-10.87	-6.16	1.17	1.5	-4.35	-9.53	-7.55	-15.19	-13.44	-18.21
225	-13.72	-12.53	-14.61	-9.73	-5.34	2.98	3.43	-3.47	-10.48	-6.1	-11.03	-13.58	-18.21
240	-13.84	-13.62	-14.77	-11.29	-6.12	2.64	2.29	-4.87	-11.86	-8.14	-10.17	-13.55	-18.21
255	-13.87	-15.02	-12.89	-14.38	-4.35	-0.25	-0.53	-9.78	-9.34	-7.44	-13.88	-12.98	-18.21



270	-13.52	-15.99	-10.37	-12.17	-2.67	2.46	2.96	-7.2	-7.73	-9.08	-13.54	-13.3	-18.21
285	-13.46	-14.34	-9.71	-9.62	-4.1	1.09	1.2	-9.52	-10.35	-9.26	-14.4	-14.37	-18.21
300	-13.24	-12.13	-10.87	-9.04	-4.21	0.25	-0.35	-13.21	-8.33	-14.56	-15.46	-12.69	-18.21
315	-13.09	-11.37	-13.95	-9.13	-3.4	3.18	2.33	-8.9	-8.59	-9.26	-12.26	-10.69	-18.21
330	-13.25	-12.07	-16.52	-9.07	-3.61	3.3	1.4	-7.48	-10.43	-6.74	-11.58	-9.94	-18.21
345	-13.64	-13.19	-16.01	-7.47	-4.86	2.5	0.96	-8.8	-8.29	-6.74	-8.91	-8.98	-18.21

Ant2													
Freq	5700												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-16.3	-11.71	-17.64	-10.12	-5.33	0.54	-0.35	-5.02	-13.98	-12.07	-10.11	-16.84	-18.04
15	-16.01	-11.9	-17.43	-10.68	-5.19	0.31	0.08	-4.85	-12.04	-12.2	-11.14	-14.49	-18.04
30	-15.92	-11.71	-14.98	-10.67	-5.78	0.88	1.05	-4.29	-9.73	-8.49	-10.07	-12.02	-18.04
45	-16.69	-11.53	-14.82	-8.41	-6.8	2.46	3.52	-2.04	-10.29	-7.89	-10.46	-11.85	-18.04
60	-17.19	-12.18	-13.72	-11.12	-7.01	1.76	3.79	-2.68	-11.57	-7.12	-9.75	-10.9	-18.04
75	-17.06	-13.59	-16.49	-15	-6.97	0.74	1.98	-2.96	-13.49	-6.44	-9.94	-11.1	-18.04
90	-16.61	-13.86	-24.53	-8.8	-7.42	2.81	4.81	-1.07	-14.82	-7.51	-10.16	-13.15	-18.04
105	-16.09	-13.36	-16.1	-7.79	-8.58	1.13	2.85	-3.32	-13.42	-7.22	-10.95	-13.55	-18.04
120	-15.72	-13.78	-14.91	-11.24	-6.46	1.75	3.5	-3.54	-13.18	-7.21	-12.71	-10.95	-18.04
135	-15.68	-15.25	-16.46	-10.52	-7.24	3.17	4.55	-2.65	-12.27	-8.01	-12.42	-9.65	-18.04
150	-16.25	-18.27	-17.98	-8.6	-7.77	2.28	3	-4.61	-10.52	-8.14	-10.46	-9.73	-18.04
165	-16.44	-20.3	-17.2	-6.63	-6.76	1.46	1.15	-6.97	-9.01	-7.93	-11.19	-10.05	-18.04
180	-16.65	-19.4	-14.43	-6.6	-6.15	1.27	0.42	-9.53	-9.61	-8.18	-10.98	-10.97	-18.04
195	-16.92	-18.54	-15.42	-7	-5.73	1.74	0.92	-9.29	-9.59	-7.82	-9.9	-10.48	-18.04
210	-16.99	-18.51	-15.47	-8.33	-4.37	3.1	1.51	-6.68	-10.64	-8.79	-9.6	-10.73	-18.04
225	-16.29	-19.08	-22.55	-8.52	-3.04	3.86	2.63	-7.63	-9.45	-8.17	-9.85	-12.39	-18.04
240	-16.08	-18.42	-19.88	-8.24	-3.72	2.17	-0.06	-12.95	-7.83	-8.06	-14.53	-12.28	-18.04
255	-16.39	-15.79	-16.05	-7.16	-2.6	2.97	2.54	-9.65	-5.34	-8.07	-12.79	-18.04	-18.04
270	-16.34	-13.4	-16.51	-9.03	-1.66	4.04	3.03	-8.27	-6.24	-4.64	-11.22	-10.06	-18.04
285	-16.82	-12.16	-17.43	-9.86	-2.34	2.42	0.75	-9.13	-6.06	-7.16	-16.02	-7.45	-18.04
300	-17.26	-11.71	-17.43	-8.61	-3.59	3.84	2.97	-5.01	-9.19	-4.25	-12.8	-7.92	-18.04
315	-17.48	-11.47	-19.57	-7.88	-3.55	3.91	3.38	-4.94	-8.14	-7.28	-13.76	-8.99	-18.04
330	-16.97	-11.27	-20.51	-8.81	-3.81	2.25	0.88	-5.33	-10.06	-7.73	-9.87	-12.3	-18.04
345	-17.01	-11.25	-23.86	-9.51	-4.45	0.94	-0.18	-5.55	-13.57	-10.02	-10.3	-17.35	-18.04

Composite Gain													
Freq	5700												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-14.87	-12.41	-15.86	-8.26	-4.71	1.56	0.51	-6.82	-10	-8.27	-9.25	-11.18	-18.12
15	-14.71	-12.28	-15.89	-8.5	-4.87	1.66	0.88	-6.33	-9.2	-7.93	-10.01	-10.34	-18.12



30	-14.92	-12.19	-14.78	-9.4	-5.12	2.35	2.37	-4.93	-8.26	-7.25	-9.38	-9.91	-18.12
45	-15.18	-11.8	-15.64	-9.57	-5.22	3.5	4.18	-2.86	-8.58	-7.18	-10.16	-10.48	-18.12
60	-15.29	-11.5	-14.75	-11.78	-5.24	2.44	3.67	-4.11	-9.49	-6.58	-9.42	-11.31	-18.12
75	-15.29	-11.66	-16.21	-11.94	-5.66	1.03	2.1	-4.51	-10.28	-6.41	-9.37	-11.56	-18.12
90	-15.1	-12.09	-20.03	-9.64	-6.13	3	4.55	-1.77	-11.74	-6.03	-9.4	-12.15	-18.12
105	-14.89	-12.34	-15.75	-10.19	-6.13	0.72	2.05	-4.34	-11.42	-5.58	-10.26	-13.07	-18.12
120	-15.07	-12.4	-14.83	-12.04	-6.35	1.6	3.11	-3.85	-13.02	-6.79	-11.11	-12.17	-18.12
135	-15.25	-12.42	-16.07	-10.58	-7.27	2.9	4.09	-2.23	-12.34	-8.08	-12.06	-11.44	-18.12
150	-15.39	-12.7	-18.19	-9.67	-7.67	1.75	2.24	-4.48	-11.26	-8.74	-11.48	-11.91	-18.12
165	-15.23	-12.97	-17.3	-8.01	-7.26	0.92	0.69	-5.66	-11.01	-8.85	-11.66	-12.44	-18.12
180	-14.92	-13.16	-14.36	-8.02	-6.6	0.74	0.39	-6.11	-11.89	-9.52	-11.8	-13.17	-18.12
195	-15.01	-13.26	-15.3	-8.55	-6.07	1	0.73	-6.18	-10.72	-8.8	-11.71	-12.7	-18.12
210	-14.94	-13.88	-15.11	-9.42	-5.17	2.24	1.51	-5.36	-10.05	-8.13	-11.55	-11.88	-18.12
225	-14.82	-14.67	-16.97	-9.08	-4.04	3.44	3.05	-5.07	-9.93	-7.01	-10.4	-12.94	-18.12
240	-14.82	-15.39	-16.61	-9.5	-4.76	2.41	1.27	-7.25	-9.39	-8.1	-11.82	-12.87	-18.12
255	-14.95	-15.39	-14.19	-9.42	-3.39	1.65	1.27	-9.71	-6.89	-7.74	-13.3	-14.81	-18.12
270	-14.71	-14.5	-12.43	-10.32	-2.14	3.32	3	-7.7	-6.92	-6.32	-12.23	-11.38	-18.12
285	-14.82	-13.11	-12.04	-9.74	-3.13	1.81	0.98	-9.32	-7.7	-8.08	-15.13	-9.66	-18.12
300	-14.8	-11.91	-13.01	-8.82	-3.89	2.41	1.62	-7.41	-8.74	-6.87	-13.93	-9.68	-18.12
315	-14.75	-11.42	-15.91	-8.46	-3.47	3.56	2.89	-6.48	-8.36	-8.16	-12.95	-9.76	-18.12
330	-14.72	-11.65	-18.07	-8.94	-3.71	2.81	1.15	-6.27	-10.24	-7.21	-10.64	-10.96	-18.12
345	-15.01	-12.11	-18.36	-8.37	-4.65	1.79	0.43	-6.88	-10.17	-8.08	-9.55	-11.4	-18.12

Ant1													
Freq	5750												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.57	-15.05	-13.97	-7.13	-3.92	2.31	1.16	-9.77	-6.07	-6.11	-8.85	-9.12	-17.92
15	-14.18	-14.54	-12.66	-7.47	-3.81	2.67	2.06	-8.85	-5.15	-5.7	-9.29	-9.07	-17.92
30	-13.81	-13.75	-11.97	-9.14	-3.27	3.3	3.15	-6.19	-5.64	-5.82	-8.74	-9.79	-17.92
45	-13.27	-11.8	-13.23	-12.31	-2.98	4.14	4.19	-4.47	-6.39	-6.09	-9.59	-10.17	-17.92
60	-13.14	-9.81	-13.26	-14.05	-2.75	3.47	3.41	-5.8	-6.68	-5.88	-9.13	-12.9	-17.92
75	-13.11	-8.96	-13.09	-12.49	-3.31	1.58	2.26	-6.85	-6.74	-6.09	-9.52	-14.85	-17.92
90	-13.81	-9.29	-13.76	-13.4	-4.64	3.14	4.25	-2.93	-7.73	-4.86	-9.6	-13.72	-17.92
105	-14.46	-10.08	-13.1	-16.3	-3.84	1.2	1.99	-5.33	-7.8	-3.81	-10.11	-13.93	-17.92
120	-14.31	-10.45	-13.53	-15.8	-5.52	1.23	2.32	-4.4	-9.21	-5.98	-9.91	-16.52	-17.92
135	-14.06	-10.31	-15.03	-12.05	-6.6	2.74	3.46	-1.96	-10.65	-7.18	-11.46	-17.19	-17.92
150	-13.86	-10.02	-16.17	-11.77	-6.45	1.69	2.01	-4.12	-10.57	-9.23	-13.38	-16.43	-17.92
165	-13.39	-9.93	-18.19	-11.45	-6.58	1	0.44	-4.44	-12.27	-9.79	-12.63	-17.92	-17.92
180	-13.26	-9.82	-16.74	-10.45	-5.97	0.83	0.8	-3.76	-14.85	-10.68	-13.08	-17.41	-17.92
195	-12.93	-10.1	-15.36	-11.26	-5.23	0.85	1.02	-3.73	-10.99	-10.18	-15.88	-16.91	-17.92
210	-12.91	-10.66	-14.69	-12.57	-4.62	1.86	2.29	-4.41	-8.87	-8.68	-16.54	-13.64	-17.92
225	-13	-11.64	-14.82	-11.76	-4.42	3	4.03	-4.5	-8.7	-6.47	-12.02	-15.03	-17.92



240	-13.16	-12.78	-15.56	-13.56	-5.05	2.17	3.02	-5.72	-9.7	-7.97	-10.31	-15.04	-17.92
255	-13.11	-14.58	-14.29	-14.54	-2.59	-0.09	1.25	-9.63	-8.91	-6.73	-13.63	-15.2	-17.92
270	-13.05	-15.02	-11.48	-12.92	-2.3	2.57	2.61	-7.76	-6.91	-8.04	-14.32	-16.34	-17.92
285	-12.73	-12.92	-10.75	-10.53	-3.98	0.87	0.33	-9.46	-8.12	-8.61	-14.32	-15.03	-17.92
300	-12.54	-11.71	-11.53	-8.91	-2.88	1.05	0.57	-14.92	-6.9	-13.28	-16.13	-12.64	-17.92
315	-12.37	-11.78	-15.13	-9.83	-2.87	3.42	1.69	-9.75	-7.57	-8.05	-12.43	-11	-17.92
330	-12.54	-13.16	-19.01	-10.52	-3.83	2.93	1.23	-7.97	-7.21	-6.74	-12	-10.44	-17.92
345	-12.85	-14.81	-16.4	-8.12	-3.93	2.19	1.02	-9.14	-7.12	-7.08	-9.12	-9.12	-17.92

Ant2													
Freq	5750												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.3	-9.43	-17.02	-10.66	-3.52	1.21	0.74	-4.56	-13.6	-11.9	-9.92	-15.56	-21.86
15	-13.21	-9.29	-18.41	-10.44	-4.04	1.06	0.29	-4.26	-10.71	-11.49	-11.11	-15.31	-21.86
30	-13.65	-9.6	-14.22	-10.59	-5.07	1.22	1.46	-4.31	-8.12	-8.24	-10.08	-13.11	-21.86
45	-13.82	-10.87	-14.87	-8.88	-6.07	2.49	3.36	-2.78	-9.48	-7.87	-10	-12.74	-21.86
60	-13.94	-12.12	-11.89	-11.1	-6.55	1.72	3.51	-2.89	-9.81	-6.25	-9.11	-12.24	-21.86
75	-14.08	-12.52	-16.08	-16.65	-6.19	1.4	2.54	-3.08	-10.75	-5.93	-9.42	-12.4	-21.86
90	-13.7	-11.99	-18.29	-9.3	-7.98	2.72	4.68	-1.53	-11.93	-6.59	-10.94	-13.71	-21.86
105	-13.59	-11.89	-13.19	-9.88	-6.56	1.45	3.3	-3.4	-10.19	-7.1	-11.64	-13.42	-21.86
120	-13.66	-12.66	-12.82	-12.69	-5.58	2.36	3.19	-3.61	-11.79	-6.92	-12.6	-11.27	-21.86
135	-13.82	-14.73	-14.38	-11.02	-8.13	2.91	3.76	-3.14	-11.36	-7.25	-11.96	-10.32	-21.86
150	-13.89	-17.68	-16.24	-9.47	-8.36	2.09	2.28	-5.23	-9.79	-7.52	-9.97	-10.41	-21.86
165	-14.35	-20.46	-17.99	-7.59	-6.61	1.74	0.86	-7.56	-7.84	-7.78	-10.57	-10.34	-21.86
180	-14.63	-21.28	-16.52	-7.52	-5.25	1.79	0.58	-10.43	-7.7	-8.29	-10.35	-11.28	-21.86
195	-14.86	-19.12	-17.23	-7.56	-4.67	1.78	0.74	-10.22	-8.07	-7.49	-9.81	-10.6	-21.86
210	-14.64	-17.57	-16.55	-9.48	-3.99	2.55	1.73	-7.83	-7.41	-7.86	-9.91	-11.23	-21.86
225	-14.51	-17.35	-20.13	-9.7	-2.75	3.63	2.08	-8.78	-7.55	-7.58	-9.99	-15.04	-21.86
240	-14.18	-16.73	-21.2	-8.89	-2.3	2.49	1.19	-13.21	-6.05	-7.2	-13.47	-13.05	-21.86
255	-13.94	-15.3	-20.6	-8.09	-2.14	2.74	1.8	-9.27	-4.8	-8.21	-14.64	-21.86	-21.86
270	-14.14	-13.27	-22.03	-9.62	-1.29	3.72	3.06	-9.74	-4.71	-4.29	-11.34	-11.48	-21.86
285	-14.35	-11.29	-16.97	-10.02	-1.32	2.71	1.31	-9.26	-3.86	-7.15	-15.41	-8.02	-21.86
300	-14.64	-10.07	-14.63	-9.28	-3.12	3.58	2.9	-5.11	-7.41	-3.89	-11.96	-8.02	-21.86
315	-14.5	-9.4	-16.17	-8.47	-3.87	3.63	3.11	-5.21	-6.15	-6.81	-13.46	-8.73	-21.86
330	-14.24	-8.99	-18.82	-8.97	-3.47	2.44	0.86	-5.09	-7.5	-7.79	-9.82	-11.89	-21.86
345	-13.7	-9.19	-19.39	-9.38	-3.48	1.42	0.5	-5.42	-10.95	-9.45	-10.4	-15.76	-21.86

Composite Gain													
Freq	5750												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180

0	-13.43	-11.39	-15.23	-8.55	-3.72	1.79	0.96	-6.43	-8.37	-8.1	-9.35	-11.24	-19.46
15	-13.67	-11.17	-14.65	-8.71	-3.92	1.94	1.26	-5.97	-7.1	-7.69	-10.11	-11.15	-19.46
30	-13.73	-11.2	-12.95	-9.8	-4.08	2.38	2.39	-5.15	-6.71	-6.86	-9.36	-11.14	-19.46
45	-13.54	-11.31	-13.97	-10.26	-4.26	3.39	3.79	-3.54	-7.67	-6.89	-9.79	-11.27	-19.46
60	-13.52	-10.81	-12.52	-12.33	-4.25	2.68	3.46	-4.11	-7.97	-6.06	-9.12	-12.56	-19.46
75	-13.57	-10.39	-14.33	-14.09	-4.52	1.49	2.4	-4.57	-8.3	-6.01	-9.47	-13.45	-19.46
90	-13.75	-10.43	-15.46	-10.88	-6	2.94	4.47	-2.17	-9.34	-5.64	-10.22	-13.71	-19.46
105	-14	-10.89	-13.14	-12	-4.99	1.33	2.69	-4.26	-8.83	-5.15	-10.81	-13.67	-19.46
120	-13.97	-11.42	-13.16	-13.97	-5.55	1.83	2.78	-3.99	-10.31	-6.42	-11.05	-13.15	-19.46
135	-13.94	-11.98	-14.69	-11.5	-7.3	2.83	3.61	-2.51	-10.99	-7.21	-11.7	-12.52	-19.46
150	-13.87	-12.34	-16.2	-10.47	-7.3	1.89	2.15	-4.64	-10.16	-8.29	-11.35	-12.45	-19.46
165	-13.84	-12.57	-18.09	-9.1	-6.59	1.39	0.66	-5.73	-9.51	-8.67	-11.48	-12.65	-19.46
180	-13.89	-12.53	-16.63	-8.74	-5.6	1.34	0.69	-5.92	-9.94	-9.32	-11.5	-13.34	-19.46
195	-13.79	-12.6	-16.2	-9.03	-4.94	1.34	0.88	-5.86	-9.29	-8.63	-11.86	-12.7	-19.46
210	-13.69	-12.87	-15.52	-10.76	-4.29	2.22	2.02	-5.79	-8.08	-8.25	-12.07	-12.27	-19.46
225	-13.69	-13.62	-16.71	-10.61	-3.51	3.33	3.16	-6.13	-8.09	-6.99	-10.89	-15.03	-19.46
240	-13.64	-14.32	-17.52	-10.63	-3.46	2.33	2.2	-8.02	-7.5	-7.57	-11.61	-13.93	-19.46
255	-13.51	-14.93	-16.39	-10.21	-2.36	1.55	1.53	-9.45	-6.39	-7.41	-14.11	-17.36	-19.46
270	-13.56	-14.06	-14.12	-10.96	-1.77	3.18	2.84	-8.64	-5.67	-5.77	-12.58	-13.26	-19.46
285	-13.46	-12.03	-12.83	-10.27	-2.45	1.89	0.85	-9.36	-5.49	-7.82	-14.83	-10.24	-19.46
300	-13.46	-10.81	-12.81	-9.09	-3	2.5	1.89	-7.69	-7.15	-6.43	-13.56	-9.74	-19.46
315	-13.31	-10.43	-15.62	-9.1	-3.34	3.53	2.46	-6.91	-6.8	-7.39	-12.91	-9.72	-19.46
330	-13.31	-10.59	-18.91	-9.68	-3.65	2.69	1.05	-6.3	-7.35	-7.23	-10.77	-11.1	-19.46
345	-13.25	-11.15	-17.64	-8.7	-3.7	1.82	0.77	-6.89	-8.63	-8.11	-9.71	-11.28	-19.46