

FCC Composite Gain Test Report

TP-Link Systems Inc.
10 Mauchly, Irvine, CA 926187



Copyright © 2024 By TP-Link Systems Inc. All rights reserved.

The drawings, specifications and the data contained in this document are exclusively the property of TP-Link Systems Inc. The information is intended for internal use only and is subject to change without any notice.

With no written permission from TP-Link Systems Inc. this document, in parts or as a whole, shall not be reproduced, copied, or used in any form or by any means to make any derivatives such as translation, transformation, or adaptation, for any purpose whatever.



is a registered trademark of TP-Link Systems Inc. Other brands and product names mentioned herein are trademarks or registered trademarks of their respective holders.

Warning

This document is intended for internal use only. A Non-Disclosure Agreement (NDA) approved by Chief Technology Officer (CTO) is required to release this document under any circumstances.

Basic Information

EUT Description:	AC1200 Wireless Gigabit Access Point		
Brand Name:	tp-link		
Model Name:	TL-WA1201(US)4.0		
Tested By:	Hui Ru Hui Ru	Date:	2025/09/01

CONTENTS

1	Operation Mode and Antenna Information	5
1.1	EUT Operation Mode	5
1.2	Antenna Information	5
1.3	Test Frequency	5
2	Test System.....	6
2.1	Test Equipment.....	6
2.2	Test Software.....	6
3	Test Summary	7
3.1	Measurement Environment	7
3.2	Measurement Quantity	9
3.3	Test Method	9
3.4	Directional Gain Calculations	10
3.5	Directional Gain ($N_{ss}=N_{ant}$) Calculations	10
3.6	Test Procedure	11
4	Measured Value and Maximum Gain Positions.....	13
4.1	Antenna Number	13
4.2	2G	13
4.2.1	DG_1SS Max Value Position	13
4.2.2	DG_1SS Max Value Position Calculation	13
4.2.3	DG_NSSmax Max Value Position.....	13
4.2.4	DG_NSSmax Max Value Position Calculation	14
4.3	5G	14
4.3.1	DG_1SS Max Value Position	14
4.3.2	DG_1SS Max Value Position Calculation	14
4.3.3	DG_NSSmax Max Value Position.....	15
4.3.4	DG_NSSmax Max Value Position Calculation	15
5	Test and Calculate Result	15
5.1	Peak Antenna Gain (Single)	15
5.2	DG_1SS Calculate Result	15
5.3	DG_NSSmax Calculate Result.....	16
6	Test Pattern	17
6.1	Antenna Pattern	17

7	Test Pattern.....	18
7.1	DG_1SS Test Data.....	18
7.2	DG_NSSmax Test Data.....	26

1 Operation Mode and Antenna Information

1.1 EUT Operation Mode

The TL-WA1201 is the Dual-band wireless router of 4 external antennas, of which 2 were 2.4G antennas and 2 were 5G antennas.

1.2 Antenna Information

The Antennas are external , the Locations of Antennas are shown below:



Figure 1-1 Locations of Antennas

The Antenna Information was shown below:

Table 1-1 Antenna Information

Antenna Position	Antenna Type	Connector	Mode of operation
Ant1	Dipole	weld	2.4G
Ant2	Dipole	weld	2.4G
Ant3	Dipole	weld	5G
Ant4	Dipole	weld	5G

1.3 Test Frequency

Test frequency bands are shown in *Table 1-2*.

Table 1-2 Test Frequency

Frequency Band(MHz)
2400-2500
5150-5250
5250-5350

5470-5725
5725-5850

2 Test System

2.1 Test Equipment

Table 2-1 Test System

Equipment	Model	Manufacturer	S/N	Cali. Interval	Cali. Due Date
Chamber	Rayzone2800	GTS	MY53470435	12months	2026/04/15
Vector Network Analyzer	E5071C	Keysight	MY46315238	24months	2026/05/27

2.2 Test Software

Table 2-2 Test Software

Software	Version	Function
GTS MaxSign100	V2.1	Passive Antenna Measurements

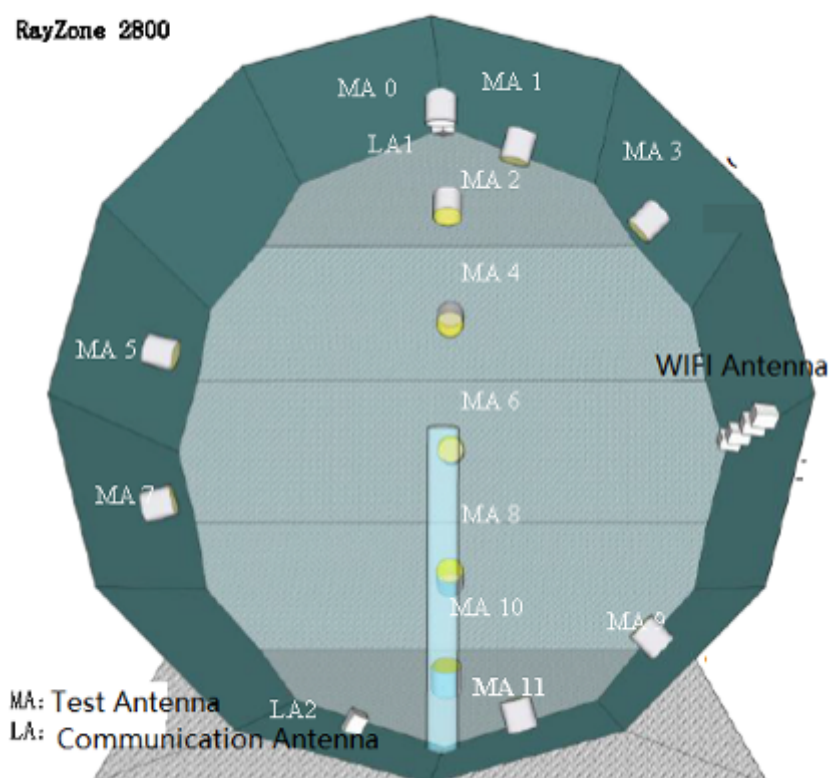


Figure 3-2 Antenna anechoic chamber for near-field measurement

During the measurement, the probe antennas were rotated in the θ direction under the control of the probe holder to sample the near-field data at the θ angle. At the same time, the EUT rotated with the turntable in the ϕ direction to sample the near field data at the ϕ angle. The system diagram was shown in Figure 3-3. From the sampling results, the EUT's near-field test data of θ component, ϕ component and total component could be obtained.

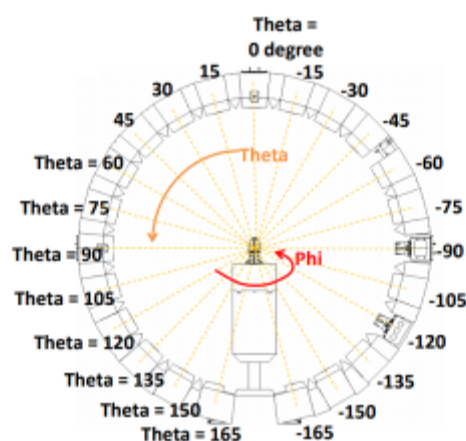


Figure 3-3 System diagram

Before the measurement, calibrated the vector network analyzer, and then connected the input end of each antenna to the output end of the vector network analyzer, and evenly the antennas to be measured. The Calibration information was shown in table 2-1.

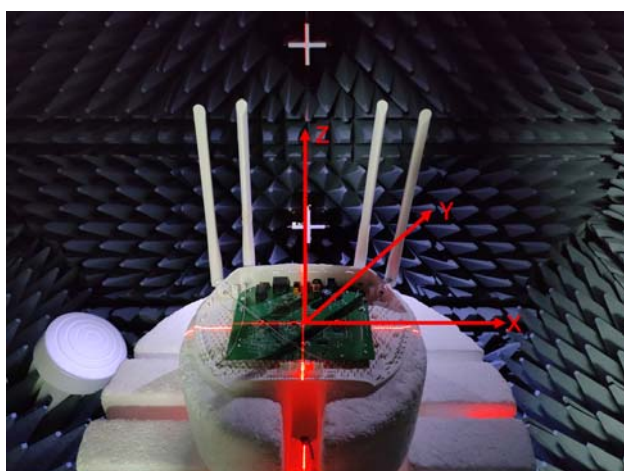


Figure 3-4 Antennas measurement diagram

Table 3-1 Calibration information

Measurement Class	Standard
Cal Type	2p/1-2
Cal Kit	N4691B

3.2 Measurement Quantity

In this measurement experiment, the Directional Gain was measured at a certain frequency interval within the whole frequency range. The measurement frequency interval of the 2.4G antennas was 10MHz, while the 5GL and 5GU and 6G antennas was 50MHz.

3.3 Test Method

During the measurement, the probe antennas were rotated in the θ direction under the control of the probe holder to sample the near-field data at the θ angle. At the same time, the EUT rotated with the turntable in the ϕ direction to sample the near field data at the ϕ angle. The sampling accuracy was 15° . The system diagram was shown in Figure 2-6. From the sampling results, the EUT's near-field test data of θ component, ϕ component and total component could be obtained.

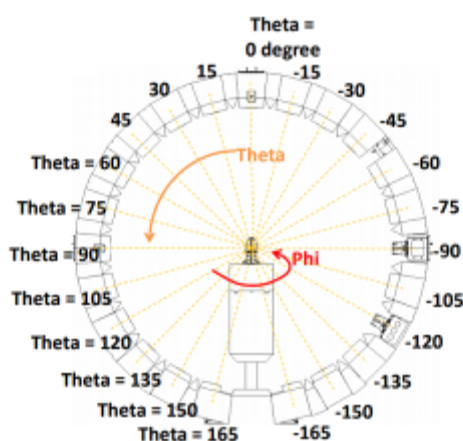


Figure 3-5 Test angle

3.4 Directional Gain Calculations

Multiple antennas system, each of which has one of two (or three) polarizations that are orthogonal to one another (i.e., cross polarized), The total gain—including array gain—is computed separately for each of the two (or three) polarizations using the procedures presented in this document. The highest of the total gains shall apply.

Theoretical Directional Gain represented the theoretical value calculated by formula 2-1. As we all know, the effect of array gain must be included in the calculation of overall directional antenna gain for devices that transmit on multiple outputs simultaneously in the same band, in the same or in overlapping frequency ranges. Therefore, in formula 2-1, the directional gain calculation needs to include all directions and all Frequencies and all Polarizations, and then take the maximum value as the final directional gain value. Therefore, the calculation formula of theoretical directional gain value can be modified as formula 2-2

$$\text{Directional Gain} = 10 \log \left[\frac{\sum_{j=1}^{N_{SS}} \left(\sum_{k=1}^{N_{ANT}} g_{j,k} \right)^2}{N_{ANT}} \right] \quad (2-1)$$

Where

N_{SS} = the number of independent spatial streams of data; $N_{SS} = 1$.

N_{ANT} = the total number of antennas: $N_{ANT} = 4$ for 2.4G & 5G antennas

$g_{j,k} = 10^{G_k/20}$ if the kth antenna is being fed by spatial stream j, or zero if it is not;

G_k is the gain in dBi of the kth antenna .

$$\text{Directional Gain} = \text{Maximum} \left[10 \log \left[\frac{\sum_{j=1}^{N_{SS}} \left(\sum_{k=1}^{N_{ANT}} g_{j,k} \right)^2}{N_{ANT}} \right] \right] \quad (2-2)$$

Maximum function is the max directional gain overall directions and all frequency all polarizations.

3.5 Directional Gain ($N_{SS}=N_{ant}$) Calculations

Multiple antennas system, each of which has one of two (or three) polarizations that are orthogonal to one another (i.e., cross polarized), The total gain—including array gain—is computed separately for each of the two (or three) polarizations using the procedures presented in this document. The highest of the total gains shall apply.

Theoretical Directional Gain represented the theoretical value calculated by formula 2-1. As we all know, the effect of array gain must be included in the calculation of overall directional antenna gain for devices that transmit on multiple outputs simultaneously in the same band, in the same or in overlapping frequency ranges. Therefore, in formula 2-1, the directional gain calculation needs to include all directions and all Frequencies and all Polarizations, and then take the maximum value as the final directional gain value. Therefore, the calculation formula of theoretical combined gain value can be modified as formula 2-2

$$\text{Directional Gain} = 10\log \left[\frac{\sum_{j=1}^{N_{ANT}} g_{j,k}}{N_{ANT}} \right] \quad (2-3)$$

Where

Nss = the number of independent spatial streams of data; NSS =Nant.

Nant = the total number of antennas: NANT =4 for 2.4G & 5G & 6G antennas

$$g_{j,k} = 10^{G_k/10} \quad \text{if the } k\text{th antenna is being fed by spatial stream } j, \text{ or zero if it is not;}$$

G_k is the gain in dBi of the kth antenna .

$$\text{Directional Gain} = \text{Maximum} \left[10\log \left[\frac{\sum_{j=1}^{N_{ANT}} g_{j,k}}{N_{ANT}} \right] \right] \quad (2-4)$$

Maximum function is the max directional gain overall directions and all frequency all polarizations.

3.6 Test Procedure

The calculation method of DG (Directional Gain) in this scheme is summarized as follows:

- 1) The antenna anechoic chamber is used to measure the gain of each antenna, the gain of each antenna at this angle is taken every 15° to calculate the Directional Gain;
- 2) Use formula below to calculate and the DG_Nss=1 of the system at this angle is obtained

$$\text{Directional Gain} = 10\log \left[\frac{\sum_{j=1}^{N_{ANT}} g_{j,k}}{N_{ANT}} \right] \quad (2-5)$$

- 3) Use formula below to calculate and the DG_Nssmax of the system at this angle is obtained

$$\text{Directional Gain} = 10\log \left[\frac{\sum_{j=1}^{N_{ANT}} g_{j,k}}{N_{ANT}} \right] \quad (2-6)$$

- 4) For each frequency point, the Directional Gain value under 24 different angles can be obtained, and finally the maximum value is taken as the system Directional Gain value.

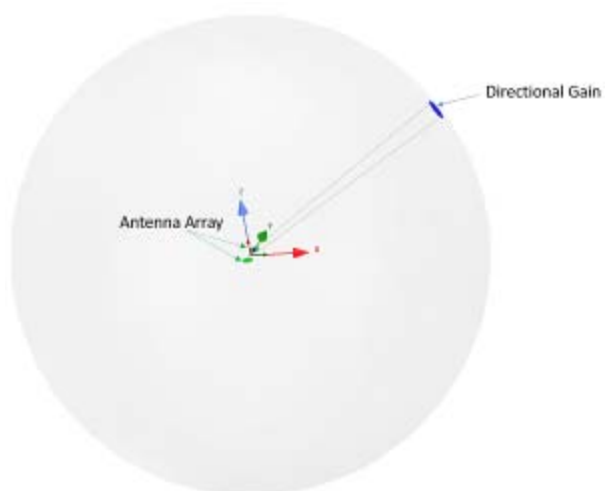


Figure 3-6 Directional Gain Calculation Sketch Map

4 Measured Value and Maximum Gain Positions

4.1 Antenna Number

The Antennas number for measured in the following section was shown below:

Table 4-1 Antennas number

Antenna Number	Antenna Position	
	2G	5G
Ant1	Ant1	Ant3
Ant2	Ant2	Ant4

4.2 2G

4.2.1 DG_1SS Max Value Position

Table 4-2 DG_1SS Max Value Position

Frequency(GHz)	2.40~2.50
Ant1(dBi)	4.79
Ant2(dBi)	0.34
Polarization	Theta
Φ (°)	135
θ (°)	90

4.2.2 DG_1SS Max Value Position Calculation

Table 4-3 DG_1SS Max Value Position Calculation

Frequency(GHz)	2.40~2.50
Ant1[$10^{(G/20)}$]	$10^{(4.79/20)}$
Ant2[$10^{(G/20)}$]	$10^{(0.34/20)}$
Ant1[$10^{(G/20)}$] value	1.736
Ant2[$10^{(G/20)}$] value	1.04
Sum of Ants Value(Antmax)	2.776
DG[$10 * \log(\text{Antmax}^2 / N_{\text{ant}})$] (dBi)	5.86

4.2.3 DG_NSSmax Max Value Position

Table 4-4 DG_NSSmax Max Value Position

Frequency(GHz)	2.40~2.50
Ant1(dBi)	4.87

Ant2(dBi)	0.13
Polarization	Theta
Φ (°)	135
θ (°)	90

4.2.4 DG_NSSmax Max Value Position Calculation

Table 4-5 DG_NSSmax Max Value Position Calculation

Frequency(GHz)	2.40~2.50
Ant1[10^{^(G/10)}]	10 ^{^(4.87/10)}
Ant2[10^{^(G/10)}]	10 ^{^(0.13/10)}
Ant1[10^{^(G/10)}] value	3.069
Ant2[10^{^(G/10)}] value	1.03
Sum of Ants Value(Antmax)	4.099
DG[10*Log₁₀(Antmax/Nant)] (dBi)	3.12

4.3 5G

4.3.1 DG_1SS Max Value Position

Table 4-6 DG_1SS Max Value Position

Frequency(GHz)	5.15~5.25	5.25~5.35	5.47~5.725	5.725~5.85
Ant1(dBi)	4.78	4.05	4.14	4.48
Ant2(dBi)	2.99	3.88	4.98	4.49
Polarization	Theta	Theta	Theta	Theta
Φ (°)	135	135	45	45
θ (°)	90	90	90	90

4.3.2 DG_1SS Max Value Position Calculation

Table 4-7 DG_1SS Max Value Position Calculation

Frequency(GHz)	5.15~5.25	5.25~5.35	5.47~5.725	5.725~5.85
Ant1[10^{^(G/20)}]	10 ^{^(4.78/20)}	10 ^{^(4.05/20)}	10 ^{^(4.14/20)}	10 ^{^(4.48/20)}
Ant2[10^{^(G/20)}]	10 ^{^(2.99/20)}	10 ^{^(3.88/20)}	10 ^{^(4.98/20)}	10 ^{^(4.49/20)}
Ant1[10^{^(G/20)}] value	1.734	1.594	1.611	1.675
Ant2[10^{^(G/20)}] value	1.411	1.563	1.774	1.677
Sum of Ants Value(Antmax)	3.145	3.157	3.385	3.352
DG[10*Log(Antmax²/Nant)] (dBi)	6.94	6.98	7.58	7.5

4.3.3 DG_NSSmax Max Value Position

Table 4-8 DG_NSSmax Max Value Position

Frequency(GHz)	5.15~5.25	5.25~5.35	5.47~5.725	5.725~5.85
Ant1(dBi)	4.78	5.3	4.14	4.48
Ant2(dBi)	2.99	2.29	4.98	4.49
Polarization	Theta	Theta	Theta	Theta
Φ (°)	135	120	45	45
θ (°)	90	90	90	90

4.3.4 DG_NSSmax Max Value Position Calculation

Table 4-9 DG_NSSmax Max Value Position Calculation

Frequency(GHz)	5.15~5.25	5.25~5.35	5.47~5.725	5.725~5.85
Ant1[10^(G/10)]	$10^{(4.78/10)}$	$10^{(5.30/10)}$	$10^{(4.14/10)}$	$10^{(4.48/10)}$
Ant2[10^(G/10)]	$10^{(2.99/10)}$	$10^{(2.29/10)}$	$10^{(4.98/10)}$	$10^{(4.49/10)}$
Ant1[10^(G/10)] value	3.006	3.388	2.594	2.805
Ant2[10^(G/10)] value	1.991	1.694	3.148	2.812
Sum of Ants Value(Antmax)	4.997	5.083	5.742	5.617
DG[10*Log ₁₀ (Antmax/Nant)] (dBi)	3.98	4.05	4.58	4.49

5 Test and Calculate Result

5.1 Peak Antenna Gain (Single)

Table 5-1 Antenna Test Result

Frequency Band(MHz)	Ant1	Ant2
2400-2500	6.79	5.22
5150-5250	6.82	6.86
5250-5350	6.43	6.17
5470-5725	7.07	7.31
5725-5850	7.15	7.19

5.2 DG_1SS Calculate Result

Table 5-2 Test & Calculate Result

Frequency Band(MHz)	Max Combined Gain	Polarization/ Φ (°) / θ (°)
2400-2500	5.86dBi	Theta/135/90

5150-5250	6.94dBi	Theta/135/90
5250-5350	6.98dBi	Theta/135/90
5470-5725	7.58dBi	Theta/45/90
5725-5925	7.50dBi	Theta/45/90


5.3 DG_NSSmax Calculate Result


Table 5-3Test & Calculate Result

Frequency Band(MHz)	Max Combined Gain	Polarization/ Φ (°) / θ (°)
2400-2450	3.12dBi	Theta/135/90
5150-5250	3.98dBi	Theta/135/90
5250-5350	4.05dBi	Theta/120/90
5470-5725	4.58dBi	Theta/45/90
5725-5925	4.49dBi	Theta/45/90


6 Test Pattern

6.1 Antenna Pattern

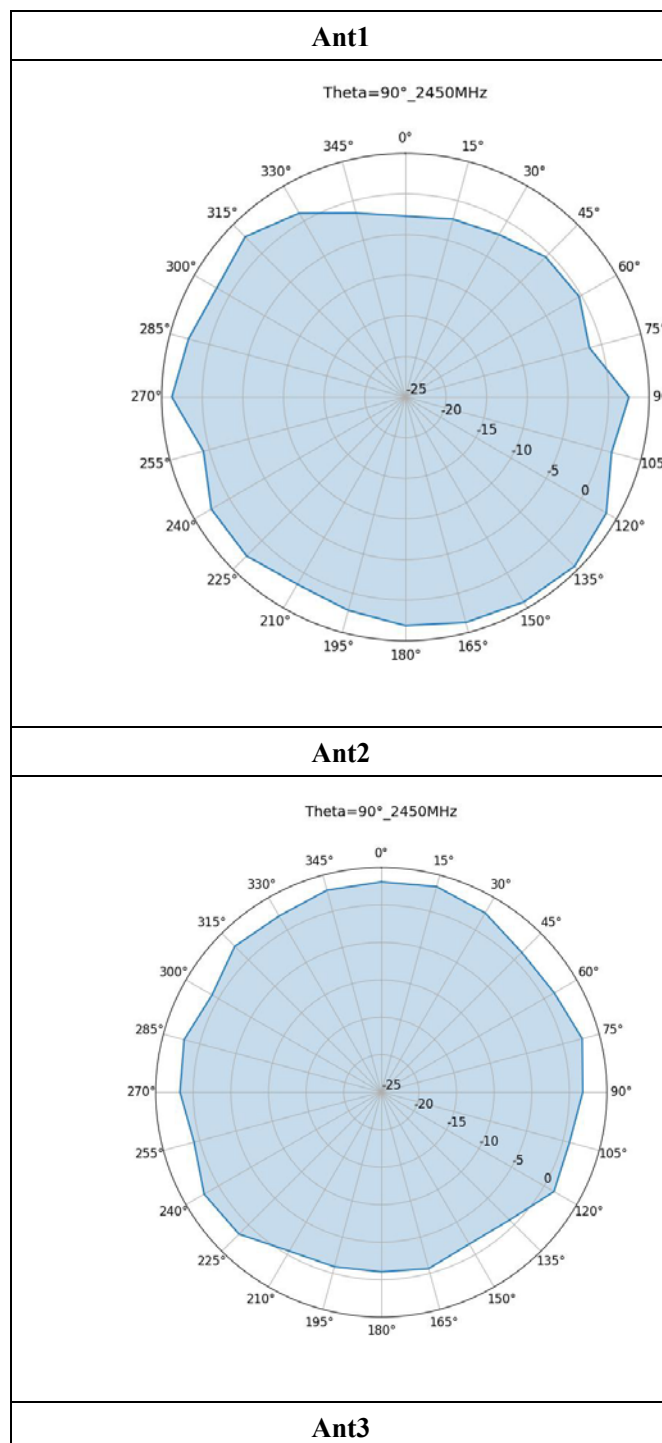

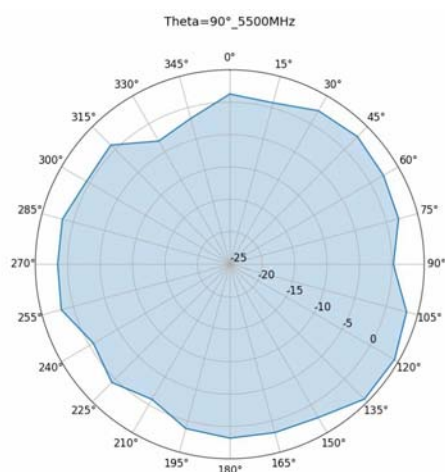

Ant4

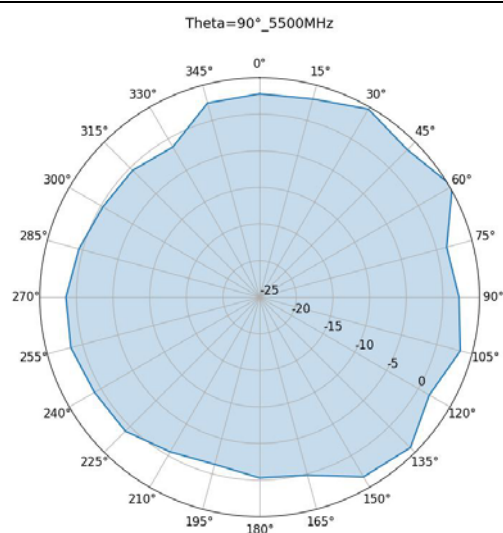

7 Test Pattern

7.1 DG_1SS Test Data

Ant1													
Freq	2400												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.87	-12.33	-13	-10.7	-16.68	-5.65	-3.79	-4.34	-8.41	-10.92	-12.53	-18.17	-19.84
15	-19.82	-11.75	-10.74	-8.15	-15.19	-5.43	-2.74	-5.68	-9.32	-7.63	-10.76	-18.55	-19.84
30	-21.02	-12.02	-9.33	-8.12	-12.74	-6.31	-3.72	-5.81	-9.3	-8.24	-11.56	-17.96	-19.84
45	-20.86	-12.17	-9.2	-9.29	-10.55	-4.33	-1.63	-3.78	-12.33	-9.25	-12.07	-17.39	-19.84
60	-20.17	-12.26	-9.25	-10.66	-9.68	-1.55	-0.12	-2.04	-7.36	-6.88	-11.29	-18.35	-19.84
75	-20.45	-12.81	-9.25	-9.51	-12.15	-2.89	-2.69	-4.85	-10.11	-7.35	-11.81	-19.79	-19.84
90	-20.18	-13.61	-9.69	-8.42	-17.77	0.1	1.99	-2.77	-8.63	-7.3	-13.21	-18	-19.84

105	-19.75	-13.64	-10.37	-8.28	-16.94	-1.84	1.64	-1.45	-6.6	-6.45	-13.72	-15.25	-19.84
120	-19.31	-12.88	-10.74	-6.89	-14.8	-1.06	3.43	-0.12	-8.29	-9.01	-16.63	-13.25	-19.84
135	-19.45	-12.57	-10.5	-5.4	-17.72	0.94	4.79	2.12	-5.29	-6.39	-17.5	-12.64	-19.84
150	-20.01	-13.07	-9.46	-4.32	-12.67	-1.17	3.99	1.84	-5.18	-5.52	-15.07	-13.58	-19.84
165	-20.6	-13.61	-8.81	-3.87	-9.34	-3.56	3.33	1.34	-7.31	-5.9	-11.96	-13.64	-19.84
180	-20.21	-14.2	-9.31	-4.85	-9.64	-4.05	3.02	0.45	-9.77	-5.93	-10.18	-13.68	-19.84
195	-19.41	-14.43	-9.69	-6.05	-12.16	-3.82	1.96	0.14	-9.89	-8.77	-12.45	-15.03	-19.84
210	-18.46	-14.69	-9.63	-6.45	-13.22	-1.95	2.79	1.38	-6.51	-8.91	-14.07	-17.33	-19.84
225	-18.29	-15.24	-9.79	-7.3	-15.45	-1.16	3.58	1.96	-6.84	-8.37	-13.44	-16.77	-19.84
240	-19.28	-15.96	-10.76	-8.35	-14.53	-4.28	1.52	-0.76	-11.89	-10.55	-12.46	-14.15	-19.84
255	-19.55	-16.59	-12.81	-7.75	-12.12	-3.03	1.72	-1.81	-16.51	-14.47	-10.24	-11.84	-19.84
270	-18.89	-16.95	-15.84	-7.09	-11.48	0.29	3.73	0.05	-14.22	-13.19	-8.85	-10.76	-19.84
285	-19.47	-17.12	-16.11	-7.5	-11.46	-1.8	1.64	-2.53	-16.18	-12.49	-9.78	-10.84	-19.84
300	-19.81	-16.36	-14.91	-7.76	-11.72	-1.06	2.06	-1.63	-11.89	-13.82	-13.14	-12.31	-19.84
315	-19.33	-15.26	-14.18	-8.44	-15.72	-1	2.16	0.47	-6.52	-10.39	-16.98	-15.47	-19.84
330	-19.41	-14.42	-14.17	-10	-17.15	-3.81	-0.8	-1.18	-6	-11.04	-18.16	-19.27	-19.84
345	-19.43	-13.5	-14.29	-11.88	-21.72	-5.91	-3.41	-3.28	-7.87	-16.34	-18.37	-19.84	-19.84

Ant2													
Freq	2450												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-15.12	-18.03	-9.47	-5.75	-10.51	-3.75	3.22	1.05	-6.97	-7.32	-7.18	-8.56	-18.92
15	-14.75	-17.62	-10.18	-5.8	-9.61	-4.41	3.22	1.43	-5.94	-6.08	-6.4	-8.96	-18.92
30	-14.88	-17.22	-11.27	-6.43	-12.08	-5	2.4	1.63	-4.63	-5.76	-7.5	-9.29	-18.92
45	-14.89	-16.94	-11.44	-6.29	-15.29	-4.07	1.74	0.61	-5.56	-6.66	-9.03	-9.36	-18.92
60	-14.96	-16.25	-10.61	-6.32	-16.87	-1.93	2.28	-1.29	-7.82	-7.1	-9.6	-10.47	-18.92
75	-15.19	-15.73	-10.51	-8.36	-14.63	-0.38	2.27	-2.8	-9.59	-6.05	-8.83	-12.59	-18.92
90	-14.89	-15.91	-11.82	-9.89	-16.05	-1.22	1.51	-2.33	-10.3	-6.65	-9	-13.65	-18.92
105	-14.33	-16	-13.61	-10.5	-20.38	-1.84	2.05	-1.98	-10.37	-8.78	-11.21	-14.27	-18.92
120	-14.22	-16.01	-13.78	-11.6	-14.85	-1.25	0.91	-3.12	-10.25	-10.74	-13.54	-16.59	-18.92
135	-14.67	-16.13	-12.02	-10.87	-13.45	-3.06	0.34	-2.94	-10.85	-16.18	-11.84	-15.08	-18.92
150	-14.93	-16.06	-11.6	-10.89	-15.27	-3.85	-0.04	-2.8	-11.97	-17.73	-10.74	-11.56	-18.92
165	-15.13	-16.09	-11.4	-10.67	-27.31	-3.97	0.16	-2.1	-8.29	-12.68	-11.98	-10.09	-18.92
180	-15.23	-16.73	-11.11	-9.76	-17.23	-3.4	0.1	-1.18	-7.83	-9.47	-14.72	-9.84	-18.92
195	-15.29	-17.54	-11.57	-9.47	-15.92	-3.43	0.03	-1.59	-7.87	-7.7	-15.39	-10.19	-18.92
210	-15.5	-18.44	-12.72	-9.63	-14.41	-2.12	-0.15	-1.79	-7.58	-9.62	-18.4	-10.22	-18.92
225	-16.14	-18.65	-13.63	-8.89	-12.09	-1.1	0.88	-2.7	-11.39	-12.06	-15.15	-10.33	-18.92
240	-16.23	-16.99	-13.89	-8.34	-12.53	-1.46	1.25	-3.38	-9.78	-11.44	-15.48	-11.9	-18.92
255	-15.84	-15.54	-15.36	-7.76	-13.41	-1.5	1.17	-1.19	-5.4	-10.96	-19.65	-17.47	-18.92
270	-15.49	-14.89	-18.39	-6.77	-11.29	-0.51	1.17	-1.22	-7.69	-14.65	-21.08	-18.92	-18.92
285	-15.82	-14.28	-15.83	-6.76	-10.54	-2.62	1.94	-0.66	-10.78	-16.79	-15.12	-12.69	-18.92
300	-16.42	-13.98	-13.26	-6.7	-12.77	-5.72	2.01	0.3	-8.74	-18.45	-13.66	-9.87	-18.92

315	-16.45	-14.86	-11.62	-8.1	-14.29	-4.28	2.02	0.67	-11.24	-13.28	-12.45	-8.46	-18.92
330	-16.27	-16.35	-10.15	-7.71	-14.37	-5.76	1.8	0.99	-8.49	-10.66	-10.34	-8.02	-18.92
345	-15.91	-17.58	-9.45	-6.41	-15.16	-5.26	2.1	0.71	-8.96	-8.94	-9.05	-8.15	-18.92

2400MHz Composite Gain													
Freq	2400												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-13.78	-11.71	-8.05	-4.87	-10.05	-1.64	3.41	1.78	-4.65	-5.92	-6.44	-9.09	-16.36
15	-13.91	-11.19	-7.45	-3.89	-8.95	-1.89	3.75	1.59	-4.46	-3.81	-5.3	-9.48	-16.36
30	-14.41	-11.23	-7.24	-4.22	-9.39	-2.62	2.88	1.69	-3.64	-3.9	-6.28	-9.58	-16.36
45	-14.36	-11.22	-7.24	-4.65	-9.59	-1.19	3.23	1.7	-5.29	-4.85	-7.41	-9.47	-16.36
60	-14.17	-11.02	-6.89	-5.21	-9.54	1.27	4.17	1.35	-4.58	-3.98	-7.39	-10.54	-16.36
75	-14.42	-11.14	-6.85	-5.91	-10.29	1.47	3.15	-0.75	-6.84	-3.67	-7.18	-12.45	-16.36
90	-14.13	-11.67	-7.68	-6.11	-13.86	2.48	4.76	0.46	-6.41	-3.96	-7.84	-12.55	-16.36
105	-13.61	-11.73	-8.83	-6.31	-15.48	1.17	4.86	1.3	-5.27	-4.53	-9.36	-11.74	-16.36
120	-13.39	-11.29	-9.12	-5.92	-11.81	1.86	5.27	1.52	-6.2	-6.82	-11.94	-11.75	-16.36
135	-13.72	-11.16	-8.22	-4.7	-12.31	2.18	5.86	2.96	-4.62	-6.96	-11.21	-10.76	-16.36
150	-14.09	-11.43	-7.45	-3.99	-10.86	0.6	5.22	2.84	-4.92	-6.63	-9.63	-9.5	-16.36
165	-14.43	-11.75	-7	-3.61	-11.32	-0.75	4.9	2.8	-4.78	-5.63	-8.96	-8.67	-16.36
180	-14.36	-12.36	-7.15	-3.95	-9.62	-0.71	4.69	2.68	-5.74	-4.51	-9.15	-8.54	-16.36
195	-14.1	-12.84	-7.57	-4.58	-10.83	-0.61	4.06	2.33	-5.81	-5.21	-10.79	-9.27	-16.36
210	-13.84	-13.35	-8.03	-4.88	-10.78	0.98	4.45	2.95	-4.02	-6.25	-12.96	-10.06	-16.36
225	-14.14	-13.77	-8.49	-5.05	-10.6	1.88	5.34	2.95	-5.81	-7.01	-11.24	-9.96	-16.36
240	-14.61	-13.45	-9.17	-5.33	-10.46	0.25	4.4	1.04	-7.76	-7.97	-10.83	-9.94	-16.36
255	-14.49	-13.04	-10.98	-4.74	-9.73	0.78	4.46	1.52	-6.28	-9.53	-10.72	-11.2	-16.36
270	-14.01	-12.85	-14.01	-3.92	-8.37	2.91	5.55	2.45	-7.34	-10.88	-9.96	-10.9	-16.36
285	-14.44	-12.57	-12.96	-4.11	-7.98	0.81	4.8	1.47	-10.06	-11.37	-9.04	-8.71	-16.36
300	-14.94	-12.08	-11.04	-4.2	-9.22	-0.07	5.05	2.4	-7.16	-12.82	-10.39	-7.99	-16.36
315	-14.76	-12.05	-9.8	-5.26	-11.97	0.52	5.1	3.58	-5.55	-8.71	-11.41	-8.27	-16.36
330	-14.69	-12.32	-8.92	-5.77	-12.64	-1.72	3.61	2.98	-4.15	-7.84	-10.39	-8.93	-16.36
345	-14.48	-12.29	-8.53	-5.71	-14.82	-2.57	2.79	1.95	-5.39	-8.86	-9.51	-9.15	-16.36

Ant3													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-17.07	-16.45	-14.43	-15.79	-12.09	-5.16	-0.65	-2.19	-6.51	-8.68	-10.71	-10.47	-22.71
15	-16.67	-15.44	-12.83	-13.51	-11.13	-1.7	0.02	-2.06	-9.84	-12.97	-10.73	-10.88	-22.71
30	-16.96	-13.69	-12.47	-7.43	-12.21	-6.87	1.73	-1.17	-5.56	-10.74	-11.73	-15.15	-22.71
45	-16.89	-12.41	-12.24	-6.37	-15.9	-3.35	2.91	1.98	-7.42	-14.85	-10.44	-12.09	-22.71
60	-17.23	-10.91	-9.47	-7.55	-12.87	-2.84	1.71	-0.66	-8.49	-12.06	-15.43	-10.13	-22.71
75	-17.9	-11.34	-11.24	-8	-12.98	-3	2.68	1.03	-8.97	-11.06	-12.08	-12.8	-22.71
90	-16.79	-13.9	-7.86	-5.94	-9.57	-5.6	0.1	-0.9	-5.69	-10.07	-12.87	-16.38	-22.71

105	-15.82	-16.36	-10.09	-6.46	-6.15	-5.88	3.35	4.53	-3.47	-6.63	-11.26	-15.57	-22.71
120	-15.58	-16.7	-12.16	-5.54	-7.77	-6.19	4.18	3.64	-6.79	-6.98	-14.28	-11.59	-22.71
135	-14.88	-16.01	-15.37	-4.85	-4.76	-7.54	4.78	3.76	-5.11	-6.42	-13.49	-8.92	-22.71
150	-15.16	-15.47	-21.75	-6.37	-6.66	-8.83	2.44	-0.02	-10.3	-12.11	-11.09	-8.35	-22.71
165	-15.59	-15.82	-15.96	-8.05	-7.43	-10.39	2.27	0.32	-11.48	-13.9	-11.35	-9.51	-22.71
180	-14.85	-16.37	-14.99	-7.03	-7.4	-10.73	1.29	0.06	-7.9	-16.63	-14.49	-8.64	-22.71
195	-14.68	-17.74	-17.74	-7.5	-7.68	-14.16	-1.13	0.15	-4.37	-8.61	-18.21	-10.39	-22.71
210	-14.84	-19.94	-18.44	-7.51	-6.47	-14.51	-1.06	0.55	-4.16	-10.46	-12.69	-15.89	-22.71
225	-14.83	-20.57	-16.57	-6.4	-7.1	-7.24	0.23	1.65	-6.15	-12	-8.58	-15.2	-22.71
240	-15.31	-23.45	-18.3	-9.17	-7.36	-11.41	-1.99	-1.27	-6.94	-13.98	-8.93	-14.01	-22.71
255	-15.38	-18.59	-13.1	-6.1	-9.55	-6.58	0.91	1.27	-6.33	-20.69	-20.56	-16.18	-22.71
270	-15.03	-15.01	-16.36	-3.16	-9.25	-6.37	-0.05	-1.42	-3.95	-8.99	-12.72	-22.71	-22.71
285	-15.33	-13.87	-20.36	-1.94	-10.67	-6.82	1.32	2.67	-2.79	-17.09	-17.95	-18.52	-22.71
300	-15.98	-13.64	-14.34	-1.4	-8.49	-8.7	-0.26	-2.78	-3.47	-8.52	-9	-15.25	-22.71
315	-16.82	-13.33	-10.79	-2.15	-8.04	-8.16	0.11	0.9	-0.85	-7.07	-8.37	-12.97	-22.71
330	-17.47	-13.93	-9.67	-3.78	-5.68	-5.06	-1.94	-1.54	-1.83	-10.12	-5.6	-10.79	-22.71
345	-17.54	-14.98	-10.48	-8.65	-7.2	-5.5	-3.53	-4.4	-5.01	-7.93	-6.99	-9.91	-22.71

Ant4													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.93	-17.25	-14.99	-12.37	-7.39	-12.13	0.31	1.48	-4.26	-8.13	-9.29	-8.92	-17.09
15	-19.63	-20.3	-17.35	-10.46	-11.44	-8.56	1.56	1.52	-5.21	-6.73	-8.61	-8.5	-17.09
30	-19.45	-21.86	-12.89	-7.28	-8.94	-5.59	2.87	2.38	-6.32	-7.66	-8.93	-10.29	-17.09
45	-18.81	-19.48	-10.25	-5.52	-6.31	-8.31	3.81	4.33	-2.25	-5.08	-9.19	-10.69	-17.09
60	-17.88	-17.72	-10.56	-4.54	-7.52	-9.23	3.55	4.85	-4.31	-4.62	-9.01	-12.43	-17.09
75	-17.27	-15.1	-12.93	-6.35	-7.54	-7.06	1.52	3.33	-3.82	-5.25	-10.04	-17.09	-17.09
90	-17.95	-14.11	-12.59	-7.49	-8.94	-5.72	0.07	-0.71	-6.52	-9.32	-9.97	-16.98	-17.09
105	-17.86	-14.07	-15.52	-8.47	-9.08	-4.49	3.41	1.51	-7.98	-13.46	-11.7	-11.78	-17.09
120	-18.31	-15.17	-11.8	-6.23	-10.21	-4.82	3.02	2.09	-6.52	-14.68	-19.02	-10.28	-17.09
135	-18.27	-15.82	-13.45	-5.4	-9.01	-6.09	2.99	2.32	-8.59	-11.98	-11.77	-11.37	-17.09
150	-18.27	-16.3	-14.26	-6.9	-11.44	-6.24	3.21	2.03	-6.22	-23.63	-13.67	-14.25	-17.09
165	-18.69	-15.8	-13.65	-8.82	-10.16	-2.57	1.56	0.22	-6.6	-16.47	-13.16	-10.7	-17.09
180	-18.27	-14.02	-14.23	-10.05	-8.83	-3.99	1.23	1.49	-5.72	-14.09	-17.67	-9.59	-17.09
195	-17.78	-13.49	-11.17	-9.39	-7.35	-5.21	-0.26	0.56	-5.19	-10.17	-14.06	-10.99	-17.09
210	-18.2	-14.31	-11.28	-3.56	-7.44	-6.37	-2	-1.62	-3.77	-10.81	-7.99	-11.95	-17.09
225	-18.53	-16.13	-12.26	-0.31	-7.68	-7.64	-0.98	0.16	-2.65	-7.67	-5.72	-13.63	-17.09
240	-19.38	-19.53	-14.54	-0.03	-12.11	-11.85	0.43	-1.88	-2.89	-12.11	-10.23	-13.83	-17.09
255	-20.07	-25.69	-19.05	-0.92	-8.08	-8.78	0.26	2.14	-1.77	-14.33	-10.17	-14.61	-17.09
270	-19.33	-24.5	-17.06	-1.92	-13.54	-6.18	1.13	1	-3.69	-15.58	-7.9	-13.05	-17.09
285	-19.52	-22.05	-12.22	-4.39	-15.77	-6.36	-0.15	1.74	-4.12	-10.37	-9.93	-13.48	-17.09
300	-19.3	-21.07	-17.17	-4.18	-9.33	-6.51	-1.95	0.67	-5.75	-10.86	-10.82	-13.15	-17.09

315	-19.1	-17.7	-16.41	-6.05	-10.25	-5.6	-2.27	2.37	-4.91	-10.47	-9.45	-16.36	-17.09
330	-18.87	-15.58	-16.36	-7.6	-7.56	-7.01	-0.6	1.37	-2.91	-15.22	-15.39	-13.22	-17.09
345	-18.22	-15.62	-15.06	-8.62	-4.82	-10.06	0.1	1.15	-5.14	-10.47	-8.37	-10.86	-17.09

5250MHz Composite Gain													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-14.94	-13.83	-11.7	-10.9	-6.42	-4.95	2.85	2.85	-2.3	-5.39	-6.96	-6.65	-16.44
15	-15.01	-14.52	-11.79	-8.84	-8.27	-1.46	3.83	2.92	-4.21	-6.29	-6.6	-6.6	-16.44
30	-15.11	-13.84	-9.67	-4.34	-7.41	-3.2	5.33	3.8	-2.92	-6.05	-7.21	-9.37	-16.44
45	-14.79	-12.23	-8.18	-2.92	-6.83	-2.47	6.38	6.24	-1.45	-5.65	-6.78	-8.35	-16.44
60	-14.54	-10.65	-6.99	-2.9	-6.78	-2.45	5.69	5.54	-3.14	-4.56	-8.63	-8.19	-16.44
75	-14.57	-10.01	-9.03	-4.13	-6.83	-1.78	5.13	5.27	-3.01	-4.67	-7.99	-11.67	-16.44
90	-14.34	-10.99	-6.9	-3.67	-6.24	-2.65	3.1	2.21	-3.08	-6.68	-8.29	-13.66	-16.44
105	-13.77	-12.13	-9.38	-4.4	-4.48	-2.15	6.39	6.16	-2.43	-6.38	-8.47	-10.46	-16.44
120	-13.83	-12.89	-8.97	-2.87	-5.89	-2.47	6.63	5.91	-3.64	-6.99	-13.32	-7.9	-16.44
135	-13.4	-12.9	-11.35	-2.11	-3.62	-3.77	6.94	6.08	-3.67	-5.75	-9.58	-7.05	-16.44
150	-13.57	-12.86	-14.21	-3.62	-5.71	-4.43	5.84	4.08	-5.01	-13.08	-9.27	-7.8	-16.44
165	-13.99	-12.8	-11.72	-5.42	-5.68	-2.62	4.93	3.28	-5.69	-12.08	-9.2	-7.07	-16.44
180	-13.38	-12.11	-11.59	-5.4	-5.08	-3.71	4.27	3.81	-3.73	-12.26	-12.92	-6.09	-16.44
195	-13.08	-12.35	-10.84	-5.38	-4.5	-5.57	2.33	3.37	-1.76	-6.34	-12.88	-7.67	-16.44
210	-13.35	-13.67	-11.13	-2.3	-3.93	-6.51	1.49	2.54	-0.95	-7.62	-7.02	-10.69	-16.44
225	-13.47	-15.06	-11.14	0.18	-4.37	-4.43	2.66	3.95	-1.21	-6.56	-4.02	-11.37	-16.44
240	-14.1	-18.26	-13.21	-0.44	-6.4	-8.62	2.31	1.44	-1.67	-9.98	-6.55	-10.91	-16.44
255	-14.4	-18.42	-12.56	-0.12	-5.77	-4.6	3.6	4.73	-0.74	-13.93	-10.89	-12.35	-16.44
270	-13.91	-15.51	-13.69	0.49	-8.12	-3.26	3.57	2.88	-0.81	-8.66	-6.97	-13.59	-16.44
285	-14.16	-14.02	-12.36	-0.07	-9.84	-3.58	3.63	5.23	-0.42	-10.09	-10.04	-12.63	-16.44
300	-14.47	-13.57	-12.63	0.33	-5.89	-4.53	1.95	2.13	-1.53	-6.6	-6.85	-11.13	-16.44
315	-14.88	-12.23	-10.14	-0.87	-6.06	-3.78	2.01	4.68	0.37	-5.59	-5.88	-11.49	-16.44
330	-15.13	-11.71	-9.38	-2.47	-3.56	-2.97	1.77	3.05	0.66	-9.29	-6.17	-8.91	-16.44
345	-14.86	-12.28	-9.46	-5.62	-2.92	-4.47	1.48	1.82	-2.06	-6.1	-4.64	-7.36	-16.44

Ant3													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.4	-12.96	-12.63	-14.6	-12.62	-3.57	-0.64	-2.15	-9.61	-11.75	-11.54	-11.38	-24
15	-18.2	-13.42	-12.91	-12.31	-12.96	-0.54	-0.22	-1.74	-12.87	-18.24	-12.07	-11.01	-24
30	-18.36	-13.83	-11.95	-6.59	-12.82	-2.75	2.07	-0.22	-10.37	-19.09	-13.98	-12.99	-24
45	-19.14	-13.23	-12.12	-5.45	-18.13	-0.48	3.27	0.78	-13.92	-18.7	-12.84	-11.42	-24
60	-19.24	-12.35	-12.72	-8.01	-14.58	-1.53	1.04	-1.85	-13.04	-18.24	-15.95	-10.32	-24
75	-17.73	-13.77	-12.88	-6.89	-16.4	-1.14	2.53	-0.53	-13.01	-14.36	-12.31	-12.85	-24
90	-17.39	-16.51	-12.92	-7.38	-11.79	-3.94	1.03	-2.12	-7.45	-11.29	-12.34	-16.41	-24

105	-17.41	-17.18	-14.15	-8.59	-12.37	-2.29	3.02	2.81	-4.68	-6.41	-11.71	-13.51	-24
120	-17.09	-16.66	-13.17	-6.98	-10.27	-1.11	5.3	3.86	-5.94	-6.45	-16.41	-10.77	-24
135	-17.24	-17.24	-13.1	-4.95	-9.74	-1.82	4.05	2.15	-8.49	-5.96	-15.23	-9.22	-24
150	-16.87	-16.91	-15.32	-6.21	-9.61	-5.47	3.03	-0.33	-19.66	-12.97	-9.38	-8.3	-24
165	-16.14	-15.43	-15.94	-7.67	-7.62	-5.94	2.64	0.68	-19.28	-15.34	-9.25	-9.03	-24
180	-16.24	-14.68	-12.4	-5.53	-8.31	-7.45	2.49	0.72	-9.74	-15.54	-15.7	-9.21	-24
195	-17.26	-15.97	-13.9	-7.07	-9.89	-10.11	1.21	0.81	-6.67	-13.14	-15.21	-9.9	-24
210	-17.35	-18.6	-13.96	-6.95	-10.29	-12.65	-0.45	-0.68	-7.94	-17.47	-13.67	-14.2	-24
225	-17.41	-20.94	-12.71	-5.53	-9.12	-5.44	0.92	0.46	-7.82	-11.66	-10.91	-13.36	-24
240	-16.84	-23.51	-14.52	-6.61	-8.78	-7.81	-0.22	-0.9	-9.08	-13.35	-10.68	-17.78	-24
255	-16.7	-19.4	-13.73	-7.47	-15.35	-3.78	0.72	-0.02	-10.12	-17.19	-24.98	-16.92	-24
270	-17	-15.48	-13.93	-3.93	-12.11	-3.69	0.77	0.45	-4.53	-12.56	-10.97	-18.41	-24
285	-18.02	-13.47	-16.77	-3.52	-12.22	-2.17	1.47	1.88	-4.72	-15.68	-18.89	-24	-24
300	-18.71	-12.55	-17.08	-2.84	-10.3	-4.63	0.98	-1.9	-3.53	-12.65	-9.99	-20.85	-24
315	-19.41	-12.45	-13.26	-3.46	-9.56	-5.83	0.42	-0.27	-3.28	-9.58	-8.49	-16.72	-24
330	-19.19	-12.78	-10.19	-7.1	-8.32	-2.97	-1.52	-0.94	-3.33	-11.27	-6.61	-13.75	-24
345	-18.56	-12.66	-10.38	-11.65	-8.93	-3.55	-2.01	-3.48	-6.46	-12.3	-8.08	-11.35	-24

Ant4													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-19.65	-15.94	-14.61	-9.22	-9.8	-7.66	2.17	1.86	-6.7	-10.38	-9.55	-10.38	-20.82
15	-18.76	-17.82	-14.17	-7.89	-15.06	-5.34	2.73	1.53	-7.74	-9.17	-8.67	-11.03	-20.82
30	-18.74	-18.62	-11.84	-7.05	-11.25	-3.91	2.67	1.4	-11.92	-9.65	-11.45	-12.27	-20.82
45	-19.76	-20.29	-9.97	-6.74	-9.54	-3.07	4.04	3.22	-5.84	-5.05	-16.01	-12.6	-20.82
60	-20.06	-21.83	-11.25	-6.62	-10.01	-3.35	4.44	4.06	-6.16	-7.07	-12.17	-14.29	-20.82
75	-20.07	-20.29	-15.6	-7.08	-11.6	-2.84	2.6	1.92	-5.95	-5.76	-10.16	-17.24	-20.82
90	-19.72	-17.34	-20.1	-8.27	-14.7	-3.15	0.51	-1.46	-11.93	-16.32	-10.95	-20.82	-20.82
105	-19.37	-16.56	-18.65	-6.66	-11.67	-1.03	4.79	1.83	-9.47	-12.03	-12.19	-14.79	-20.82
120	-19.91	-18.24	-15.95	-7.4	-15.94	-3.01	2.29	0.26	-11.24	-16.01	-19.02	-11.53	-20.82
135	-21.31	-19.16	-13.51	-5.49	-11.81	-2.08	3.88	1.74	-12.83	-9.81	-13.92	-10.95	-20.82
150	-20.77	-18.41	-13.56	-5.84	-13.73	-3.9	2.21	0.96	-8.89	-14.28	-15.25	-14.3	-20.82
165	-20.15	-17.29	-12.18	-6.89	-12.77	-1.54	0.83	-1.15	-8.26	-16.8	-12.5	-14.37	-20.82
180	-20.64	-15.47	-12.96	-7.62	-12.03	-2.1	1.05	0.77	-7.86	-18.23	-17.99	-11.71	-20.82
195	-20.17	-14.92	-11.38	-9.14	-10.54	-3.32	-0.18	-0.58	-7.09	-12.21	-15.75	-12.72	-20.82
210	-19.98	-15.25	-11.91	-4.77	-10.94	-3.51	-0.92	-1.64	-3.88	-13.08	-9.73	-12.64	-20.82
225	-20.44	-16.73	-13.16	-2.39	-12.14	-3.06	1.43	1.07	-3.72	-9.32	-6.6	-12.8	-20.82
240	-20.07	-20.63	-14.91	-2.32	-12.36	-7.9	-0.24	-2.96	-4.45	-13.88	-11.7	-14.38	-20.82
255	-20.02	-26.38	-17.63	-2.03	-9.89	-4.04	1.77	2.06	-3.33	-17.27	-11.83	-14.92	-20.82
270	-20.55	-29.2	-14.84	-3.62	-21.28	-5.82	0.49	0.28	-5.98	-20.73	-9.52	-13.83	-20.82
285	-19.45	-26.51	-10.63	-3.72	-19.09	-3.27	1.45	1.98	-6.2	-12.41	-12.88	-15.24	-20.82
300	-18.8	-22.49	-13.67	-3.34	-10.55	-6.65	-1.61	-0.24	-9.15	-11.03	-13.31	-18.07	-20.82

315	-19.13	-18.51	-11.82	-6.43	-15.52	-2.42	1.03	2.79	-5.13	-14.97	-13.8	-19.44	-20.82
330	-19.46	-15.88	-14.15	-5.28	-8.76	-4.95	0.2	-0.02	-4.93	-15.56	-16.92	-12.65	-20.82
345	-19.95	-14.68	-13.58	-7.3	-6.64	-7.94	1.31	0.85	-8.43	-12.14	-9.53	-11.07	-20.82

5350MHz Composite Gain													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-15.99	-11.31	-10.55	-8.49	-8.09	-2.37	3.89	3.09	-5.02	-8.03	-7.48	-7.86	-19.25
15	-15.47	-12.33	-10.51	-6.81	-10.94	0.4	4.39	3.06	-6.92	-9.56	-7.19	-8.01	-19.25
30	-15.54	-12.89	-8.88	-3.81	-8.99	-0.3	5.39	3.64	-8.1	-10.14	-9.61	-9.61	-19.25
45	-16.43	-13.05	-7.97	-3.06	-9.8	1.33	6.67	5.1	-5.96	-6.42	-11.27	-8.98	-19.25
60	-16.63	-12.85	-8.94	-4.28	-8.99	0.62	5.92	4.61	-5.93	-7.96	-10.85	-9.07	-19.25
75	-15.81	-13.42	-11.12	-3.97	-10.66	1.06	5.58	3.79	-5.77	-6.03	-8.16	-11.76	-19.25
90	-15.47	-13.9	-12.78	-4.8	-10.11	-0.53	3.78	1.23	-6.39	-10.44	-8.61	-15.33	-19.25
105	-15.32	-13.85	-13.1	-4.56	-9	1.37	6.96	5.34	-3.74	-5.76	-8.94	-11.12	-19.25
120	-15.38	-14.4	-11.44	-4.18	-9.64	1	6.94	5.26	-5.18	-6.97	-14.61	-8.13	-19.25
135	-16.03	-15.14	-10.29	-2.21	-7.7	1.06	6.98	4.96	-7.38	-4.66	-11.54	-7.03	-19.25
150	-15.59	-14.62	-11.39	-3.01	-8.42	-1.64	5.64	3.35	-9.69	-10.59	-8.82	-7.78	-19.25
165	-14.91	-13.3	-10.85	-4.26	-6.81	-0.45	4.79	2.82	-9.12	-13.03	-7.71	-8.29	-19.25
180	-15.15	-12.06	-9.67	-3.5	-6.96	-1.36	4.81	3.76	-5.74	-13.77	-13.76	-7.36	-19.25
195	-15.58	-12.42	-9.54	-5.03	-7.2	-3.06	3.55	3.15	-3.87	-9.65	-12.47	-8.19	-19.25
210	-15.56	-13.75	-9.86	-2.78	-7.6	-3.92	2.33	1.86	-2.66	-11.99	-8.47	-10.37	-19.25
225	-15.78	-15.57	-9.92	-0.81	-7.49	-1.16	4.19	3.78	-2.52	-7.4	-5.48	-10.07	-19.25
240	-15.3	-18.94	-11.7	-1.19	-7.38	-4.84	2.78	1.14	-3.45	-10.6	-8.16	-12.9	-19.25
255	-15.19	-19.2	-12.45	-1.32	-9.19	-0.9	4.27	4.09	-3.07	-14.22	-13.11	-12.85	-19.25
270	-15.58	-16.86	-11.36	-0.76	-12.53	-1.68	3.64	3.38	-2.21	-12.71	-7.2	-12.81	-19.25
285	-15.7	-14.73	-10.16	-0.61	-11.98	0.31	4.47	4.94	-2.42	-10.88	-12.36	-15.55	-19.25
300	-15.74	-13.16	-12.2	-0.08	-7.41	-2.57	2.79	1.98	-2.88	-8.79	-8.48	-16.34	-19.25
315	-16.26	-11.95	-9.5	-1.81	-9.03	-0.95	3.74	4.4	-1.15	-8.85	-7.74	-14.96	-19.25
330	-16.31	-11.18	-8.94	-3.13	-5.53	-0.89	2.39	2.54	-1.08	-10.14	-7.31	-10.17	-19.25
345	-16.22	-10.6	-8.82	-6.2	-4.7	-2.46	2.82	1.96	-4.38	-9.21	-5.76	-8.2	-19.25

Ant3													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.86	-18.2	-11.95	-13.16	-15.62	-1.11	0.56	-3.81	-21.2	-18.73	-18.76	-23.45	-24.71
15	-19.1	-16.18	-12.76	-14.08	-14.95	0.27	0.63	-3.79	-14.89	-13.75	-15.88	-18.49	-24.71
30	-19.63	-16	-14.37	-8.97	-13.47	0.09	1.31	-2.74	-17.09	-10.45	-18.83	-19.31	-24.71
45	-19.21	-19.62	-15.1	-10.86	-17.91	2.23	4.14	-1.81	-10.44	-10.72	-20.75	-20.62	-24.71
60	-18.56	-21.29	-11.79	-9.9	-17.83	0.01	1.11	-3.64	-13.64	-16.13	-16.26	-18.8	-24.71
75	-19.07	-20.75	-21	-8.59	-19.52	2.14	3.37	-2.25	-12.06	-12.38	-17.1	-23.87	-24.71
90	-19.33	-19.94	-19.31	-10.36	-14.86	-2.47	0.22	-5.78	-15.94	-13.18	-18.4	-20.14	-24.71

105	-18.91	-18.69	-19.88	-8.35	-16.26	0.28	3.08	-1.68	-13.69	-10.11	-17.82	-16.4	-24.71
120	-19.48	-18.94	-16.33	-7.31	-11.16	0.56	4.99	0.45	-7.13	-6.97	-18.85	-12.76	-24.71
135	-18.98	-18.69	-14.87	-6.36	-18.34	1.16	3.25	-0.87	-8.87	-8.15	-14.99	-10.2	-24.71
150	-18.54	-19.08	-15.14	-7.06	-19.09	-0.43	2.99	-2.81	-9.67	-8.92	-10.19	-9.82	-24.71
165	-19.51	-18.04	-15.01	-6.23	-13.05	0.9	3.23	-1.8	-15.13	-10.16	-9.31	-10.14	-24.71
180	-20.27	-17.84	-11.68	-6.09	-14.72	-0.9	3.11	-1.3	-26.42	-10.46	-12.96	-12	-24.71
195	-19.42	-19.12	-10.65	-5.66	-19.58	-2.66	2.28	-0.42	-16.44	-12.81	-12.08	-13.25	-24.71
210	-19.33	-19.57	-13.9	-5.74	-11.37	-4.78	-1.15	-2.37	-20.35	-9.72	-11.56	-15.73	-24.71
225	-19.37	-21.27	-12.67	-6.84	-13.99	-2.71	0.5	-0.53	-13.53	-9.6	-10.64	-17.83	-24.71
240	-19.63	-23.2	-11.94	-7.07	-13.82	-1.93	0.53	-1.78	-17.07	-13.97	-11.9	-24.71	-24.71
255	-19.4	-18.24	-11.68	-5.37	-14.41	-1.02	1.31	-0.97	-17.2	-14.26	-17.8	-18.93	-24.71
270	-19.68	-16.07	-15.86	-5.78	-15.26	-2.81	1.19	-1.36	-11.92	-16.87	-16.02	-18.16	-24.71
285	-19.62	-15.63	-19.94	-4.08	-15.61	-1.03	2.6	0.83	-9.14	-14.57	-31.98	-20.14	-24.71
300	-19.47	-15.67	-16.67	-5.82	-14.24	-4.08	-0.65	-4.15	-7.24	-12.19	-18.12	-23.47	-24.71
315	-19.62	-15.22	-13.78	-7.41	-14.64	-2.27	1.27	-0.79	-7.48	-11.44	-20.17	-19.69	-24.71
330	-19.66	-15.98	-13.36	-10.43	-14.75	0.16	-2.09	-0.96	-7.22	-18.05	-11.45	-17.21	-24.71
345	-18.97	-17.6	-12.86	-13.79	-24.71	-1.26	-2.99	-4.24	-11.18	-18.09	-14.23	-21.04	-24.71

Ant4													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-23.89	-15.46	-9.26	-7.87	-13.1	-4.3	2.73	-0.2	-12.08	-7.8	-8.33	-14.72	-24.26
15	-24.25	-16.79	-9.21	-6.91	-22.44	-1.18	2.73	-1.44	-12.96	-8.46	-7.85	-13.19	-24.26
30	-22.63	-17.06	-9.15	-6.62	-18.88	0.05	4.27	-0.7	-10.5	-13.61	-10.06	-12.83	-24.26
45	-22.31	-17.49	-13.53	-7.96	-18.99	0.88	4.98	1.07	-6.25	-8.97	-15.16	-14.79	-24.26
60	-22.76	-19.22	-17.88	-5.87	-14.79	-0.26	4.76	0.42	-6.21	-6.74	-19.3	-16.95	-24.26
75	-22.99	-21.05	-13.57	-7.2	-13.16	-2.37	2.57	-1.9	-16.37	-9.79	-20.46	-15.96	-24.26
90	-22.94	-23.11	-11.86	-6.84	-14.67	0.08	2.51	-3.55	-15.55	-19.21	-15.79	-17.24	-24.26
105	-23.47	-26.67	-12.07	-7.7	-21.23	0.91	3.73	-3.09	-13.33	-13.01	-17.86	-18.65	-24.26
120	-22.78	-26.42	-12.27	-9.11	-15.62	1.01	2.89	-3.31	-15.46	-12.62	-18.77	-18.16	-24.26
135	-23.07	-23.11	-12.31	-7.63	-13.92	0.4	3.41	-3.54	-11.7	-7.26	-17.76	-21.54	-24.26
150	-23.88	-22.69	-10.5	-7.51	-11.36	0.79	3.41	-2.93	-11.06	-6.3	-19.26	-24.26	-24.26
165	-25.01	-21.79	-8.92	-11.27	-14.65	1.75	1.27	-2.57	-8.36	-10.81	-13.72	-20.91	-24.26
180	-24.17	-19.09	-9.39	-9.38	-13.91	1.23	0.81	0.2	-10.46	-16.52	-14.03	-18.16	-24.26
195	-24.08	-18.21	-11.74	-9.18	-19.02	0.71	0.79	-0.9	-13.47	-14.24	-21.18	-15.89	-24.26
210	-24.55	-18.53	-10.89	-7.5	-16.3	0.54	-1.29	-1.16	-8.49	-11.51	-15.19	-14.16	-24.26
225	-24.08	-17.98	-11.85	-4.52	-17.31	-1.79	0.4	-0.54	-9.19	-11.51	-12.96	-15.01	-24.26
240	-24.74	-19.31	-14.29	-3.35	-11.78	-3.54	1.25	-3.71	-6.05	-13.1	-18.64	-16.14	-24.26
255	-25.75	-22.88	-13.47	-2.45	-11.29	-1.81	1.32	-0.23	-7.3	-20.66	-12.02	-12.9	-24.26
270	-25.49	-24.09	-10.64	-4.16	-12.28	-2.91	2.03	-0.58	-10.24	-15.67	-15.02	-11.98	-24.26
285	-24.98	-23.22	-10.51	-3.79	-8.95	-1.11	1.1	-0.77	-14.03	-13.76	-12.96	-13.96	-24.26
300	-24.33	-20.97	-11.57	-5.04	-20.18	-2.41	0.13	-1.92	-14.44	-11.93	-14.69	-18.82	-24.26

315	-23.13	-16.13	-13.29	-7.02	-16.3	-1.55	0.13	0.13	-13.8	-12.45	-16.28	-20.58	-24.26
330	-23.41	-13.42	-12.04	-6.29	-10.49	-2.31	0.43	-2.02	-18.96	-12.25	-14.96	-15.93	-24.26
345	-23.44	-13.83	-9.36	-8.08	-10.42	-3.61	2.7	-0.38	-14.74	-8.78	-10.24	-14.48	-24.26

5600MHz Composite Gain													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.01	-13.71	-7.49	-7.11	-11.26	0.45	4.72	1.19	-12.48	-8.64	-9.06	-15.02	-21.47
15	-18.29	-13.47	-7.79	-6.76	-14.9	2.59	4.75	0.47	-10.86	-7.7	-7.96	-12.43	-21.47
30	-17.99	-13.5	-8.36	-4.71	-12.75	3.08	5.93	1.35	-10.17	-8.88	-10.37	-12.47	-21.47
45	-17.61	-15.48	-11.27	-6.28	-15.42	4.59	7.58	2.76	-5.08	-6.79	-14.5	-14.21	-21.47
60	-17.4	-17.18	-11.3	-4.64	-13.17	2.89	6.14	1.64	-6.14	-7.21	-14.64	-14.82	-21.47
75	-17.8	-17.89	-13.5	-4.86	-12.76	3.18	5.99	0.94	-10.94	-7.98	-15.61	-16.03	-21.47
90	-17.94	-18.37	-11.8	-5.41	-11.75	1.91	4.45	-1.58	-12.73	-12.67	-13.99	-15.56	-21.47
105	-17.88	-18.78	-12.11	-5.01	-15.38	3.61	6.42	0.65	-10.5	-8.43	-14.83	-14.44	-21.47
120	-17.96	-18.89	-11.05	-5.15	-10.1	3.8	7.01	1.78	-7.32	-6.33	-15.8	-12.04	-21.47
135	-17.78	-17.61	-10.49	-3.96	-12.84	3.8	6.34	0.91	-7.16	-4.68	-13.25	-11.13	-21.47
150	-17.8	-17.69	-9.5	-4.27	-11.38	3.21	6.21	0.14	-7.33	-4.5	-10.58	-11.32	-21.47
165	-18.82	-16.7	-8.43	-5.38	-10.8	4.35	5.32	0.83	-8.09	-7.47	-8.23	-10.94	-21.47
180	-18.99	-15.43	-7.45	-4.57	-11.3	3.24	5.05	2.49	-12.19	-9.96	-10.47	-11.53	-21.47
195	-18.43	-15.64	-8.17	-4.23	-16.29	2.2	4.58	2.35	-11.82	-10.49	-12.48	-11.46	-21.47
210	-18.54	-16.02	-9.25	-3.57	-10.48	1.29	1.79	1.27	-9.53	-7.56	-10.18	-11.9	-21.47
225	-18.4	-16.46	-9.24	-2.59	-12.48	0.77	3.46	2.48	-8.08	-7.49	-8.71	-13.3	-21.47
240	-18.8	-18.03	-10.03	-2	-9.73	0.31	3.91	0.32	-6.91	-10.51	-11.62	-16.4	-21.47
255	-19	-17.24	-9.52	-0.78	-9.7	1.6	4.33	2.42	-7.9	-13.87	-11.43	-12.39	-21.47
270	-19.1	-16.18	-9.85	-1.92	-10.63	0.15	4.63	2.05	-8.03	-13.24	-12.5	-11.52	-21.47
285	-18.88	-15.61	-10.99	-0.92	-8.65	1.94	4.89	3.08	-8.24	-11.15	-15.05	-13.5	-21.47
300	-18.55	-14.91	-10.74	-2.41	-13.7	-0.19	2.76	0.05	-7.1	-9.05	-13.23	-17.83	-21.47
315	-18.19	-12.65	-10.52	-4.2	-12.42	1.11	3.73	2.69	-7.07	-8.92	-15	-17.11	-21.47
330	-18.32	-11.6	-9.66	-5.11	-9.35	2.02	2.27	1.54	-8.23	-11.66	-10.02	-13.54	-21.47
345	-17.91	-12.5	-7.92	-7.46	-11.9	0.65	3.32	0.91	-9.77	-9.23	-9	-14.14	-21.47

Ant3													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-17.46	-16.97	-7.72	-14.52	-12.15	0.08	-0.09	-5.89	-16.1	-15.37	-19.14	-23.64	-26.68
15	-17.56	-17.52	-8.95	-12.31	-10.92	0.05	0.98	-8	-14	-13.78	-20.36	-17.96	-26.68
30	-17.62	-19.46	-11.58	-12.47	-9.04	1.62	2.34	-6.65	-12.09	-11.28	-17.96	-17.89	-26.68
45	-17.27	-19.34	-10.84	-14.54	-11	2.12	4.48	-7.67	-8.96	-13.25	-13.95	-19.74	-26.68
60	-17.25	-20.74	-12.67	-9.51	-10.62	0.4	0.97	-9.41	-11.89	-16.56	-14.44	-19.83	-26.68
75	-18.14	-22.46	-13.37	-11.03	-13.07	1.61	2.52	-8.86	-12.55	-15.57	-16.62	-20.47	-26.68
90	-17.97	-20.29	-13.32	-8.63	-11.28	0.8	1.63	-9.82	-12.72	-13.38	-16.82	-21.46	-26.68

105	-17.27	-18.01	-20.44	-9.02	-14.26	-0.56	0.79	-6.77	-11.15	-11.42	-21.8	-19.07	-26.68
120	-17.53	-17.51	-17.23	-8.34	-12.76	1.99	4.36	-4.13	-7.02	-8.76	-19.79	-15.29	-26.68
135	-17.32	-18.69	-15.83	-9.34	-20.35	1.79	3.33	-7.91	-7.02	-11.37	-15.22	-13.03	-26.68
150	-17.52	-23.54	-15.47	-9.52	-15.86	2.16	3.2	-5.98	-9.17	-10.28	-15	-13.77	-26.68
165	-18.45	-25.17	-14.2	-6.51	-20.11	0.91	2.07	-7.08	-13.64	-13.72	-13.37	-15.17	-26.68
180	-18.05	-22.02	-13.82	-5.51	-16.29	-0.91	1.46	-3.93	-24.75	-12.39	-14.68	-16.9	-26.68
195	-16.87	-21.12	-12.82	-4.8	-23.21	-0.07	2.27	-2.29	-23.64	-11.42	-14.54	-16.66	-26.68
210	-16.89	-22.3	-10.01	-6.6	-15.58	-0.72	1.76	-2.27	-24.36	-11.7	-14.39	-15.38	-26.68
225	-16.73	-26.4	-9.57	-8.26	-19.34	-3.43	-0.84	-3.98	-14.26	-10.67	-15.4	-13.21	-26.68
240	-17.11	-25.6	-14	-7.56	-14.87	-0.52	2.09	-1.34	-12.33	-10.71	-17.03	-16.59	-26.68
255	-17.35	-21.57	-15.01	-9.21	-15.73	-2.69	-0.53	-5.06	-13.07	-11.34	-19.49	-17.72	-26.68
270	-17.53	-19.74	-11.88	-7.01	-13.02	-0.1	1.85	-2.34	-22.52	-18.49	-16.64	-15.11	-26.68
285	-17.14	-19.88	-10.61	-7.69	-14.19	-2.45	1.87	-3.62	-20.45	-14.8	-18.95	-15.66	-26.68
300	-16.96	-21.13	-9.43	-7.52	-13.37	-2.64	1.25	-2.88	-14.12	-15.6	-15.91	-19.62	-26.68
315	-16.68	-21.55	-9.06	-9.74	-20.3	-1.53	0.17	-3.47	-11.59	-14.13	-18.9	-26.68	-26.68
330	-16.86	-19.46	-9.63	-14.41	-33.95	0.46	0.2	-2.16	-15.5	-19.04	-16.98	-24.63	-26.68
345	-17.11	-18.11	-8.51	-19.7	-13.19	-0.2	-2.22	-4.16	-16.99	-19.68	-16.77	-26.05	-26.68

Ant4													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-21.54	-19.4	-9.88	-7.31	-13.31	-2.05	2.79	-2.62	-15.67	-9.12	-12.68	-20.46	-23.83
15	-23.54	-20.43	-8.95	-7.36	-21.27	0.87	2.8	-4.21	-18.68	-11.66	-11.47	-14.87	-23.83
30	-22.01	-22.59	-11.43	-7.72	-12.84	1.31	4.93	-4.42	-10.76	-17.49	-12.84	-12.7	-23.83
45	-22.08	-24.86	-12.1	-7.36	-16.74	1.06	4.49	-3.71	-6.51	-12.57	-12.38	-13.71	-23.83
60	-22.64	-24.87	-13.93	-8.58	-12.7	1.58	4.47	-4.24	-9.1	-10.43	-15.21	-16.5	-23.83
75	-22.57	-24.21	-13.31	-7.27	-15.68	-1.22	1.11	-5.78	-15.9	-13.27	-20.42	-16.21	-23.83
90	-22.2	-23.44	-9.14	-6.12	-13.28	2.35	3.51	-5.84	-10.3	-21.7	-22.11	-16.1	-23.83
105	-22.58	-21.61	-9.16	-6.44	-15.17	1.21	3.68	-10.41	-16.23	-19.27	-19.2	-17.69	-23.83
120	-21.67	-17	-8.55	-5.92	-12.44	0.9	1.39	-10.29	-15.79	-10.59	-19.67	-19.27	-23.83
135	-22.2	-15.38	-8.65	-8.08	-10.05	1.81	4.02	-8.35	-13.86	-11.05	-17.96	-21.94	-23.83
150	-22.54	-14.43	-7.87	-8.06	-10.27	1.12	1.98	-8.03	-12.18	-7.79	-15.59	-23.83	-23.83
165	-22.3	-15.84	-7.75	-10	-11.96	0.4	-1.04	-7.48	-11.57	-10.9	-14.7	-22.52	-23.83
180	-22.11	-16.87	-7.51	-8.89	-10.52	0.26	-1.35	-3.33	-10.82	-12.82	-16.03	-20.99	-23.83
195	-21.78	-14.77	-9.6	-7.73	-12.63	0.13	-1.09	-4.99	-17.81	-12.79	-23.2	-19.06	-23.83
210	-21.1	-14.99	-9.58	-7.61	-18.15	1.77	0.02	-1.84	-15.02	-12.46	-18.13	-16.37	-23.83
225	-20.9	-17.15	-9.28	-6.66	-17.48	-0.16	0.96	-1.94	-15.3	-14.38	-17.21	-16.32	-23.83
240	-20.84	-18.19	-9.88	-4.77	-10.84	-2.36	0.7	-6.14	-11.39	-15.16	-18.9	-16.76	-23.83
255	-20.76	-18.24	-10.1	-5.73	-10.36	-0.81	1.1	-2.06	-13.26	-21.06	-20.7	-14.86	-23.83
270	-21.46	-18.69	-10.8	-5.31	-7.93	-2.02	2.26	-2.38	-16.91	-18.77	-30.64	-14.77	-23.83
285	-22.56	-21.16	-12.74	-5.04	-8.98	-2.55	0.15	-5.24	-16.24	-16.51	-19.23	-14.62	-23.83
300	-21.4	-19.84	-15.09	-7.46	-13.94	-0.41	2.41	-2.66	-16.63	-19.28	-20.35	-15.77	-23.83

315	-20.81	-16.19	-11.61	-5.88	-18.8	-2.04	-1.43	-3.64	-14.76	-16.73	-15.69	-15.46	-23.83
330	-20.91	-15.74	-9.78	-6.54	-13.27	-0.13	2.59	-2.93	-20.2	-16.69	-19.35	-15.43	-23.83
345	-20.95	-17.65	-9.49	-7.66	-12.1	0.1	3.52	-1.87	-18.43	-11.21	-15.4	-18.76	-23.83

5800MHz Composite Gain													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-16.25	-15.09	-5.72	-7.18	-9.7	2.09	4.48	-1.09	-12.87	-8.68	-12.31	-18.89	-22.13
15	-17.03	-15.84	-5.94	-6.48	-11.63	3.48	4.95	-2.89	-13.02	-9.65	-11.81	-13.27	-22.13
30	-16.53	-17.87	-8.49	-6.76	-7.72	4.48	6.74	-2.45	-8.39	-10.83	-12.02	-11.9	-22.13
45	-16.34	-18.66	-8.44	-7.22	-10.39	4.62	7.5	-2.46	-4.64	-9.89	-10.12	-13.2	-22.13
60	-16.52	-19.55	-10.27	-6.02	-8.59	4.02	5.91	-3.44	-7.37	-9.95	-11.81	-15	-22.13
75	-17.07	-20.28	-10.33	-5.94	-11.27	3.32	4.85	-4.17	-11.05	-11.33	-15.3	-15.07	-22.13
90	-16.82	-18.71	-7.97	-4.27	-9.21	4.62	5.63	-4.59	-8.42	-13.57	-16.06	-15.36	-22.13
105	-16.52	-16.61	-10.07	-4.62	-11.69	3.38	5.36	-5.39	-10.31	-11.48	-17.39	-15.34	-22.13
120	-16.35	-14.24	-8.84	-4.04	-9.59	4.47	6.01	-3.66	-7.33	-6.62	-16.72	-14.04	-22.13
135	-16.41	-13.87	-8.51	-5.68	-10.74	4.81	6.69	-5.12	-6.77	-8.2	-13.47	-13.38	-22.13
150	-16.66	-14.83	-7.85	-5.75	-9.61	4.67	5.62	-3.93	-7.53	-5.94	-12.28	-14.41	-22.13
165	-17.15	-16.3	-7.38	-5.07	-12.1	3.67	3.66	-4.27	-9.53	-9.19	-11	-15.08	-22.13
180	-16.83	-16.06	-7.09	-4.03	-9.92	2.7	3.18	-0.61	-12.24	-9.59	-12.32	-15.7	-22.13
195	-15.97	-14.37	-8.05	-3.13	-13.39	3.04	3.76	-0.53	-17.23	-9.07	-14.82	-14.77	-22.13
210	-15.73	-14.89	-6.78	-4.08	-13.76	3.62	3.94	0.96	-15.48	-9.06	-13.05	-12.85	-22.13
225	-15.56	-17.59	-6.41	-4.41	-15.35	1.37	3.12	0.11	-11.75	-9.32	-13.25	-11.62	-22.13
240	-15.77	-18.12	-8.69	-3.04	-9.61	1.62	4.43	-0.4	-8.84	-9.64	-14.9	-13.66	-22.13
255	-15.88	-16.74	-9.2	-4.29	-9.63	1.31	3.33	-0.42	-10.15	-11.9	-17.06	-13.16	-22.13
270	-16.26	-16.19	-8.31	-3.11	-7.1	2	5.07	0.65	-16.26	-15.62	-18.07	-11.93	-22.13
285	-16.42	-17.49	-8.6	-3.25	-8.19	0.51	4.06	-1.38	-15.08	-12.6	-16.08	-12.11	-22.13
300	-15.89	-17.45	-8.8	-4.48	-10.64	1.56	4.86	0.24	-12.27	-14.24	-14.84	-14.47	-22.13
315	-15.49	-15.45	-7.23	-4.59	-16.51	1.23	2.42	-0.54	-10.02	-12.32	-14.14	-16.36	-22.13
330	-15.64	-14.39	-6.69	-6.6	-15.51	3.18	4.49	0.47	-14.53	-14.78	-15.07	-15.85	-22.13
345	-15.81	-14.87	-5.98	-8.73	-9.62	2.96	4.13	0.07	-14.67	-11.44	-13.05	-18.65	-22.13

7.2 DG_NSSmax Test Data

Ant1													
Freq	2410												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.65	-11.75	-12.75	-10.02	-17.24	-5.2	-3.5	-4.63	-8.52	-10.08	-11.91	-17.34	-19.42
15	-19.57	-11.42	-10.38	-8	-15.98	-5.1	-2.67	-5.98	-9.68	-7.37	-10.34	-17.94	-19.42
30	-20.96	-11.79	-9.06	-8.38	-13.72	-5.72	-3.23	-5.9	-9.42	-7.8	-11.2	-17.46	-19.42
45	-20.68	-12.09	-9.06	-9.79	-11.03	-3.45	-1.12	-3.34	-11.74	-8.72	-11.46	-16.98	-19.42

60	-20.31	-12.24	-9.02	-10.9	-10.09	-1.28	0.05	-2.04	-7.16	-6.5	-10.61	-18.01	-19.42
75	-20.38	-12.86	-8.85	-9.29	-12.61	-2.53	-2.27	-4.9	-10.31	-6.75	-11.08	-19.42	-19.42
90	-19.62	-13.65	-9.37	-8.38	-18.51	0.38	2.35	-2.49	-7.65	-6.51	-12	-17.46	-19.42
105	-19.46	-13.8	-10.22	-8.34	-16.79	-1.87	1.88	-1.34	-6.19	-5.97	-12.8	-14.83	-19.42
120	-19.37	-13.09	-10.72	-6.71	-15.42	-0.56	3.7	0.39	-7.19	-8	-15.83	-12.76	-19.42
135	-19.4	-12.69	-10.39	-5.17	-17.73	1.17	4.87	2.39	-4.24	-5.23	-16.03	-12.15	-19.42
150	-19.98	-13.14	-9.27	-4.28	-12.33	-0.98	4.07	1.95	-4.15	-4.65	-13.55	-12.98	-19.42
165	-20.45	-13.91	-8.62	-3.88	-9.35	-3.29	3.43	1.42	-6.37	-5.38	-11.03	-12.85	-19.42
180	-19.84	-14.52	-9.03	-4.85	-9.7	-3.98	3.18	0.64	-9.49	-5.45	-9.57	-12.88	-19.42
195	-19.11	-14.69	-9.29	-6.06	-11.75	-3.72	2.09	0.02	-9.78	-8.14	-11.63	-14.13	-19.42
210	-18.38	-14.86	-9.3	-6.48	-12.78	-1.99	2.65	1.14	-6.63	-8.44	-13.18	-15.93	-19.42
225	-18.25	-15.34	-9.62	-7.29	-15.08	-0.77	3.66	1.99	-6.76	-8.04	-13.14	-15.76	-19.42
240	-19.28	-16.2	-10.75	-8.22	-14.44	-3.48	1.95	-0.55	-11.74	-10.55	-12.55	-13.66	-19.42
255	-19.58	-16.88	-12.8	-7.74	-11.43	-3.04	1.6	-1.95	-16.93	-14.59	-10.27	-11.54	-19.42
270	-18.82	-17.05	-15.89	-7.03	-10.59	0.61	3.99	0.18	-13.79	-13.23	-8.7	-10.41	-19.42
285	-19.21	-16.65	-15.91	-7.47	-11.13	-1.32	2.01	-2.06	-14.86	-12.37	-9.37	-10.47	-19.42
300	-19.6	-15.66	-14.68	-7.88	-11.2	-0.91	2.23	-1.48	-10.92	-13	-12.7	-11.88	-19.42
315	-19.2	-14.68	-14.23	-8.52	-14.15	-0.55	2.6	0.87	-5.78	-9.71	-16.96	-14.77	-19.42
330	-19.56	-13.88	-14.28	-9.83	-15.76	-3.23	-0.2	-0.66	-5.32	-10.53	-18.89	-17.67	-19.42
345	-19.52	-12.73	-14.33	-11.34	-20.43	-5.34	-3.02	-3.16	-7.5	-15.08	-17.89	-18.18	-19.42

Ant2													
Freq	2410												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-14.92	-17.83	-9.05	-5.36	-9.88	-3.21	3.5	1.19	-6.29	-6.39	-6.49	-7.47	-17.35
15	-14.56	-17.47	-10.06	-5.53	-9.38	-3.72	3.43	1.61	-5.26	-5.4	-5.81	-7.76	-17.35
30	-14.5	-16.86	-11.46	-6.47	-12.31	-4.36	2.59	1.75	-4.07	-5.17	-6.95	-8.18	-17.35
45	-14.49	-16.4	-11.51	-6.49	-15.91	-3.61	1.72	0.55	-5.12	-6.15	-8.41	-8.45	-17.35
60	-14.6	-15.42	-10.07	-6.25	-16.46	-1.76	2.28	-1.45	-7.72	-6.8	-9.03	-9.62	-17.35
75	-14.82	-14.33	-9.65	-7.74	-13.54	0.02	2.65	-2.77	-9.78	-6.07	-8.4	-11.7	-17.35
90	-14.68	-14.51	-10.84	-9.54	-16.09	-0.9	1.56	-2.38	-9.89	-6.46	-8.72	-12.67	-17.35
105	-14.11	-14.87	-13.03	-10.55	-19.94	-1.72	2.12	-1.7	-9.14	-8.17	-10.85	-13.43	-17.35
120	-13.81	-15.1	-14.07	-12.42	-14.1	-0.81	1.28	-2.56	-9.36	-9.76	-13.21	-15.88	-17.35
135	-14.23	-15.59	-12.15	-11.1	-12.85	-2.88	0.13	-3.13	-10.29	-14.54	-11.68	-14.43	-17.35
150	-14.51	-15.91	-11.44	-11.31	-14.43	-3.75	-0.05	-2.88	-11.61	-17.98	-10.47	-11.05	-17.35
165	-14.72	-15.92	-11.56	-11.1	-24.09	-3.76	0.25	-1.99	-8.08	-12.75	-11.45	-9.69	-17.35
180	-15.05	-16.31	-11.2	-10.03	-16.95	-3.2	0.24	-1.12	-7.57	-9.25	-14.27	-9.37	-17.35
195	-15.2	-16.98	-11.43	-9.61	-15.71	-3.34	0.23	-1.55	-8.02	-7.54	-15.28	-9.69	-17.35
210	-15.26	-17.95	-12.5	-9.73	-13.7	-1.95	0.01	-1.87	-7.91	-9.49	-17.98	-9.7	-17.35
225	-15.7	-17.87	-13.41	-8.86	-11.17	-0.86	1.23	-2.63	-11.84	-11.42	-14.61	-9.9	-17.35
240	-15.76	-16.07	-13.8	-8.25	-11.8	-1.09	1.72	-3.23	-9.86	-10.72	-15.04	-11.78	-17.35
255	-15.48	-14.73	-15.53	-7.54	-12.6	-1.15	1.29	-1.48	-5.51	-10.69	-18.46	-17.35	-17.35

270	-15.31	-14.05	-19.01	-6.43	-10.19	-0.14	1.33	-1.52	-8.32	-14.76	-17.95	-16.34	-17.35
285	-15.78	-13.36	-16.02	-6.5	-9.83	-2.31	2.27	-0.37	-10.42	-15.51	-13.23	-10.95	-17.35
300	-16.25	-13.3	-13.22	-6.75	-13.04	-5.37	1.94	0.29	-8.81	-16.89	-12.14	-8.32	-17.35
315	-16.07	-14.42	-11.56	-8.08	-13.68	-3.94	2.25	0.76	-11.24	-11.94	-11	-7.02	-17.35
330	-15.88	-15.95	-9.83	-7.28	-14.24	-5.51	2.02	1.12	-8.39	-9.64	-9.45	-6.73	-17.35
345	-15.6	-17.09	-8.98	-6.12	-14.73	-4.69	2.54	0.97	-8.3	-7.86	-8.21	-7	-17.35

2410MHz Composite Gain													
Freq	2410												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-16.4	-13.8	-10.52	-7.09	-12.16	-4.09	1.28	-0.81	-7.26	-7.85	-8.4	-10.05	-18.26
15	-16.38	-13.47	-10.22	-6.59	-11.53	-4.36	1.37	-0.7	-6.93	-6.27	-7.51	-10.37	-18.26
30	-16.63	-13.62	-10.1	-7.32	-12.96	-4.99	0.59	-0.57	-5.97	-6.29	-8.57	-10.71	-18.26
45	-16.56	-13.73	-10.11	-7.83	-12.82	-3.53	0.53	-0.97	-7.27	-7.25	-9.67	-10.89	-18.26
60	-16.58	-13.55	-9.51	-7.98	-12.2	-1.51	1.31	-1.73	-7.43	-6.65	-9.75	-12.04	-18.26
75	-16.77	-13.53	-9.23	-8.45	-13.05	-1.07	0.85	-3.71	-10.04	-6.4	-9.54	-14.03	-18.26
90	-16.48	-14.06	-10.04	-8.92	-17.13	-0.21	1.97	-2.43	-8.63	-6.48	-10.06	-14.44	-18.26
105	-16.01	-14.3	-11.4	-9.31	-18.09	-1.79	2	-1.52	-7.42	-6.93	-11.72	-14.07	-18.26
120	-15.76	-13.98	-12.08	-8.69	-14.71	-0.68	2.66	-0.84	-8.14	-8.79	-14.33	-14.05	-18.26
135	-16.09	-13.9	-11.18	-7.19	-14.64	-0.4	3.12	0.45	-6.29	-7.76	-13.33	-13.14	-18.26
150	-16.44	-14.31	-10.22	-6.51	-13.25	-2.15	2.48	0.17	-6.44	-7.46	-11.74	-11.91	-18.26
165	-16.7	-14.8	-9.85	-6.14	-12.22	-3.52	2.12	0.04	-7.14	-7.66	-11.23	-10.99	-18.26
180	-16.82	-15.32	-9.98	-6.71	-11.96	-3.57	1.95	-0.15	-8.42	-6.95	-11.31	-10.78	-18.26
195	-16.73	-15.69	-10.23	-7.48	-13.29	-3.53	1.26	-0.69	-8.81	-7.83	-13.08	-11.37	-18.26
210	-16.55	-16.14	-10.61	-7.81	-13.22	-1.97	1.53	-0.11	-7.22	-8.93	-14.95	-11.78	-18.26
225	-16.79	-16.42	-11.11	-8	-12.7	-0.81	2.61	0.27	-8.6	-9.41	-13.81	-11.91	-18.26
240	-17.17	-16.13	-12.01	-8.23	-12.92	-2.12	1.84	-1.69	-10.7	-10.63	-13.62	-12.62	-18.26
255	-17.06	-15.67	-13.95	-7.64	-11.98	-1.99	1.45	-1.71	-8.22	-12.22	-12.67	-13.54	-18.26
270	-16.72	-15.3	-17.18	-6.72	-10.39	0.25	2.86	-0.59	-10.25	-13.93	-11.22	-12.43	-18.26
285	-17.16	-14.7	-15.96	-6.96	-10.43	-1.79	2.14	-1.13	-12.1	-13.66	-10.88	-10.7	-18.26
300	-17.61	-14.32	-13.89	-7.28	-12.02	-2.59	2.09	-0.51	-9.74	-14.52	-12.41	-9.75	-18.26
315	-17.36	-14.55	-12.69	-8.29	-13.91	-1.92	2.43	0.82	-7.7	-10.68	-13.03	-9.36	-18.26
330	-17.34	-14.79	-11.51	-8.37	-14.93	-4.22	1.05	0.32	-6.59	-10.06	-11.99	-9.4	-18.26
345	-17.13	-14.38	-10.88	-7.99	-16.71	-5	0.59	-0.62	-7.88	-10.12	-10.78	-9.69	-18.26

Ant3													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-17.07	-16.45	-14.43	-15.79	-12.09	-5.16	-0.65	-2.19	-6.51	-8.68	-10.71	-10.47	-22.71
15	-16.67	-15.44	-12.83	-13.51	-11.13	-1.7	0.02	-2.06	-9.84	-12.97	-10.73	-10.88	-22.71
30	-16.96	-13.69	-12.47	-7.43	-12.21	-6.87	1.73	-1.17	-5.56	-10.74	-11.73	-15.15	-22.71
45	-16.89	-12.41	-12.24	-6.37	-15.9	-3.35	2.91	1.98	-7.42	-14.85	-10.44	-12.09	-22.71

60	-17.23	-10.91	-9.47	-7.55	-12.87	-2.84	1.71	-0.66	-8.49	-12.06	-15.43	-10.13	-22.71
75	-17.9	-11.34	-11.24	-8	-12.98	-3	2.68	1.03	-8.97	-11.06	-12.08	-12.8	-22.71
90	-16.79	-13.9	-7.86	-5.94	-9.57	-5.6	0.1	-0.9	-5.69	-10.07	-12.87	-16.38	-22.71
105	-15.82	-16.36	-10.09	-6.46	-6.15	-5.88	3.35	4.53	-3.47	-6.63	-11.26	-15.57	-22.71
120	-15.58	-16.7	-12.16	-5.54	-7.77	-6.19	4.18	3.64	-6.79	-6.98	-14.28	-11.59	-22.71
135	-14.88	-16.01	-15.37	-4.85	-4.76	-7.54	4.78	3.76	-5.11	-6.42	-13.49	-8.92	-22.71
150	-15.16	-15.47	-21.75	-6.37	-6.66	-8.83	2.44	-0.02	-10.3	-12.11	-11.09	-8.35	-22.71
165	-15.59	-15.82	-15.96	-8.05	-7.43	-10.39	2.27	0.32	-11.48	-13.9	-11.35	-9.51	-22.71
180	-14.85	-16.37	-14.99	-7.03	-7.4	-10.73	1.29	0.06	-7.9	-16.63	-14.49	-8.64	-22.71
195	-14.68	-17.74	-17.74	-7.5	-7.68	-14.16	-1.13	0.15	-4.37	-8.61	-18.21	-10.39	-22.71
210	-14.84	-19.94	-18.44	-7.51	-6.47	-14.51	-1.06	0.55	-4.16	-10.46	-12.69	-15.89	-22.71
225	-14.83	-20.57	-16.57	-6.4	-7.1	-7.24	0.23	1.65	-6.15	-12	-8.58	-15.2	-22.71
240	-15.31	-23.45	-18.3	-9.17	-7.36	-11.41	-1.99	-1.27	-6.94	-13.98	-8.93	-14.01	-22.71
255	-15.38	-18.59	-13.1	-6.1	-9.55	-6.58	0.91	1.27	-6.33	-20.69	-20.56	-16.18	-22.71
270	-15.03	-15.01	-16.36	-3.16	-9.25	-6.37	-0.05	-1.42	-3.95	-8.99	-12.72	-22.71	-22.71
285	-15.33	-13.87	-20.36	-1.94	-10.67	-6.82	1.32	2.67	-2.79	-17.09	-17.95	-18.52	-22.71
300	-15.98	-13.64	-14.34	-1.4	-8.49	-8.7	-0.26	-2.78	-3.47	-8.52	-9	-15.25	-22.71
315	-16.82	-13.33	-10.79	-2.15	-8.04	-8.16	0.11	0.9	-0.85	-7.07	-8.37	-12.97	-22.71
330	-17.47	-13.93	-9.67	-3.78	-5.68	-5.06	-1.94	-1.54	-1.83	-10.12	-5.6	-10.79	-22.71
345	-17.54	-14.98	-10.48	-8.65	-7.2	-5.5	-3.53	-4.4	-5.01	-7.93	-6.99	-9.91	-22.71

Ant4													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.93	-17.25	-14.99	-12.37	-7.39	-12.13	0.31	1.48	-4.26	-8.13	-9.29	-8.92	-17.09
15	-19.63	-20.3	-17.35	-10.46	-11.44	-8.56	1.56	1.52	-5.21	-6.73	-8.61	-8.5	-17.09
30	-19.45	-21.86	-12.89	-7.28	-8.94	-5.59	2.87	2.38	-6.32	-7.66	-8.93	-10.29	-17.09
45	-18.81	-19.48	-10.25	-5.52	-6.31	-8.31	3.81	4.33	-2.25	-5.08	-9.19	-10.69	-17.09
60	-17.88	-17.72	-10.56	-4.54	-7.52	-9.23	3.55	4.85	-4.31	-4.62	-9.01	-12.43	-17.09
75	-17.27	-15.1	-12.93	-6.35	-7.54	-7.06	1.52	3.33	-3.82	-5.25	-10.04	-17.09	-17.09
90	-17.95	-14.11	-12.59	-7.49	-8.94	-5.72	0.07	-0.71	-6.52	-9.32	-9.97	-16.98	-17.09
105	-17.86	-14.07	-15.52	-8.47	-9.08	-4.49	3.41	1.51	-7.98	-13.46	-11.7	-11.78	-17.09
120	-18.31	-15.17	-11.8	-6.23	-10.21	-4.82	3.02	2.09	-6.52	-14.68	-19.02	-10.28	-17.09
135	-18.27	-15.82	-13.45	-5.4	-9.01	-6.09	2.99	2.32	-8.59	-11.98	-11.77	-11.37	-17.09
150	-18.27	-16.3	-14.26	-6.9	-11.44	-6.24	3.21	2.03	-6.22	-23.63	-13.67	-14.25	-17.09
165	-18.69	-15.8	-13.65	-8.82	-10.16	-2.57	1.56	0.22	-6.6	-16.47	-13.16	-10.7	-17.09
180	-18.27	-14.02	-14.23	-10.05	-8.83	-3.99	1.23	1.49	-5.72	-14.09	-17.67	-9.59	-17.09
195	-17.78	-13.49	-11.17	-9.39	-7.35	-5.21	-0.26	0.56	-5.19	-10.17	-14.06	-10.99	-17.09
210	-18.2	-14.31	-11.28	-3.56	-7.44	-6.37	-2	-1.62	-3.77	-10.81	-7.99	-11.95	-17.09
225	-18.53	-16.13	-12.26	-0.31	-7.68	-7.64	-0.98	0.16	-2.65	-7.67	-5.72	-13.63	-17.09
240	-19.38	-19.53	-14.54	-0.03	-12.11	-11.85	0.43	-1.88	-2.89	-12.11	-10.23	-13.83	-17.09
255	-20.07	-25.69	-19.05	-0.92	-8.08	-8.78	0.26	2.14	-1.77	-14.33	-10.17	-14.61	-17.09

270	-19.33	-24.5	-17.06	-1.92	-13.54	-6.18	1.13	1	-3.69	-15.58	-7.9	-13.05	-17.09
285	-19.52	-22.05	-12.22	-4.39	-15.77	-6.36	-0.15	1.74	-4.12	-10.37	-9.93	-13.48	-17.09
300	-19.3	-21.07	-17.17	-4.18	-9.33	-6.51	-1.95	0.67	-5.75	-10.86	-10.82	-13.15	-17.09
315	-19.1	-17.7	-16.41	-6.05	-10.25	-5.6	-2.27	2.37	-4.91	-10.47	-9.45	-16.36	-17.09
330	-18.87	-15.58	-16.36	-7.6	-7.56	-7.01	-0.6	1.37	-2.91	-15.22	-15.39	-13.22	-17.09
345	-18.22	-15.62	-15.06	-8.62	-4.82	-10.06	0.1	1.15	-5.14	-10.47	-8.37	-10.86	-17.09

5250MHz Composite Gain													
Freq	5250												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-17.9	-16.83	-14.7	-13.75	-9.13	-7.38	-0.14	0.02	-5.24	-8.4	-9.94	-9.63	-19.05
15	-17.9	-17.22	-14.53	-11.72	-11.28	-3.9	0.86	0.09	-6.94	-8.81	-9.54	-9.53	-19.05
30	-18.03	-16.08	-12.67	-7.35	-10.27	-6.18	2.34	0.96	-5.92	-8.93	-10.11	-12.07	-19.05
45	-17.74	-14.64	-11.13	-5.92	-8.87	-5.16	3.38	3.31	-4.11	-7.65	-9.77	-11.33	-19.05
60	-17.54	-13.1	-9.98	-5.79	-9.42	-4.95	2.73	2.92	-5.92	-6.91	-11.13	-11.13	-19.05
75	-17.57	-12.83	-12	-7.1	-9.46	-4.57	2.14	2.33	-5.67	-7.25	-10.94	-14.44	-19.05
90	-17.33	-14	-9.61	-6.65	-9.24	-5.66	0.09	-0.8	-6.09	-9.68	-11.18	-16.67	-19.05
105	-16.72	-15.07	-12.01	-7.35	-7.37	-5.13	3.38	3.28	-5.16	-8.82	-11.47	-13.27	-19.05
120	-16.73	-15.87	-11.98	-5.87	-8.82	-5.45	3.64	2.93	-6.65	-9.31	-16.03	-10.89	-19.05
135	-16.25	-15.91	-14.3	-5.12	-6.38	-6.75	3.98	3.1	-6.51	-8.37	-12.55	-9.97	-19.05
150	-16.44	-15.87	-16.56	-6.63	-8.42	-7.34	2.84	1.12	-7.8	-14.82	-12.19	-10.37	-19.05
165	-16.87	-15.81	-14.65	-8.42	-8.58	-4.92	1.93	0.27	-8.39	-15	-12.16	-10.06	-19.05
180	-16.23	-15.04	-14.59	-8.28	-8.06	-6.17	1.26	0.83	-6.67	-15.18	-15.8	-9.09	-19.05
195	-15.96	-15.11	-13.32	-8.34	-7.51	-7.7	-0.67	0.36	-4.76	-9.32	-15.66	-10.68	-19.05
210	-16.2	-16.27	-13.53	-5.1	-6.93	-8.76	-1.5	-0.4	-3.96	-10.63	-9.73	-13.49	-19.05
225	-16.3	-17.81	-13.9	-2.36	-7.38	-7.44	-0.33	0.97	-4.06	-9.32	-6.92	-14.34	-19.05
240	-16.88	-21.06	-16.03	-2.54	-9.12	-11.62	-0.61	-1.56	-4.46	-12.95	-9.53	-13.92	-19.05
255	-17.12	-20.83	-15.13	-2.78	-8.75	-7.54	0.6	1.73	-3.48	-16.44	-12.8	-15.32	-19.05
270	-16.67	-17.56	-16.7	-2.5	-10.89	-6.27	0.58	-0.04	-3.82	-11.14	-9.67	-15.61	-19.05
285	-16.94	-16.27	-14.61	-2.99	-12.51	-6.58	0.65	2.23	-3.4	-12.54	-12.3	-15.31	-19.05
300	-17.33	-15.93	-15.53	-2.57	-8.89	-7.47	-1.02	-0.72	-4.46	-9.53	-9.82	-14.07	-19.05
315	-17.81	-14.99	-12.75	-3.68	-9.01	-6.69	-0.92	1.7	-2.42	-8.45	-8.88	-14.34	-19.05
330	-18.11	-14.68	-11.84	-5.28	-6.52	-5.93	-1.22	0.15	-2.34	-11.96	-8.18	-11.84	-19.05
345	-17.87	-15.29	-12.19	-8.63	-5.85	-7.21	-1.35	-0.79	-5.07	-9.02	-7.63	-10.36	-19.05

Ant3													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.4	-12.96	-12.63	-14.6	-12.62	-3.57	-0.64	-2.15	-9.61	-11.75	-11.54	-11.38	-24
15	-18.2	-13.42	-12.91	-12.31	-12.96	-0.54	-0.22	-1.74	-12.87	-18.24	-12.07	-11.01	-24
30	-18.36	-13.83	-11.95	-6.59	-12.82	-2.75	2.07	-0.22	-10.37	-19.09	-13.98	-12.99	-24
45	-19.14	-13.23	-12.12	-5.45	-18.13	-0.48	3.27	0.78	-13.92	-18.7	-12.84	-11.42	-24

60	-19.24	-12.35	-12.72	-8.01	-14.58	-1.53	1.04	-1.85	-13.04	-18.24	-15.95	-10.32	-24
75	-17.73	-13.77	-12.88	-6.89	-16.4	-1.14	2.53	-0.53	-13.01	-14.36	-12.31	-12.85	-24
90	-17.39	-16.51	-12.92	-7.38	-11.79	-3.94	1.03	-2.12	-7.45	-11.29	-12.34	-16.41	-24
105	-17.41	-17.18	-14.15	-8.59	-12.37	-2.29	3.02	2.81	-4.68	-6.41	-11.71	-13.51	-24
120	-17.09	-16.66	-13.17	-6.98	-10.27	-1.11	5.3	3.86	-5.94	-6.45	-16.41	-10.77	-24
135	-17.24	-17.24	-13.1	-4.95	-9.74	-1.82	4.05	2.15	-8.49	-5.96	-15.23	-9.22	-24
150	-16.87	-16.91	-15.32	-6.21	-9.61	-5.47	3.03	-0.33	-19.66	-12.97	-9.38	-8.3	-24
165	-16.14	-15.43	-15.94	-7.67	-7.62	-5.94	2.64	0.68	-19.28	-15.34	-9.25	-9.03	-24
180	-16.24	-14.68	-12.4	-5.53	-8.31	-7.45	2.49	0.72	-9.74	-15.54	-15.7	-9.21	-24
195	-17.26	-15.97	-13.9	-7.07	-9.89	-10.11	1.21	0.81	-6.67	-13.14	-15.21	-9.9	-24
210	-17.35	-18.6	-13.96	-6.95	-10.29	-12.65	-0.45	-0.68	-7.94	-17.47	-13.67	-14.2	-24
225	-17.41	-20.94	-12.71	-5.53	-9.12	-5.44	0.92	0.46	-7.82	-11.66	-10.91	-13.36	-24
240	-16.84	-23.51	-14.52	-6.61	-8.78	-7.81	-0.22	-0.9	-9.08	-13.35	-10.68	-17.78	-24
255	-16.7	-19.4	-13.73	-7.47	-15.35	-3.78	0.72	-0.02	-10.12	-17.19	-24.98	-16.92	-24
270	-17	-15.48	-13.93	-3.93	-12.11	-3.69	0.77	0.45	-4.53	-12.56	-10.97	-18.41	-24
285	-18.02	-13.47	-16.77	-3.52	-12.22	-2.17	1.47	1.88	-4.72	-15.68	-18.89	-24	-24
300	-18.71	-12.55	-17.08	-2.84	-10.3	-4.63	0.98	-1.9	-3.53	-12.65	-9.99	-20.85	-24
315	-19.41	-12.45	-13.26	-3.46	-9.56	-5.83	0.42	-0.27	-3.28	-9.58	-8.49	-16.72	-24
330	-19.19	-12.78	-10.19	-7.1	-8.32	-2.97	-1.52	-0.94	-3.33	-11.27	-6.61	-13.75	-24
345	-18.56	-12.66	-10.38	-11.65	-8.93	-3.55	-2.01	-3.48	-6.46	-12.3	-8.08	-11.35	-24

Ant4													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-19.65	-15.94	-14.61	-9.22	-9.8	-7.66	2.17	1.86	-6.7	-10.38	-9.55	-10.38	-20.82
15	-18.76	-17.82	-14.17	-7.89	-15.06	-5.34	2.73	1.53	-7.74	-9.17	-8.67	-11.03	-20.82
30	-18.74	-18.62	-11.84	-7.05	-11.25	-3.91	2.67	1.4	-11.92	-9.65	-11.45	-12.27	-20.82
45	-19.76	-20.29	-9.97	-6.74	-9.54	-3.07	4.04	3.22	-5.84	-5.05	-16.01	-12.6	-20.82
60	-20.06	-21.83	-11.25	-6.62	-10.01	-3.35	4.44	4.06	-6.16	-7.07	-12.17	-14.29	-20.82
75	-20.07	-20.29	-15.6	-7.08	-11.6	-2.84	2.6	1.92	-5.95	-5.76	-10.16	-17.24	-20.82
90	-19.72	-17.34	-20.1	-8.27	-14.7	-3.15	0.51	-1.46	-11.93	-16.32	-10.95	-20.82	-20.82
105	-19.37	-16.56	-18.65	-6.66	-11.67	-1.03	4.79	1.83	-9.47	-12.03	-12.19	-14.79	-20.82
120	-19.91	-18.24	-15.95	-7.4	-15.94	-3.01	2.29	0.26	-11.24	-16.01	-19.02	-11.53	-20.82
135	-21.31	-19.16	-13.51	-5.49	-11.81	-2.08	3.88	1.74	-12.83	-9.81	-13.92	-10.95	-20.82
150	-20.77	-18.41	-13.56	-5.84	-13.73	-3.9	2.21	0.96	-8.89	-14.28	-15.25	-14.3	-20.82
165	-20.15	-17.29	-12.18	-6.89	-12.77	-1.54	0.83	-1.15	-8.26	-16.8	-12.5	-14.37	-20.82
180	-20.64	-15.47	-12.96	-7.62	-12.03	-2.1	1.05	0.77	-7.86	-18.23	-17.99	-11.71	-20.82
195	-20.17	-14.92	-11.38	-9.14	-10.54	-3.32	-0.18	-0.58	-7.09	-12.21	-15.75	-12.72	-20.82
210	-19.98	-15.25	-11.91	-4.77	-10.94	-3.51	-0.92	-1.64	-3.88	-13.08	-9.73	-12.64	-20.82
225	-20.44	-16.73	-13.16	-2.39	-12.14	-3.06	1.43	1.07	-3.72	-9.32	-6.6	-12.8	-20.82
240	-20.07	-20.63	-14.91	-2.32	-12.36	-7.9	-0.24	-2.96	-4.45	-13.88	-11.7	-14.38	-20.82
255	-20.02	-26.38	-17.63	-2.03	-9.89	-4.04	1.77	2.06	-3.33	-17.27	-11.83	-14.92	-20.82

270	-20.55	-29.2	-14.84	-3.62	-21.28	-5.82	0.49	0.28	-5.98	-20.73	-9.52	-13.83	-20.82
285	-19.45	-26.51	-10.63	-3.72	-19.09	-3.27	1.45	1.98	-6.2	-12.41	-12.88	-15.24	-20.82
300	-18.8	-22.49	-13.67	-3.34	-10.55	-6.65	-1.61	-0.24	-9.15	-11.03	-13.31	-18.07	-20.82
315	-19.13	-18.51	-11.82	-6.43	-15.52	-2.42	1.03	2.79	-5.13	-14.97	-13.8	-19.44	-20.82
330	-19.46	-15.88	-14.15	-5.28	-8.76	-4.95	0.2	-0.02	-4.93	-15.56	-16.92	-12.65	-20.82
345	-19.95	-14.68	-13.58	-7.3	-6.64	-7.94	1.31	0.85	-8.43	-12.14	-9.53	-11.07	-20.82

5350MHz Composite Gain													
Freq	5350												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.98	-14.2	-13.51	-11.13	-10.99	-5.15	0.99	0.3	-7.92	-11.01	-10.43	-10.85	-22.13
15	-18.47	-15.09	-13.49	-9.56	-13.88	-2.31	1.5	0.2	-9.59	-11.67	-10.05	-11.02	-22.13
30	-18.55	-15.6	-11.89	-6.81	-11.96	-3.29	2.38	0.67	-11.08	-12.19	-12.53	-12.62	-22.13
45	-19.44	-15.46	-10.91	-6.05	-11.99	-1.58	3.67	2.17	-8.22	-7.88	-14.14	-11.97	-22.13
60	-19.63	-14.9	-11.92	-7.26	-11.72	-2.35	3.06	2.04	-8.36	-9.76	-13.66	-11.87	-22.13
75	-18.74	-15.91	-14.03	-6.98	-13.37	-1.91	2.57	0.87	-8.18	-8.21	-11.1	-14.51	-22.13
90	-18.4	-16.91	-15.17	-7.8	-13.01	-3.53	0.78	-1.78	-9.14	-13.11	-11.59	-18.08	-22.13
105	-18.28	-16.86	-15.84	-7.52	-12.01	-1.61	3.99	2.35	-6.45	-8.37	-11.94	-14.1	-22.13
120	-18.28	-17.38	-14.34	-7.18	-12.24	-1.96	4.05	2.42	-7.83	-9	-17.52	-11.13	-22.13
135	-18.81	-18.09	-13.3	-5.21	-10.65	-1.95	3.97	1.95	-10.14	-7.47	-14.53	-10	-22.13
150	-18.4	-17.6	-14.35	-6.02	-11.2	-4.61	2.64	0.36	-11.55	-13.58	-11.39	-10.34	-22.13
165	-17.7	-16.26	-13.67	-7.26	-9.47	-3.21	1.83	-0.14	-10.94	-16.01	-10.58	-10.93	-22.13
180	-17.91	-15.06	-12.67	-6.45	-9.78	-4	1.83	0.75	-8.7	-16.68	-16.7	-10.28	-22.13
195	-18.48	-15.41	-12.46	-7.98	-10.2	-5.5	0.57	0.17	-6.87	-12.65	-15.47	-11.09	-22.13
210	-18.47	-16.61	-12.82	-5.72	-10.6	-6.02	-0.68	-1.13	-5.45	-14.74	-11.27	-13.35	-22.13
225	-18.67	-18.34	-12.93	-3.68	-10.37	-4.09	1.18	0.78	-5.3	-10.33	-8.24	-13.07	-22.13
240	-18.16	-21.84	-14.71	-3.96	-10.21	-7.85	-0.23	-1.81	-6.18	-13.61	-11.16	-15.76	-22.13
255	-18.05	-21.62	-15.26	-3.95	-11.81	-3.91	1.28	1.14	-5.51	-17.23	-14.63	-15.81	-22.13
270	-18.42	-18.31	-14.36	-3.77	-14.62	-4.63	0.63	0.37	-5.19	-14.95	-10.18	-15.54	-22.13
285	-18.68	-16.27	-12.69	-3.62	-14.42	-2.69	1.46	1.93	-5.4	-13.74	-14.92	-17.71	-22.13
300	-18.75	-15.14	-15.05	-3.08	-10.42	-5.52	-0.12	-0.99	-5.49	-11.76	-11.34	-19.24	-22.13
315	-19.27	-14.5	-12.48	-4.7	-11.59	-3.8	0.74	1.52	-4.11	-11.49	-10.38	-17.87	-22.13
330	-19.32	-14.06	-11.73	-6.1	-8.53	-3.85	-0.58	-0.46	-4.06	-12.91	-9.23	-13.17	-22.13
345	-19.2	-13.55	-11.69	-8.95	-7.64	-5.21	-0.04	-0.8	-7.33	-12.22	-8.74	-11.21	-22.13

Ant3													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-18.86	-18.2	-11.95	-13.16	-15.62	-1.11	0.56	-3.81	-21.2	-18.73	-18.76	-23.45	-24.71
15	-19.1	-16.18	-12.76	-14.08	-14.95	0.27	0.63	-3.79	-14.89	-13.75	-15.88	-18.49	-24.71
30	-19.63	-16	-14.37	-8.97	-13.47	0.09	1.31	-2.74	-17.09	-10.45	-18.83	-19.31	-24.71
45	-19.21	-19.62	-15.1	-10.86	-17.91	2.23	4.14	-1.81	-10.44	-10.72	-20.75	-20.62	-24.71

60	-18.56	-21.29	-11.79	-9.9	-17.83	0.01	1.11	-3.64	-13.64	-16.13	-16.26	-18.8	-24.71
75	-19.07	-20.75	-21	-8.59	-19.52	2.14	3.37	-2.25	-12.06	-12.38	-17.1	-23.87	-24.71
90	-19.33	-19.94	-19.31	-10.36	-14.86	-2.47	0.22	-5.78	-15.94	-13.18	-18.4	-20.14	-24.71
105	-18.91	-18.69	-19.88	-8.35	-16.26	0.28	3.08	-1.68	-13.69	-10.11	-17.82	-16.4	-24.71
120	-19.48	-18.94	-16.33	-7.31	-11.16	0.56	4.99	0.45	-7.13	-6.97	-18.85	-12.76	-24.71
135	-18.98	-18.69	-14.87	-6.36	-18.34	1.16	3.25	-0.87	-8.87	-8.15	-14.99	-10.2	-24.71
150	-18.54	-19.08	-15.14	-7.06	-19.09	-0.43	2.99	-2.81	-9.67	-8.92	-10.19	-9.82	-24.71
165	-19.51	-18.04	-15.01	-6.23	-13.05	0.9	3.23	-1.8	-15.13	-10.16	-9.31	-10.14	-24.71
180	-20.27	-17.84	-11.68	-6.09	-14.72	-0.9	3.11	-1.3	-26.42	-10.46	-12.96	-12	-24.71
195	-19.42	-19.12	-10.65	-5.66	-19.58	-2.66	2.28	-0.42	-16.44	-12.81	-12.08	-13.25	-24.71
210	-19.33	-19.57	-13.9	-5.74	-11.37	-4.78	-1.15	-2.37	-20.35	-9.72	-11.56	-15.73	-24.71
225	-19.37	-21.27	-12.67	-6.84	-13.99	-2.71	0.5	-0.53	-13.53	-9.6	-10.64	-17.83	-24.71
240	-19.63	-23.2	-11.94	-7.07	-13.82	-1.93	0.53	-1.78	-17.07	-13.97	-11.9	-24.71	-24.71
255	-19.4	-18.24	-11.68	-5.37	-14.41	-1.02	1.31	-0.97	-17.2	-14.26	-17.8	-18.93	-24.71
270	-19.68	-16.07	-15.86	-5.78	-15.26	-2.81	1.19	-1.36	-11.92	-16.87	-16.02	-18.16	-24.71
285	-19.62	-15.63	-19.94	-4.08	-15.61	-1.03	2.6	0.83	-9.14	-14.57	-31.98	-20.14	-24.71
300	-19.47	-15.67	-16.67	-5.82	-14.24	-4.08	-0.65	-4.15	-7.24	-12.19	-18.12	-23.47	-24.71
315	-19.62	-15.22	-13.78	-7.41	-14.64	-2.27	1.27	-0.79	-7.48	-11.44	-20.17	-19.69	-24.71
330	-19.66	-15.98	-13.36	-10.43	-14.75	0.16	-2.09	-0.96	-7.22	-18.05	-11.45	-17.21	-24.71
345	-18.97	-17.6	-12.86	-13.79	-24.71	-1.26	-2.99	-4.24	-11.18	-18.09	-14.23	-21.04	-24.71

Ant4													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-23.89	-15.46	-9.26	-7.87	-13.1	-4.3	2.73	-0.2	-12.08	-7.8	-8.33	-14.72	-24.26
15	-24.25	-16.79	-9.21	-6.91	-22.44	-1.18	2.73	-1.44	-12.96	-8.46	-7.85	-13.19	-24.26
30	-22.63	-17.06	-9.15	-6.62	-18.88	0.05	4.27	-0.7	-10.5	-13.61	-10.06	-12.83	-24.26
45	-22.31	-17.49	-13.53	-7.96	-18.99	0.88	4.98	1.07	-6.25	-8.97	-15.16	-14.79	-24.26
60	-22.76	-19.22	-17.88	-5.87	-14.79	-0.26	4.76	0.42	-6.21	-6.74	-19.3	-16.95	-24.26
75	-22.99	-21.05	-13.57	-7.2	-13.16	-2.37	2.57	-1.9	-16.37	-9.79	-20.46	-15.96	-24.26
90	-22.94	-23.11	-11.86	-6.84	-14.67	0.08	2.51	-3.55	-15.55	-19.21	-15.79	-17.24	-24.26
105	-23.47	-26.67	-12.07	-7.7	-21.23	0.91	3.73	-3.09	-13.33	-13.01	-17.86	-18.65	-24.26
120	-22.78	-26.42	-12.27	-9.11	-15.62	1.01	2.89	-3.31	-15.46	-12.62	-18.77	-18.16	-24.26
135	-23.07	-23.11	-12.31	-7.63	-13.92	0.4	3.41	-3.54	-11.7	-7.26	-17.76	-21.54	-24.26
150	-23.88	-22.69	-10.5	-7.51	-11.36	0.79	3.41	-2.93	-11.06	-6.3	-19.26	-24.26	-24.26
165	-25.01	-21.79	-8.92	-11.27	-14.65	1.75	1.27	-2.57	-8.36	-10.81	-13.72	-20.91	-24.26
180	-24.17	-19.09	-9.39	-9.38	-13.91	1.23	0.81	0.2	-10.46	-16.52	-14.03	-18.16	-24.26
195	-24.08	-18.21	-11.74	-9.18	-19.02	0.71	0.79	-0.9	-13.47	-14.24	-21.18	-15.89	-24.26
210	-24.55	-18.53	-10.89	-7.5	-16.3	0.54	-1.29	-1.16	-8.49	-11.51	-15.19	-14.16	-24.26
225	-24.08	-17.98	-11.85	-4.52	-17.31	-1.79	0.4	-0.54	-9.19	-11.51	-12.96	-15.01	-24.26
240	-24.74	-19.31	-14.29	-3.35	-11.78	-3.54	1.25	-3.71	-6.05	-13.1	-18.64	-16.14	-24.26
255	-25.75	-22.88	-13.47	-2.45	-11.29	-1.81	1.32	-0.23	-7.3	-20.66	-12.02	-12.9	-24.26

270	-25.49	-24.09	-10.64	-4.16	-12.28	-2.91	2.03	-0.58	-10.24	-15.67	-15.02	-11.98	-24.26
285	-24.98	-23.22	-10.51	-3.79	-8.95	-1.11	1.1	-0.77	-14.03	-13.76	-12.96	-13.96	-24.26
300	-24.33	-20.97	-11.57	-5.04	-20.18	-2.41	0.13	-1.92	-14.44	-11.93	-14.69	-18.82	-24.26
315	-23.13	-16.13	-13.29	-7.02	-16.3	-1.55	0.13	0.13	-13.8	-12.45	-16.28	-20.58	-24.26
330	-23.41	-13.42	-12.04	-6.29	-10.49	-2.31	0.43	-2.02	-18.96	-12.25	-14.96	-15.93	-24.26
345	-23.44	-13.83	-9.36	-8.08	-10.42	-3.61	2.7	-0.38	-14.74	-8.78	-10.24	-14.48	-24.26

5600MHz Composite Gain													
Freq	5600												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-20.68	-16.62	-10.4	-9.75	-14.18	-2.42	1.78	-1.64	-14.59	-10.47	-10.96	-17.18	-24.48
15	-20.95	-16.47	-10.63	-9.16	-17.25	-0.39	1.81	-2.46	-13.82	-10.34	-10.23	-15.08	-24.48
30	-20.88	-16.5	-11.02	-7.64	-15.38	0.07	3.04	-1.6	-12.65	-11.75	-12.53	-14.96	-24.48
45	-20.49	-18.43	-14.24	-9.17	-18.42	1.61	4.58	-0.14	-7.86	-9.76	-17.11	-16.79	-24.48
60	-20.17	-20.13	-13.84	-7.43	-16.05	-0.12	3.31	-1.15	-8.5	-9.28	-17.52	-17.78	-24.48
75	-20.6	-20.9	-15.86	-7.84	-15.27	0.45	2.99	-2.07	-13.7	-10.89	-18.46	-18.32	-24.48
90	-20.77	-21.24	-14.15	-8.25	-14.76	-1.01	1.51	-4.52	-15.74	-15.22	-16.9	-18.45	-24.48
105	-20.62	-21.06	-14.41	-8.01	-18.07	0.61	3.42	-2.33	-13.51	-11.32	-17.84	-17.38	-24.48
120	-20.82	-21.24	-13.84	-8.12	-12.84	0.79	4.07	-1.04	-9.55	-8.93	-18.81	-14.67	-24.48
135	-20.56	-20.36	-13.4	-6.95	-15.59	0.8	3.33	-2	-10.06	-7.68	-16.16	-12.9	-24.48
150	-20.44	-20.52	-12.23	-7.28	-13.69	0.22	3.21	-2.87	-10.31	-7.42	-12.69	-12.68	-24.48
165	-21.44	-19.52	-10.97	-8.06	-13.78	1.35	2.36	-2.17	-10.54	-10.47	-10.98	-12.8	-24.48
180	-21.8	-18.42	-10.39	-7.43	-14.3	0.29	2.11	-0.49	-13.36	-12.51	-13.46	-14.07	-24.48
195	-21.15	-18.64	-11.16	-7.07	-19.29	-0.66	1.6	-0.65	-14.71	-13.47	-14.59	-14.37	-24.48
210	-21.2	-19.02	-12.14	-6.53	-13.17	-1.35	-1.22	-1.72	-11.23	-10.52	-13.01	-14.87	-24.48
225	-21.12	-19.32	-12.24	-5.53	-15.34	-2.23	0.45	-0.53	-10.84	-10.45	-11.65	-16.2	-24.48
240	-21.47	-20.83	-12.96	-4.82	-12.68	-2.66	0.9	-2.64	-8.73	-13.51	-14.08	-18.59	-24.48
255	-21.51	-19.97	-12.48	-3.67	-12.58	-1.4	1.32	-0.58	-9.89	-16.37	-14.01	-14.94	-24.48
270	-21.68	-18.44	-12.51	-4.89	-13.52	-2.86	1.63	-0.95	-11	-16.23	-15.49	-14.05	-24.48
285	-21.52	-17.94	-13.05	-3.93	-11.11	-1.07	1.91	0.1	-10.93	-14.15	-15.92	-16.03	-24.48
300	-21.25	-17.56	-13.41	-5.41	-16.26	-3.17	-0.24	-2.89	-9.49	-12.06	-16.07	-20.55	-24.48
315	-21.03	-15.65	-13.53	-7.21	-15.39	-1.9	0.74	-0.31	-9.58	-11.92	-17.8	-20.11	-24.48
330	-21.14	-14.51	-12.65	-7.88	-12.12	-0.9	-0.65	-1.46	-9.95	-14.25	-12.86	-16.52	-24.48
345	-20.65	-15.32	-10.77	-10.06	-13.27	-2.28	0.73	-1.89	-12.61	-11.31	-11.79	-16.62	-24.48

Ant3													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-17.46	-16.97	-7.72	-14.52	-12.15	0.08	-0.09	-5.89	-16.1	-15.37	-19.14	-23.64	-26.68
15	-17.56	-17.52	-8.95	-12.31	-10.92	0.05	0.98	-8	-14	-13.78	-20.36	-17.96	-26.68
30	-17.62	-19.46	-11.58	-12.47	-9.04	1.62	2.34	-6.65	-12.09	-11.28	-17.96	-17.89	-26.68
45	-17.27	-19.34	-10.84	-14.54	-11	2.12	4.48	-7.67	-8.96	-13.25	-13.95	-19.74	-26.68

60	-17.25	-20.74	-12.67	-9.51	-10.62	0.4	0.97	-9.41	-11.89	-16.56	-14.44	-19.83	-26.68
75	-18.14	-22.46	-13.37	-11.03	-13.07	1.61	2.52	-8.86	-12.55	-15.57	-16.62	-20.47	-26.68
90	-17.97	-20.29	-13.32	-8.63	-11.28	0.8	1.63	-9.82	-12.72	-13.38	-16.82	-21.46	-26.68
105	-17.27	-18.01	-20.44	-9.02	-14.26	-0.56	0.79	-6.77	-11.15	-11.42	-21.8	-19.07	-26.68
120	-17.53	-17.51	-17.23	-8.34	-12.76	1.99	4.36	-4.13	-7.02	-8.76	-19.79	-15.29	-26.68
135	-17.32	-18.69	-15.83	-9.34	-20.35	1.79	3.33	-7.91	-7.02	-11.37	-15.22	-13.03	-26.68
150	-17.52	-23.54	-15.47	-9.52	-15.86	2.16	3.2	-5.98	-9.17	-10.28	-15	-13.77	-26.68
165	-18.45	-25.17	-14.2	-6.51	-20.11	0.91	2.07	-7.08	-13.64	-13.72	-13.37	-15.17	-26.68
180	-18.05	-22.02	-13.82	-5.51	-16.29	-0.91	1.46	-3.93	-24.75	-12.39	-14.68	-16.9	-26.68
195	-16.87	-21.12	-12.82	-4.8	-23.21	-0.07	2.27	-2.29	-23.64	-11.42	-14.54	-16.66	-26.68
210	-16.89	-22.3	-10.01	-6.6	-15.58	-0.72	1.76	-2.27	-24.36	-11.7	-14.39	-15.38	-26.68
225	-16.73	-26.4	-9.57	-8.26	-19.34	-3.43	-0.84	-3.98	-14.26	-10.67	-15.4	-13.21	-26.68
240	-17.11	-25.6	-14	-7.56	-14.87	-0.52	2.09	-1.34	-12.33	-10.71	-17.03	-16.59	-26.68
255	-17.35	-21.57	-15.01	-9.21	-15.73	-2.69	-0.53	-5.06	-13.07	-11.34	-19.49	-17.72	-26.68
270	-17.53	-19.74	-11.88	-7.01	-13.02	-0.1	1.85	-2.34	-22.52	-18.49	-16.64	-15.11	-26.68
285	-17.14	-19.88	-10.61	-7.69	-14.19	-2.45	1.87	-3.62	-20.45	-14.8	-18.95	-15.66	-26.68
300	-16.96	-21.13	-9.43	-7.52	-13.37	-2.64	1.25	-2.88	-14.12	-15.6	-15.91	-19.62	-26.68
315	-16.68	-21.55	-9.06	-9.74	-20.3	-1.53	0.17	-3.47	-11.59	-14.13	-18.9	-26.68	-26.68
330	-16.86	-19.46	-9.63	-14.41	-33.95	0.46	0.2	-2.16	-15.5	-19.04	-16.98	-24.63	-26.68
345	-17.11	-18.11	-8.51	-19.7	-13.19	-0.2	-2.22	-4.16	-16.99	-19.68	-16.77	-26.05	-26.68

Ant4													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-21.54	-19.4	-9.88	-7.31	-13.31	-2.05	2.79	-2.62	-15.67	-9.12	-12.68	-20.46	-23.83
15	-23.54	-20.43	-8.95	-7.36	-21.27	0.87	2.8	-4.21	-18.68	-11.66	-11.47	-14.87	-23.83
30	-22.01	-22.59	-11.43	-7.72	-12.84	1.31	4.93	-4.42	-10.76	-17.49	-12.84	-12.7	-23.83
45	-22.08	-24.86	-12.1	-7.36	-16.74	1.06	4.49	-3.71	-6.51	-12.57	-12.38	-13.71	-23.83
60	-22.64	-24.87	-13.93	-8.58	-12.7	1.58	4.47	-4.24	-9.1	-10.43	-15.21	-16.5	-23.83
75	-22.57	-24.21	-13.31	-7.27	-15.68	-1.22	1.11	-5.78	-15.9	-13.27	-20.42	-16.21	-23.83
90	-22.2	-23.44	-9.14	-6.12	-13.28	2.35	3.51	-5.84	-10.3	-21.7	-22.11	-16.1	-23.83
105	-22.58	-21.61	-9.16	-6.44	-15.17	1.21	3.68	-10.41	-16.23	-19.27	-19.2	-17.69	-23.83
120	-21.67	-17	-8.55	-5.92	-12.44	0.9	1.39	-10.29	-15.79	-10.59	-19.67	-19.27	-23.83
135	-22.2	-15.38	-8.65	-8.08	-10.05	1.81	4.02	-8.35	-13.86	-11.05	-17.96	-21.94	-23.83
150	-22.54	-14.43	-7.87	-8.06	-10.27	1.12	1.98	-8.03	-12.18	-7.79	-15.59	-23.83	-23.83
165	-22.3	-15.84	-7.75	-10	-11.96	0.4	-1.04	-7.48	-11.57	-10.9	-14.7	-22.52	-23.83
180	-22.11	-16.87	-7.51	-8.89	-10.52	0.26	-1.35	-3.33	-10.82	-12.82	-16.03	-20.99	-23.83
195	-21.78	-14.77	-9.6	-7.73	-12.63	0.13	-1.09	-4.99	-17.81	-12.79	-23.2	-19.06	-23.83
210	-21.1	-14.99	-9.58	-7.61	-18.15	1.77	0.02	-1.84	-15.02	-12.46	-18.13	-16.37	-23.83
225	-20.9	-17.15	-9.28	-6.66	-17.48	-0.16	0.96	-1.94	-15.3	-14.38	-17.21	-16.32	-23.83
240	-20.84	-18.19	-9.88	-4.77	-10.84	-2.36	0.7	-6.14	-11.39	-15.16	-18.9	-16.76	-23.83
255	-20.76	-18.24	-10.1	-5.73	-10.36	-0.81	1.1	-2.06	-13.26	-21.06	-20.7	-14.86	-23.83

270	-21.46	-18.69	-10.8	-5.31	-7.93	-2.02	2.26	-2.38	-16.91	-18.77	-30.64	-14.77	-23.83
285	-22.56	-21.16	-12.74	-5.04	-8.98	-2.55	0.15	-5.24	-16.24	-16.51	-19.23	-14.62	-23.83
300	-21.4	-19.84	-15.09	-7.46	-13.94	-0.41	2.41	-2.66	-16.63	-19.28	-20.35	-15.77	-23.83
315	-20.81	-16.19	-11.61	-5.88	-18.8	-2.04	-1.43	-3.64	-14.76	-16.73	-15.69	-15.46	-23.83
330	-20.91	-15.74	-9.78	-6.54	-13.27	-0.13	2.59	-2.93	-20.2	-16.69	-19.35	-15.43	-23.83
345	-20.95	-17.65	-9.49	-7.66	-12.1	0.1	3.52	-1.87	-18.43	-11.21	-15.4	-18.76	-23.83

5800MHz Composite Gain													
Freq	5800												
Phi\Theta	0	15	30	45	60	75	90	105	120	135	150	165	180
0	-19.04	-18.02	-8.67	-9.56	-12.69	-0.86	1.58	-3.95	-15.88	-11.21	-14.81	-21.77	-25.03
15	-19.59	-18.74	-8.95	-9.16	-13.55	0.48	1.98	-5.7	-15.74	-12.59	-13.95	-16.15	-25.03
30	-19.28	-20.75	-11.5	-9.48	-10.54	1.47	3.83	-5.39	-11.37	-13.36	-14.69	-14.56	-25.03
45	-19.04	-21.28	-11.42	-9.61	-12.98	1.62	4.49	-5.25	-7.56	-12.9	-13.09	-15.75	-25.03
60	-19.16	-22.33	-13.25	-9.02	-11.54	1.03	3.06	-6.1	-10.27	-12.49	-14.81	-17.85	-25.03
75	-19.81	-23.25	-13.34	-8.76	-14.18	0.42	1.87	-7.05	-13.91	-14.27	-18.12	-17.84	-25.03
90	-19.59	-21.59	-10.75	-7.2	-12.17	1.64	2.67	-7.39	-11.34	-15.79	-18.7	-18	-25.03
105	-19.16	-19.45	-11.86	-7.54	-14.69	0.41	2.47	-8.22	-12.99	-13.77	-20.31	-18.33	-25.03
120	-19.12	-17.25	-11.01	-6.96	-12.6	1.48	3.12	-6.2	-9.49	-9.58	-19.73	-16.84	-25.03
135	-19.11	-16.73	-10.9	-8.66	-12.67	1.8	3.69	-8.12	-9.21	-11.21	-16.38	-15.52	-25.03
150	-19.34	-16.94	-10.18	-8.73	-12.22	1.67	2.63	-6.89	-10.42	-8.86	-15.28	-16.37	-25.03
165	-19.96	-18.37	-9.87	-7.91	-14.35	0.66	0.79	-7.28	-12.48	-12.09	-13.98	-17.45	-25.03
180	-19.62	-18.72	-9.61	-6.88	-12.51	-0.29	0.28	-3.62	-13.66	-12.6	-15.3	-18.48	-25.03
195	-18.67	-16.88	-10.92	-6.02	-15.28	0.03	0.91	-3.43	-19.81	-12.05	-17	-17.7	-25.03
210	-18.5	-17.26	-9.79	-7.08	-16.68	0.7	0.98	-2.05	-17.55	-12.06	-15.87	-15.85	-25.03
225	-18.33	-19.67	-9.42	-7.39	-18.31	-1.49	0.15	-2.84	-14.75	-12.14	-16.21	-14.49	-25.03
240	-18.59	-20.48	-11.47	-5.94	-12.4	-1.34	1.45	-3.11	-11.83	-12.39	-17.87	-16.67	-25.03
255	-18.73	-19.59	-11.9	-7.13	-12.26	-1.65	0.36	-3.31	-13.16	-13.91	-20.05	-16.06	-25.03
270	-19.06	-19.18	-11.31	-6.08	-9.77	-0.95	2.06	-2.36	-18.87	-18.63	-19.48	-14.94	-25.03
285	-19.05	-20.47	-11.55	-6.17	-10.85	-2.5	1.09	-4.35	-17.85	-15.57	-19.09	-15.11	-25.03
300	-18.64	-20.44	-11.4	-7.49	-13.65	-1.38	1.87	-2.77	-15.2	-17.06	-17.59	-17.28	-25.03
315	-18.27	-18.09	-10.15	-7.39	-19.49	-1.78	-0.56	-3.55	-12.89	-15.24	-17	-18.15	-25.03
330	-18.43	-17.21	-9.7	-8.89	-16.24	0.18	1.56	-2.53	-17.24	-17.71	-18.01	-17.95	-25.03
345	-18.62	-17.87	-8.97	-10.41	-12.61	-0.05	1.54	-2.87	-17.65	-13.64	-16.03	-21.03	-25.03