


Laser Presenter

Use Manual

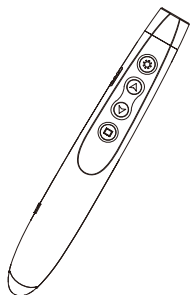

Read through the manual carefully
before operation

◆Product Parameter:

Transmitter:

Remote-control technology:

RF2.4 GHZ

Control distance: 30m

Laser distance: >200m

Laser power: <1mW

Battery: 1*AAA (one battery)

Working voltage: 1.5V

Standby current: 30uA

Product dimension: 136*21*20mm

Product total weight: 30g

Receiver:

Operation system: Windows, Mac

OS, XP, Vista, Linux

Interface: USB 2.0,


compatible with USB 1.1, USB 3.0

Working voltage:

USB electricity supply(4.5-5.5V)

Dimension: 23*14*12mm

◆Product Diagram

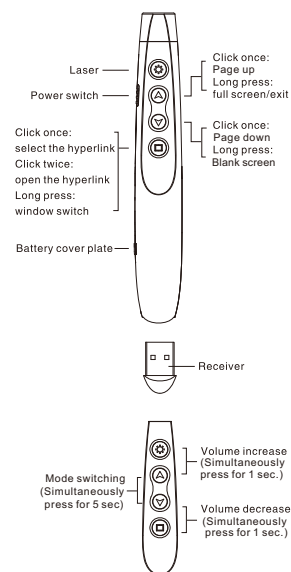

1

2

◆Function List

Function Keys	Function Description
	Laser key, press to emit laser; release the key, laser off
	Click once, page up
	Press and hold: full screen/exit (only available for PowerPoint)
	Click once, page down
	Press and hold: blank screen/exit (Only available for PowerPoint; under Win8 system, the input method should be switched to English)
	Click once to perform Tab function; That is to select the hyperlink; (Only available for PowerPoint under full screen displaying state)
	Click twice to perform Enter function; That is to open the hyperlink; (Only available for PowerPoint under full screen displaying state)
	Press and hold to perform Alt + Tab function; That is to switch the window
	Press them together for 1 sec. to increase the volume
	Press them together for 5 seconds to switch mode. Please refer to the following Note 4 for more details.
	Press them together for 1 sec. to decrease the volume

Notes:

1. Blank screen function: Only available for PowerPoint, if under Win8 system, the input method should be switched to English state.
2. Hyperlink function: Only available for PowerPoint with full screen display, WPS office doesn't support the function.
3. Under Mac system, it only supports Page up and page down functions on the Keynote application.

3

4.This product can fully support PPT, keynote,Prezi and other presentation applications. Just press Page up and Page down buttons at the same time for 5 seconds to switch from different modes.

◆Mode Switching Steps:

Default Mode: Support page up/down for PPT and keynote, which is equivalent to the up and down arrow on the keyboard.


1st switching mode : Support page up/down for Browser and picture viewer, which is equivalent to "Page UP", "Page Down" key on the keyboard.

2nd switching mode: Support page up/down for Prezi, which is equivalent to left and right arrow on the keyboard.

3rd switching mode: Back to Default (Support PPT,keynote again)

◆Operation Indication:

- 1.Pull the Mini USB receiver out of the presenter, and insert it to USB port of computer.
- 2.The product supports Windows,Mac operation system.For initial installation of Mac,iL shows Keyboard Set Assistant (keyboard setting assistant)and indicates unknown keyboard. Just click Continue key once and finish the installation, afterward, the presenter will work correspondingly.
- 3.The distance of receiver will be reduced by interference from peripheral electronic equipment.
- 4.When not operating the product,it will enter the dormancy state,so press any of the key to arouse.

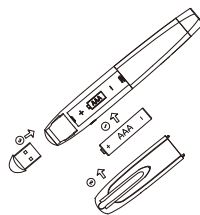

4

◆Battery Installation:

The product adopts a triple A battery (AAA) as power supply.The installation process:pull out the receiver,open the battery cover and assemble the battery, fix the battery cover and then return the receiver to the end.

◆Battery Installation Notice:

Don't assemble the battery reversely, please confirm the positive pole (+) and negative (-) label of the battery for correct installation.

Don't leave the battery in product in case of long time out of use. Please take out the battery. When the product has no function or remote-control distance shortens, please replace it for new battery.

◆Kindly Reminder:

Please throw the waste battery into the battery special recycling bin or sent to related department. Don't discard the battery randomly to avoid environment pollution.

◆Safety Indication:

- 1.The laser is harmful to the eye. Don't point the laser to other person, especially for the face. Prevent the direct laser to the eye!
- 2.Don't point the laser to the mirror or other high reflection surface!
- 3.Prohibit the children to play with the product.
- 4.Don't look the laser of remote control with the telescope and other devices.
- 5.The dismantling, adjusting and repairing must be done by technicians.
- 6.The product belongs to the third kind of laser products.



5

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.The device can be used in portable exposure condition without restriction.