

尺寸:320x130mm

包布磁流体蓝牙音响

使用说明书

功能参数

型号:RY-CLT-004

产品重量:725g

产品尺寸:197*62*86mm

输入电压:5V

输入电流:2A

额定功率:10W




产品配件

产品配件:磁流体音响主体,说明书,电源适配器,握把小磁铁

操作说明


1 蓝牙指示灯,开机后亮起:

闪烁:等待连接
常亮:连接成功
连接成功后,有播放音乐时,缓慢闪烁




2 开关键:

长按开关机,短按为播放/暂停功能

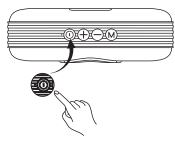


3 音乐控制按键:

短按:提高音量1档,共16档音量,开机默认5档音量,当调到最大音量时,有“嘟”提示音
长按:切换上一曲音乐




4 音乐控制按键:

短按:降低音量1档,共16档音量,开机默认5档音量,当调到最小音量时,有“嘟”提示音
长按:切换下一曲音乐



5 模式按键:

短按切换模式:蓝牙模式/拾音模式/AUX IN模式/TF卡模式



6 蓝牙配对说明:

1.长按两秒开机:
长按开机控制两秒,直至扬声器打开
2.开机默认蓝牙搜索配对模式,如已配对过则可切断配对设备,即可与新设备连接
3.从音频设备的蓝牙列表中选择CLT-004



7 充电指示灯:

充电时亮红灯,充满灭灯

8 TYPE-C充电插口,

支持5V 2A输入

9 AUX IN 音源输入插口

10 TF卡插口.



磁流体保养

什么是磁流体 (Ferrofluid)?

磁流体是一种环保无毒磁性物质,主要由非常细小的铁粒子和表面活性剂混合基础油组成,这种液态物质由于表面活性剂不会沉淀并能够均分散在基础油中磁流体最初在1960年代被NASA开发用于太空航天器中的燃料运输和密封连接,曾经只存在于太空中的科幻元素如今已成为世界中广泛用的磁性材料。

注意事项

- 请勿连续使用超过12小时(至少需要1小时的冷却时间)
- 仅在室内使用,减少阳光曝晒最佳使用环境温度为15-28℃
- 磁流体运动得越激烈其寿命越短
- 切勿将外部磁铁长时间连接到玻璃瓶上,避免磁流体沾至瓶壁
- 磁流体瓶内预留气泡为预防玻璃瓶热膨胀破裂
- 请勿取出玻璃瓶中的内容物并用手触摸或食用
- 请勿放置于高温或低温环境,避免磁流体瓶身破裂,例如密闭车内,冬天户外
- 如果玻璃瓶中的内容物不慎沾到您的手上或进入您的眼睛,请立即用流水冲洗。沾手上可以用肥皂或洗手液清洗,沾到眼部清水冲洗后,请立即就医
- 磁流体分层:取出磁铁将磁流体吸回一个整体观察是否内部包裹气泡将气泡排出后,继续使用可获得更好的视觉效果
- 磁流体沾瓶?

磁流体长时间放置同一个角度不使用,因温差变化可能会出现沾瓶现象,可将瓶子从产品内取出用磁铁吸取沾瓶位置,让磁流体聚合



Baobu Magnetic fluid Bluetooth Speaker

USER MANUAL

Functional parameters

Model: RY-CLT-004


Product weight: 725g

Product size: 197*62*86mm

Input Voltage: 5V

Input Current: 2A

Rated Power: 10W

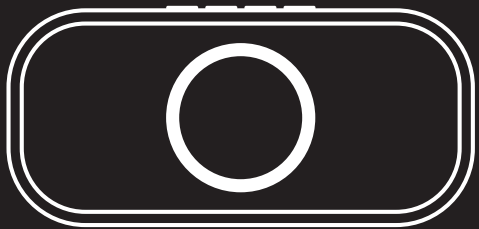


Product accessories

Product accessories: Magnetic fluid audio body, instruction manual, power adapter, small magnetic handle.

Operating instructions


1 Bluetooth indicator light, lights up after turning on:

Blinking: Waiting for connection
Constant light: Successful connection
Slow blinking light when there is music playing after successful connection




2 on/off switch:

Long press to turn on/off, short press for play/pause function

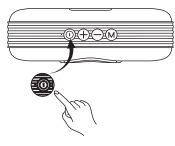


3 Music control buttons:

Short press: Increase the volume by 1 level, for a total of 16 levels. When turned on, the default volume is 5 levels. When set to the maximum volume, there will be a "beep" prompt sound
Long press: Switch to the previous music track




4 Music control buttons:

Short press: Reduce the volume by 1 level, for a total of 16 levels. When turned on, the default volume is 5 levels. When the volume is set to the minimum level, there will be a "beep" prompt sound
Long press: Switch to the next music track

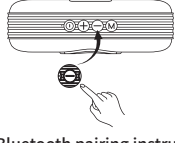

5 Mode button:

Short press to switch modes: Bluetooth mode/Pick up mode/AUX IN mode/TF card mode



6 Bluetooth pairing instructions:

1. Long press two seconds to turn on: Long press the power on control for two seconds until the speaker turns on.
2. Power on the default Bluetooth search pairing mode, such as has been paired to cut off the paired device, you can connect with a new device
3. Select CLT-004 from the Bluetooth list of audio devices.



7 Charging indicator light:


When charging, the red light will turn on, and when fully charged, the light will turn off

8 TYPE-C charging port,

Supports 5V 2A input

9 AUX IN audio input port

10 TF card socket.



Magnetic fluid maintenance

What is ferrofluid?

Magnetic fluid is an environmentally friendly and non-toxic magnetic substance, mainly composed of a mixture of very small iron particles and surfactants in base oil. This liquid substance, due to the fact that surfactants do not precipitate and can be uniformly dispersed in base oil, was first developed by NASA in the 1960s for fuel transportation and sealing connections in spacecraft, Science fiction elements that once existed only in space have now become widely used magnetic materials in the real world.

Matters needing attention

- Do not use continuously for more than 12 hours (at least 1 hour of ooling time is required)
 - Only for indoor use, reducing sunlight exposure. The optimal operating environment temperature is 15-28 °C.
 - The more intense the motion of magnetic fluid, the shorter their lifespan
 - Do not connect the external magnet to the glass bottle for an extended period of time to prevent magnetic fluid from sticking to the bottle wall
 - Reserve bubbles inside the magnetic fluid bottle to prevent thermal expansion and rupture of the glass bottle
 - Please do not remove the contents of the glass bottle and touch or consume it with your hands
 - Do not place in high or low temperature environments to avoid the rupture of the magnetic fluid bottle body, such as in a closed car or outdoors in winter
 - If the contents of the glass bottle accidentally touch your hands or enter your eyes, rinse immediately with running water. Soap or hand sanitizer can be used to clean hands. After rinsing with eye water, seek medical attention immediately
 - Magnetic fluid layering: Remove the magnet and suck the magnetic fluid back into a whole to observe whether there are bubbles wrapped inside. After the bubbles are expelled, continue to use for better visual effects
 - Magnetic fluid contamination bottle?
- If the magnetic fluid is left at the same angle for a long time without use, there may be bottle sticking due to temperature differences. The bottle can be removed from the product and the position of the bottle sticking can be sucked by a magnet to allow the magnetic fluid to aggregate



保修信息

亲爱的顾客,

感谢您对FREKVENS的信任与支持。为了保障您的权益并提供更好的购物体验我们为您提供了一系列售后服务其中包括为期6个月的功能质保,人为因素维修退换货服务及一对一的售后支持等。我们希望通过服务,让您在使FREKVENS磁流体拾音器的过程中更加安心便捷。以下是具体的售后服务规则和说明,请您详细阅读。

人为因素维修:

若产品在使用过程中出现人为因素引起的故障我们将为您提供有偿维修服务。

人为因素指的是但不限于一下情况:

*人为疏忽或错误的操作

*非授权的改装或拆卸

*损坏或撞击



保修卡

客户姓名	
联系电话	
通讯地址	
购买日期	

保修条款

- 1.使用本公司产品前请认真阅读本产品的说明书
- 2.自购机之日起一年内,在正常使用情况下,如发生性能故障,可以享受整机免费保修;一切人为损坏、自行拆机等非正常使用导致的故障,不在保修范围内
- 3.玻璃瓶为易碎品配件,不在保修范围内,如产品收货时候,发现玻璃瓶破损请联系商家补发玻璃瓶。

Warranty Information

Dear customer,

Thank you for your trust and support in FREKVENS. In order to protect your rights and provide a better shopping experience, we provide you with a series of after-sales services, including a 6-month functional warranty,human factor repair and return services, and one-on-one after-sales support. We hope to provide you with more peace of mind and convenience in the process of using FREKVENS magnetic fluid Sound-Pickupel through our services. The following are specific after-sales service rules and instructions, please read them in detail.

Human factors maintenance:

Ifthe product malfunctions due to human factors during use, we will provide you with paid repair services.

Human factors refer to but are not limited to thefollowing situations:

*Human negligence or erroneous operation

*Unauthorized modification or disassembly

*Accidental damage or impact



Warranty card

Customer Name	
contact number	
postal address	
Purchase date	

Warranty terms

1. Before using our company's products, please carefully read the user manual ofthis product
- 2.Within one year from the date of purchase, in case of performance failure during normal use, the machine can enjoy free warranty for the entire machine; Any malfunctions caused by human damage, self disassembly, or abnormal use are not covered by the warranty
3. The glass bottle is a fragile accessory and is not covered by the warranty. If the glass bottle is found to be damaged when the product is received, please contact the seller to send a replacement glass bottle.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.