

UFaudiO

使用說明書

產品規格

輸入電壓: 18v
輸入電流: 3.6A
額定功率: 64.8W


產品重量: 2480g
產品材質: ABS, 橡膠, 楓木,
玻璃, 磁流體



產品內容: 音響主體, 說明書, 感謝小卡, 電源變壓器, 小磁鐵



安裝方式

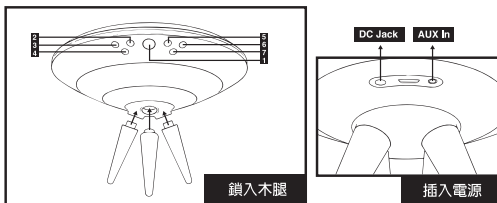

功能說明

開關按鍵 (1)	*短按開機 *長按2秒關機
音樂>>按鍵 (2)	*短按切換下一首 (無線音訊模式) *長按增加音量 (音量於最大時下燈光依目前顏色燈光閃爍三次)
音樂<<按鍵 (3)	*短按切換上一首 (無線音訊模式) *長按減少音量 (音量於最小時下燈光依目前顏色燈光閃爍三次)
音樂播放按鍵 (4)	*短按 暫停/播放 音樂
背光模式按鍵 (5)	*短按切換背光燈顏色 循環燈效 *長按關閉背光 *若背光關閉時,短按開背光 (顏色為關閉時之定義)
燈光模式按鍵 (6)	*短按切換燈光顏色 循環燈效 *長按關閉燈光 *若背光關閉時,短按開背光 (顏色為關閉時之定義)
音源切換模式按鍵 (7)	*短按切換音源 (有線, 無線, 麥克風) - 有線AUX-IN音訊模式 (當有AUX-IN線時, 下燈光紅燈閃爍三次) - 無線音訊模式 (下燈光藍燈閃爍三次) 長按3秒進入無線連接模式 (第一次開機時主動進入此模式) 下次開機將自動連接最後一次連接裝置 - 麥克風拾音模式 (下燈光藍燈閃爍三次)

注意事項

1. 使用時間
請勿連續使用超過 12 小時, 建議使用後休息冷卻至少 1 小時。
2. 適用環境
僅限室內使用, 避免日曬。建議溫度為 15—28° C, 有助延長壽命。
3. 壽命說明
磁流體平均使用約 3000—4000 小時, 劇烈運動會縮短壽命。
4. 磁鐵注意
請勿長時間將磁鐵吸附在瓶上, 以免磁流體黏附瓶壁。
5. 瓶內氣泡
瓶內氣泡為防熱脹冷縮設計, 屬正常現象, 請安心使用。
6. 內容物請勿觸碰
請勿開啟瓶子、觸摸或誤食內容物。
7. 儲存建議
避免高溫或低溫環境, 如車內或戶外寒冷處, 以防破裂。
8. 誤觸處理
若磁流體接觸皮膚或眼睛, 請立即以清水沖洗。若進眼, 請儘速就醫。
9. 分層處理
如出現分層, 可取出磁鐵, 操作排出氣泡, 即可恢復視覺效果。
10. 沾瓶處理
若長時間未使用致沾瓶, 可用磁鐵將磁流體集中回收再使用。

親愛的顧客您好,
感謝您對 FUSION LAB 的支持與信任!
為了保障您的權益, 並提供更完善的使用體驗, 我們提供多項貼心的售後服務, 包括一年期的產品功能保固、人為因素導致的故障維修服務, 以及一對一的售後支援。
希望透過這些服務, 讓您在使用 FUSION LAB 磁流體氣圈燈喇叭的過程中, 能感受到我們的用心與安心。
人為因素維修說明:
若產品在使用期間因人為因素造成故障, 我們將提供合理收費的維修服務。
所謂「人為因素」, 包含但不限於以下幾種情況:
1. 因操作不當或疏忽所導致的損壞
2. 未經授權的拆解或改裝
3. 意外跌落、碰撞或損壞

PRODUCT SERIAL NUMBER



COMPANY: Fusion Lab Company Limited
ADDRESS:
新竹市東區中華路二段198號1樓及地下室一樓
Tel: +886-958396070

保固資訊

NCC無語:

取得實驗證明之低功率射頻器材, 非經核准, 公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信; 經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。前述合法通信, 指依電信管理法規規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

設備名稱：無線磁流體音響		型號（型式）：UFAudio				
Equipment name		Type designation (Type)				
單元 Unit	限制物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電路板	○	○	○	○	○	○
輸入孔	○	○	○	○	○	○
外殼	○	○	○	○	○	○
揚聲器	○	○	○	○	○	○
備考 1. "超出 0.1 wt %" 及 "超出 0.01 wt %" 係指限制物質之百分比含量超出百分比含量基準值。 Note 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.						
備考 2. "○" 係指該項限制物質之百分比含量未超出百分比含量基準值。 Note 2: "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考 3. "—" 係指該項限制物質為排除項目。 Note 3: The "-" indicates that the restricted substance corresponds to the exemption.						

保固卡

客戶姓名	
聯繫電話	
通訊地址	
購買日期	

保固說明

為確保您的使用體驗與權益, 煩請您在使用前詳閱產品說明書, 以瞭解正確操作方式及注意事項。

1. 請在使用本公司產品前, 務必詳讀隨附的說明書, 以避免因操作不當造成產品損壞。
 2. 保固期限與範圍, 自購買日起一年內, 若於正常使用情況下發生產品性能故障, 我們將提供免費整體維修服務。
 3. 玻璃瓶破裂處理, 本產品內含玻璃瓶, 屬易碎材質。若您在收貨時發現玻璃瓶有破裂或損壞情形, 請儘速聯繫購買商家。我們將協助為您補寄新品。
- 如您在使用過程中有任何疑問或需要協助之處, 歡迎隨時與我們聯繫, 我們將竭誠為您服務。
www.fusion-lab.tech

UFaudioO

USER MANUAL

Product Specification

Input Voltage : 18v
Input Current : 3.6A
Input Power : 64.8W

Product Weights : 2480g
Material : ABS, rubber,
maple, glass, ferrofluid




Product Contents : Speaker unit, User manual, Thank-you card,

Power adapter, Small magnet



Installation Instructions

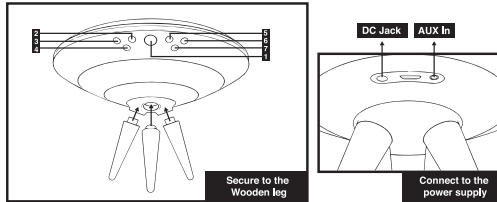

Description of Functions

Power Button (1)	*Short press to power on *Press and hold for 2 seconds to power off
Audio >> Button (2)	*Short press to skip to the next track (wireless audio mode) *Press and hold to increase volume (when volume reaches maximum, the backlight flashes three times in the current color)
Audio << Button (3)	*Short press to switch to the previous track (wireless audio mode) *Press and hold to decrease volume (when volume reaches minimum, the backlight flashes three times in the current color)
Play Button (4)	*Short press to pause/play music
Backlight Mode Button (5)	*Short press to cycle lighting colors: Cyclic Lighting Effects *Press and hold to turn off the backlight When backlight is off, short press to turn it on (color returns to the last selected color before turning off)
Lighting Mode Button (6)	*Short press to cycle lighting colors: Cyclic Lighting Effects *Press and hold to turn off the lighting When the lighting is off, short press to turn it on (color returns to the last selected setting before turning off)
Audio Source Switch Button (7)	*Short press to switch audio source (Wired, Wireless, Microphone) - Wired AUX-IN audio mode (When AUX-IN cable is connected, the indicator light flashes red three times) - Wireless audio mode (Indicator light flashes blue three times) - Microphone pickup mode (Indicator light flashes blue three times) - Press and hold for 3 seconds to enter wireless pairing mode (Automatically enters this mode on first power-on) *Next power-on will automatically connect to the last paired device

Safety Instructions

1. Usage Duration

Do not use continuously for more than 12 hours. It is recommended to let the device rest and cool down for at least 1 hour after use.

2. Applicable Environment

For indoor use only. Avoid direct sunlight. Recommended operating temperature is 15~28°C to help extend product lifespan.

3. Lifespan Information

The magnetic fluid has an average lifespan of approximately 3,000~4,000 hours. Intense activity may shorten its lifespan.

4. Magnet Caution

Do not let the magnet adhere to the bottle for extended periods to prevent the magnetic fluid from sticking to the bottle walls.

5. Bubbles Inside the Bottle

Bubbles inside the bottle are a normal design feature to accommodate thermal expansion and contraction. Please use with confidence.

6. Do Not Touch Contents

Do not open the bottle, touch, or ingest the contents.

7. Storage Recommendations

Avoid storing in high or low temperature environments, such as inside vehicles or cold outdoor areas, to prevent cracking.

8. Accidental Contact Handling

If the magnetic fluid contacts skin or eyes, rinse immediately with clean water. If it enters the eyes, seek medical attention promptly.

9. Layer Separation Handling

If separation occurs, remove the magnet and operate to expel air bubbles. This will restore the visual effect.

10. Adhesion Handling

If the fluid adheres to the bottle after long periods of non-use, use a magnet to gather and recycle the magnetic fluid for reuse.

PRODUCT SERIAL NUMBER



Warranty Information

Dear Customer,

Thank you for your support and trust in FUSION LAB!

To protect your rights and provide a better user experience, we offer a range of thoughtful after-sales services, including a one-year product functional warranty, repair services for damages caused by human factors, and dedicated one-on-one after-sales support.

We hope these services allow you to feel our care and assurance while using the FUSION LAB Magnetic Fluid Ambient Light Speaker.

Human Factor Repair Explanation:

If the product malfunctions due to human factors during use, we offer repair services at a reasonable fee.

"Human factors" include, but are not limited to, the following cases:

1. Damage caused by improper operation or negligence

2. Unauthorized disassembly or modification

3. Accidental drops, collisions, or impacts

Warranty Card

Customer Name	
Contact Number	
Address	
Purchase Date	

Warranty description :

To ensure a smooth user experience and protect your rights, please carefully read the product manual before use to understand the correct operating procedures and important precautions.

- Please make sure to thoroughly read the enclosed manual before using our product to avoid any damage caused by improper operation.
- The warranty period and coverage are valid for one year from the date of purchase. If the product experiences functional defects under normal use during this period, we will provide free repair service for the entire unit.
- Glass Bottle Breakage: This product contains a glass bottle which is fragile. If you notice any cracks or damage to the glass bottle upon delivery, please contact the retailer promptly. We will assist you with sending a replacement.

If you have any questions or require assistance during use, please feel free to contact us. We are committed to providing you with dedicated support.

www.fusion-lab.tech

UFaudioO

ユーザーマニュアル

製品仕様

入力電圧:18V
入力電流:3.6A
入力電力:64.8W

製品重量:2480g

素材:ABS樹脂、ゴム、メー
プル材、ガラス、磁性流体(フ
ェロフリッド)




製品内容:

スピーカーユニット、取扱説明書、サンキューカード、電源アダプター、小型マグネット



設置手順

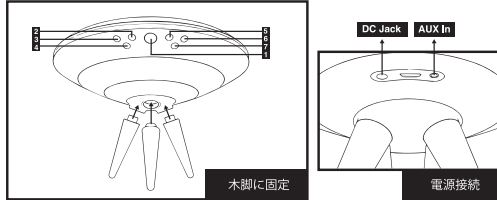

機能の説明

電源ボタン (1)	*短押しで電源オン *2秒間長押しで電源オフ
オーディオ >> ボタン (2)	*短押しで次の曲にスキップ (ワイヤレスオーディオモード時) *長押しで音量を上げる (音量が最大に達すると、バックライトが現在の色で3回点滅します)
オーディオ << ボタン (3)	*短押しで前の曲に戻る (ワイヤレスオーディオモード時) *長押しで音量を下げる (音量が最小になると、バックライトが現在の色で3回点滅します)
再生ボタン (4)	*短押しで音楽の一時停止/再生
バックライトモードボタン (5)	*短押しで照明の色を切り替え: レインボーモード → レインボー/ブルース → 白 → 青 → 紫 → 藍 → 黄 → 緑 → 赤 → (レインボーモードに戻る) *長押しでバックライトを消灯 バックライトが消灯中に短押しすると点灯 (消灯前の色に戻る)
照明モードボタン (6)	*短押しで照明の色を切り替え: レインボーモード → レインボー/ブルース → 白 → 青 → 紫 → 藍 → 黄 → 緑 → 赤 → (レインボーモードに戻る) *長押しで照明を消灯 照明が消灯中に短押しすると点灯 (消灯前の設定に戻る)
音源切替ボタン (7)	*短押しで音源を切り替え (有線、無線、マイク) *有線AUX-IN音声モード (AUX-INケーブル接続時、インジケーターが赤色に3回点滅) *無線音声モード (インジケーターが青色に3回点滅) *マイク入力モード (インジケーターが青色に3回点滅) *長押し3秒で無線ペアリングモードに入る (初回電源オン時に自動的にこのモードに入る) 次回電源オン時には最後に接続したデバイスに自動接続されます。

安全注意事項

- 使用時間について**
連続使用は12時間以内にしてください。ご使用後は少なくとも1時間以上休ませ、冷却させることを推奨します。
- 使用環境について**
本製品は室内専用です。直射日光を避けてください。推奨使用温度は15〜28℃で、製品寿命を延ばすためにも適した環境での使用をお願いいたします。
- 寿命について**
磁性流体の平均寿命は約3,000〜4,000時間です。激しい動作は寿命を短くする可能性があります。
- 磁石の使用注意**
磁石を長時間ボトルに接触させたままにしないでください。磁性流体がボトルの内壁に付着する原因となります。
- ボトル内の気泡について**
ボトル内部の気泡は、熱膨張および収縮に対応するための設計によるもので、異常ではありません。安心してご使用ください。
- 内容物への接触禁止**
ボトルを開けたり、内容物に触れたり、口に入れたりしないでください。
- 保管の推奨環境**
車内や極端に寒冷な場所など、高温または低温の環境での保管は避けてください。ひび割れなどの原因になります。
- 誤って接触した場合の対処**
磁性流体が皮膚や目に触れた場合は、すぐに清潔な水で洗い流してください。目に入った場合は、直ちに医師の診察を受けてください。
- 層分離が発生した場合の対処**
磁石を取り外し、動作させて気泡を取り除いてください。視覚効果が元に戻ります。
- 付着の対処法**
長期間使用しなかった場合に流体がボトル内に付着していることがあります。磁石を使って流体を集め、再循環させることで元の状態に戻ります。

PRODUCT SERIAL NUMBER



保証情報

お客様へ
FUSION LAB をご愛顧いただき、誠にありがとうございます。
お客様の権利を保護し、より良いユーザー体験を提供するため、以下のアフターサービスをご用意しております:
1. 製品機能に関する 1年間の保証サービス
2. 人的要因による破損に対する 有償修理サービス
3. 専任スタッフによる 1対1のアフターサポート
FUSION LAB 磁性流体アンビエントライトスピーカーを安心してご使用いただけるよう、万全のサポート体制を整えております。
人的要因による修理について:
使用中に人的要因により不具合が生じた場合でも、FUSION LAB では適正な費用にて修理サービスを提供しております。
「人的要因」とは、以下を含むが、これらに限定されない事例を指します:

- 不適切な操作や不注意による破損
- 無断での分解・改造
- 落下、衝突、または衝撃による損傷

保証書

お客様氏名	
ご連絡先	
ご住所	
ご購入日	

保証内容について

お客様に安心してご使用いただくために、本製品を使用する前に必ず取扱説明書をよくお読みいただき、正しい使用方法と重要な注意事項をご確認ください。
1. 本製品をご使用になる前に、同梱の取扱説明書を必ずお読みください。誤った操作による製品の破損を防ぐためです。
2. 保証期間および保証範囲は、ご購入日より1年間有効です。正常な使用状態において製品に機能的な不具合が生じた場合、無償にて本体の修理対応をいたします。
3. ガラス瓶の破損について:
本製品にはガラス瓶が含まれており、壊れやすい素材となっております。お届け時にガラス瓶にひび割れや破損が見られた場合は、速やかにご購入店舗へご連絡ください。交換品の発送手続きについてサポートいたします。
製品の使用中にご不明点やサポートが必要な場合は、いつでもお気軽にお問い合わせください。誠心誠意、対応させていただきます。

www.fusion-lab.tech

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.