

T3 AI 大模型翻译机

使用说明书

使用前请仔细阅读本说明书
本公司保留说明书解释权
产品外观以实物为准
说明书以 AIGSM APP 功能为主
如遇产品技术或软件升级或因版本
不一致时功能差异，恕不另行通知

安全信息

使用本产品之前，请先阅读以下安全信息：


- 1.请勿使用损坏或未经质量检测的充电器充电，以免引发火灾、爆炸或其他危险。
- 2.请将设备及所有配件放在儿童接触不到的地方，避免被他们误食导致窒息或其他风险。
- 3.该设备不防水，请远离任何液体。
- 4.请避免将产品重摔、焚烧、挤压，以免设备损坏。
- 5.请勿将产品暴露在高温处、发热设备周围如烤箱、微波炉等。
- 6.使用非官方认可的配件造成的质量问题、设备故障和安全事故，我司概不负责。



1.包装内容

- 翻译机*1
- 磁吸环*1
- 充电线*1

2.按钮和接口

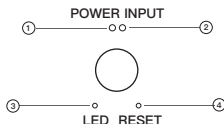

注:产品外观请以实物为准

① 磁吸充电口

提供磁吸充电功能。

② 语音操控键

设备连接时，长按操控键使用语音转文字和翻译功能。

休眠时，按下操控键唤醒设备。

③ 复位键

用手机取卡针按住 2秒可重启设备。

④ 指示灯

指示设备的状态。查看下表以了解不同灯效所指示的设备状态，

指示灯	状态	状态说明
蓝灯	闪烁	蓝牙未连接
	灯灭(或连续闪烁三下)	蓝牙连接成功
	按下即亮，松开即灭	已有设备连接着 (若需更换，需断开原设备)
红灯	持续常亮	充电中
	熄灭	电已充满
不亮	/	休眠/待机

3.使用产品

3.1.下载并安装 App

3. 1. 1.苹果手机

- 通过微信或浏览器扫描二维码下载 APP

1.打开微信，点击右上角 ⊕ > 「扫一扫」，扫描下方二维码。



2.点击「App store下载」，点击「允许」，直接进入 App Store 中「AIGSM」下载页面。

3.点击「获取」或下载图标，下载安装 App。

3. 1. 2.安卓手机

注:在各品牌安卓手机上下载安装「AIGSM」的方法相同，但各品牌安卓手机界面在安装本 App 时提示信息略有不同，以下步骤作为参考。

- 通过微信或浏览器扫描二维码下载 APP

1.打开微信，点击右上角 ⊕ > 「扫一扫」，扫描下方二维码。



2.点击「Android下载」，进入已上架「AIGSM」的应用商店页面，点击「浏览器下载」，点击右上角「…」，选择「在浏览器打开」。



3.在浏览器打开页面后，点击「浏览器下载」，开始下载APP软件安装包。



4.APP下载完成后，如弹出安装提醒，点击「允许」或「继续安装」。



5.安装成功后，打开软件弹出软件提示，建议选择「始终允许」或「使用期间允许」，后续打开将不会再弹出。

3.2.连接手机蓝牙


设备需要连接手机蓝牙后才能配合「AIGSM」一起使用。

- 1.按下设备的语音操控键，唤醒设备，此时设备上的蓝灯闪烁。
- 2.在手机设置中打开蓝牙，连接设备。连接完成后，即可打开「AIGSM」开始使用
- 苹果手机:在手机上打开「设置」>「蓝牙」，然后在设备列表中选择AIGSM点击「配对」完成连接。连接成功后，设备将显示在蓝牙设备列表中。
- 安卓手机:在手机上打开「设置」>「设备连接」>「蓝牙」，然后在可用设备列表中选择AIGSM配对。配对成功后，设备将显示在已配对的设备中。

注:设备在约 10 分钟无操作后将进入休眠状态。按一下语音操控键唤醒设备，设备将自动与配对的手机恢复连接。

3.3. 设备充电

- 1.将充电线带触点的一端对准并放置和设备磁吸充电口处，确保接口完全吸附贴合。

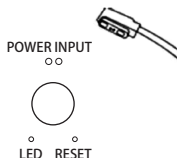

- 2.将充电线的另一端插入带 USB-A 的充电器上，然后将该充电器插入电源插座。充电时，指示灯显示为红色。充电完成后，红灯熄灭。

3.5.如何设置语言

- 1.在手机屏幕上点击「AIGSM」以打开应用程序。
- 2.根据使用需要，选择点击应用程序左上角菜单，进入所需使用功能的页面
- 3.在页面第一个语言选择框中，点击选择并设置需要识别的源语言，源语言为自己的语言。
- 4.在页面第二个语言选择框中，点击选择并设置需要翻译的目标语言，目标语言为对方语言。

3.6. 文本/语音翻译

- 1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。
 - 2.在首页点击「跨应用翻译」，设置需要识别的源语言和目标语言(见3.5)。
 - 3.长按语音操控键，对准手机清晰说出需要翻译的内容，或播放需要翻译的对方语音，说完或语音播放完毕后松开语音操控键。
 - 4.APP 将根据用户的自定义设置:翻译、自动播报及在文本框内显示译文(或原译文)。
- 注:输入文本后，需点击「翻译」按钮翻译为译文。

3.6. 1.自定义设置菜单¹

设置项	开启	关闭
翻译	识别语音输入信息并翻译	只语音识别输入的信息
自动播报 ²	翻译完成后自动播放译文语音	翻译完成后不播放译文语音
仅显示译文 ³	在文本框内仅显示译文，不显示识别出的原文	在文本框内同时显示译文和原文
显示悬浮窗 (安卓端)	悬浮窗会置顶于任何应用程序之上，并显示翻译结果	悬浮窗不显示
发音 ⁴	选择播报时使用:男声、女声	/

1.功能可能会因 APP 版本不同而有所差异。

2.该菜单在打开翻译开关时才可开启或关闭

3.该菜单在打开翻译开关时才可开启或关闭。

4.离线模型暂不支持发音选择。

3.6.2.跨应用程序语音自动翻译

- 1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。
- 2.在首页点击「跨应用翻译」，设置需要识别的源语言和目标语言(见3.5)
- 3.确保「自动粘贴」已开启(苹果端)，手机端-设置-APP-wechat(WhatsApp)-允许自动粘贴
- 4.在需要翻译的其他应用程序中点击输入框。
注:此步骤适用于跨应用程序翻译我方语音时
- 5.长按语音操控键，对准手机清晰说出需要翻译的内容，或播放需要翻译的对方语音，说完或语音播放完毕后松开语音操控键
- 6.APP 将自动识别语音，并将翻译后的译文(原文)填充至第三方应用的文本框内。

3.6.3.跨应用程序文本自动翻译

- 1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。
- 2.在首页点击「跨应用翻译」，设置需要识别的源语言和目标语言(见3.5)
- 3.在其他应用中选中并复制需要翻译的对方语言文本，然后切换回「AIGSM」。
- 4.需要翻译的文本会自动粘贴到文本框内，并翻译成自己的语言(源语言)。

3.7.拍照翻译

- 1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。
- 2.进入应用程序，在首页点击「拍照翻译」，可以选择新拍摄图片翻译或选择手机内照片进行翻译。
 - 点击「拍照」按钮，实时拍照并裁剪出待翻译内容所在区域。
 - 点击「相册」按钮，从手机内部存储中选择需翻译的图片，并点击右下角「已完成」并裁剪出待翻译内容所在区域。

- 3.在翻译页面顶部，可以重新选择需要识别的源语言和目标语言(见3.5)。
- 4.在翻译页面，点击「双语对照」可以查看并分别复制原译文;点击「保存」可以将翻译后的图片保存至本地相册。

3.8.对话翻译

- 1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。
- 2.进入应用程序，在首页点击「对话翻译」。
- 3.在屏幕上方点击语言栏，设置需要对话翻译的源语言和目标语言。
- 4.在对话过程中，需要分别按住源语言、目标语言按钮，对准手机清晰说出需要表达的内容，说完后松开按钮。
注:按住的按钮语言应和当前说话人所说的语言保持一致。
- 5.系统将自动识别说话人的讲话内容，并翻译为对方的语言，同时播报译文给对方听。
注:点击右上角「」按钮，可以清空窗口内的对话记录

3.9.同声传译

- 1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。
- 2.进入应用程序，在首页点击「同声传译」。
- 3.在屏幕上方点击语言栏，设置需要同声翻译的源语言和目标语言。
- 4.点击屏幕中的「开始」图标，开始说话，同声传译开始。
- 5.点击屏幕中的「结束」图标，结束同声传译。
- 6.结束同传时，APP 将为您自动保存同传记录。⁵
注:点击同传页面的历史记录按钮可以打开同传记录列表，查看所有已保存的同传对话记录。

5.功能可能会因 APP 版本不同而有所差异。

3.10.视频通话

3.10.1.发起通话

- 1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。
- 2.进入应用程序，在首页点击「视频通话」。
- 3.在通话页面，分别点击「我方语言」和「对方语言」完成语言设置。
- 4.点击「视频通话」或「语音通话」，进入通话等待界面。通话的房间二维码、ID号及链接一同显示在屏幕上。
注:对方可直接使用聊天软件扫描二维码加入通话。
- 5.将通话的房间ID号及链接发送给对方，等待对方点击链接或通过房间ID加入通话。
- 6.通话完毕，点击「」。
- 7.点击右上角「历史记录」按钮，可查看、分享历史语音/视频通话记录。
 - 点击单条通话记录进入详情页面，通过页面内语音播放区右侧按钮及右上角按钮可以分别分享音频及聊天文本。
 - 按住单条通话记录左滑，出现修改名称和删除选项，点击可修改名称、删除记录。

3.10.2.加入通话

- 1.收到他人邀请，在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。
- 2.点击屏幕下方的「视频通话」。

3.点击「邀请好友通话」下方的小字「通过房间号加入通话」，填入对方发送的房间号，加入通话。

4.通话完毕，点击「」。

注:如无设备，您可从对方获取二维码或链接，使用聊天软件扫描二维码或点击链接加入通话。

3.11.AI助手（以实物为准）

1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。

2.点击屏幕左上角，进入个人中心-AI助手-打开。

3.说“小译，小译”唤醒AI助手，说“请打开翻译”开启功能。

3.12 便捷对话（以实物为准）

1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。

2.进入应用程序，在首页点击「便捷对话」，设置需要的源语言和目标语言。

3.点击屏幕中的「开始」图标，开始说话，便捷对话开始。

4.点击屏幕中的「结束」图标，结束便捷对话。

3.13 群聊功能（以实物为准）

1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。

2.进入应用程序，在首页点击「群聊」，编辑昵称和选择我的语言后，点击「创建群聊」。

3.进入群聊页面，可以通过聊天软件分享二维码以供其他人扫描。

4.扫描后会同步进入到翻译界面，选择完对应语言后多方可以按住屏幕上的按钮进行拾音并进行翻译播报。

3.14场景切换（以实物为准）

1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。

2.进入应用程序，在首页点击「场景切换」。

4.可切换「翻译场景」「自拍场景」「视频场景」。

5.按下翻译牌按键，实现对应功能。

3.15.我的(个人中心)

3.15.1.下载离线模型

1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接，

2.点击应用程序左上角菜单栏的「我的」。

3.进入我的页面后，点击「离线模型」，进入离线模型管理页面，根据需要下载离线模型。

注:离线模型较大，建议在WIFI网络下载。下载后的离线模型可以在弱网或断网情况下使用，使用时需确保设备已连接。

3.15.2.版本更新

1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。

2.点击应用程序左上角菜单栏的「我的」，在“我的”页面点击并进入「关于软件」,如新版本将在「版本更新」中显示最新版本的版本号，下载后安装即可(安装步骤见3.1)。

3.15.3.其他

1.在手机屏幕上点击「AIGSM」以打开应用程序，并确保设备已连接。

2.点击应用程序底部菜单栏的「我的」，在“我的”页面点击并进入「关于软件」。

目录	功能描述
语言设置	设置国际化语言，默认跟随系统。
主题设置	默认浅色主题，可根据需要选择暗色及浅色主题。
用户协议、隐私政策	用户协议及隐私政策。
客服电话	客服热线。

3.15. 4.常见问题

• 苹果手机

问题描述	解决办法
苹果 iOS16 以上系统，某个 App 频繁出现粘贴提示弹窗。	1.确认弹窗的 App 名称。 2.打开手机「设置」，下滑找到这个App，点击进入。 3.打开「从其他 App 粘贴」，将状态改为「允许」，关闭粘贴提示弹窗。
使用设备一键语音翻译/转文本时，出现重复语句，其重要特征为左上角出现蓝色图标（麦克风/语音识别）。	1.打开手机「设置」→「辅助功能」→「语音控制」 2.关闭「语音控制」。完成后，即可恢复正常。
使用设备一键语音翻译/转文本时，文本没有自动粘贴到文本输入框。	1.打开手机「设置」→「辅助功能」→「键盘」→「粘滞键」。 2.关闭「粘滞键」和「使用 shift 键切换」。 3.打开手机「设置」→「辅助功能」→「键盘」→「慢速键」。 4.关闭「慢速键」。完成后，即可恢复正常。
扫描下方二维码或打开音视频通话链接时，网页加载后仍然显示空白。	1.打开手机「设置」，下滑找到「Safari 浏览器」点击进入。 2.下滑到底找到「高级」，点击进入。 3.开启「JavaScript」。完成后，重新打开网页或刷新网页，即可恢复正常。

• 安卓手机

问题描述	解决办法
在 APP 内，点击输入框，输入法键盘始终不出现。	(以小米手机为例) 1.打开手机「设置」→「更多设置」→「语言与输入法」→「键盘、鼠标和触控板」。 2.开启「使用屏幕键盘」，完成后，即可恢复正常。 注:其他安卓品牌手机可参考此操作步骤，在手机语言与输入法设置中找到并开启使用屏幕键盘即可。
华为鸿蒙系统无法安装未知来源应用	1.打开手机「设置」，找到“安全”或“安全与隐私”选项。 2.点击更多安全设置，选择安装外部来源应用。 3.开启允许安装应用。
使用一键语音翻译时，手机输入法自动收缩或最小化。	出现此问题的原因可能为手机内置的输入法与本产品功能有冲突。推荐下载安装并使用“百度输入法”使体验更加流畅。
当应用在后台运行时，按住设备的语音操控键没有任何反应。	出现此问题的原因是某些品牌的手机会默认关闭后台自启动，因此需要在手机设置内权限管理中允许「AIGSM」后台自启动。

保修卡

免责条款

- 1.使用前请仔细阅读产品说明书，严格按照说明书内容操作；
- 2.本产品不对翻译结果承担责任；
- 3.本产品不防水，因为进水问题造成的机器损坏由用户自己承担。

保修条列

- 1.本产品免费保修期为12个月；
- 2.在保修期内,按照说明书正常使用所产生的故障(由本公司售后人员或者我公司授权服务人员判定)，予以免费维修。

3.在保修期内,以下情况不属于免费保修范围:

- 1)不能够提供保修证书及有效购货凭证；
 - 2)未经授权的维修、误用、碰撞、疏忽、滥用、事故、不正确使用本产品等；
 - 3)因为长时间暴露在强光、火烤或者类似过热的环境中；
 - 4)因为进水等人为因素造成的机器损坏或者性能故障；
 - 5)因使用不合格的超过5V/2A以上的电源适配器所造成的损失；
- 4.本公司不对任何特殊的、偶然的或者间接的损失和损害负责。

姓 名 _____

电 话 _____

联系地址 _____

SN 号 _____

故障描述 _____

购买渠道 _____

订单编号 _____

如需售后服务,请先及时联系售后渠道客服具体操作,
请详细填写此卡,并随同产品一起寄回。

AI Large Model Translation Machine

instruction manual

Please read this manual carefully before use

The Company reserves the right to interpret these instructions.

The appearance of the product shall prevail in kind

The instruction manual is based on the AIGSM APP function.

In case of product technology or software upgrades, without prior notice

Safety information

Please read the following safety information before using this product.


1. Do not charge with a damaged or nonquality tested charger, as this may cause fire, explosion or other hazards.
2. Keep the device and all accessories out of the reach of children to avoid choking or other risks caused by their accidental ingestion.
3. The device is not waterproof, keep it away from any liquids.
4. Please avoid dropping, burning or squeezing the product heavily to avoid equipment damage.
5. Do not expose the product to high temperatures, around heat generating equipment such as ovens, microwaves, etc.
6. We are not responsible for quality problems, equipment failure and safety accidents caused by the use of unofficial approved accessories.



1.Package content

- Translator*1
- Magnetic ring*1
- Charging Cable*1

2. Buttons and interfaces

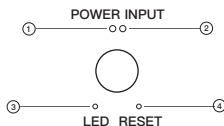

Note: Please refer to the actual product appearance.

① Magnetic charging port

Provides magnetic charging function.

② Voice Control Keys

When the device is connected, long press the control button to use the speech-to-text and translation functions.

When hibernating, press the control key to wake up the device.

③ Reset button

Press and hold the card removal pin with your cell phone for 2 seconds to restart the device.

④ Indicator light

Indicates the status of the device. Check the table below to see the status of the device indicated by the different light effects.

Indicator light	State of affairs	Status Description
Blue light	vague(of speech)	Bluetooth not connected
	Three flashes in a row.	Bluetooth connection successful
	Press to illuminate,release to extinguish	There's already a device connected. (Disconnect original equipment if replacement is required)
Red light	Always on	Charging
	Go out(of fire)	It's fully charged.
Not bright	/	Sleep/Standby

3. Use of products

3.1.3.1. Download and install the App

3. 1. 1. Apple phone

- Download APP by scanning QR code via WeChat or browser

1. Open WeChat, click on the upper right corner of (+) > "Sweep" and scan the QR code below.



2. Click on "App Store Download", click on "Allow", and directly enter the "AIGSM" download page in the App Store.

3. Click on the "Get" or download icon to download and install the app.

3. 1. 2. Android phone

Note: The method of downloading and installing "AIGSM" on various brands of Android phones is the same, but the prompts on the interface of each brand of Android phone when installing this app are slightly different. The following steps are for reference.

- Scan the QR code through WeChat or browser to download the APP

1. Open WeChat, click on the upper right corner of (+) > "Sweep" and scan the QR code below.



2. Click on "Android Download" to enter the app store page of the already launched "AIGSM".

Click on "Browser Download", click on the "..." in the upper right corner, and select "Open in Browser".



3.After opening the page in the browser, click " Browser Download " to start downloading the APP software installation package.



4.After the APP download is completed, if an installation reminder pops up, click " Allow " or " Continue Installation ".



5. After successful installation, when opening the software, a software prompt will pop up. It is recommended to choose " Always allow " or " Allow during use ", and it will not pop up again in the future.

3.2.Connect your phone via Bluetooth


The device needs to be connected to the Bluetooth of the mobile phone before it can be used in conjunction with " AIGSM ".

1. Press the voice control button on the device to wake it up, and the blue light on the device will flash.
 2. Turn on Bluetooth in the phone settings and connect the device. After the connection is completed, you can open " AIGSM " to start using it
- Apple phone: Open " Settings ">"Bluetooth" on the phone, then select AIGSM in the device list and click "Pair" to complete the connection. After successful connection, the device will be displayed in the Bluetooth device list.
 - Android phone: Open " Settings ">"Device Connections ">"Bluetooth" on the phone, and then select AIGSM pairing from the list of available devices. After successful pairing, the device will be displayed among the paired devices.

Note: The device will enter sleep mode after about 10 minutes of inactivity. Press the voice control button to wake up the device, and the device will automatically reconnect with the paired phone.

3.3. Device charging

- 1.Align the end of the charging cable with the contact point and place it at the magnetic charging port of the device, ensuring that the interface is fully adhered and fitted.

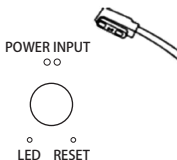

2. Insert the other end of the charging cable into a USB-A charger, and then plug the charger into a power outlet. When charging, the indicator light displays in red. After charging is completed, the red light goes out.

3.5.How to set language

1. Click on " AIGSM " on the phone screen to open the application.
2. According to usage needs, select and click on the menu in the upper left corner of the application to enter the page for the desired function
3. In the first language selection box on the page, click to select and set the source language to be recognized, which is your own language.
4. In the second language selection box on the page, click to select and set the target language to be translated, which is the language of the other party.

3.6. Text/Voice Translation

1. Click on " AIGSM " on the phone screen to open the application and ensure that the device is connected.
2. Click on ' Cross App Translation ' on the homepage and set the source and target languages to be recognized (see 3.5).
3. Long press the voice control button, aim at the phone and clearly say the content that needs to be translated, or play the other person's voice that needs to be translated, and then finish speaking. After the voice playback is complete, release the voice control button.
4. The APP will display the translation (or original translation) in the text box according to the user's custom settings: translation, automatic broadcasting.

Note: After entering the text, you need to click the "Translate" button to translate it into a translation.

3.6. 1.Customize Settings Menu¹

Setting items	Open	Close
Translate	Recognize voice input information and translate it	Only speech recognition input information
Automatic ² broadcasting	Automatically play the translated audio after completion of the translation	Do not play the translated audio after the translation is completed
Only display ³ translation	Only display the translated text in the text box, without displaying the recognized original text	Display both the translation and the original text in the text box simultaneously
Display floating window (Android version)	The floating window will be placed on top of any application and display the translation results	Suspended window does not display
pronunciation ⁴	When selecting to broadcast, use: male voice, female voice	/

1. The functionality may vary depending on the version of the app.

2. This menu can only be turned on or off when the translation switch is turned on

3. This menu can only be turned on or off when the translation switch is turned on.

4. Offline models currently do not support pronunciation selection.

3.6.2.Cross application voice automatic translation

1. Click on "AIGSM" on the phone screen to open the application and ensure that the device is connected.
2. Click on "Cross App Translation" on the homepage and set the source and target languages to be recognized (see 3.5).
3. Ensure that 'Auto Paste' is turned on (Apple app), on the mobile app – Settings – AP WeChat (WhatsApp) – Allow Auto Paste
4. Click on the input box in other applications that require translation.Note: This step is applicable for translating our voice across applications
5. Long press the voice control button, aim at the phone and clearly say the content that needs to be translated, or play the other person's voice that needs to be translated. After finishing speaking or playing the voice, release the voice control button
6. The APP will automatically recognize the voice and fill the translated text (original text) into the text box of the third-party application.

3.6.3.Cross application text automatic translation

1. Click on "AIGSM" on the phone screen to open the application and ensure that the device is connected.
2. Set the source language to your own language and the target language to the other language.
3. Select and copy the target language text to be translated in other applications, and then switch back to "AIGSM".
4. The text that needs to be translated will be automatically pasted into the text box and translated into its own language (source language).

3.7.Photo translation

1. Click on "AIGSM" on the phone screen to open the application and ensure that the device is connected.
 2. Enter the application, click on "Photo Translation" on the homepage, and you can choose to translate new photos or select photos from your phone for translation.
- Click the 'Take Photo' button to take real-time photos and crop out the area where the content to be translated is located.
 - Click the "Album" button, select the image to be translated from the internal storage of the phone, and click "Completed" in the bottom right corner to crop out the area where the content to be translated is located.

3. At the top of the translation page, you can reselect the source and target languages that need to be recognized (see 3.5).

4. On the translation page, click on **"Bilingual Comparison"** to view and copy the original translation separately; Click **'Save'** to save the translated image to your local album.

3.8. dialogue translation

1. Click on **"AIGSM"** on the phone screen to open the application and ensure that the device is connected.

2. Enter the application and click on **'Dialogue Translation'** on the homepage.

3. Click on the language bar at the top of the screen to set the source and target languages for conversation translation.

4. During the conversation, it is necessary to hold down the source language and target language buttons separately, aim at the phone and clearly state the content to be expressed, and then release the button after speaking.

Note: The language of the button held down should be consistent with the language spoken by the current speaker.

5. The system will automatically recognize the speaker's speech content, translate it into the other person's language, and broadcast the translation to the other person.

Note: Click the  button in the upper right corner to clear the conversation records in the window

3.9. simultaneous interpretation

1. Click on **"AIGSM"** on the phone screen to open the application and ensure that the device is connected.

2. Enter the application and click on **'Simultaneous Interpretation'** on the homepage.

3. Click on the language bar at the top of the screen to set the source and target languages that require simultaneous translation.

4. Click on **"Video Call"** or **"Voice Call"** to enter the call waiting interface. The room QR code, ID number, and link for the call are displayed on the screen together.

5. Click the **'End'** icon on the screen to end simultaneous interpretation.

6. When simultaneous interpreting ends, APP will automatically save simultaneous interpreting records for you.

Note: Click the History button on the simultaneous interpreting page to open the simultaneous interpreting record list and view all saved simultaneous interpreting dialog records.⁵

5. The functionality may vary depending on the version of the app.

3.10. Video call

3.10.1. Initiate a call

1. Click on **"AIGSM"** on the phone screen to open the application and ensure that the device is connected.

2. Enter the application and click on **'Video Call'** on the homepage

3. On the call page, click on **"Our Language"** and **"Other Language"** respectively to complete the language settings.

4. Click on **"Video Call"** or **"Voice Call"** to enter the call waiting interface. The room QR code, ID number, and link for the call are displayed on the screen together.

Note: The other party can directly use the chat software to scan the QR code and join the call.

5. Send the room ID number and link of the call to the other party, and wait for them to click on the link or join the call through the room ID.

6. After the call is over, click on .

7. Click the **"History"** button in the upper right corner to view and share historical voice/video call records.

- Click on a single call record to enter the details page, and use the buttons on the right side and top right corner of the voice playback area on the page to separate them. Do not share audio or chat text.
- Press and hold the single call record, swipe left, and the options to modify the name and delete will appear. Click to modify the name and delete the record.

3.10.2. Join the call

1. Upon receiving an invitation from someone, click on **"AIGSM"** on the phone screen to open the application and ensure that the device is connected.

2. Click on **"Video Call"** at the bottom of the screen.

3. Click on the small text **"Join call through room number"** under **"Invite friend to call"**, fill in the room number sent by the other party, and join the call.
4. After the call is over, click on **"🔴"**.

Note: If there is no device, you can obtain a QR code or link from the other party, scan the QR code using chat software, or click the link to join the call.

3.11.AI assistant (subject to physical object)

1. Click on **'AIGSM'** on the phone screen to open the application and ensure that the device is connected.
2. Click on the top left corner of the screen to enter the Personal Center – AI Assistant – Open.
3. Say **'Xiao Yi, Xiao Yi'** to wake up the AI assistant, and say **'Please open the translation'** to activate the function.

3.12 Convenient conversation (subject to physical object)

1. Click on **'AIGSM'** on the phone screen to open the application and ensure that the device is connected.
2. Enter the application, click on **"Convenient Dialogue"** on the homepage, and set the desired source and target languages.
3. Click on the **'Start'** icon on the screen to start speaking and initiate a convenient conversation.
4. Click the **'End'** icon on the screen to end the convenient conversation.

3.13 Group chat function (subject to physical object)

1. Click on **'AIGSM'** on the phone screen to open the application and ensure that the device is connected.
2. Enter the application, click on **"Group Chat"** on the homepage, edit your nickname and select my language, then click on **"Create Group Chat"**.
3. Enter the group chat page and share the QR code through the chat software for others to scan.
4. After scanning, it will synchronously enter the translation interface. After selecting the corresponding language, multiple parties can hold down the button on the screen to pick up the sound and provide translation and broadcasting.

3.14.Scene switching (subject to actual object)

1. Click on **"AIGSM"** on the phone screen to open the application and ensure that the device is connected.
2. Enter the application and click on **"Scene Switch"** on the homepage.
4. You can switch between **"translation scene"**, **"selfie scene"**, and **"video scene"**.
5. Press the translation button to achieve the corresponding function.

3.15.My (Personal Center)

3.15.1.Download offline model

1. Click on **"AIGSM"** on the phone screen to open the application and ensure that the device is connected,
2. Click on **"My"** in the menu bar in the upper left corner of the application.
3. After entering my page, click on **"Offline Model"** to enter the offline model management page and download the offline model as needed.

Note: The offline model is relatively large, it is recommended to download it from a WIFI network. The downloaded offline model can be used in weak or disconnected networks, and it is necessary to ensure that the device is connected when using it.

3.15.2.version update

1. Click on **"AIGSM"** on the phone screen to open the application and ensure that the device is connected.
2. Click on **"My"** in the menu bar in the upper left corner of the application, then click on **"About Software"** on the **"My"** page. If a new version is available, the latest version number will be displayed in the **"Version Update"** section. Download and install it (see section 3.1 for installation steps).

3.15. 3. other

1. Click on **"AIGSM"** on the phone screen to open the application and ensure that the device is connected.
2. Click on **"My"** in the menu bar at the bottom of the application, then click on **"About Software"** on the **"My"** page.

catalogue	Function Description
Language settings	Set the internationalization language to follow the system by default.
Theme Settings	Default light color theme, you can choose dark or light color themes as needed.
User Agreement, Privacy Policy	User Agreement and Privacy Policy.
customer service telephone numbers	Customer service hotline.

3.15. 4.frequently asked questions

- iPhone

Problem description	Solution
On Apple iOS 16 and above systems, a certain app frequently displays paste prompt pop ups.	1.Confirm the name of the pop-up app. 2.Open the "Settings" on your phone, scroll down to find this app, and click to enter. 3.Open 'Paste from Other App', change the status to 'Allow', and close the paste prompt pop-up window.
When using a device for one click voice translation/text conversion, repeated sentences appear, characterized by a blue icon (microphone/voice recognition) in the upper left corner.	1.Open your phone's "Settings" ->"Accessibility" ->"Voice Control" 2.Turn off 'voice control'. After completion, normal operation can be restored.
When using the device for one click voice translation/text conversion, the text is not automatically pasted into the text input box.	1.Open your phone's "Settings" ->"Accessibility" ->"Keyboard" ->"Sticky Keys". 2.Turn off 'Sticky Key' and 'Use Shift Key to Switch'. 3.Open the phone's "Settings" ->"Accessibility" ->"Keyboard" ->"Slow Key". 4.Turn off the 'slow key'. After completion, normal operation can be restored.
When scanning and downloading QR codes or opening audio and video call links, the webpage still displays blank after loading.	1.Open the "Settings" on your phone, scroll down to find "Safari Browser" and click to enter. 2.Scroll down to find 'Advanced' and click to enter. 3.Enable JavaScript. After completion, reopen the webpage or refresh it to restore normal operation.

• Andriod

Problem description	Solution
In the app, when clicking on the input box, the input method keyboard never appears.	(Taking Xiaomi phones as an example) 1. Open your phone's "Settings" -> "More Settings" -> "Language and Input Methods" -> "Keyboard, Mouse, and Touchpad". 2. Turn on 'Use on-screen keyboard', and once completed, it will return to normal. Note: For other Android brand phones, you can refer to this operation step and find and enable the use of the on-screen keyboard in the phone language and input method settings.
Huawei HarmonyOS cannot install unknown source applications	1. Open the "Settings" on your phone and find the "Security" or "Security and Privacy" options. 2. Click on "More Security Settings" and select "Install External Source Apps". 3. Enable the installation of applications.
When using one click voice translation, the mobile input method automatically shrinks or minimizes.	The reason for this issue may be a conflict between the built-in input method of the phone and the functionality of this product. Recommend downloading, installing, and using 'Baidu Input Method' to make the experience smoother.
When the application is running in the background, holding down the device's voice control button has no response.	The reason for this issue is that some brands of phones will default to disabling background auto start, so it is necessary to allow "AIGSM" background auto start in the permission management of the phone settings.

Warranty card

Disclaimer

1. Please read the product manual carefully before use and operate strictly in accordance with the contents of the manual;
2. This product is not responsible for the translation results;
3. This product is not waterproof. The user shall bear the machine damage caused by water ingress.

Warranty clause

1. The free warranty period of this product is 12 months;
2. During the warranty period, the fault caused by normal use in accordance with the manual (determined by our after-sales personnel or our authorized service personnel) will be repaired free of charge.

3. During the warranty period, the following situations are not covered by the free warranty:

- 1) Failure to provide warranty certificate and valid purchase certificate;
- 2) Unauthorized repair, misuse, collision, negligence, abuse, accident, improper use of this product, etc.;
- 3) Due to long-term exposure to strong light, fire or similar overheating environment;
- 4) Machine damage or performance failure caused by human factors such as water ingress;
- 5) Losses caused by using unqualified power adapters exceeding 5V/2A;

4. The company is not responsible for any special, incidental or indirect losses and damages.

name	_____
telephone	_____
Contact address	_____
SN number	_____
Fault description	_____
Purchase channel	_____
Order number	_____

If you need after-sales service, please contact after-sales channel customer service in time.

Please fill out this card in detail and return it with the product.

FCC Caution:**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.