



FR

**Cet appareil
se recycle**

À DÉPOSER
EN MAGASIN



ou

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



PAP 22
Raccolta Carta

58.03.001.0805


Reolink

RLA-CD1

Operational Instructions




@ReolinkTech <https://reolink.com>

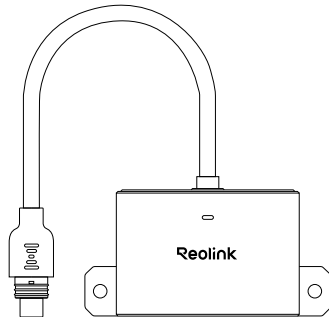

Contents

01	What's in the Box	02
02	Device Overview	03
03	Install the Device	04
04	Set Up the Device	07
05	Specifications	11
06	Important Safety Instructions	12
07	Legal Disclaimer	13
08	Notification of Compliance	15

01 What's in the Box

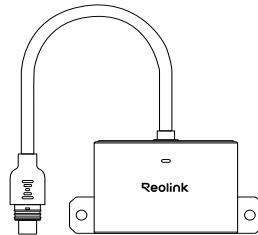

• RLA-CD1*1



• Mounting Bar*1



• Mounting Template*1




• Screw Bag*1




• Operational Instructions*1

02 Device Overview

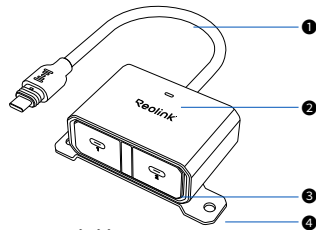

Compatibility


For the RLA-CD1 compatible device list, please refer to <https://support.reolink.com/hc/en-us/articles/46189538548377/>.

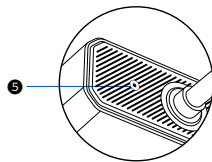

- 1 USB-C Cable
- 2 Indicator Light
- 3 Cover
- 4 Mounting Bar
- 5 Temperature & Humidity Sensor

03 Install the Device

Step 1. Attach to the Mounting Bar

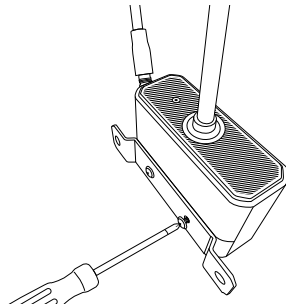


NOTE:

Please ensure the installation surface can support the total weight of the camera and its accessories.

Step 2. Mount the Device

Option 1. Mount on the Wall


Stick the mounting template to the wall, then drill two 1-inch deep holes.

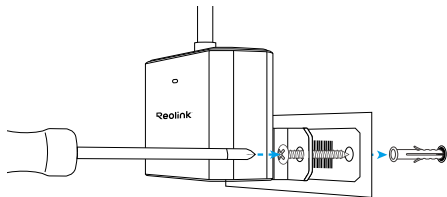

- Hard Walls (e.g. Concrete, Brick, and Plaster Walls):
Drill the two wall anchors from the screw bag into the wall. Use two screws to secure the RLA-CD1 onto the wall.
- Soft Walls (e.g. Wooden Walls):
Directly drill in the two screws to secure the RLA-CD1 onto the wall.

Option 2. Mount to the Bracket

This RLA-CD1 accessory can be attached to the brackets of certain Reolink models, such as the TrackMix LTE Plus 2.

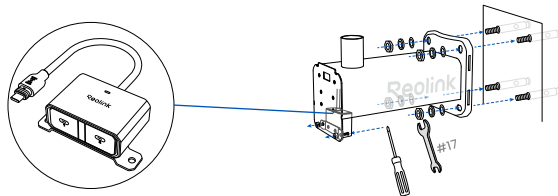

Use two screws to attach the RLA-CD1 to the bracket.




NOTE:

For optimal water resistance, install the dock with the logo facing upwards.

04 Set Up the Device

Step 1. Connect the Device

The following is an example of connecting two RLA-BP1 battery packs.

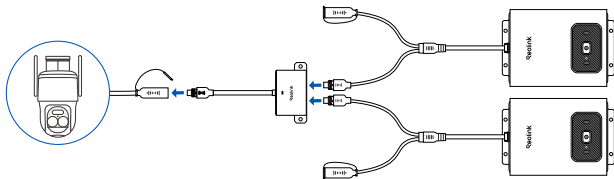

1. Connect the RLA-CD1 to the camera.
2. Plug the USB-C cable of the battery pack into the RLA-CD1's port.

Understanding Indicator Lights

Status LED		
Cameras Compatible with RLA-CD1*	Connecting	Flashing Green Light (3s)
	Connection Successful	Solid Green Light (2s)
Cameras Incompatible with RLA-CD1		Flashing Red Light (3s)
*Cameras support real-time temperature and humidity sensing and IoT accessory pairing.		

Step 2. Pair the Device

The following is an example of pairing the RLA-BP1 battery pack.

1. After successful connection, shortly press the battery pack's button three times. The red and green lights will flash alternately, indicating that the two devices start pairing.
2. Open the Reolink App and enter the camera's Settings page. Tap Expansion Devices.
3. Follow the onscreen instructions to pair the battery pack with the RLA-CD1.



NOTE:

The methods for entering pair mode may vary depending on the device. Please follow the specific instructions for your device. To ensure the proper functioning of the RLA-CD1, please pair and use it through the latest version of the app.

Understanding Indicator Lights

Status LED		
Pairing	Start Pairing	Red & Green Lights Flash Alternately
	Pairing Completed	Solid Green Light (2s)
	Pairing Failed	Solid Red Light (2s)

05 Specifications

Material: Aluminum Alloy & Polycarbonate

Dimension: 66 × 46 × 25 mm

Weight: 75g

Weatherproof: IP67

06 Important Safety Instructions

Please read the instructions carefully before using the device.

1. Replace only with the same or equivalent type of accessories recommended by Reolink.
2. Do not use the device in an environment that exceeds the recommended temperature range.
3. Do not use the device in an environment that exceeds the recommended humidity range.
4. Do not attempt to disassemble, repair, or alter the device by yourself.
5. Always follow the local safety laws and regulations when using the device.
6. The device contains (or comes with) small components, small plastic elements, and other small parts that may cause choking hazards. Keep the device and its accessories out of reach of children. Consult a physician immediately if small parts are swallowed.
7. The device contains (or comes with) cables or cords that may cause strangulation hazards. Keep the device and its accessories out of reach of children.

07 Legal Disclaimer

To the maximum extent permitted by applicable law, this document and the product described, with its hardware, software, firmware, and services, are delivered on an "as-is" and "as-available" basis, with all faults and without warranty of any kind. Reolink disclaims all warranties, express or implied, including but not limited to, warranties of merchantability, satisfactory quality, fitness for a particular purpose, accuracy, and non-infringement of third-party rights. In no event will Reolink, its directors, officers, employees, or agents be liable to you for any special, consequential, incidental or indirect damages, including but not limited to damages for loss of business profits, business interruption, or loss of data or documentation, in connection with the use of this product, even if Reolink has been advised of the possibility of such damages.

To the extent permitted by applicable law, your use of the Reolink products and services is at your sole risk and you assume all risks associated with internet access. Reolink does not take any responsibilities for abnormal operation, privacy leakage or other damages

resulting from cyber attacks, hacker attacks, virus inspections, or other internet security risks. However, Reolink will provide timely technical support if required.

The laws and regulations related to this product vary by jurisdiction. Please check all relevant laws and regulations in your jurisdiction before using this product to ensure that your use conforms to the applicable law and regulation. During the use of the product, you must comply with relevant local laws and regulations. Reolink is not responsible for any illegal or improper use and its consequences. Reolink is not liable in the event that this product is used with illegitimate purposes, such as third-party rights infringement, medical treatment, safety equipment, or other situations where the product failure could lead to death or personal injury, or for weapons of mass destruction, chemical and biological weapons, nuclear explosion, and any unsafe nuclear energy uses or anti-humanity purposes. In the event of any conflicts between this manual and the applicable law, the latter prevails.

08 Notification of Compliance

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



SIMPLIFIED EU AND UK DECLARATION OF CONFORMITY

Hereby, REOLINK INNOVATION LIMITED declares that the radio equipment type [refer to the cover of the Operational Instructions] is in compliance with Directive 2014/53/EU. The full text of the EU and UK declaration of conformity is available at the following internet address: <https://support.reolink.com/hc/en-us/articles/36788378727065/>

RF exposure information: The Maximum Permissible Exposure (MPE) level has been calculated based on a distance of 20cm between the device and the human body. To maintain compliance with RF exposure requirement, use product that maintain a 20cm distance between the device and human body

Operating Frequency :

915MHz RF Power: ≤30dBm(EIRP)



Correct Disposal of This Product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Limited Warranty

This product comes with a 2-year limited warranty that is valid only if purchased from Reolink Official Store or a Reolink authorized reseller. Learn more: <https://reolink.com/warranty-and-return/>.

NOTE: We hope that you enjoy the new purchase. But if you are not satisfied with the product and plan to return, we strongly suggest that you reset the camera to factory

default settings and take out the inserted SD card before returning.

Terms and Privacy

Use of the product is subject to your agreement to the Terms of Service and Privacy Policy at reolink.com

Terms of Service

By using the Product Software that is embedded on the Reolink product, you agree to the terms&conditions between you and Reolink. Learn more:
<https://reolink.com/terms-conditions/>

Technical Support

If you need any technical help, please visit our official support site and contact our support team before returning the products, <https://support.reolink.com>.

Trademarks Acknowledgement

"Reolink" and other Reolink's trademarks and logos are the properties of Reolink. Other trademarks and logos mentioned are the properties of their respective owners.

REOLINK TECHNOLOGY PTE. LTD.

31 KAKI BUKIT ROAD 3, #06-02, TECHLINK, SINGAPORE 417818