

User Manual

Smart Glasses
Model: UF-SL03
FCC ID:2BN7Z-UF-SL03

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Thank You

Thank you for purchasing the **weariQ Smart Glasses**. Please read this user manual carefully before using the product and follow all instructions during operation. Improper use may result in damage or personal injury. Keep this manual for future reference.

Important Safety Instructions

Please read all the contents of this manual and operate the product according to the instructions.

- Read all the contents of this manual and operate the product according to the instructions.
- This product is only used to provide smart audio and call services.
- It is not suitable for children.
- Use this wireless / BT smart glasses only for the purposes described in this manual.
- Do not place or store the glasses in places where they may fall or be dropped into water.
- If you have any concerns about your health, consult a doctor before use.

- If you experience any discomfort during use, such as dizziness, nausea, eye pain or other uncomfortable symptoms, stop using immediately.
- Do not immerse the glasses in water or any other liquid to avoid damaging the electronic components.
- When not in use, turn off the glasses and store them properly. Avoid exposing them to high temperatures or humid environments for a long time.
- These glasses are designed for adults and for personal use only. Do not use the glasses as children's toys.
- When using the glasses, make sure they are firmly fixed on your head to prevent accidental dropping.
- Use the glasses correctly according to the instructions in this manual to avoid damage caused by improper operation.

This product is not intended for use by children under 14 years of age.
This product contains small parts and may present a choking hazard.

SAVE THESE INSTRUCTIONS

About the Product

1. Specifications


Product Name: Smart Glasses
Distance: 33 ft
Music Playing time: 5 H
Call time: 5 H
Input: 5.0V  1.0A

Charging time: 1.5 H
Standby time: 30 H
Battery capacity: 3.8V / 55mAh
Weight: 0.066 lb
Size: L5.7 x W6.1 x H1.7 inch

2. Package Contents

1 x weariQ-06 Smart Glasses
1 x Magnetic Charging Cable
1 x Storage Bag
1 x User Manual

3. Product Structure

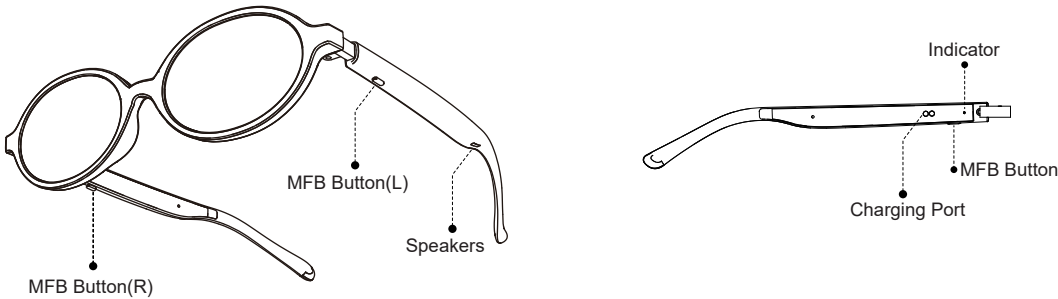

Operation Instructions

Power On / Off

- **Power On:** Press and hold both MFB buttons for 3 seconds. The indicator flashes blue 3 times quickly, then alternates between red and blue, accompanied by a voice prompt: "Welcome to weariQ."
- **Power Off:** Press and hold both MFB buttons for 5 seconds. The indicator turns solid red for 1 second, then turns off, accompanied by a voice prompt: "Goodbye from weariQ."

BT Pairing

- 1.Turn on the glasses. They will automatically enter pairing mode with a voice prompt "Pairing".
2. Enable BT on your mobile device.
3. Search for **weariQ-06** and select it to connect.
4. The indicator light on temples will turn off after the left and right temples are successfully paired accompanied by a voice prompt saying "Connected."
5. When turn off BT on your phone, the smart glasses will disconnect from the phone, flash red and blue alternately, and play a voice prompt saying "Disconnected."


MFB Button Operation

Function	Action	Button
Power on	Press and hold both buttons for 3 seconds	L and R
Power off	Press and hold either buttons for 5 seconds	L and R
Play / Pause music	Single tap (either button)	L or R
Enable / disable the voice assistant	Triple-tap the left button	L
Previous track	Double-tap the left button	L
Next track	Double-tap the right button	R
Remote camera (when camera is active)	Triple-tap the right button	R
Volume up	Press and hold the right button for 1.5 seconds	R
Volume down	Press and hold the left button for 1.5 seconds	L
Answer / End call	Single tap (either button)	L or R
Reject a call	Press and hold either button for 1.5 seconds	L or R

Charging Instructions

- Attach the magnetic charging cable to the charging port on the smart glasses, it will snap into place automatically via magnetic alignment.
- Solid red light on: charging
- Red light turns off: fully charged
- Low battery alert: red light flashes.

Note: This product contains a built-in rechargeable battery. Do not attempt to remove or replace the battery.

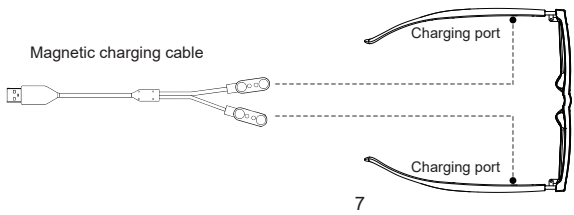

Cleaning and Maintenance

- Turn off the device before cleaning.
- Use a soft, dry or slightly damp cloth to clean the glasses.
- Do not use abrasive or corrosive cleaning agents.
- Do not expose the product to high temperatures or direct sunlight for extended periods.
- Do not disassemble the product. Doing so will void the warranty.

BT Connection Issues

Problem: unable to pair or connect

- Ensure BT is enabled on your phone.
- Keep the glasses within 10 meters (33 ft) of the device.
- Restart both the glasses and your phone, then try pairing again.

- Clear pairing information with mobile phone:

With the device powered on and not connected to any device, quickly press either button 5 times in a row.

The pairing information will be cleared, and the device will automatically power off once the process is complete.

No Power

Problem: Device does not turn on

- There is no BT connection for 5 minutes, the glasses will automatically shut down.
- Ensure the MFB button is pressed and held for at least 5 seconds.
- Charge the device fully, then try again.

Poor Call Quality

Problem: Low audio quality or noise

- Move to a quieter environment.
- Ensure your phone has a strong network signal.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference.
- (2)This device must accept any interference received , including interference that may cause undesired operation.

FCC Statement Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help with the supplied fastener.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

Warranty

This product is covered by a **one-year limited warranty** from the date of purchase.

The warranty will be void if damage is caused by:

1. Improper use or operation
2. Unauthorized disassembly or modification
3. Accidental damage or misuse
4. Natural disasters or abnormal voltage
5. Commercial or industrial use
6. Normal wear and tear that does not affect product functionality

A Dedicated Team Just For You



Every weariQ product is backed by a 1-year warranty and an award-winning customer service team. If you are in any way dissatisfied with a product you ordered, we'll exchange it, replace it or refund your money under the warranty. Simply email us the problem, and we'll take care of it.



Troubleshoot
Help you solve any issues with your device.



Product Knowledge
Answer questions about your device and best practices.



Initiate Returns
Provide instructions for replacements, returns and refunds.



Place New Orders
Help with placing orders online or via authorized resellers.

US Importer:

Amazing Impulse, LLC
7025 CR 46A Ste 1071-412
Lake Mary, FL 32746, USA

Customer Support:

Email: support@weariq.net

© weariQ. All rights reserved.
Made in China