


WEARFIT AI SMART GLASSES

USER MANUAL

Product button description

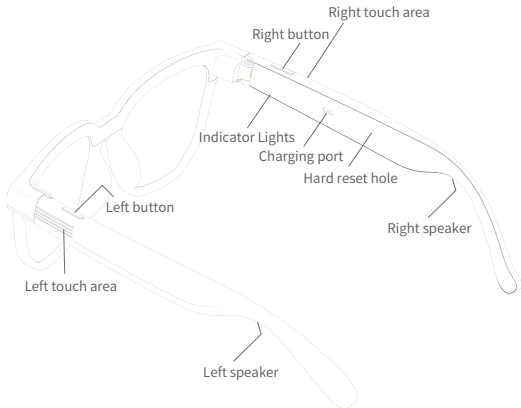

Product Parameters

Product Name	Smart Glasses
Product Model	P18
Product Weight	
Camera pixels	2 megapixels
Built-in storage	16Gb
Bluetooth version	Dual Bluetooth 5.3
Battery	290mAh
Charge	2PIN magnetic charging
Charging time	About 2.5 hours
FCC ID	2BPS4ASG-P18B250800

Features List

Function	Functional Description	Remark
HD Shooting	One-Click photo and video capture	
HD Recording	One-Click HD Recording	
AI Intelligent Image Recognition	AI assistant captures and analyzes image content in real time	
AI Voice Assistant	AI large-Scale Models voice dialogue	
AI Schedule Management	Voice setting schedule and smart reminder	
AI intelligent translation	One-Click translation, simultaneous interpretation, face-to-face translation	Supports 140+ languages worldwide
AI conference Omni-tool	Real-time recording/translation of meeting content, AI organizes meeting minutes	Supports 60+ languages worldwide
Real-Time communication	Real-time translation for voice/video calls	Supports 60+ languages worldwide
Smart Navigation	Real-time voice navigation route broadcast	
Music Playback	Local/Bluetooth/Cloud multiple modes	
Bluetooth Calling	Bluetooth answer/end call	

Key Description

Left button	Click	Wake up the AI voice assistant (power on)
	Click	End the conversation and stop the broadcast (AI voice broadcast status)
Left touch area	Click	Switch to next song
	Double click	Switch to previous song
	Long press for 2 seconds	Wake up the phone's voice assistant
Right button	Click	Take a photo/turn off video/turn off recording/answer a call/hang up
	Double click	Record/Reject Call
	Triple click	Recording
	Long press for 3 seconds	Power on/off
Right touch area	Long press for 2 seconds	Play Music
	Click	Pause Music
Left button + right button	Long press for 6 seconds	Restore to factory settings
Hard reset hole	Press Ejector pin for 1 second	Reset and Restart

Indicator light/Fill light description

Blue Light	Power on	Blue light flashes 2 times
	Device Connection	Blue light flashes 3 times quickly and then turns off.
	Fully Charged	Blue light is always on display
	OTA Update	The blue light is always on display and turns off when completed.
Red light	Shutdown	Blue light flashes 2 times
	Low battery	Blue light flashes 5 times
	Charging	Red light keeps flashing
	Factory Reset	After the red light flashes continuously, the light goes out
Fill Light	Photograph	Press once, flash once
	Recording	Flashes every 5 seconds

Download and Connect

① Download and install the "Wearfit Pro" APP

Search for "Wearfit Pro" in major app stores and download;

Scan the QR code below to access the download link (Browser or WeChat scan code can be used);



② Connect to AI Smart Glasses

Turn on the Bluetooth of your mobile phone and keep it in the waiting state;

Long press AI smart glasses right button 3 seconds, release the button after hearing the power-on prompt tone. Then the Glasses powered on;

Open "Wearfit Pro" APP, quickly register an account to log in, and grant the necessary operating permissions;

Click the "+" sign in the upper right corner, select Manual Add, select Smart Glasses, find your glasses device, and click Connect.

③ Connect AI Smart Glasses to WiFi

Click System Settings, then Wi-Fi Settings;

Select the WiFi name you want to connect to or set it manually, then enter the password;

Note: ① When switching device connections, you need to delete the device in the "Wearfit Pro" APP and ignore the device in the system Bluetooth list;

② When connecting to WiFi, if you cannot find your WiFi name, you can manually enter it above and connect;

Function Instructions

① High-definition shooting

Click the button on the right side of the AI Smart Glasses, and you will hear a "click" sound that means the shooting is completed;

After shooting, you can import the photos in the "Wearfit Pro" APP for viewing and sharing;

Note: To maintain the clarity of the shot, please try to keep the device stable when shooting;

② High-definition video recording

Double-click the right button of the AI Smart Glasses, and a "Start video recording" sound to start shooting.

Click the button on the right side of the AI Smart Glasses again, and you will hear a "Stop recording" sound to end the shooting.

After shooting, you can import the video in the "Wearfit Pro" APP for viewing and sharing;

Note: To maintain the clarity of the shot, please try to keep the device stable when shooting;

③ Recording

Click the right button of the AI Smart Glasses three times, and you will hear a "Start audio recording" sound to start recording.

Click the button on the right side of the AI Smart Glasses again, and you will hear a "Stop recording" sound to end the recording.

After recording is completed, you can import audio files synchronously in the "Wearfit Pro" APP for viewing and sharing;

Note: This device supports taking photos, recording videos and recording audio, but the power consumption is relatively high when using. When the power is below 20%, the device will disable the photo, video and audio functions.

④ AI intelligent image recognition

Click the button on the left side of the AI Smart Glasses to wake up the AI voice assistant; or you can say "Xiǎo Fàn Xiǎo Fàn" or "Hi Xiǎo Fàn" to wake up the AI voice assistant.

Ask a question (e.g., what is in front of me);

Hearing the prompt sound "click" means the shooting is completed, and the AI voice assistant will

⑤ AI Voice Assistant

Click the button on the left side of the AI Smart Glasses to wake up the AI voice assistant; or you can say "Xiǎo Fàn Xiǎo Fàn" or "Hi Xiǎo Fàn" to wake up the AI voice assistant.

Ask questions, and the AI voice assistant will analyze and answer them;

⑥ AI schedule management

Wake up the AI voice assistant by pressing a button or using voice, and set schedule reminders (e.g., remind me of the meeting in 1 hour);

Or open "Wearfit Pro" APP, click on the schedule reminder, and click the "+" sign on the page to set the schedule;

⑦ AI intelligent translation

One-click translation: Open "Wearfit Pro" APP, click one-click translation, select the original language and target language, long press the voice recording icon to record the sound, release the button when finished, and the AI Smart Glasses will automatically broadcast the translation result.

Simultaneous Interpretation: Open "Wearfit Pro" APP, click one-click translation, select the original language and target language, click to start recording, and the AI Smart Glasses will automatically broadcast the translation results.

Real-time communication: Turn on" Wearfit Pro" APP, click Real-time communication, select Video call or Voice call, select my language and the other party's language, click Invite call, copy and share the link with the other party, and the other party can join the call by clicking it.

Face-to-face translation: Open" Wearfit Pro" APP, click Face-to-face translation, select my language and the other party's language, press and hold the corresponding button and speak to translate the voice into the target language.

⑧ AI conference tool

Open" Wearfit Pro" APP, click on the meeting tool, enter the meeting information and click start;

Click to end the recording and automatically generate AI meeting minutes.

⑨ AI Intelligent Navigation

Press a button or speak to wake up the AI voice assistant and tell it your navigation needs (e.g., Please navigate to Shenzhen North Station);
Or open "Wearfit Pro" APP, click Smart Navigation, enter your destination, select the navigation method, and click Start;

⑩ Music playback and download

Play music: AI Smart Glasses have 1 song built-in. Click the touch area on the right to play/pause the music.

Download music: Open "Wearfit Pro" APP, click Music, select Add Music, and download the music you need;

⑪ Answering the phone

After connecting your mobile phone, when a call comes in, the AI Smart Glasses will automatically play the incoming call ringtone prompt;

Click the right button to answer the call, and click the right button again to end the call;

Double-click the right button to reject the call;

Notes

① Please avoid using this product in high temperature, humid or strong magnetic field environment, otherwise it may interfere with the electronic components of the glasses, affect their normal operation, and damage the batteries and internal parts of the glasses

Avoid such environments when using and storing the product;

② This product is a precision electronic device and should not be subjected to strong impact, squeezing or dropping, which may damage the internal components and affect normal use. Therefore, please keep the glasses properly and avoid strong collisions with hard objects;

③ When not in use, this product should be placed in a dry, ventilated place away from direct sunlight. They can be stored in a glasses case or protective cover to prevent collision, squeezing or scratching, thus reducing the risk of damage.

④ Please use the original charger to charge the glasses, avoid using inferior chargers to prevent safety problems caused by improper charging, such as overheating, fire, etc.; avoid overcharging and over-discharging. When the battery power is less than 20%, charge it in time, and unplug the charger when it is full; charge and discharge the battery every once in a while to maintain battery performance;

⑤ Do not charge in a humid or wet environment. Please ensure that the charging area of the glasses is clean and in full contact with the charger surface.

⑥ Please keep the lens clean during use, wipe it gently with a clean, soft cloth, and avoid using chemical solvents or rough materials to clean the lens;

⑦ Regularly check and update the firmware of AI Smart Glasses to obtain new features, improve performance and fix vulnerabilities; during the update process, ensure that the battery is sufficient (more than 60%) and the network is stable to avoid device failure caused by update interruption;

⑧ Some functions may be adjusted or changed in the corresponding software version, which is normal;

⑨ The company reserves the right to modify the contents of this manual if necessary without prior notice;

★This product supports photo and video recording functions. It is strictly prohibited to use this product for candid photography and other activities. Please strictly follow local laws and regulations and use this product in compliance with regulations.

Common faults and solutions

Common faults	Solution
Unable to turn on	Check the battery level and charge
Unable to charge	Check whether the charging cable is normal
Unable to connect to mobile phone	Check whether the glasses are turned on and waiting for connection
Unable to connect to WiFi	Disconnect the device, reconnect and try again
No sound for music and announcements	Enter the APP to check whether the volume is normal
Slow photo/video import	Check if your WiFi is working properly
Photo/video import failed	Check whether your phone and device are connected to the same WiFi

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

WEARFIT AI SMART GLASSES
PREMIUM INSIDE OUT