

CO-EYE i-Bracelet

User Manual

for Operator

FCC Statement

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception,
- which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - -- Reorient or relocate the receiving antenna.
 - -- Increase the separation between the equipment and receiver.
 - -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CO-EYE i-Bracelet

Assembled i-Bracelet



Body of bracelet



different sizes of optical
fiber straps which are
packed in accessory box

Disposable optical fiber strap



- Disposable optical fiber strap cannot be adjusted by user, REFINE offer different sizes to cover all usage.
- Shown as below, the length of strap including 190mm(XS), 200mm(S), 220mm(M), 240mm(L), 260mm(XL). Find those straps in accessory box.



i-Bracelet attached at ANKLE as below shown



Offender should kneel on one knee on the chair and waiting for bracelet attached.

Attached at ankle

Step 1. Select the suitable size of strap according to ankle size.

Note: measure the strap firstly and don't connect with main part of bracelet before the right size selected. Once connected it's cannot be released without physical destroy. The size of strap doesn't need to be accurately measured, just avoiding too short or too long.


not too short



not too long



good

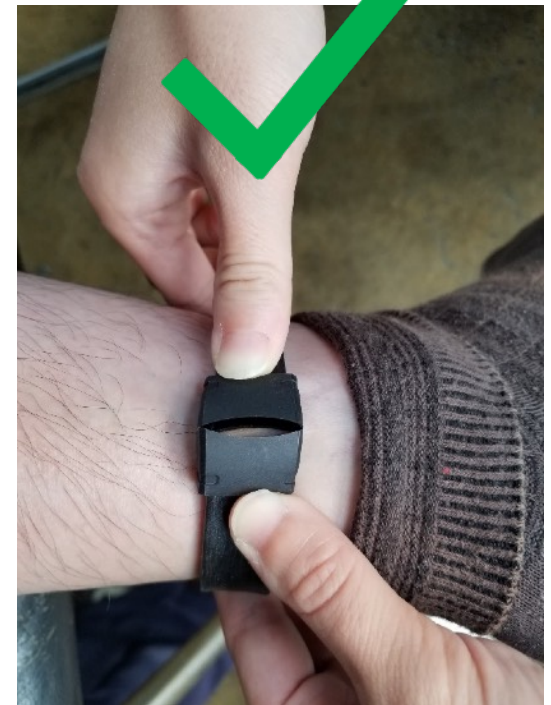

Attached at ankle

Step 2. Firmly fasten the clasps at both ends of bracelet. Pull again to make sure it doesn't loose.

There are 2 methods for operation:

1. Hold the plastic end of strap and forcefully push into position, then swaying from side to side (note: it will reduce clip failed) to clip well. Finally, pull the band to check locked.
2. Or hold the fiber optic end and forcefully push into position to clip well. Then, pull the band to check locked.



**Double-check:
Pull again to make
sure it doesn't
loose.**

Attentions




- The bracelet supports bath or swimming in normal life, but forbids such behaviors like diving or sauna.
- The effective range between i-Bracelet and monitoring device is from 10 meters (smartphone) to 30 meters (Tracker), recommend that both of them will be kept in same room to avoiding false alerts, especially at night.
- Please note that bracelet will stop to transmit any signals for power saving if no motion status lasts for 2 hours. There is a high sensitivity motion sensor built in the bracelet, once offender body attached it's not possible for no motions in 2 hours except death. This power saving mode is designed for storage.

Removal bracelet



Cut with scissors


Reuse the body of bracelet

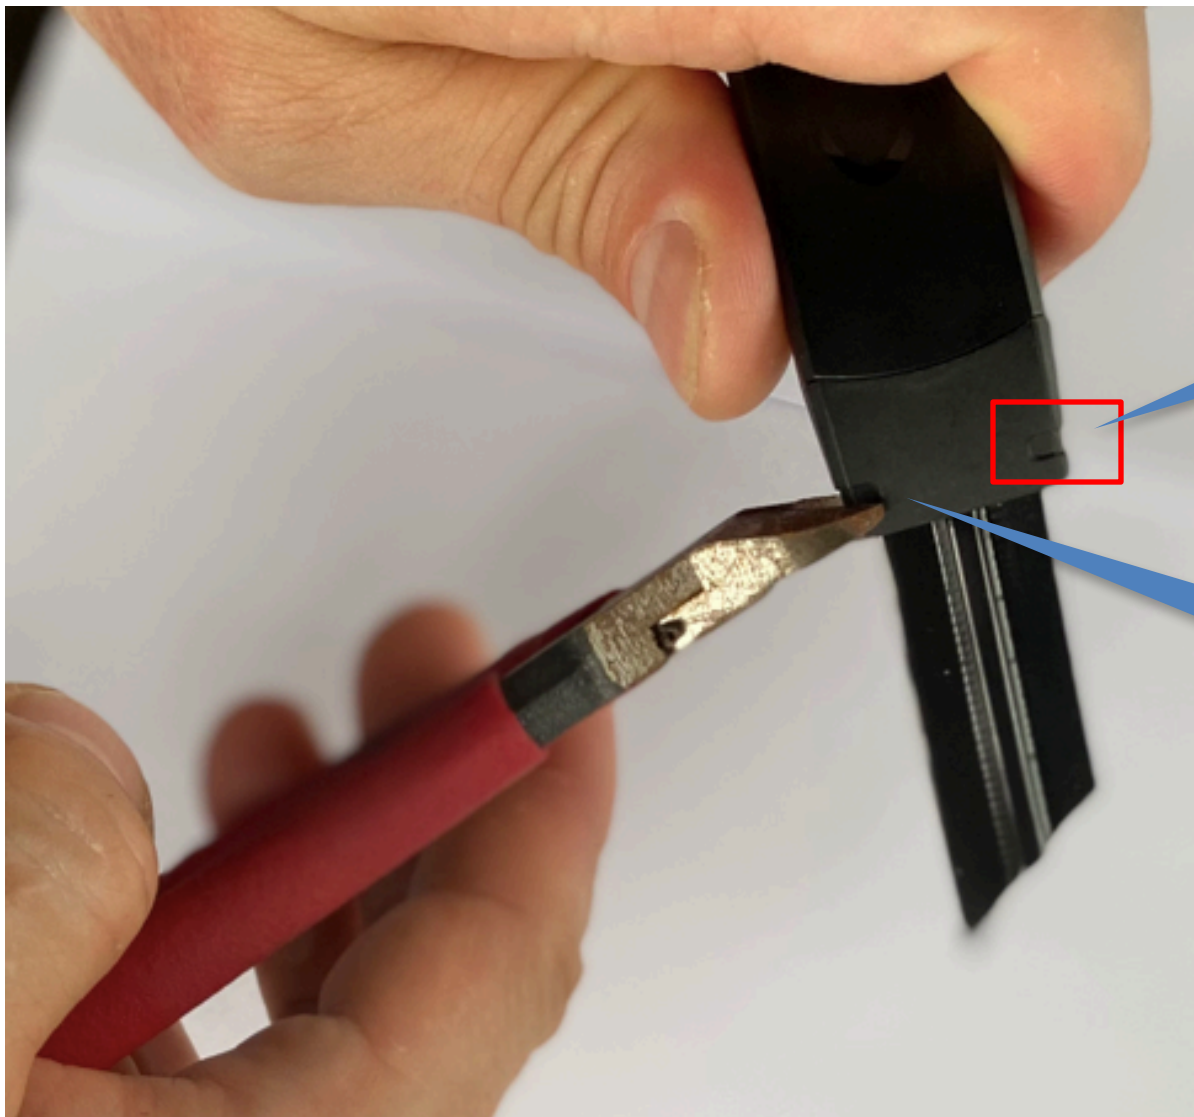

Mark to release
bracelet main part
from strap


Use side cutter plier
to cut mark position
for separation of
strap

Reuse the body of bracelet

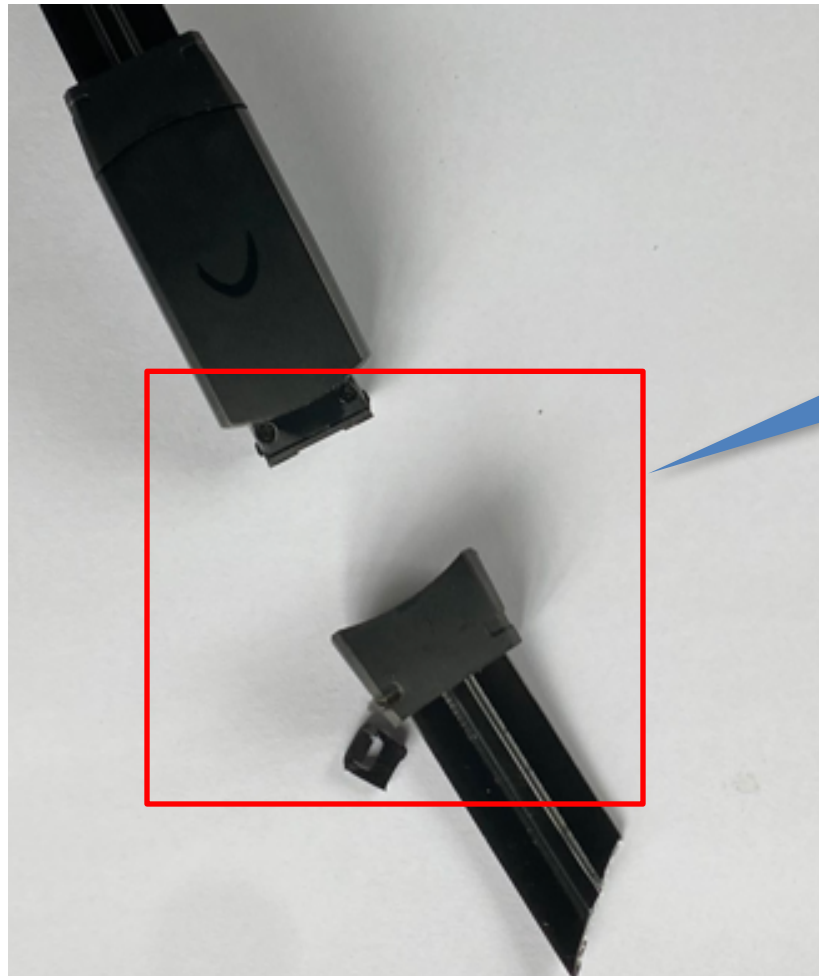

Finished one side
release strap

Change the battery

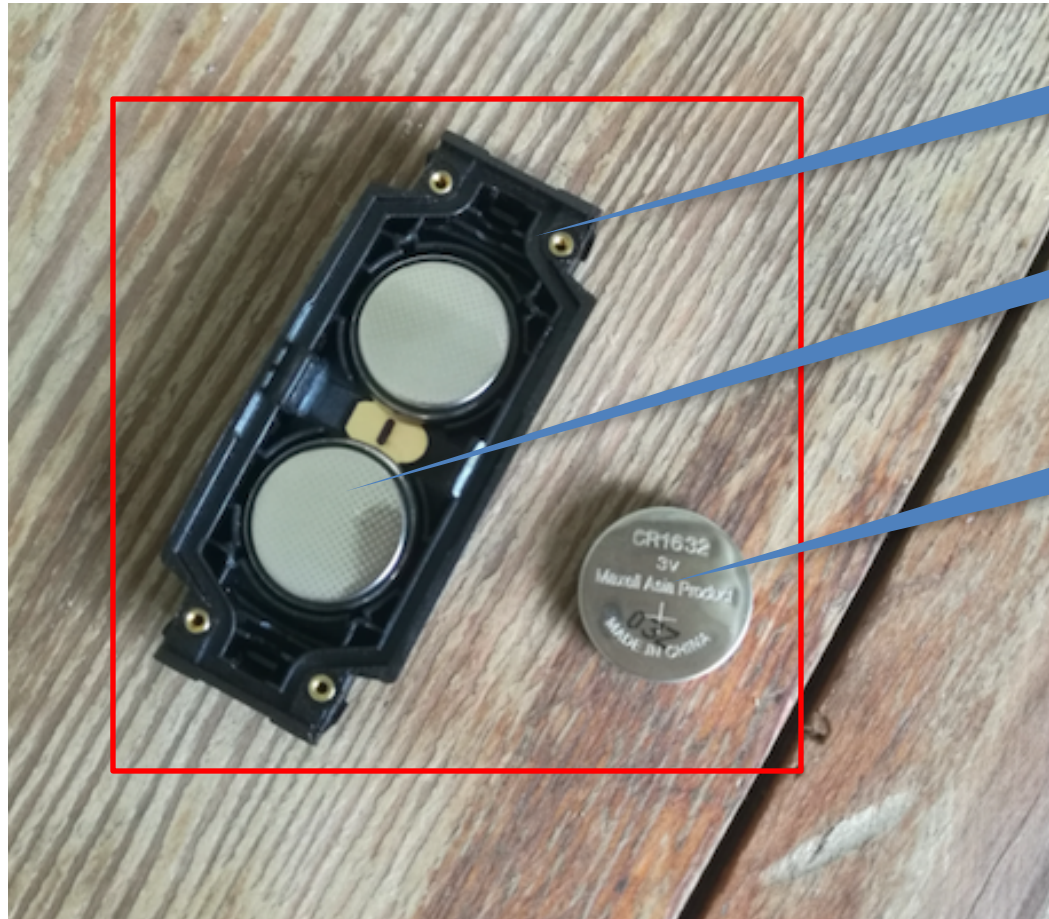

Open the cover of bracelet body with the cross screwdriver

i-Bracelet loads two standard CR1632 metal Li-batteries

Keep positive electrode at the bottom When load battery

Technical Supports

- +86 021-64826080
- Email: support@rfidcn.com
- Operating hours: 8:30-17:30 (Monday - Friday)