

说明书



智能通话眼镜

前言


感谢您购买并使用本公司的产品,为了让您尽快轻松自如地操作本机,在您开始使用之前请仔细阅读本手册。
本机是一款设计时尚的便携式无线蓝牙眼镜。本机支持蓝牙协议,支持智能手机、平板电脑、笔记本等带蓝牙音频功能的设备,可让您彻底摆脱有线束缚,无拘无束享受音乐乐趣。

注意事项

切勿严重撞击主机。

- ◆切勿接触苯、稀释剂等化学药品。
- ◆请不要靠近强磁场、电场下使用。
>请避开直射光线或发热器具。
- ◆切勿自行拆卸、修理、改造。
- ◆骑车、驾驶汽车及摩托车时,请勿使用播放器,以免造成危险。
- ◆切勿以较大音量长时间收听,以免对听力造成不良影响。
- ◆切勿用清水清洁本机,请用稍稍湿润的布清洁本机表面即可。
- ◆低电压使用时可能引起声音失真并及时充电,长时间不使用时请断开电源。
- ◆蓝牙功能与常见的智能手机、平板电脑等兼容,但根据您所使用的设备或应用程序的不同,可能不支持某些功能。
- ◆请勿将设备置于温度过低或过高(0度以下或45度以上)的环境下。

产品结构及功能框图

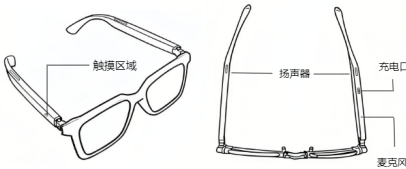

按住 3 秒开机, 按住 5 秒关机
短按: 暂停、播放
双击: 切下一首歌曲

参数

产品型号: A01
无线版本: V5.4
充电时间: 120 分钟
电池容量: 100mAh
传输距离: ≥10米
输入: DC5V
待机时间: 120小时
声道: 双声道 立体声

功能操作说明

- (1) 开关机: 关机时长按 3 秒触摸区域开机, 关机时长按 5 秒触摸区域关机。
- (2) 蓝牙连接: 开机后若未连接蓝牙, 此时红蓝灯闪烁, 打开手机蓝牙搜索并连接 A01。蓝牙连接后设备蓝灯 5 秒闪烁一次。
- (3) 音乐播放 / 暂停: 单击触摸区域。
- (4) 音乐下一首: 双击触摸区域。
- (5) 电话功能: 单击触摸区域接听电话、取消呼出。双击触摸区域拒接、挂断电话。
- (6) 唤醒手机语音助手: 三击触摸区域。
- (7) 清除配对并重置: 四击触摸区域。
- (8) 切换中英文提示音: 五击触摸区域
- (9) 低电提示: 60 秒提示一次, 红灯 5 秒闪烁 2 次。

充电操作

- (1) 眼镜充电: Type-C 接口接入 DC5V (如 PC 的 USB 接口, 5V 适配器)
- (2) 充电指示灯: 充电时红灯常亮, 充电时蓝灯常亮。


FUNCTIONAL OPERATION INSTRUCTIONS

- (1)Power On/Off:When powered off, press and hold the touch area for 3 seconds to power on.When powered on, press and hold the touch area for 5 seconds to power off.
- (2)Bluetooth Connection:If Bluetooth is not connected after powering on, the red and blue lights flash alternately. Turn on Bluetooth on your mobile phone, search for and connect to A01.After successful connection, the blue light flashes once every 5 seconds.
- (3)Music Play/Pause:Single tap the touch area.
- (4)Next Track:Double tap the touch area.
- (5)Call Functions:Single tap the touch area to answer a call or cancel an outgoing call.
- (6)Double tap the touch area to reject or end a call.
- (7)Wake Up Voice Assistant:Triple tap the touch area.
- (8)Clear Pairing and Reset:Quadruple tap the touch area.
- (9)Switch Chinese/English Voice Prompts:Quintuple tap the touch area.
- (10)Low Battery Alert:A low-battery alert is issued once every 60 seconds;the red light flashes twice within 5 seconds.

CHARGING OPERATION

- (1) Glasses charging
Input: DC5V power supply charging red light is always on;
- (2) The glasses are fully charged and the blue light stays on.

PRODUCT STRUCTURE AND FUNCTIONAL BLOCK DIAGRAM

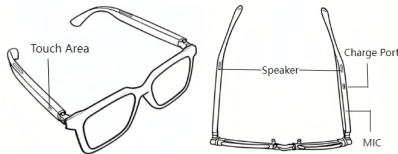

Press and hold for 3 seconds to power on
Press and hold for 5 seconds to power off
Short press: Pause / Play
Double press: Skip to the next track

PARAMETER

Product Model: A01
Wireless version: V5.4
Charging time: 120minutes
Battery capacity: 100mAh
Transmission distance: ≥ 10 meters
Input: DC5V
Standby time: 120 hours
Channel: Two channel stereo

FOREWORD

Thank you for purchasing and using our company's products. In order to enable you to operate this machine easily and smoothly as soon as possible, please read this manual carefully before starting to use it.

This device is a stylish and portable wireless Bluetooth glasses. This device supports Bluetooth protocol and supports devices with Bluetooth audio function such as smartphones, tablets, and laptops, allowing you to completely break free from wired constraints and enjoy music freely.

PRECAUTIONS

- ◆Do not severely impact the host.
- ◆Do not come into contact with chemicals such as benzene and diluents.
- ◆Please do not use near strong magnetic or electric fields.
- >Please avoid direct sunlight or heating appliances.
- ◆Do not disassemble, repair, or modify on your own.
- ◆When riding a bike, driving a car or motorcycle, do not use the player to avoid danger.
- ◆Do not listen at high volume for a long time to avoid adverse effects on hearing.
- ◆Do not clean this machine with clean water. Please clean the surface of the machine with a slightly damp cloth.
- ◆Low voltage use may cause sound distortion, please charge in a timely manner, and disconnect the power when not in use for a long time.
- ◆Bluetooth function is compatible with common smartphones, tablets, etc., but some functions may not be supported depending on the device or application you are using.
- ◆Do not place the device in an environment where the temperature is too low or too high (below 0 degrees or above 45 degrees).

SZsmartglasses

INSTRUCTIONS



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. – Increase the separation between the equipment and receiver. – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. – Consult the dealer or an experienced radio/TV technician for help.