



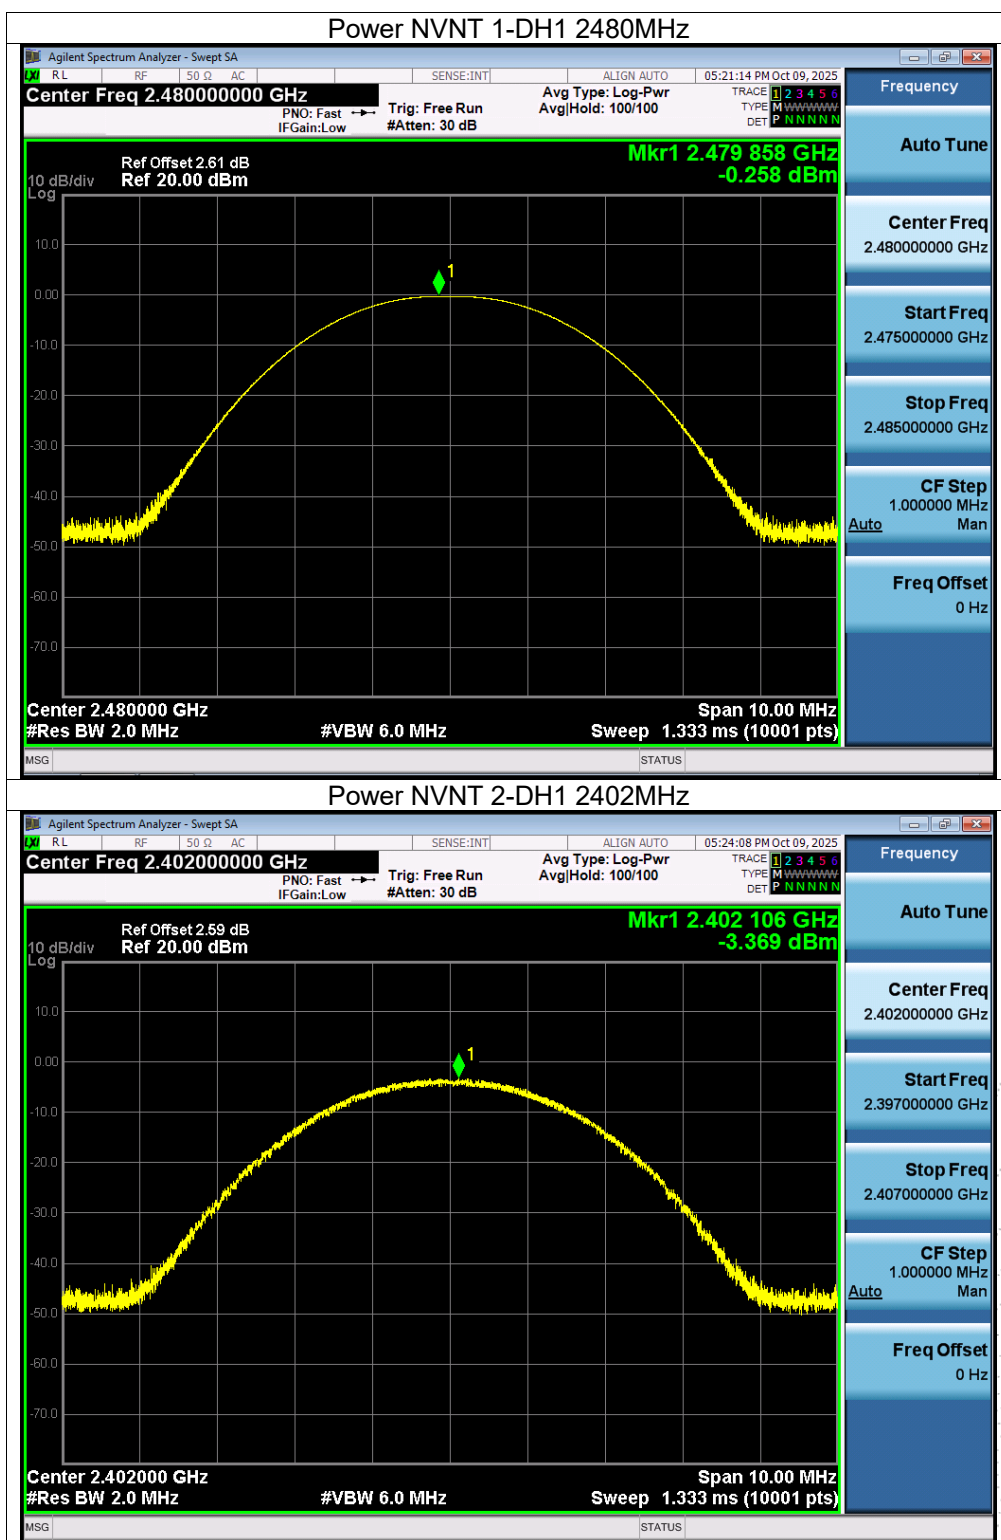


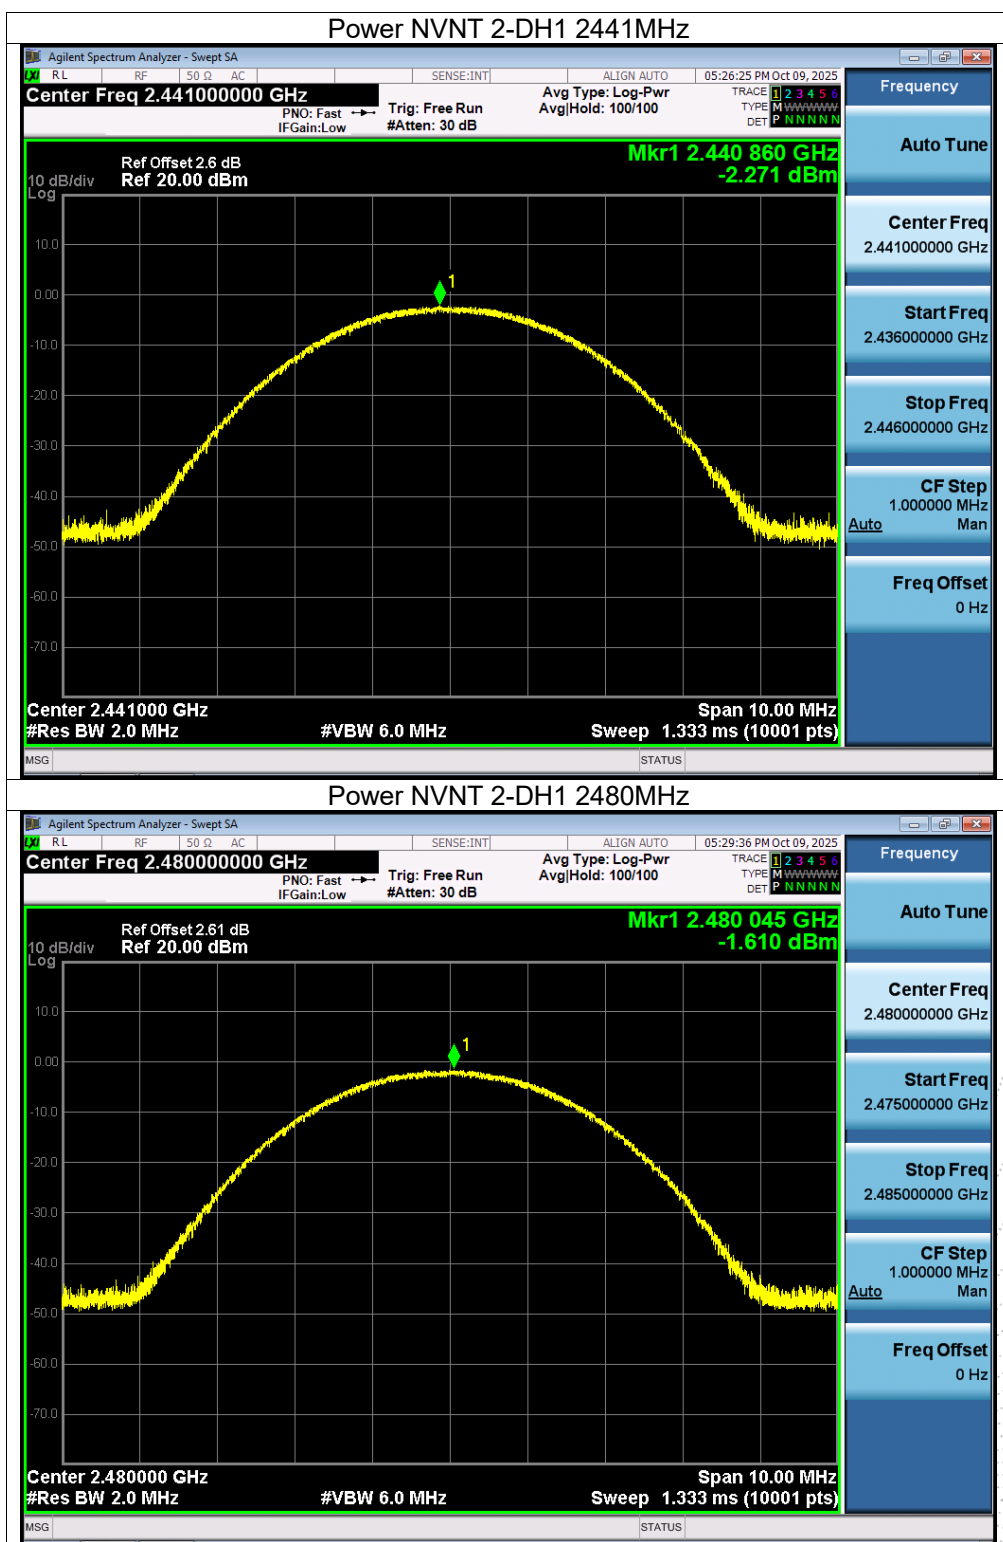

CHENZHEN

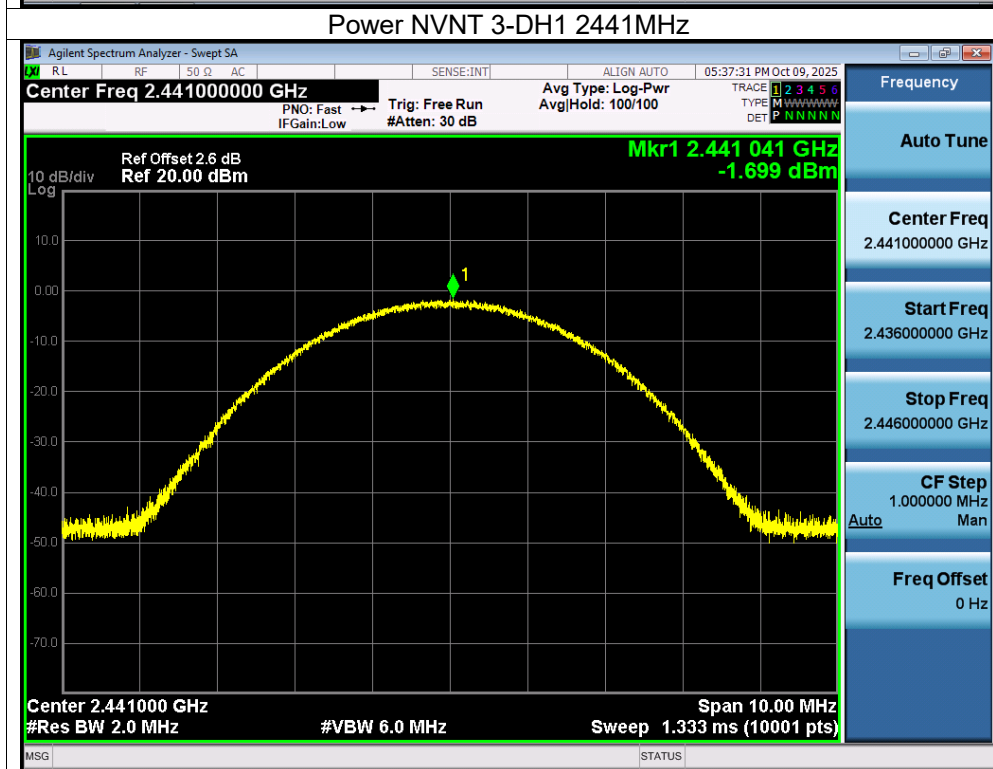

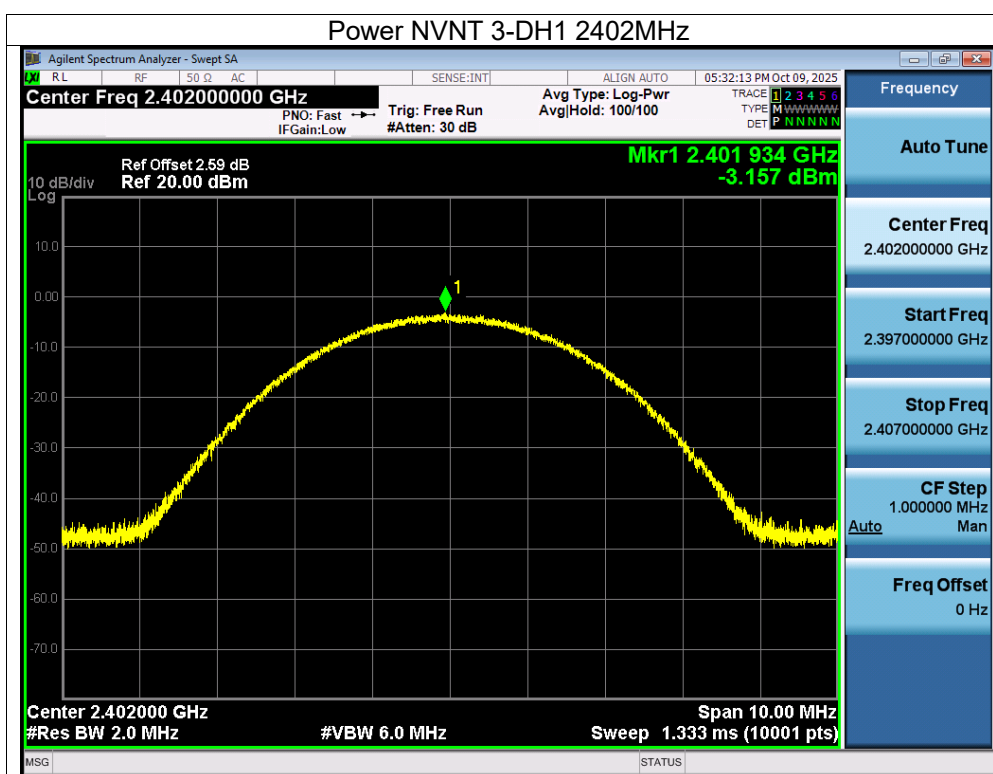

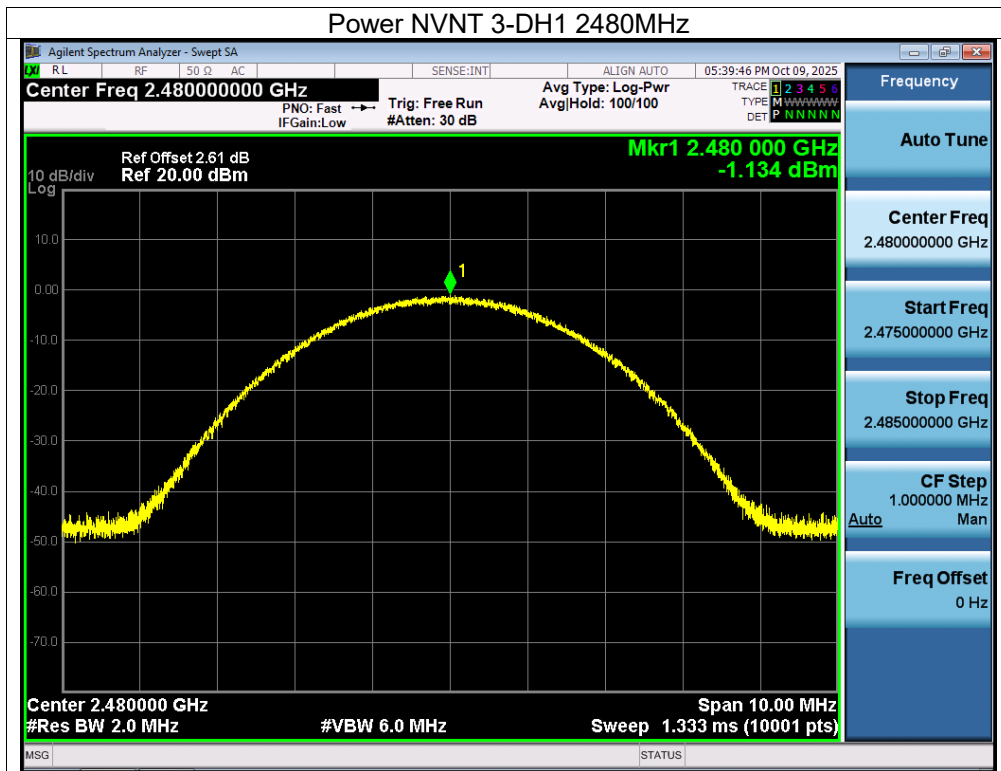

12. Hopping Channel Separation

12.1 Block Diagram Of Test Setup



12.2 Limit


Frequency hopping systems shall have hopping channel carrier frequencies separated by a minimum of 25 kHz or the 20 dB bandwidth of the hopping channel, whichever is greater. Alternatively, frequency hopping systems operating in the 2400-2483.5 MHz band may have hopping channel carrier frequencies that are separated by 25 kHz or two-thirds of the 20 dB bandwidth of the hopping channel, whichever is greater, provided the systems operate with an output power no greater than 0.125W.

12.3 Test procedure



1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 30kHz. VBW = 100kHz , Span = 2.0MHz. Sweep = auto; Detector Function = Peak. Trace = Max hold.
3. Allow the trace to stabilize. Use the marker-delta function to determine the separation between the peaks of the adjacent channels. The limit is specified in one of the subparagraphs of this Section Submit this plot.

12.4 Test Result



Mode	Test Channel	Separation (MHz)	Limit(MHz)	Result
1-DH1	Low	1.004	0.667	PASS
1-DH1	Middle	0.998	0.623	PASS
1-DH1	High	1.004	0.59	PASS
2-DH1	Low	0.998	0.829	PASS
2-DH1	Middle	1.002	0.847	PASS
2-DH1	High	1.002	0.849	PASS
3-DH1	Low	0.998	0.82	PASS
3-DH1	Middle	1	0.833	PASS
3-DH1	High	1.008	0.846	PASS


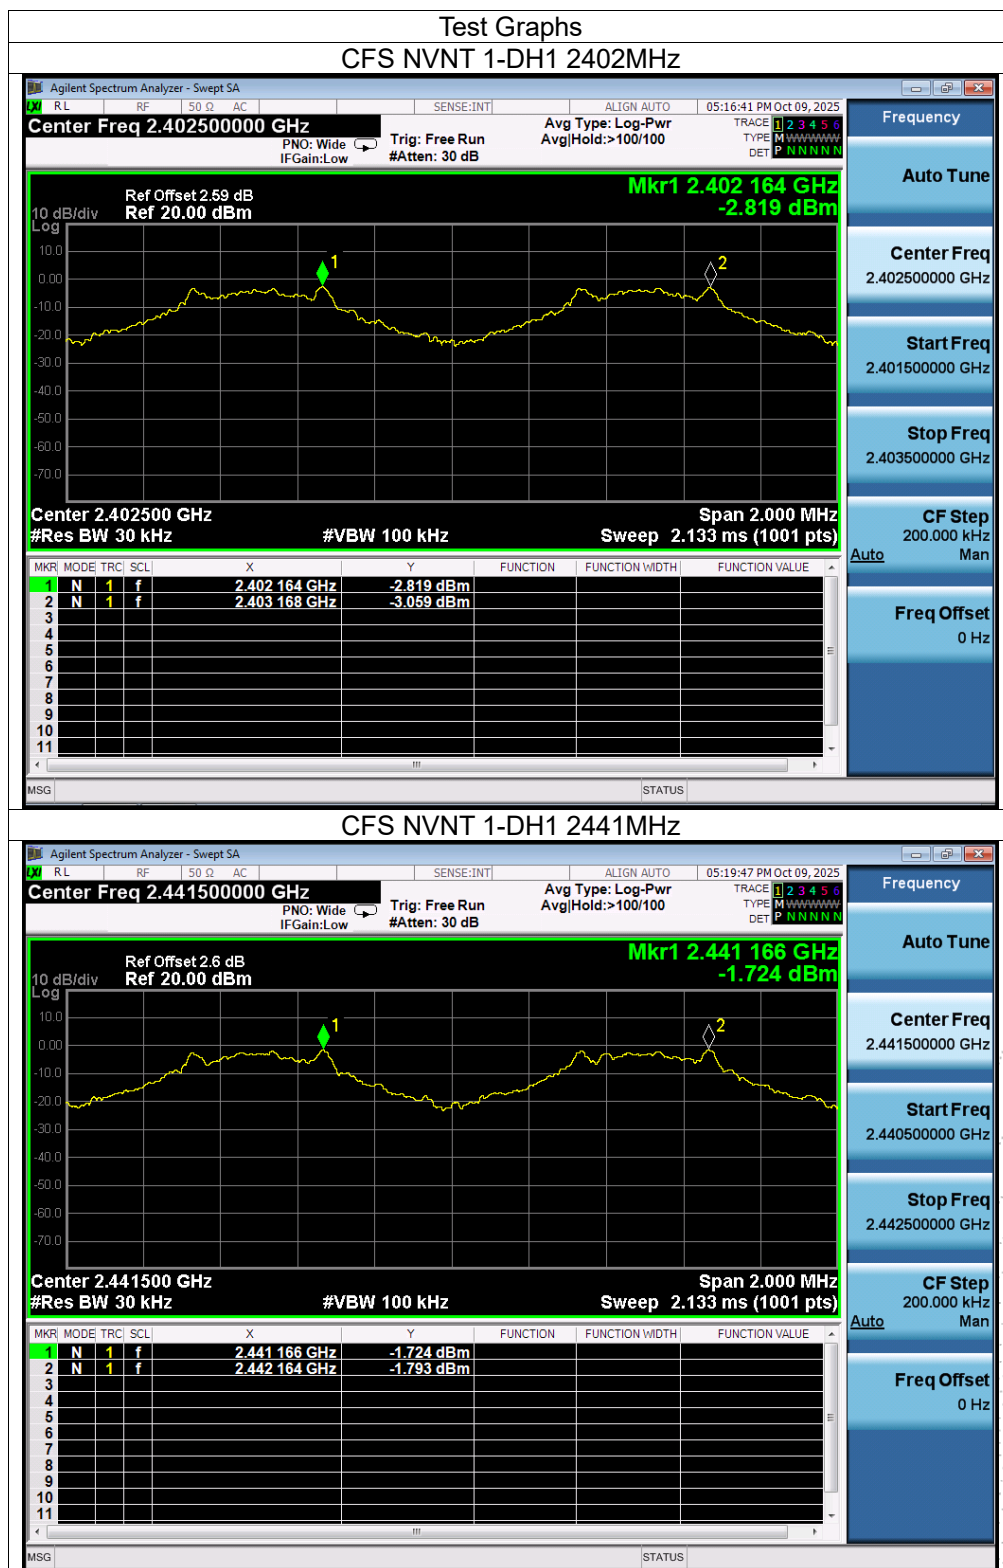



CO. LTD

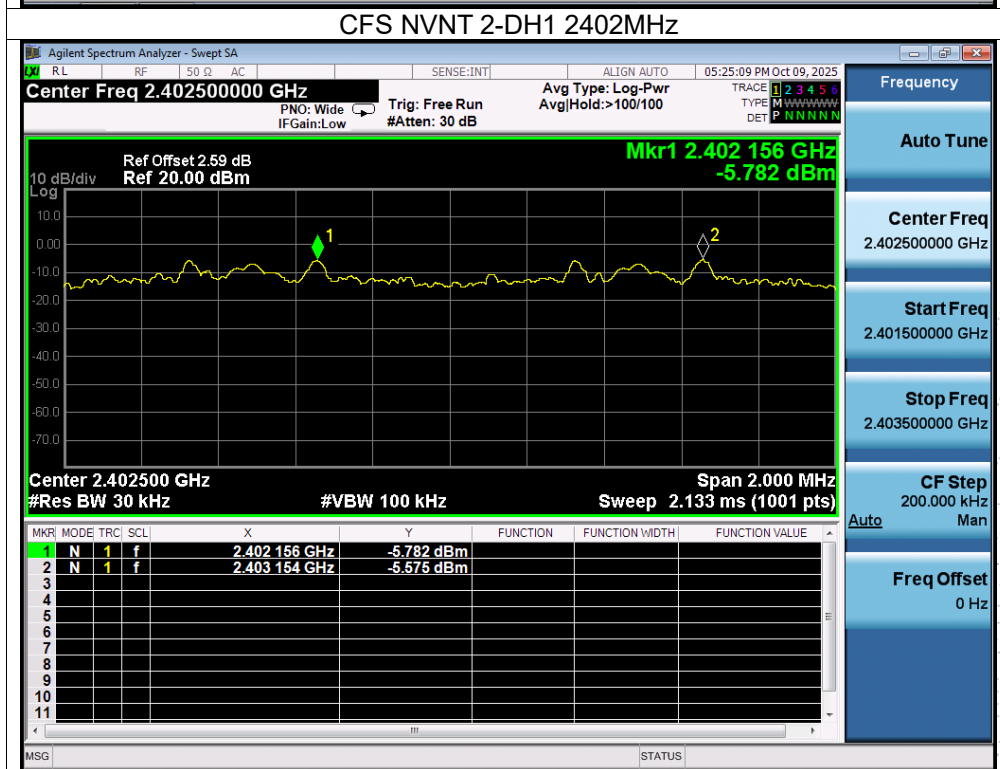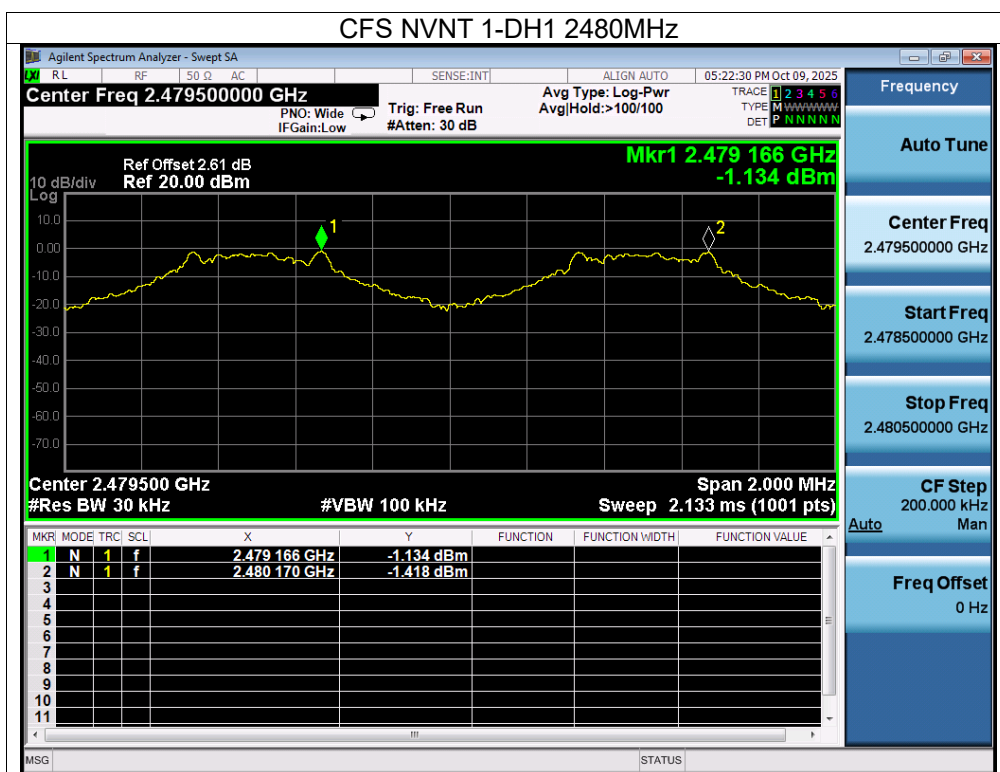

CHENZHEN

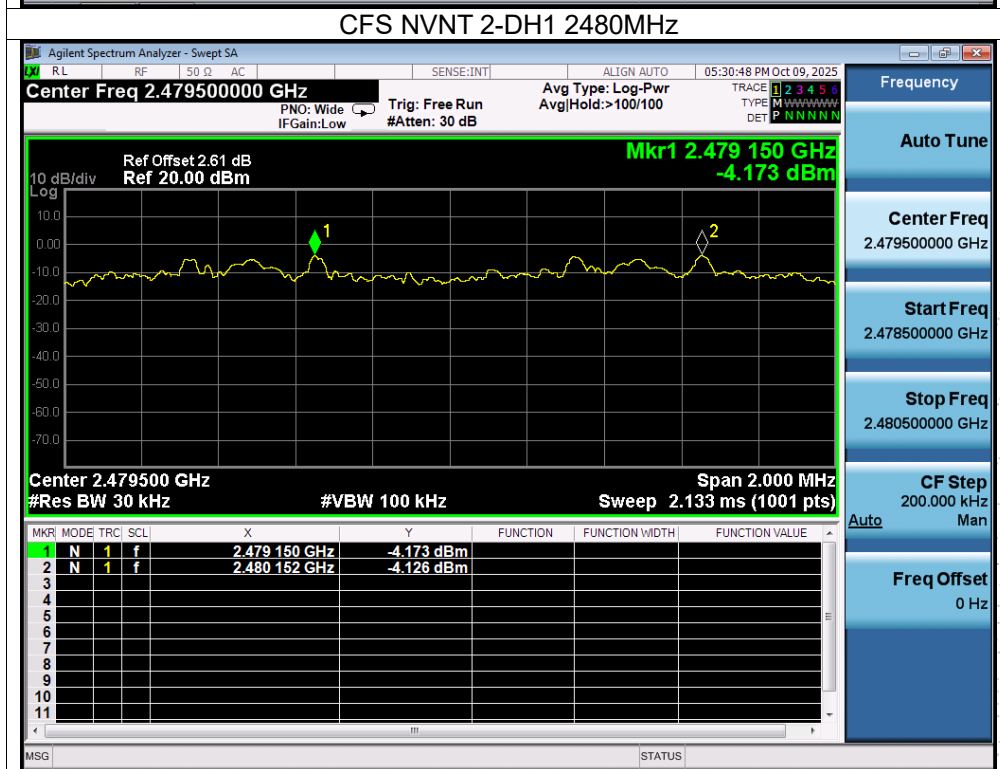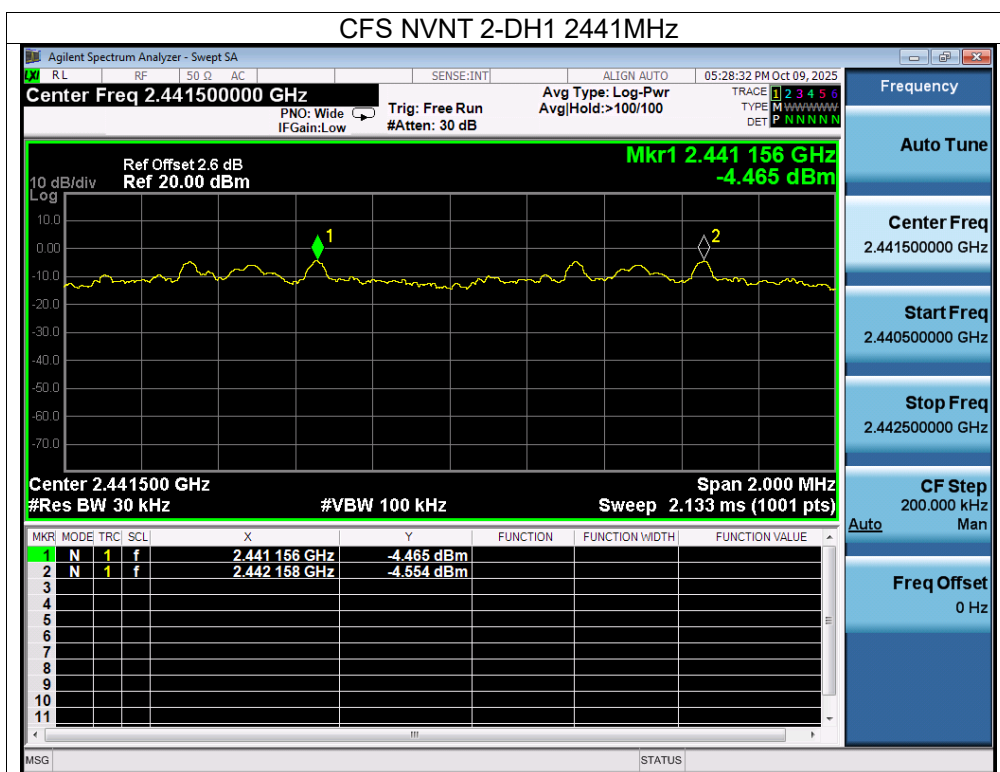

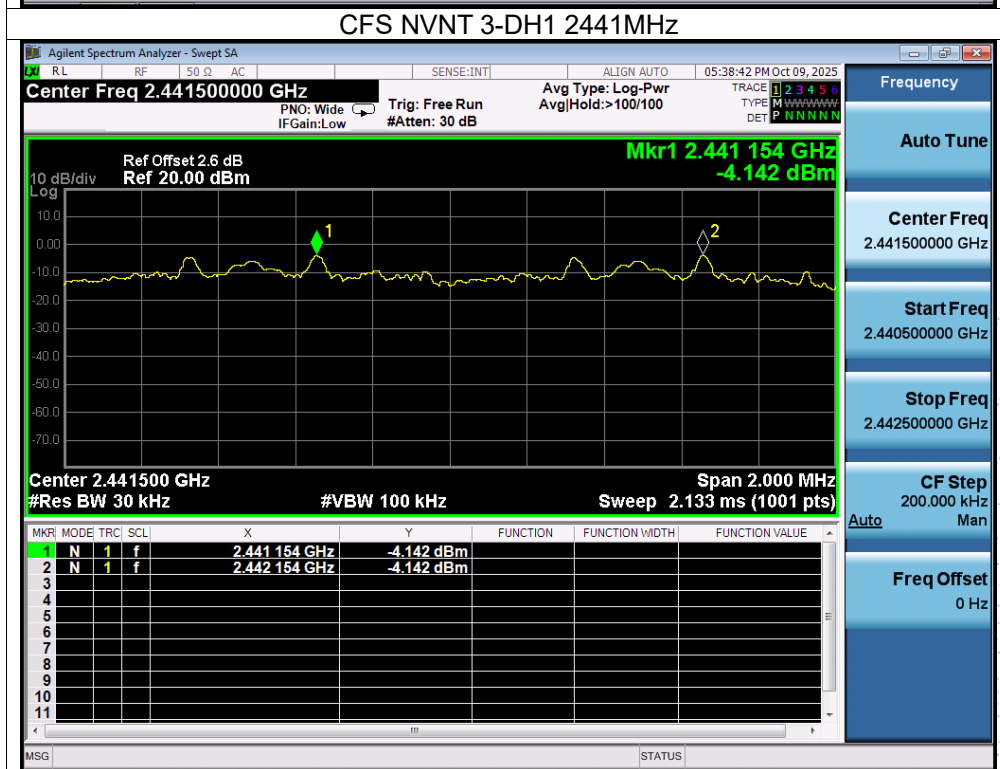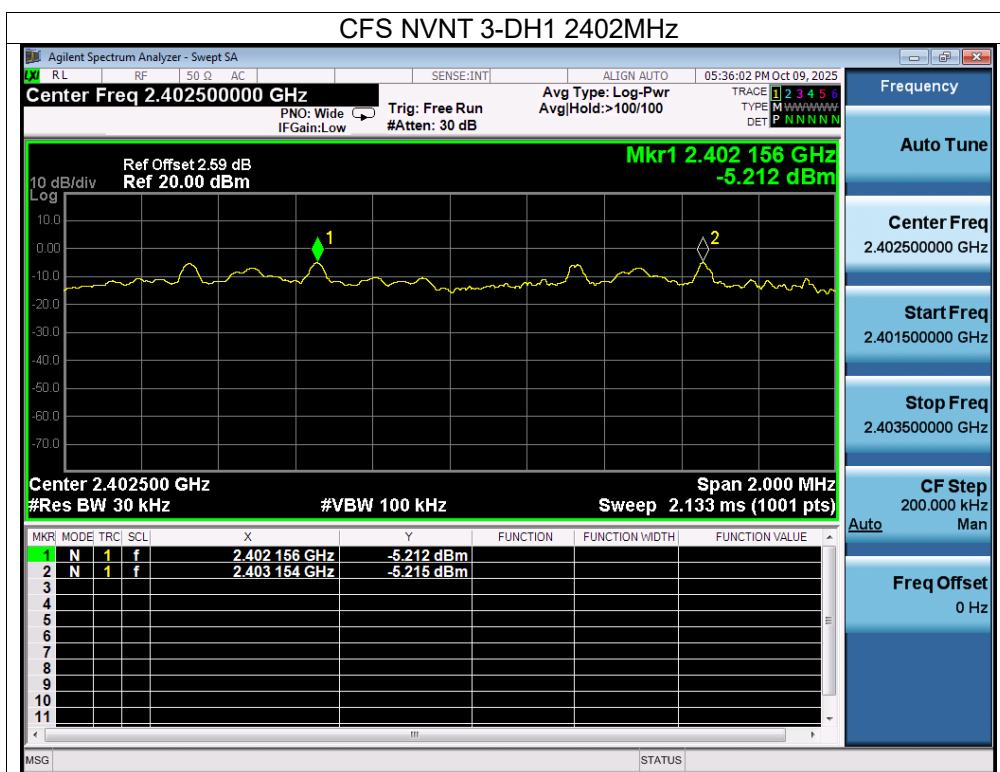


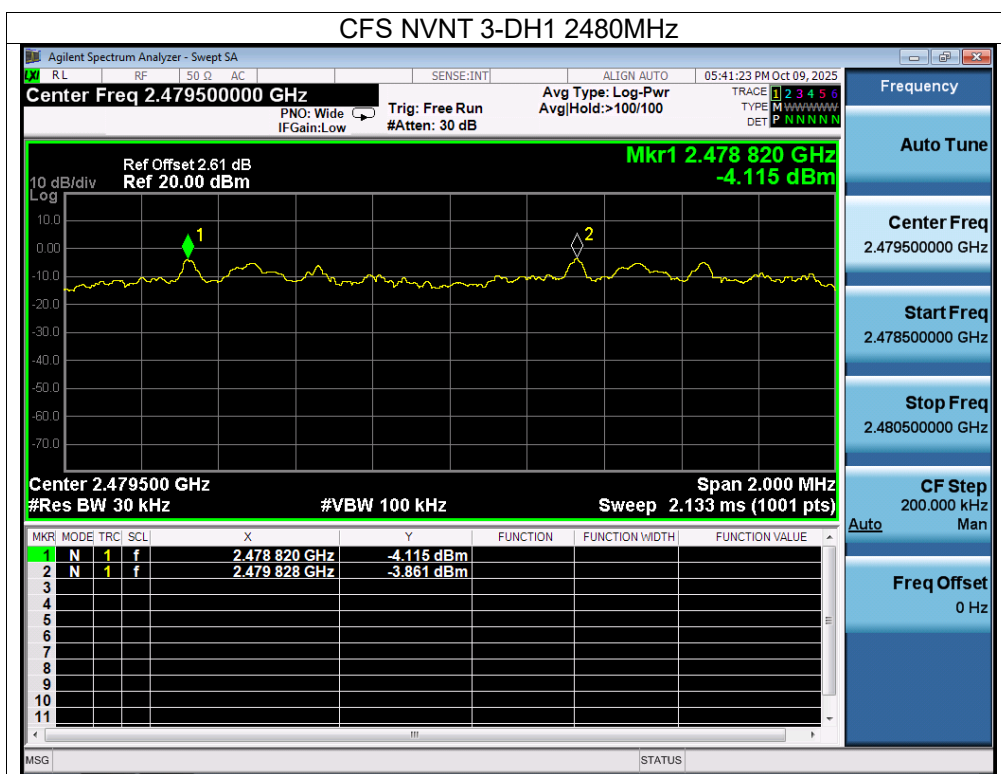

TEC
TO
OVER
t See

13. Number Of Hopping Frequency

13.1 Block Diagram Of Test Setup

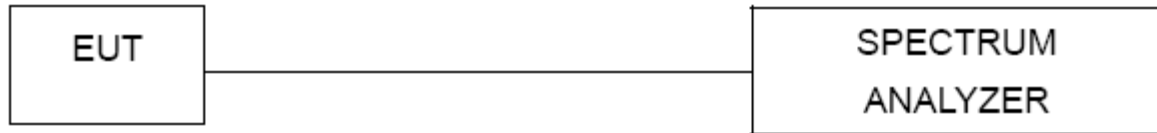

13.2 Limit


Frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels.

13.3 Test procedure


1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set the spectrum analyzer: RBW = 100kHz. VBW = 300kHz. Sweep = auto; Detector Function = Peak. Trace = Max hold.
3. Allow the trace to stabilize. It may prove necessary to break the span up to sections. in order to clearly show all of the hopping frequencies. The limit is specified in one of the subparagraphs of this Section.
4. Set the spectrum analyzer: Start Frequency = 2.4GHz, Stop Frequency = 2.4835GHz. Sweep=auto;

13.4 Test Result

Condition	Mode	Hopping Number	Limit	Verdict
NVNT	1-DH1	79	15	Pass
NVNT	2-DH1	79	15	Pass
NVNT	3-DH1	79	15	Pass

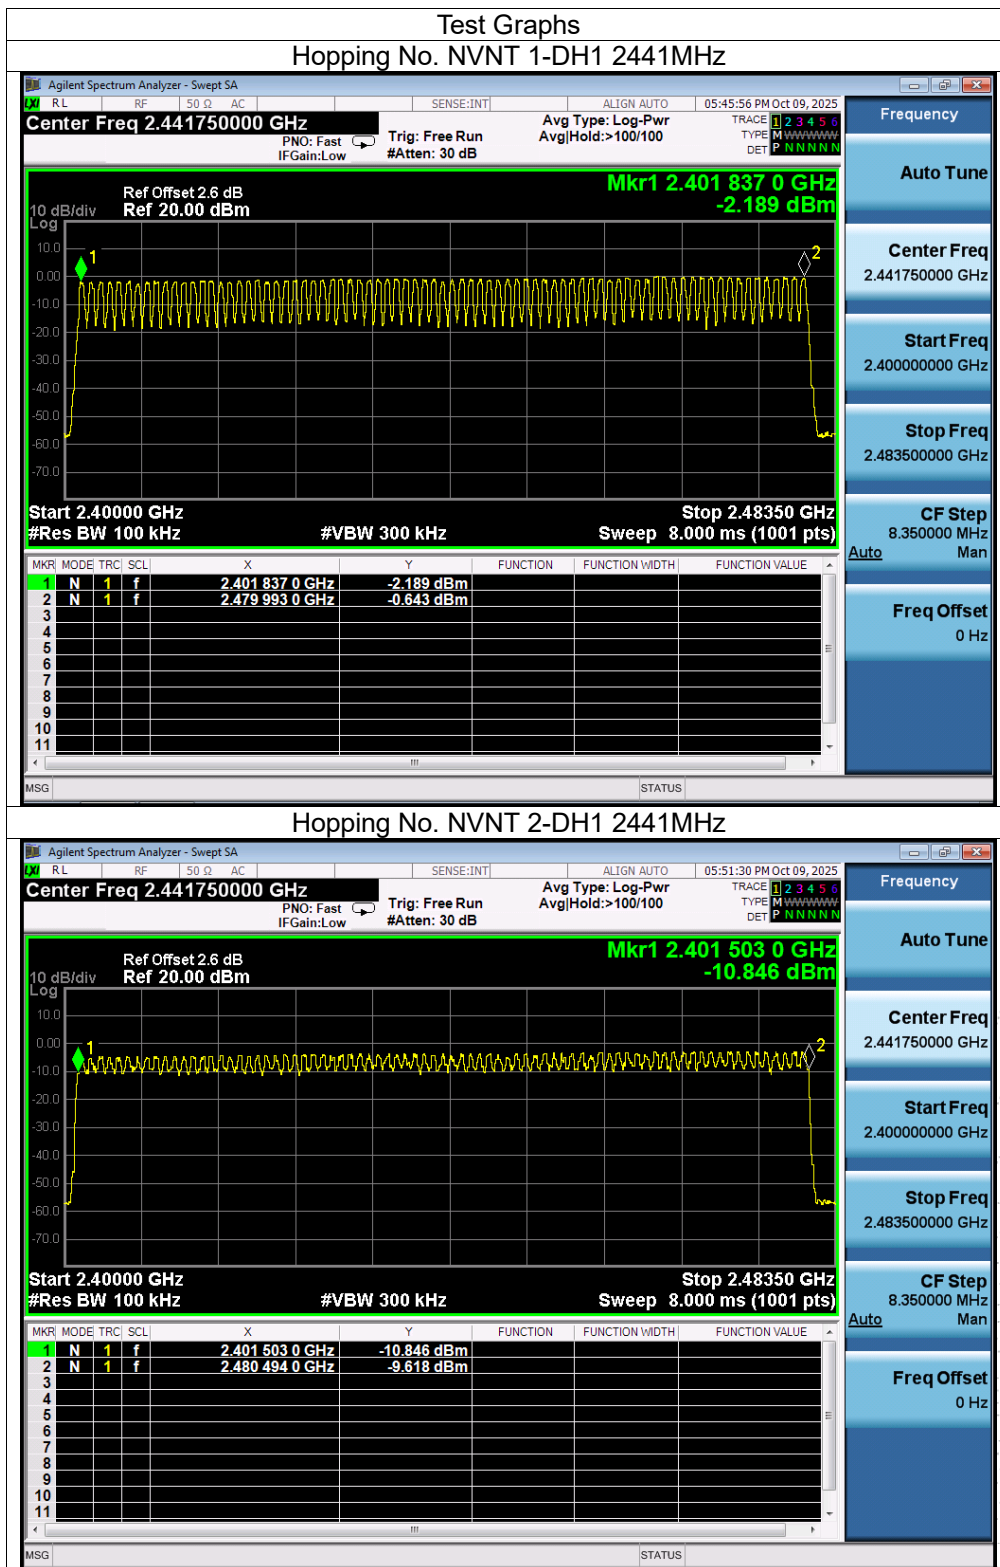


CO., LTD.

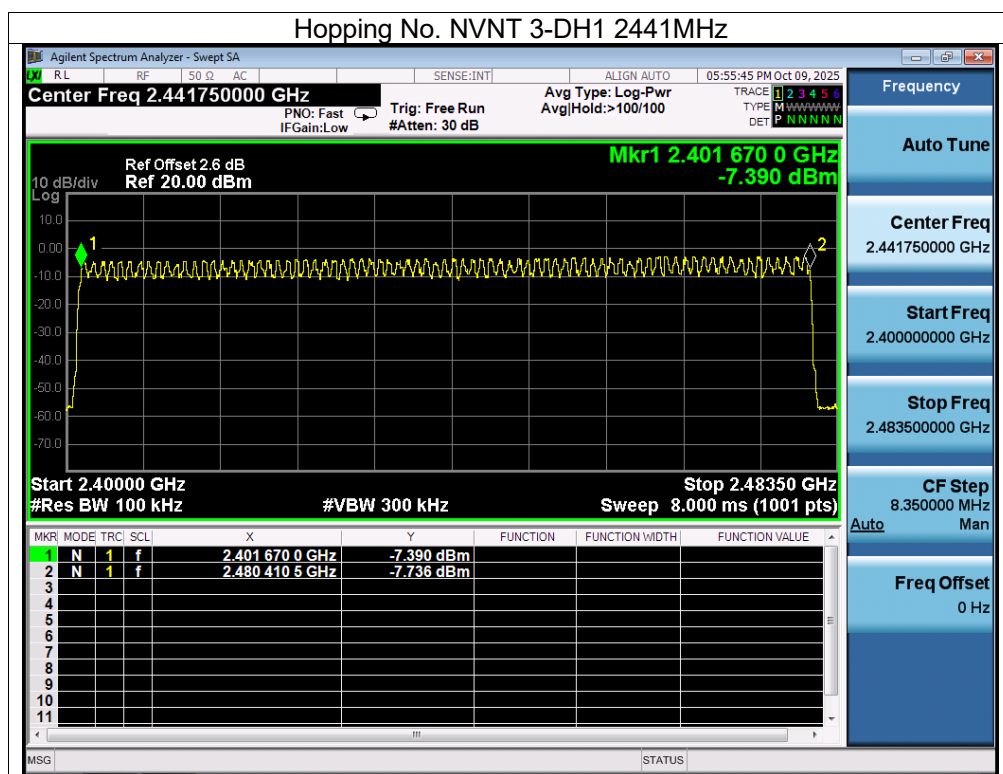

CHENZHEN

14. Dwell Time

14.1 Block Diagram Of Test Setup

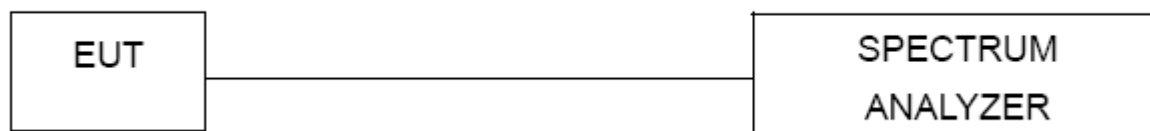

14.2 Limit

Frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels. The average time of occupancy on any channel shall not be greater than 0.4 seconds within a period of 0.4 seconds multiplied by the number of hopping channels employed. Frequency hopping systems may avoid or suppress transmissions on a particular hopping frequency provided that a minimum of 15 channels are used.


14.3 Test procedure



1. Remove the antenna from the EUT and then connect a low RF cable from the antenna port to the spectrum.
2. Set spectrum analyzer span = 0. Centred on a hopping channel;
3. Set RBW = 1MHz and VBW = 3MHz. Sweep = as necessary to capture the entire dwell time per hopping channel. Set the EUT for DH5, DH3 and DH1 packet transmitting.
4. Use the marker-delta function to determine the dwell time. If this value varies with different modes of operation (e.g.. data rate. modulation format. etc.). repeat this test for each variation. The limit is specified in one of the subparagraphs of this Section. Submit this plot(s).



14.4 Test Result



Mode	Frequency (MHz)	Pulse Time (ms)	Total Dwell Time (ms)	Burst Count	Period Time (ms)	Limit (ms)	Verdict
1-DH1	2441	0.383	121.028	316	31600	400	Pass
1-DH3	2441	1.639	263.879	161	31600	400	Pass
1-DH5	2441	2.887	308.909	107	31600	400	Pass
2-DH1	2441	0.392	124.656	318	31600	400	Pass
2-DH3	2441	1.644	266.328	162	31600	400	Pass
2-DH5	2441	2.892	312.336	108	31600	400	Pass
3-DH1	2441	0.391	123.556	316	31600	400	Pass
3-DH3	2441	1.642	247.942	151	31600	400	Pass
3-DH5	2441	2.894	312.552	108	31600	400	Pass

Note: Total Dwell Time (ms) = Pulse Time (ms)*Burst Count


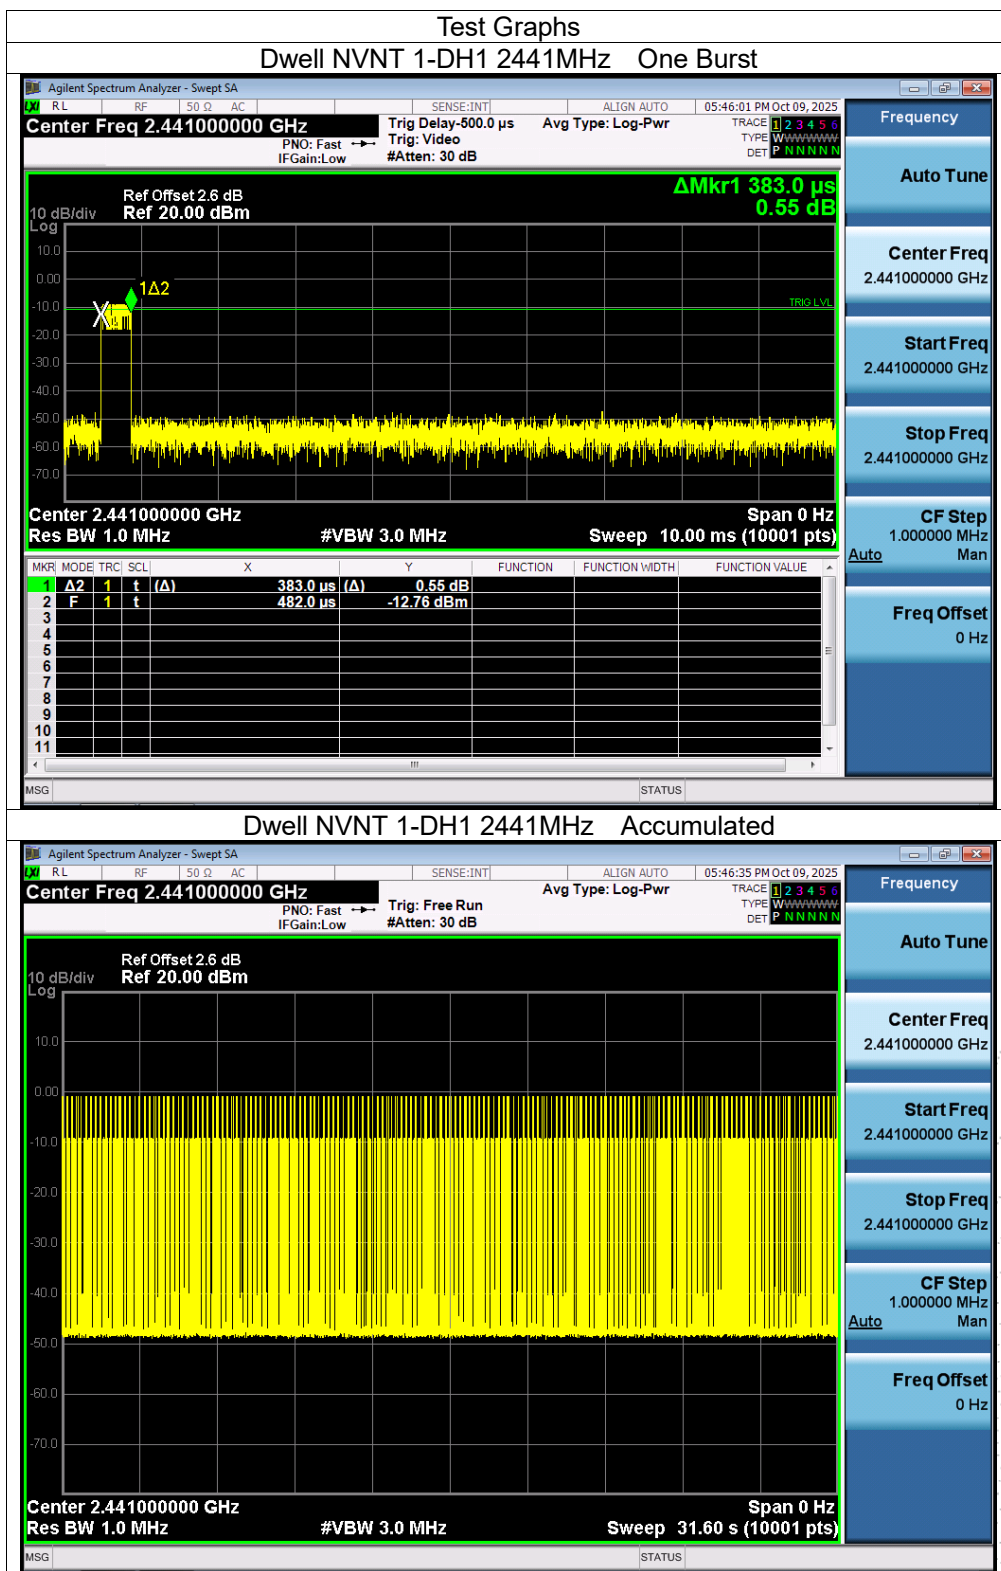


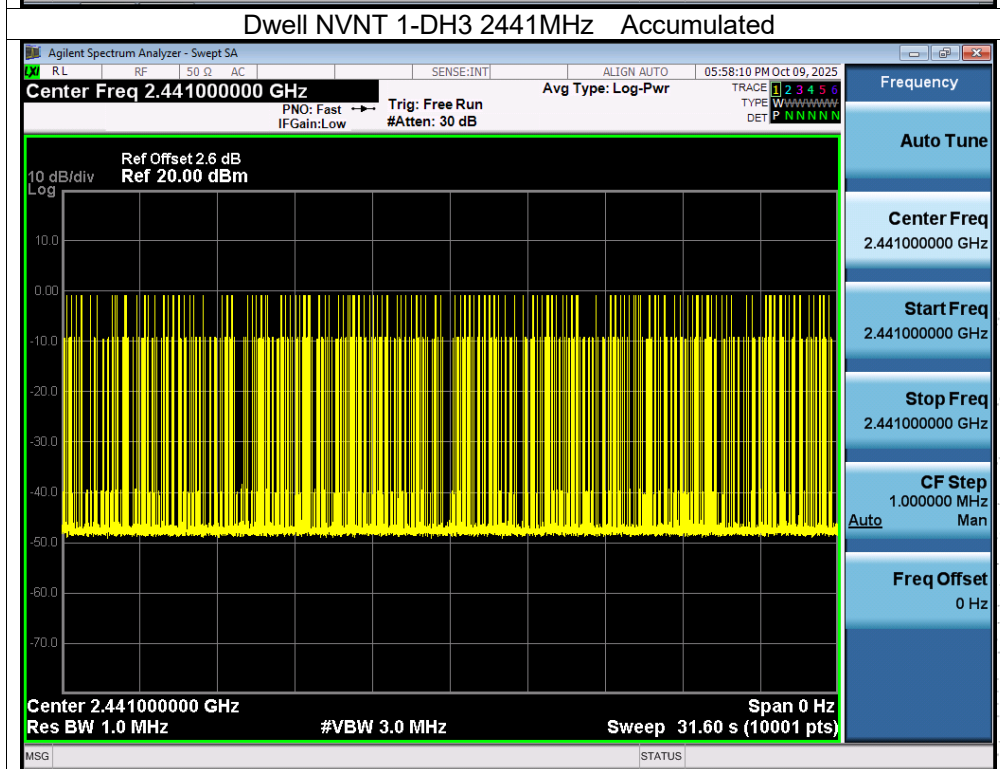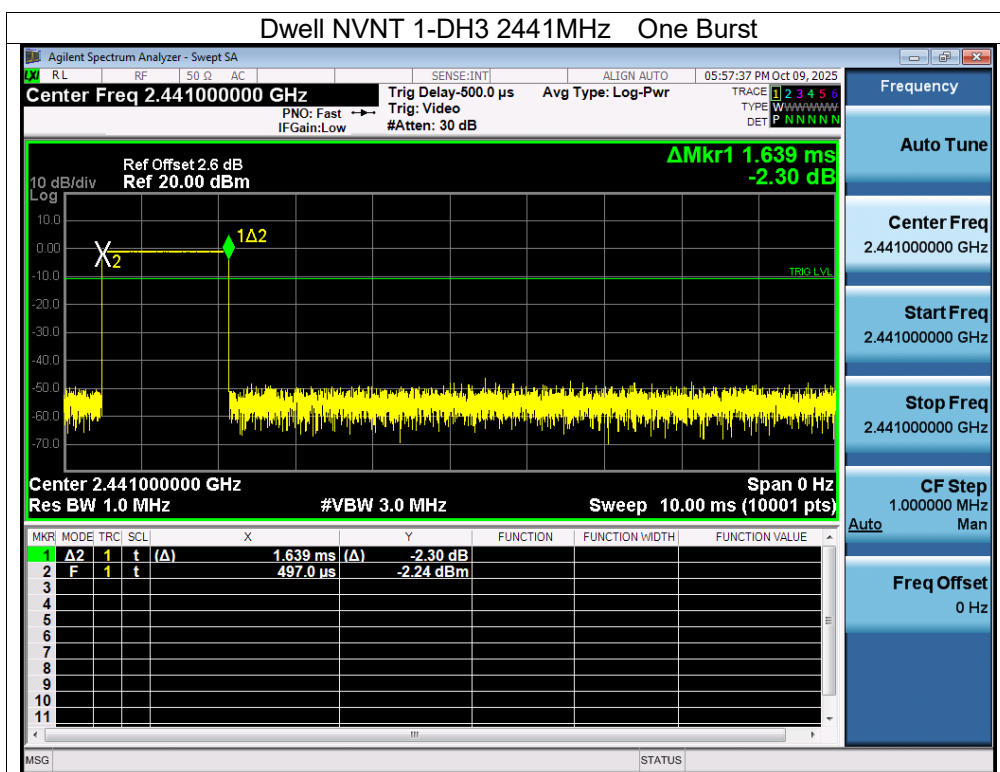

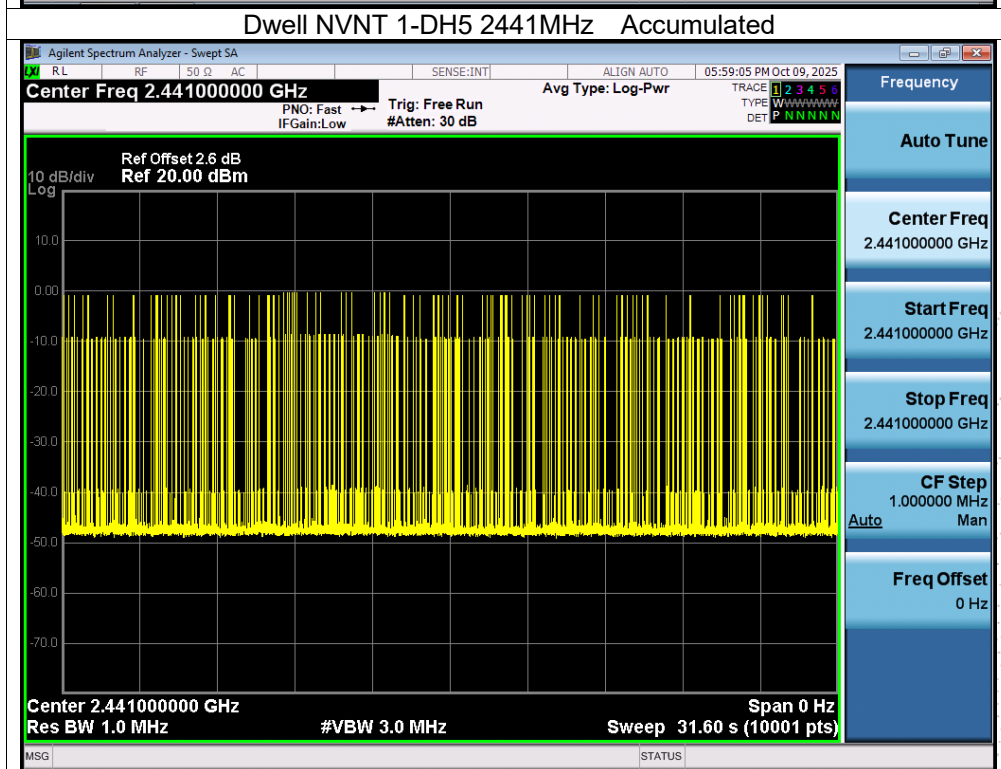
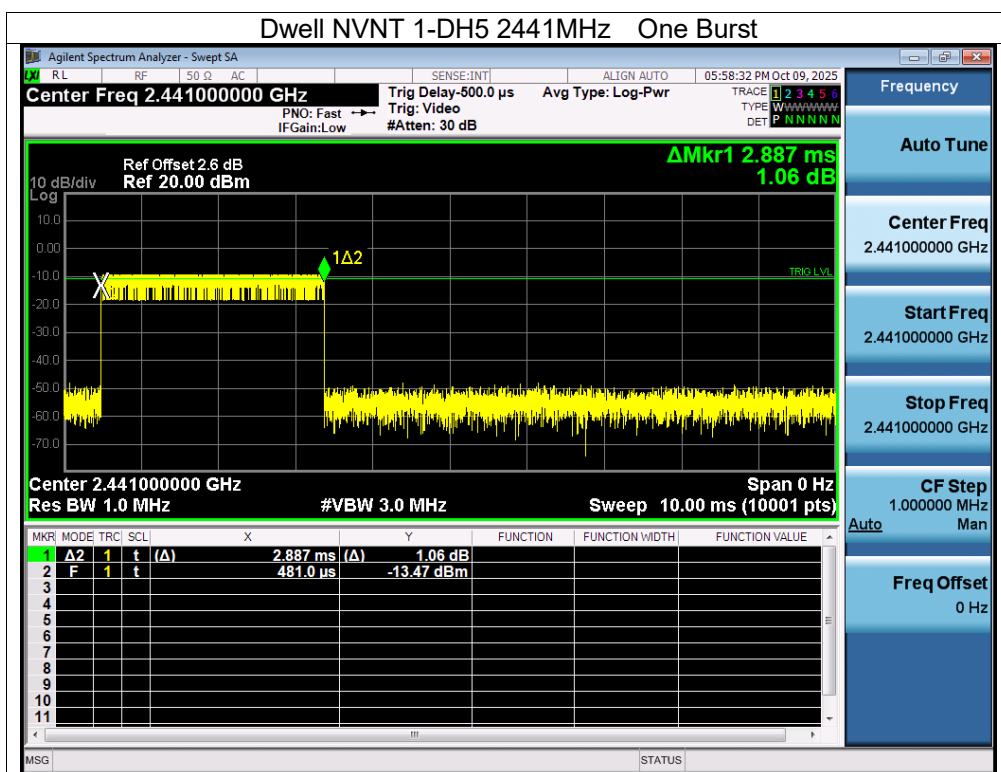


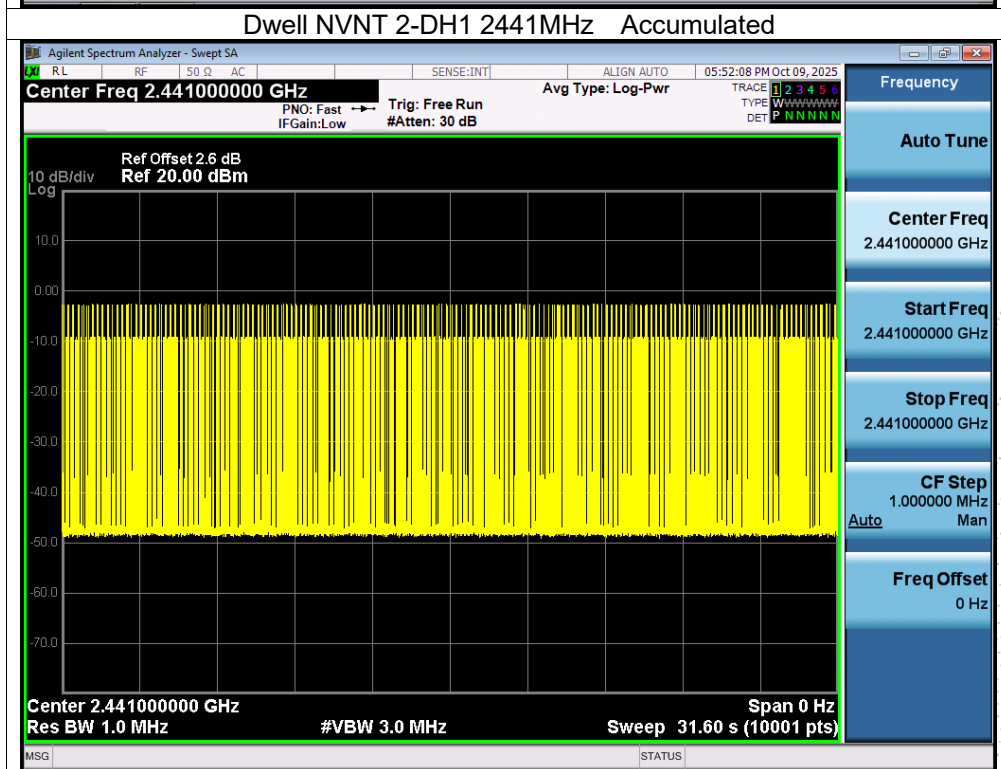
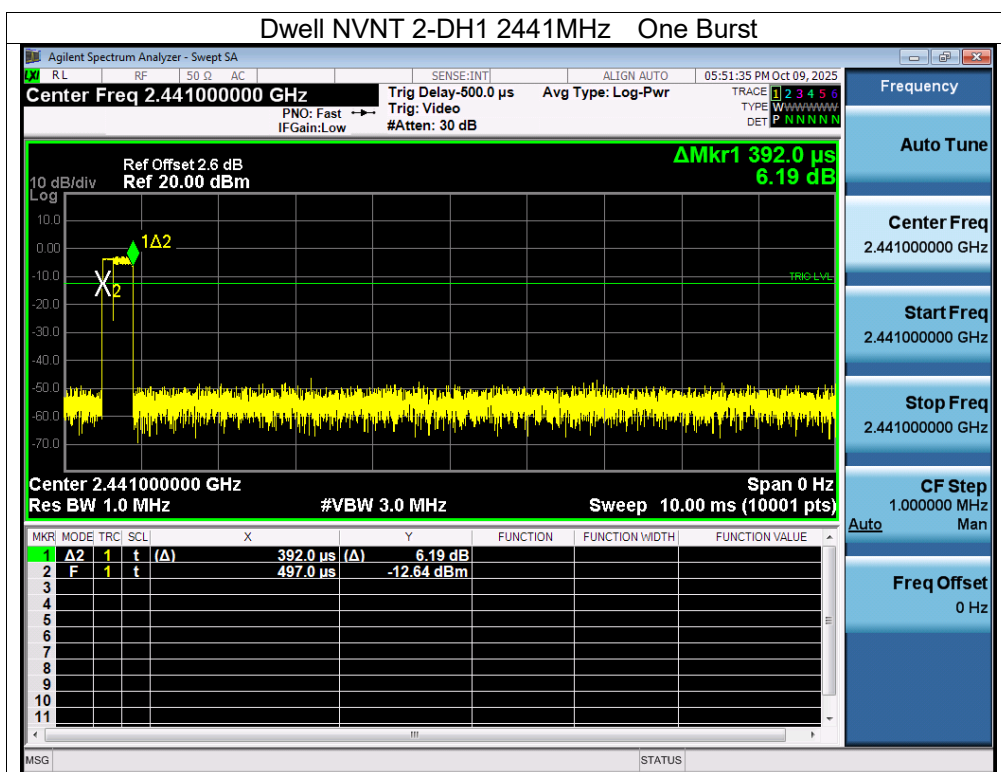




CO.LTD

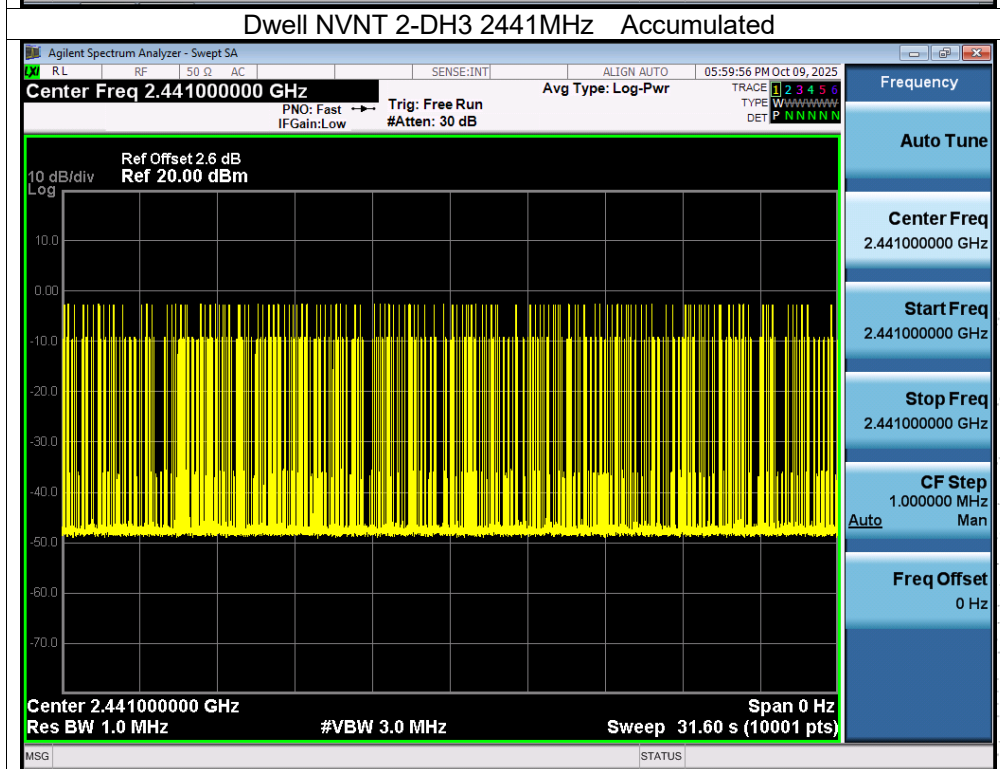
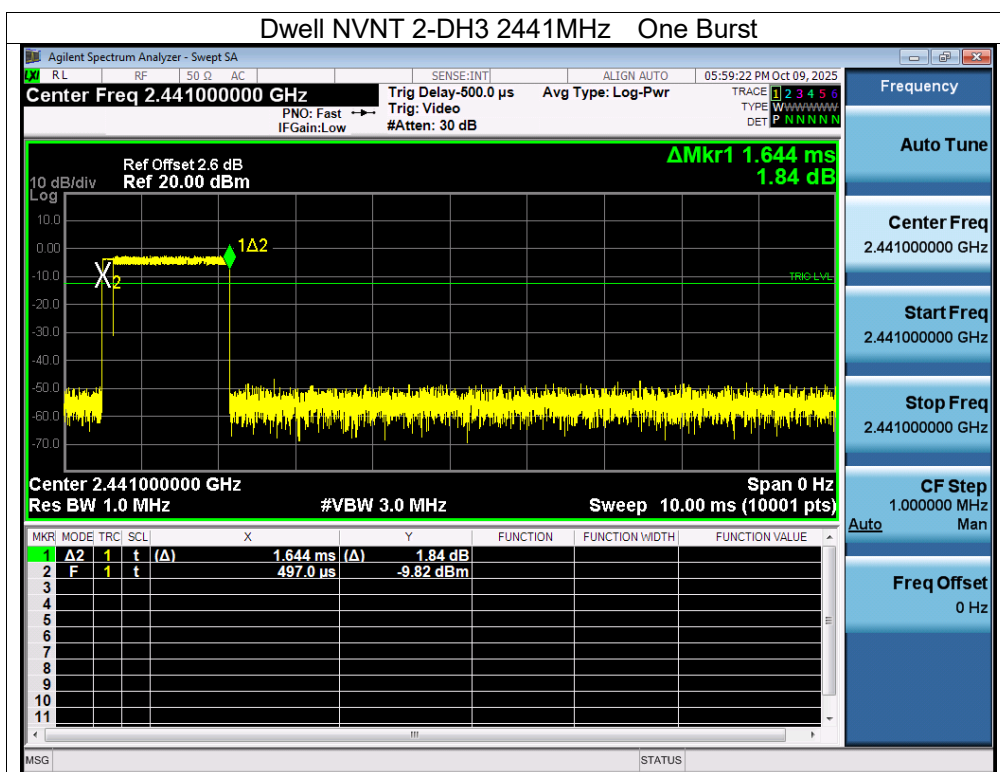


CHENZHEN

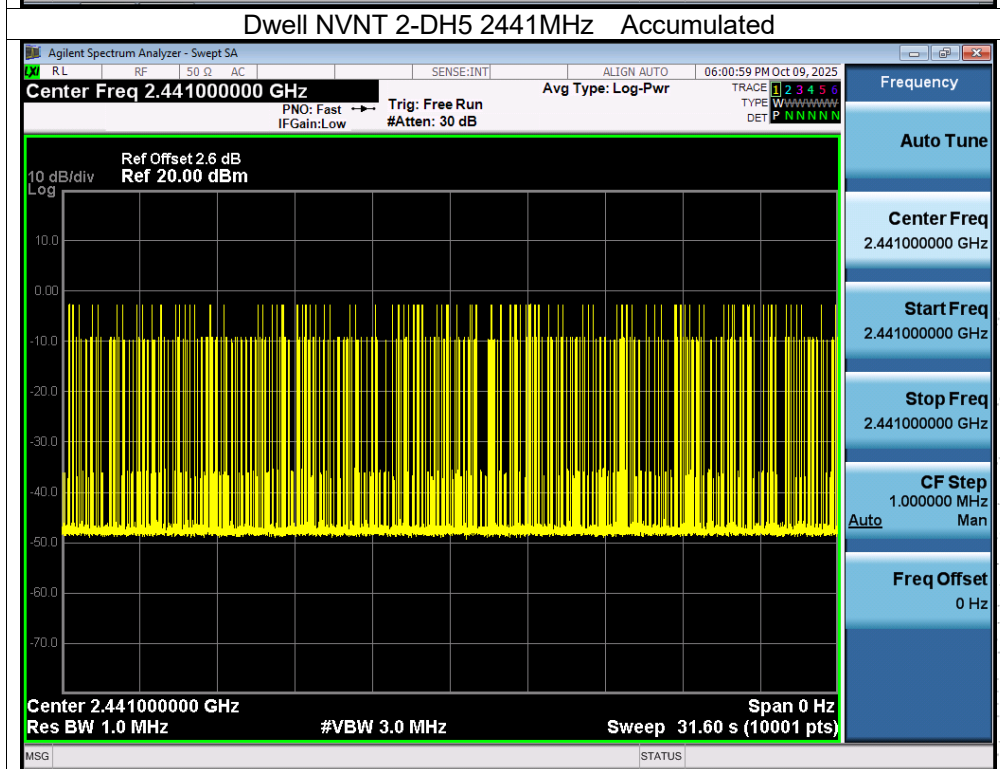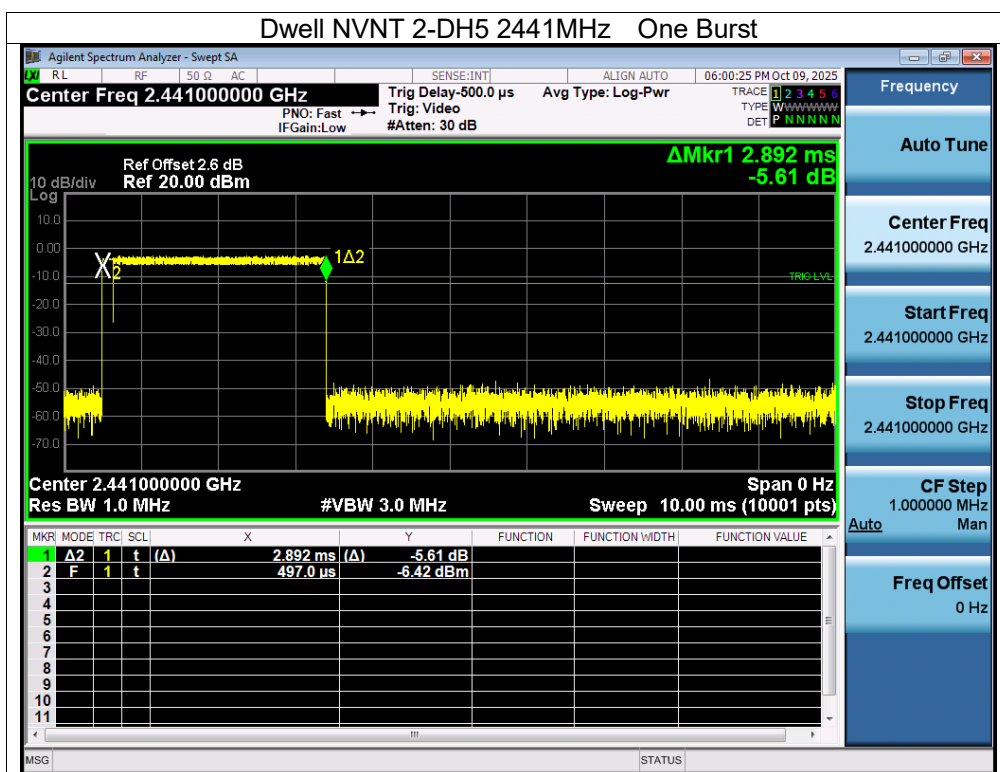

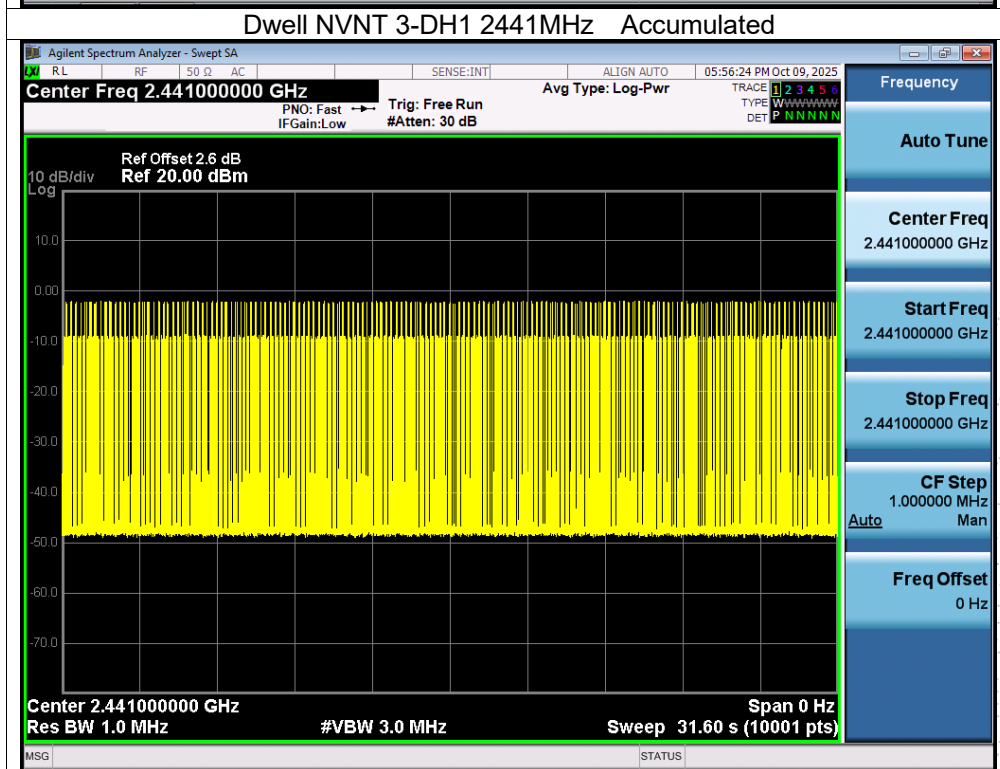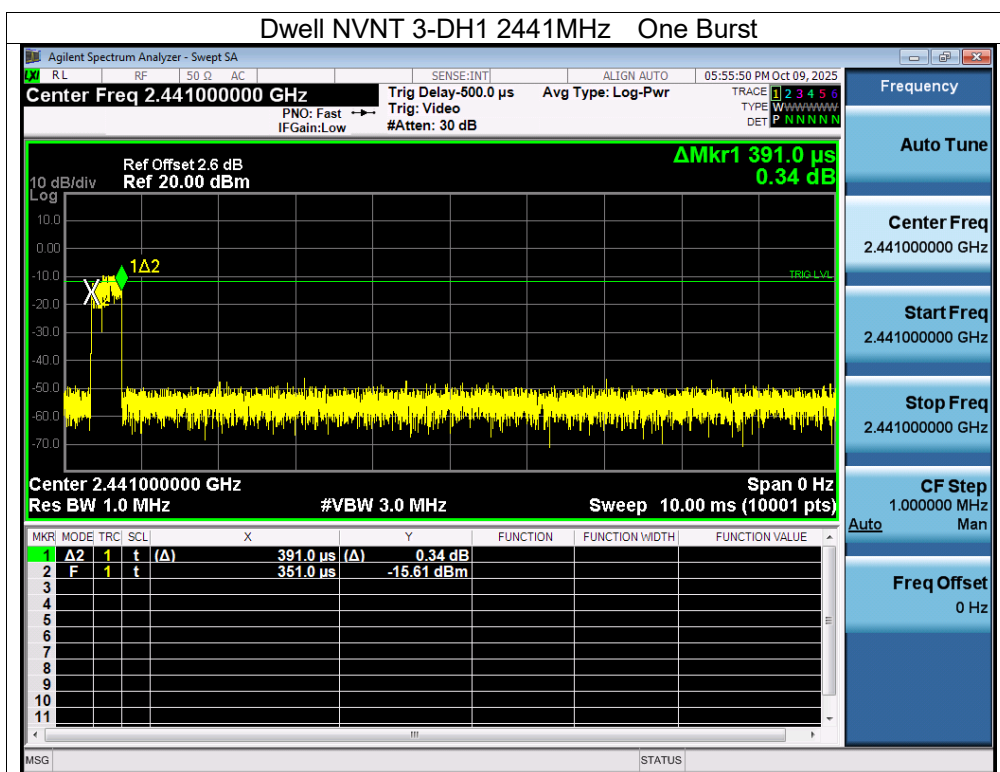

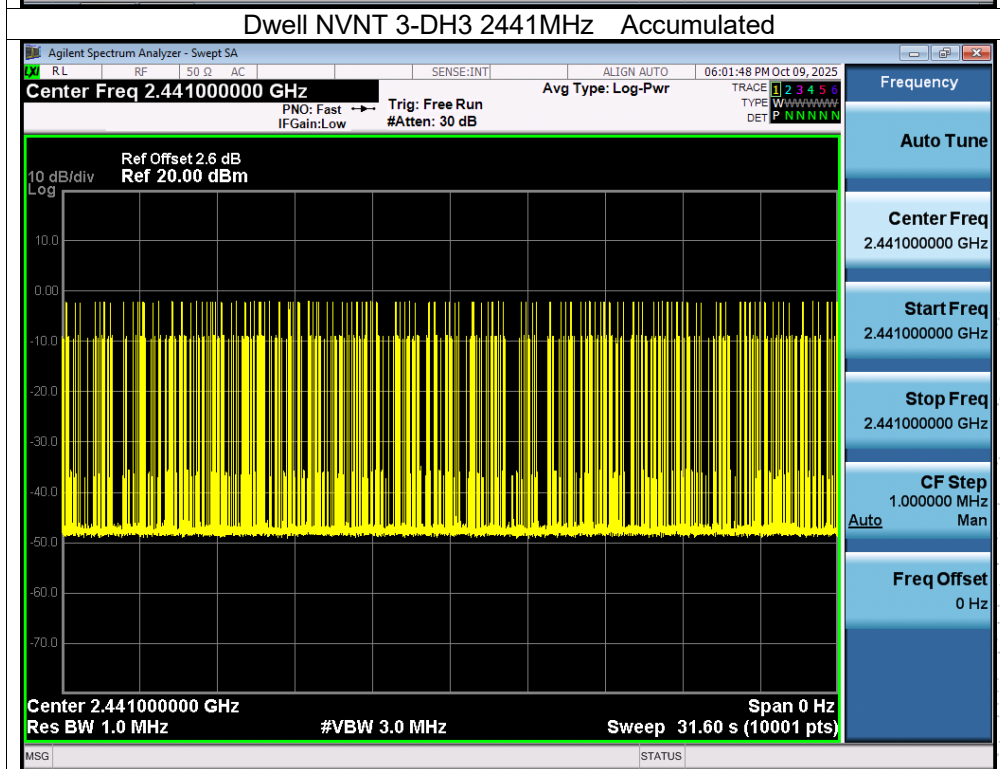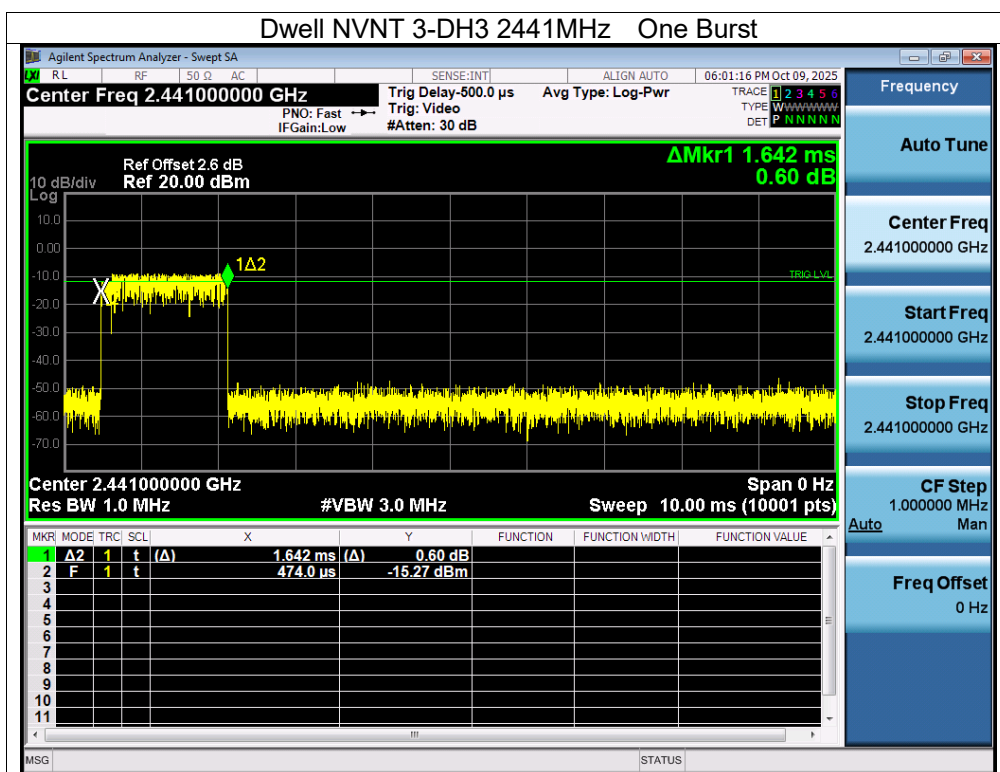

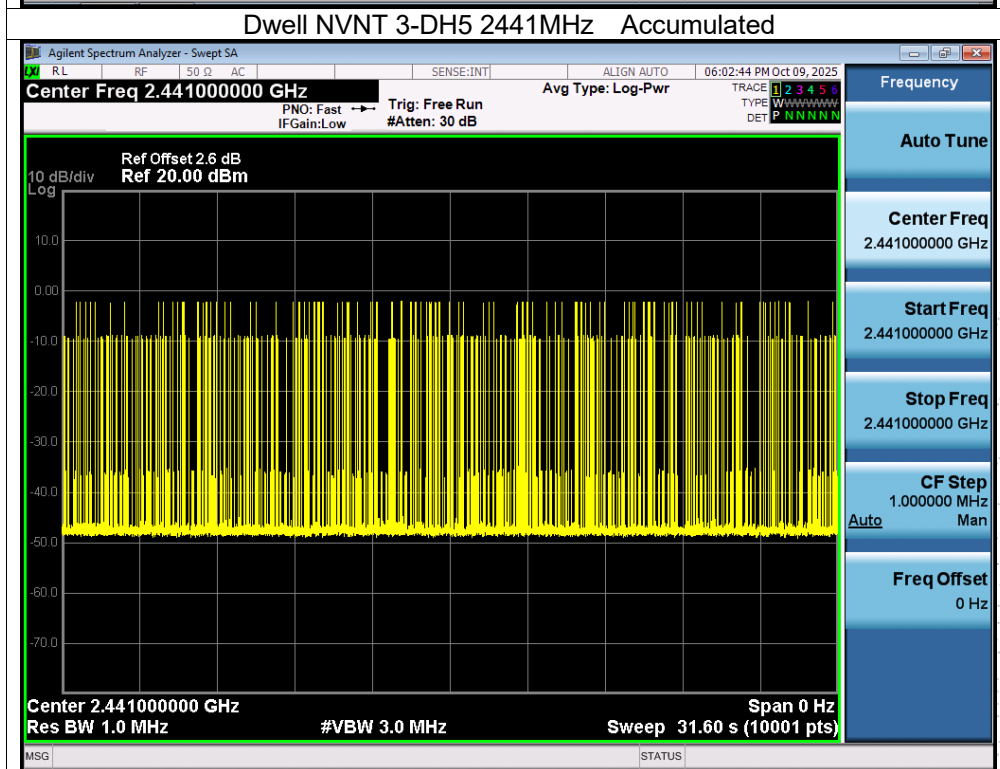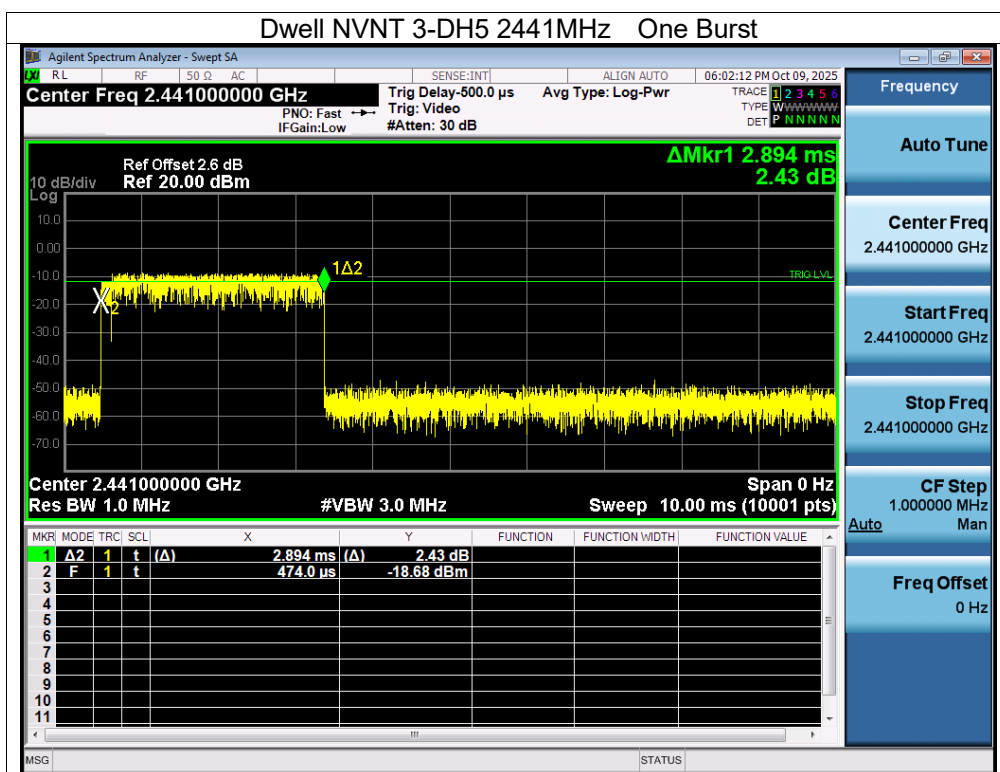

15. Antenna Requirement

15.1 Limit

15.203 requirement: For intentional device, according to 15.203: an intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device.


15.2 Test Result

The EUT antenna is Internal antenna, fulfill the requirement of this section.


CO., LTD.

16. EUT Photographs

EUT Photo

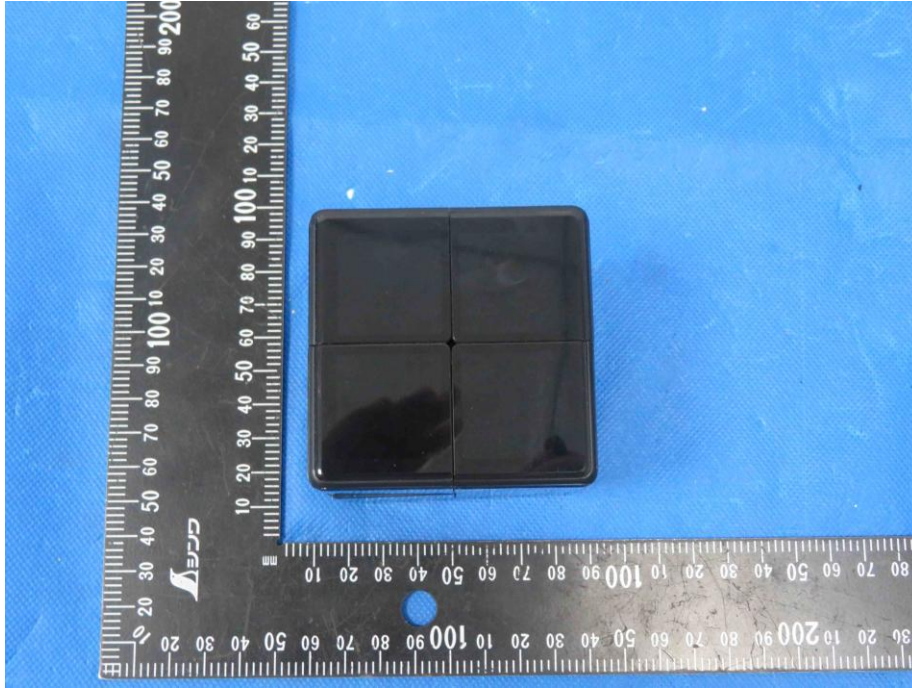

Appendix-Photographs Of EUT Constructional Details
(_External & Internal Photos)

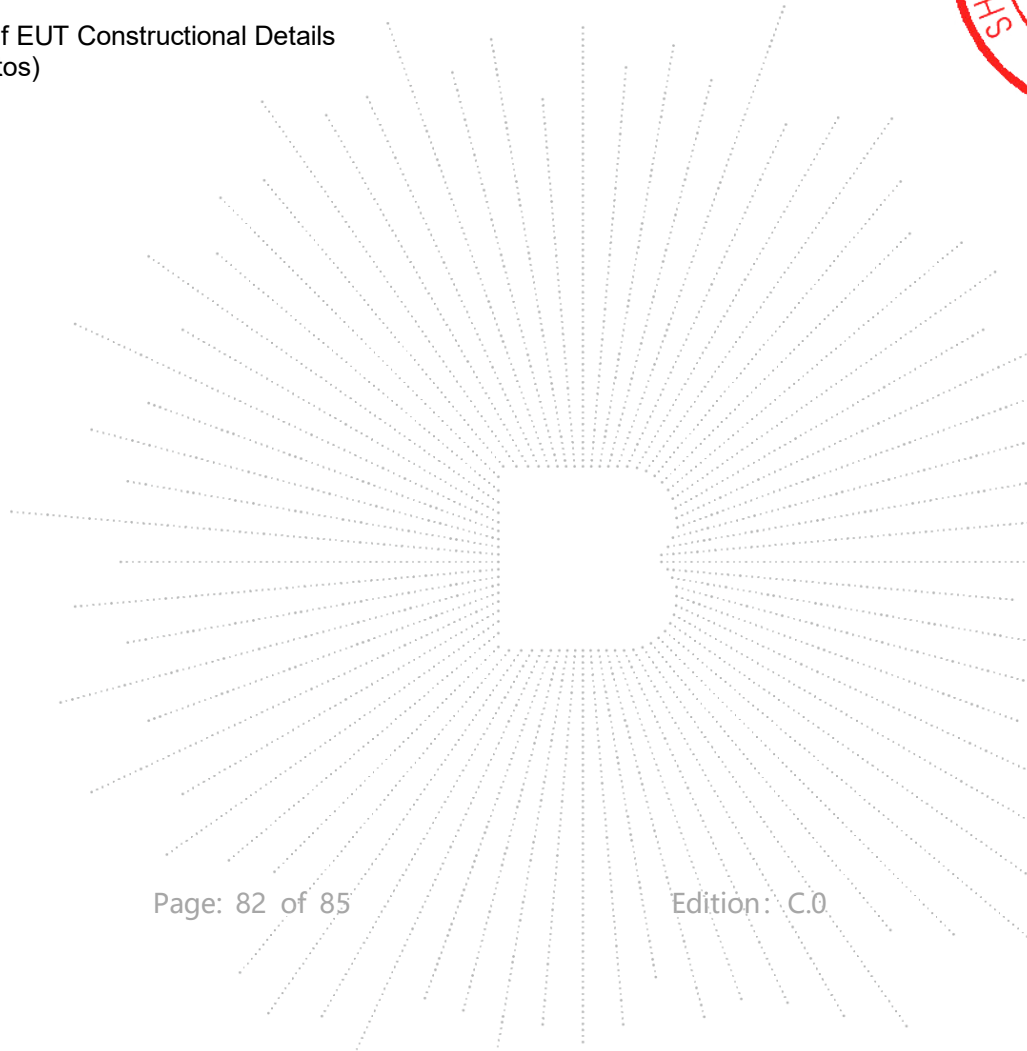


17. EUT Test Setup Photographs


Conducted emissions



Radiated Measurement Photos

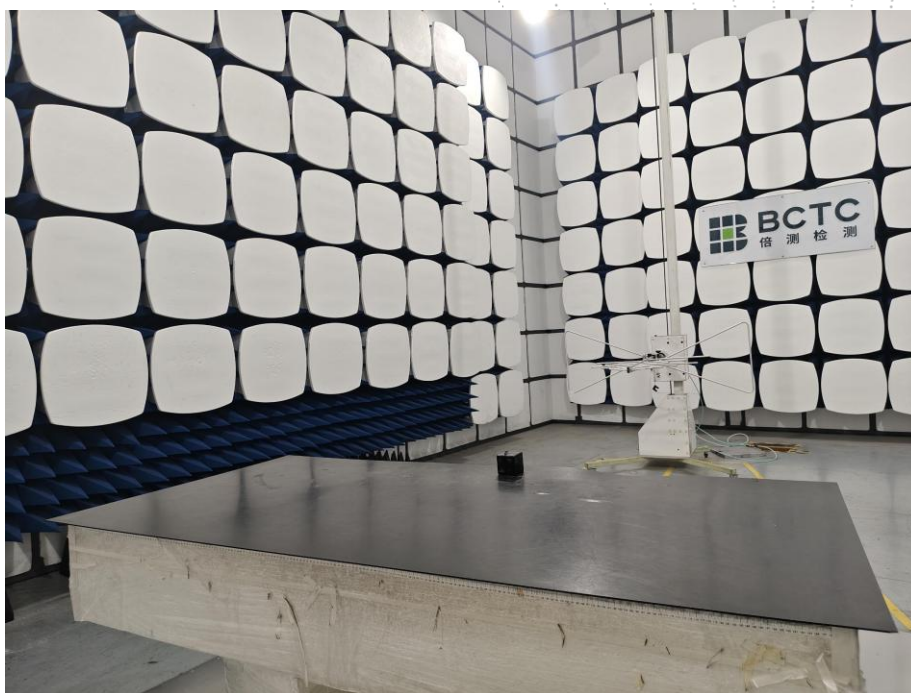

Spurious emissions

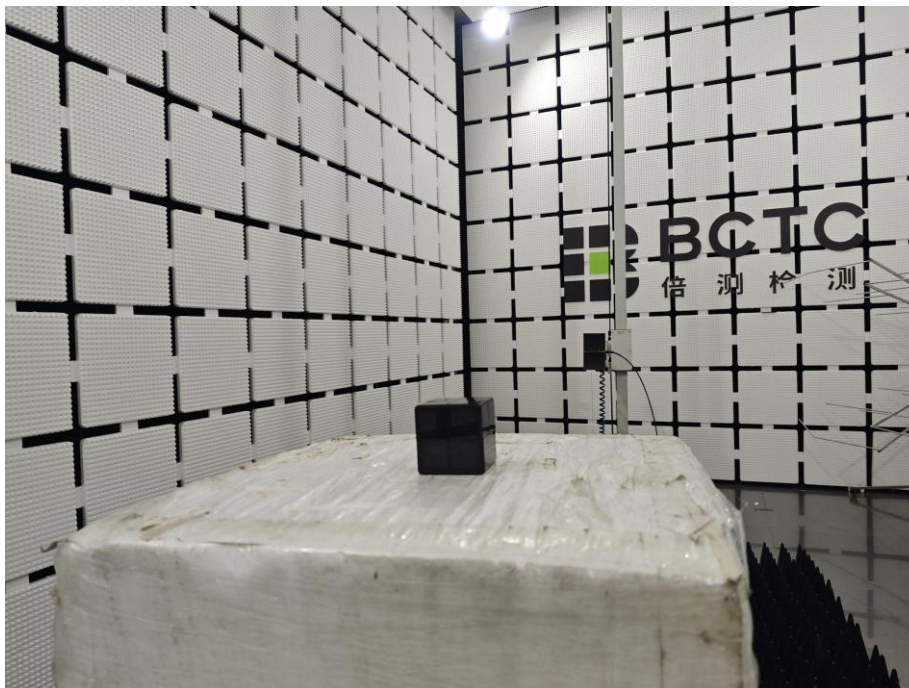

STATEMENT

1. The equipment lists are traceable to the national reference standards.
2. The test report can not be partially copied unless prior written approval is issued from our lab.
3. The test report is invalid without the "special seal for inspection and testing".
4. The test report is invalid without the signature of the approver.
5. The test process and test result is only related to the Unit Under Test.
6. Sample information is provided by the client and the laboratory is not responsible for its authenticity.
7. The quality system of our laboratory is in accordance with ISO/IEC17025.
8. If there is any objection to this test report, the client should inform issuing laboratory within 15 days from the date of receiving test report.

Address:

1-2/F., Building B, Pengzhou Industrial Park, No.158, Fuyuan 1st Road, Zhancheng, Fuhai Subdistrict, Bao'an District, Shenzhen, Guangdong, China

TEL: 400-788-9558

P.C.: 518103

FAX: 0755-33229357

Website: <http://www.chnbctc.com>

Consultation E-mail: bctc@bctc-lab.com.cn

Complaint/Advice E-mail: advice@bctc-lab.com.cn

***** END *****

