

NanoHydra

Pro

User Manual



CONTENT

● NanoHydra Pro

● User Manual

01 Package Contents

02 Product Overview

03 Product Specifications

04 Operating Instructions

05 Cleaning & Maintenance

06 Maintenance Guide

07 After-Sales Service


08 Warranty Card

09 Certificate of Conformity


01 Package Contents

Package Contents


1 Main Device + Pre-installed HydraCapsule

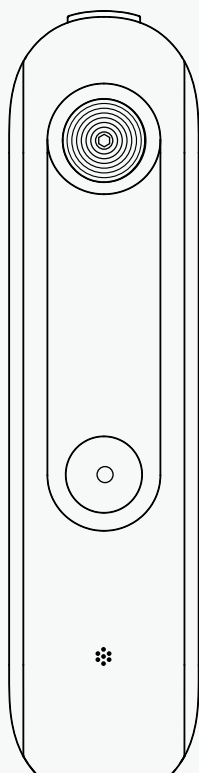

2 HydraCapsule*1

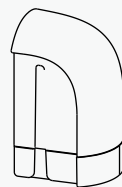

3 Charging Cable

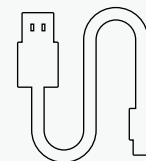


4 Refill Injector



5 Instruction Card




6 Allen Wrench



02 Product Overview

Product Overview

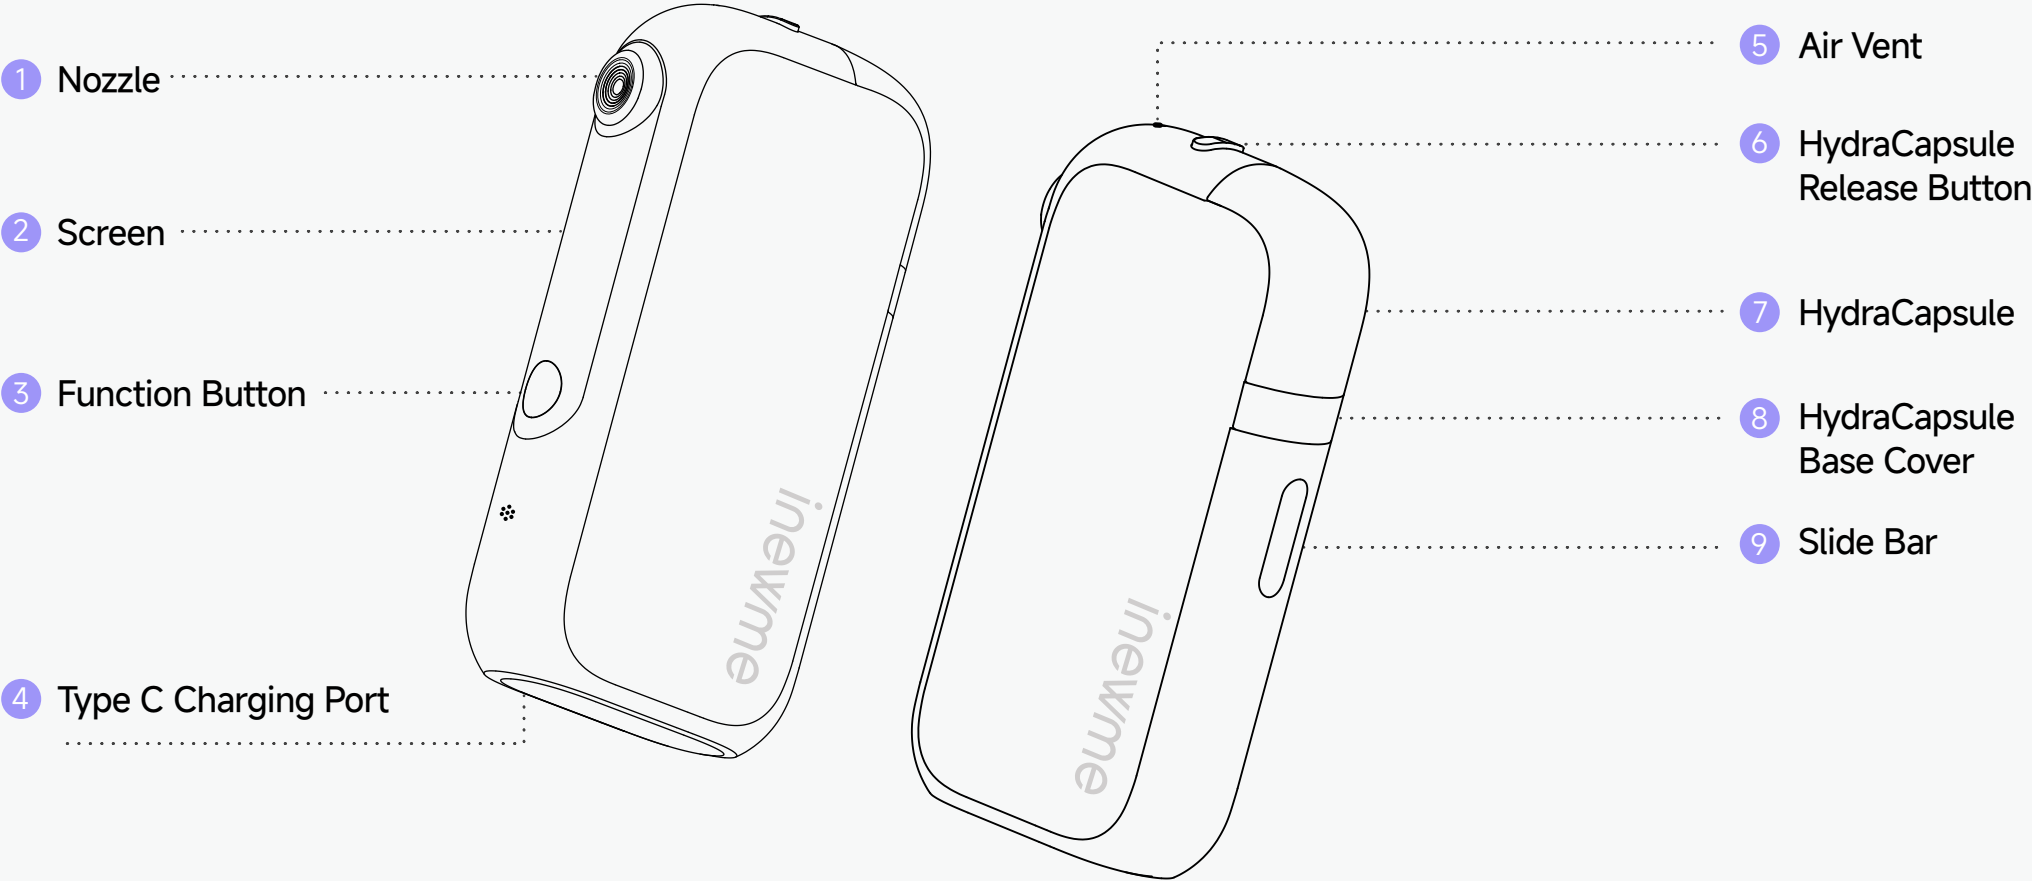

03 Product Specifications

Product Specifications

● Brand	inewme
Product Model	PQ100-H
Weight	≈200g
Material	Plastic、Aluminum Alloy
Dimensions	≈62*29*117 mm


● Product Name	NanoHydra Pro
Battery Capacity	800mAh
Rated Voltage	DC 5V
Charging Time	≈60 minutes (full charge)
Charging Port	USB Type-C

04 Operating Instructions

4.1 Usage Instructions

Step 1

Press the HydraCapsule release button, and the HydraCapsule will automatically pop out.

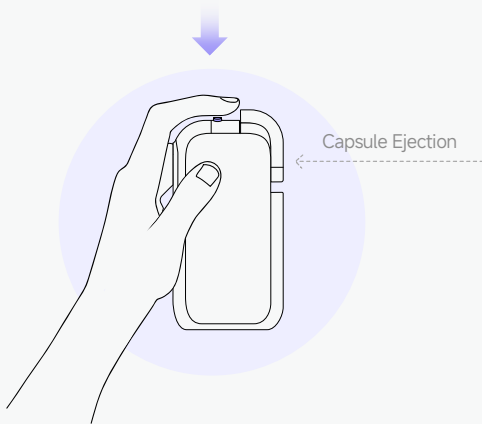


Step 2

Rotate to open the HydraCapsule base cover.



Step 3

Use the refill injector to fill in the skincare water, then close the HydraCapsule base cover.

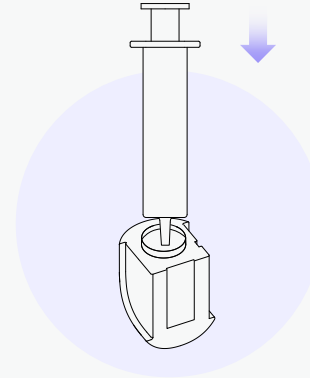

Step 4

Reinstall the HydraCapsule into the NanoHydra Pro.




04 Operating Instructions

4.2 Button Operations


Power On

Long press the function button for 2 seconds

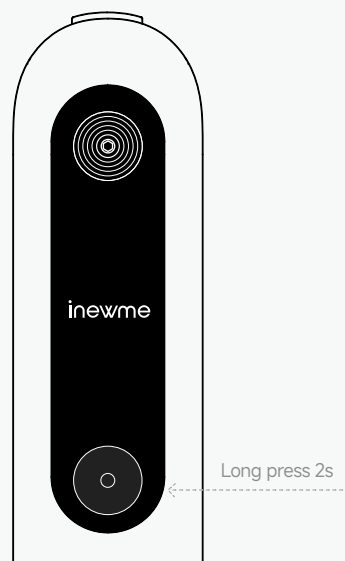

Switch Mode

Slide up or down on the slide bar

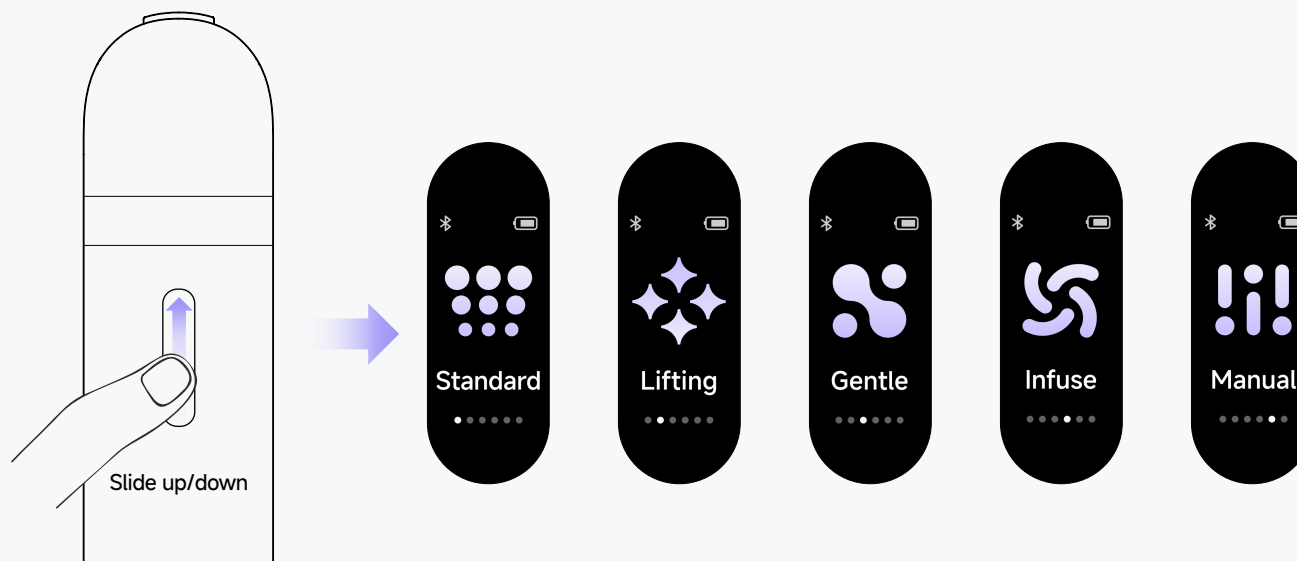

04 Operating Instructions

4.2 Button Operations


Start Spraying

Short press the function button



Pause Spraying

Short press the function button

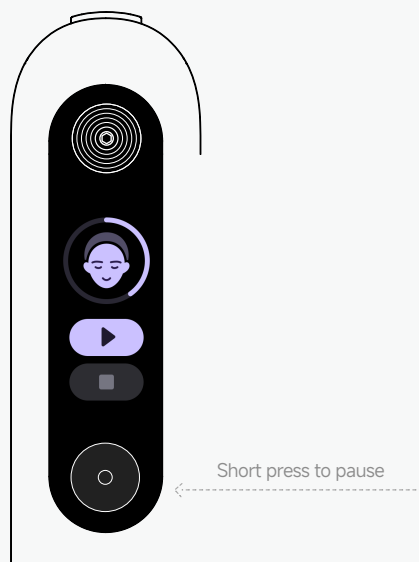


Care Completed

The screen displays the PIPPI animation




04 Operating Instructions

4.2 Button Operations

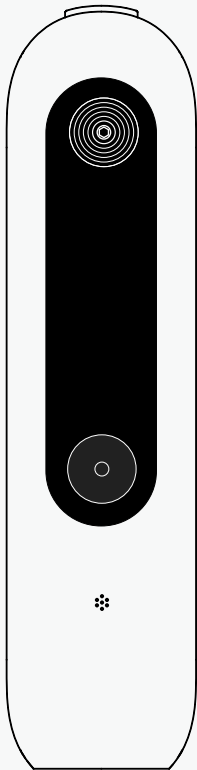

Screen Off / Standby

⌚ Automatically enters standby mode after 15 seconds of inactivity.

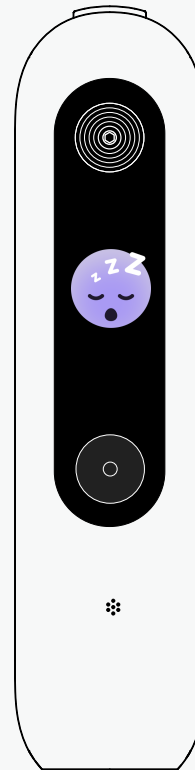


Sleep Mode

Press and hold the function button for 2 seconds on the mode selection screen, or the device will automatically enter sleep mode after 3 minutes of inactivity.


04 Operating Instructions

4.3 Mode Description

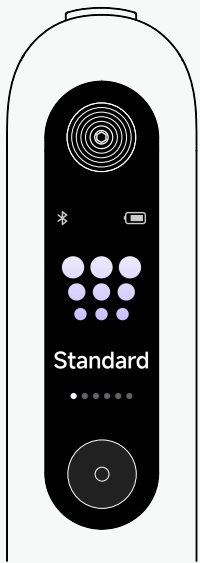


Standard Mode

Automatically adjusts mist volume based on the distance between the nozzle and the face, suitable for use with basic hydrating water

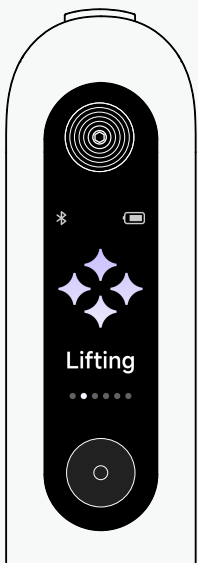


Lifting Mode

Specially tuned mist rhythm delivers a delicate massage to the skin, suitable for use with firming water.

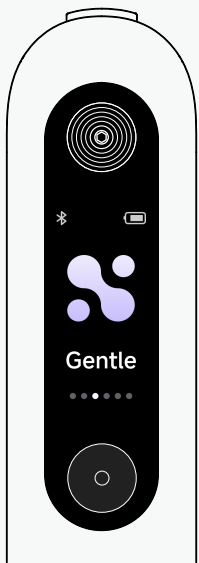


Gentle Mode

Gentle mist intensity provides a soft skin feel, suitable for use when the skin is sensitive, and can be paired with soothing water.

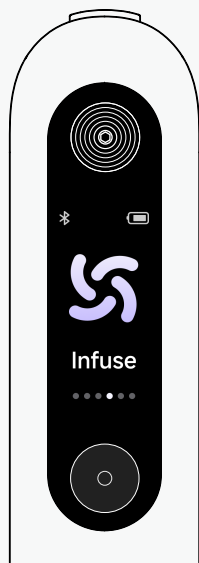

Infuse Mode

Stronger mist intensity, suitable for use with refreshing toner after exercise, applicable for both facial and body care.

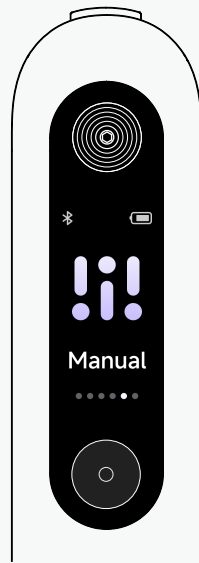

Manual mode

Constant mist mode, mist volume can be adjusted via the touch slide bar.

04 Operating Instructions

4.4 Intelligent Motion Sensing

Intelligent Motion Sensing

In Infuse Mode, the NanoHydra Pro is equipped with motion detection, which can automatically identify the area of use.

When the nozzle moves from the face to larger areas such as the arm, the mist output will automatically increase, delivering a more efficient hydration experience.




Facial Mist Volume



Arm Mist Volume


04 Operating Instructions

4.5 Optimal Care Distance

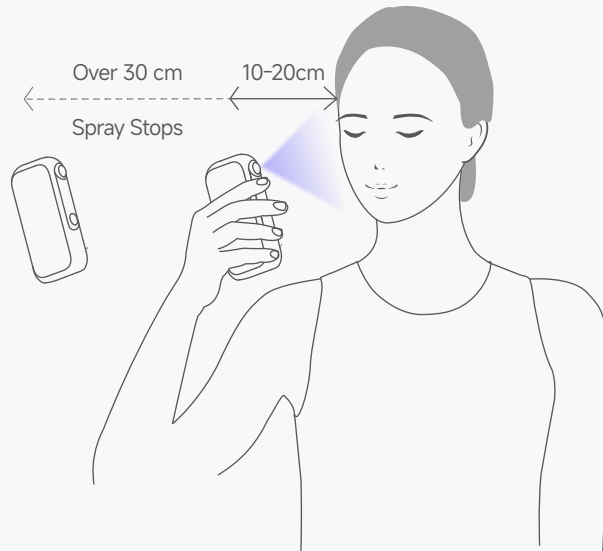


Optimal Distance

Aim the spray nozzle at the face, with an approximate distance of 10–20 cm. When the distance exceeds 30 cm, spraying will pause. Spraying will automatically resume when within 30 cm.

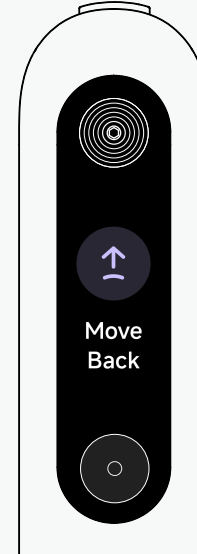

The distance is too close

If the distance is too close, a sound alert will be triggered at 5 cm.

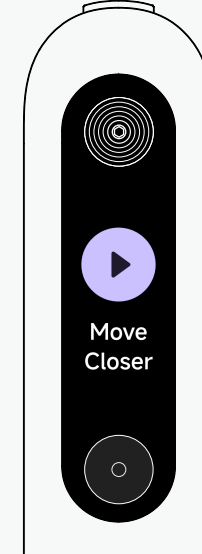

The distance is too far

If the distance is too far, a sound alert and vibration feedback will be triggered at 30 cm.

04 Operating Instructions

4.6 Connect To The APP

Step 1


Download **inewme** app and register.
Turn on Bluetooth and open the app on your phone, then tap "Add Device."

Step 2


Select the corresponding product shown on the screen and connect, the device will be successfully paired.

Step 3


Select the desired mode on the NanoHydra Pro, and after misting starts, the app will simultaneously display the active misting mode.

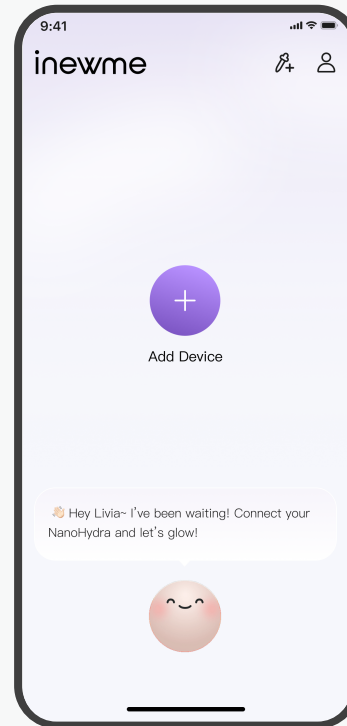

1

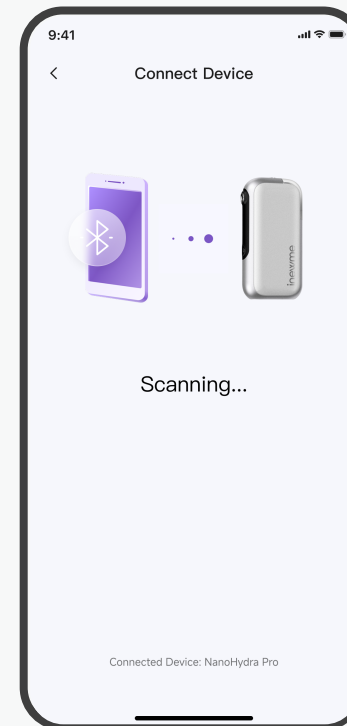

2

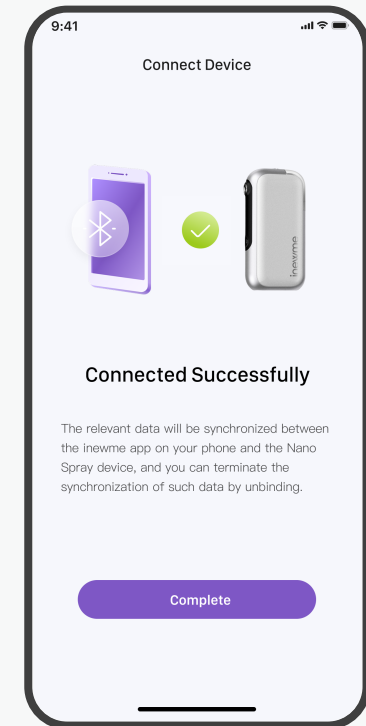


3


04 Operating Instructions

4.7 Main APP Features


- Skin Hydration Test
- Real-Time Hydration Sync
- Daily Reminders & Suggestions
- Hydration / Test Records
- Personal Skincare Product Management

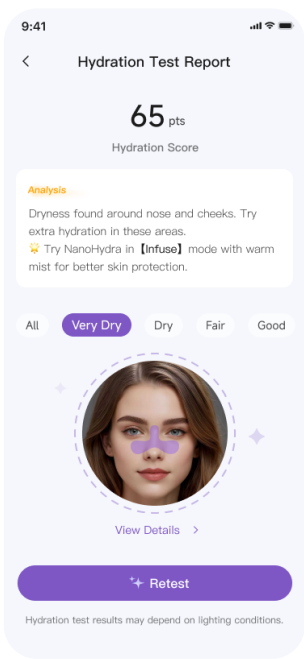


Detects dry areas and scores on the face, providing hydration recommendations.

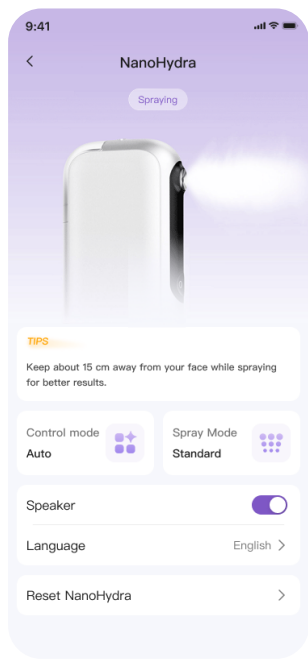


One press to spray, the screen shows misting/paused status and duration in real time.

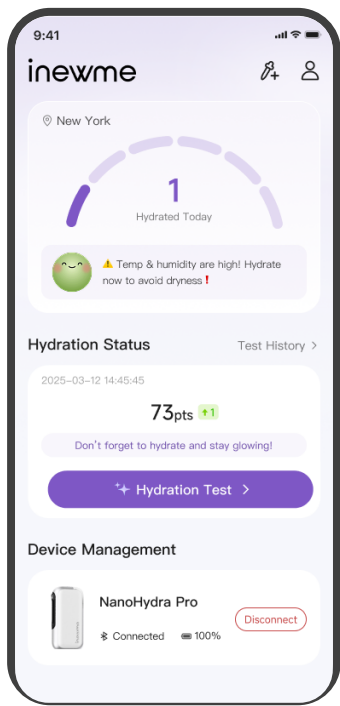

Based on moisture trends and changes in temperature and humidity, sends hydration tips and reminders.

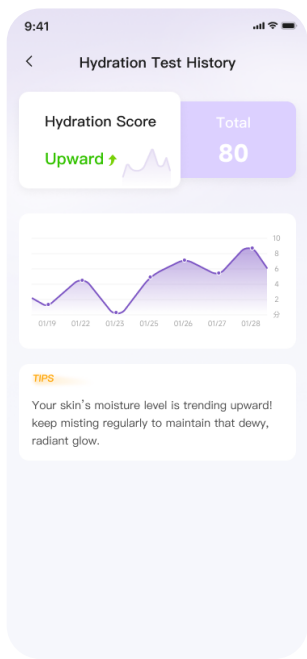


Check hydration frequency, history, and trends to better understand skin condition.

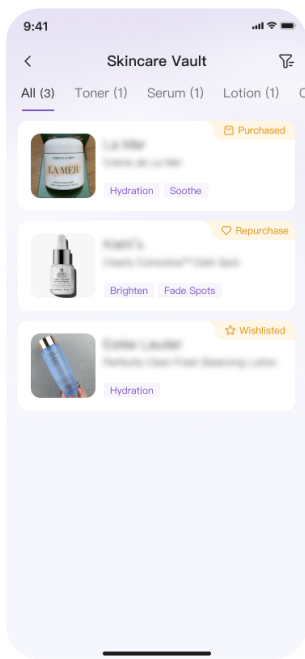


AI One-Tap Skincare Recognition Builds a personal skincare product library.

04 Operating Instructions

4.8 Smart Push Notifications

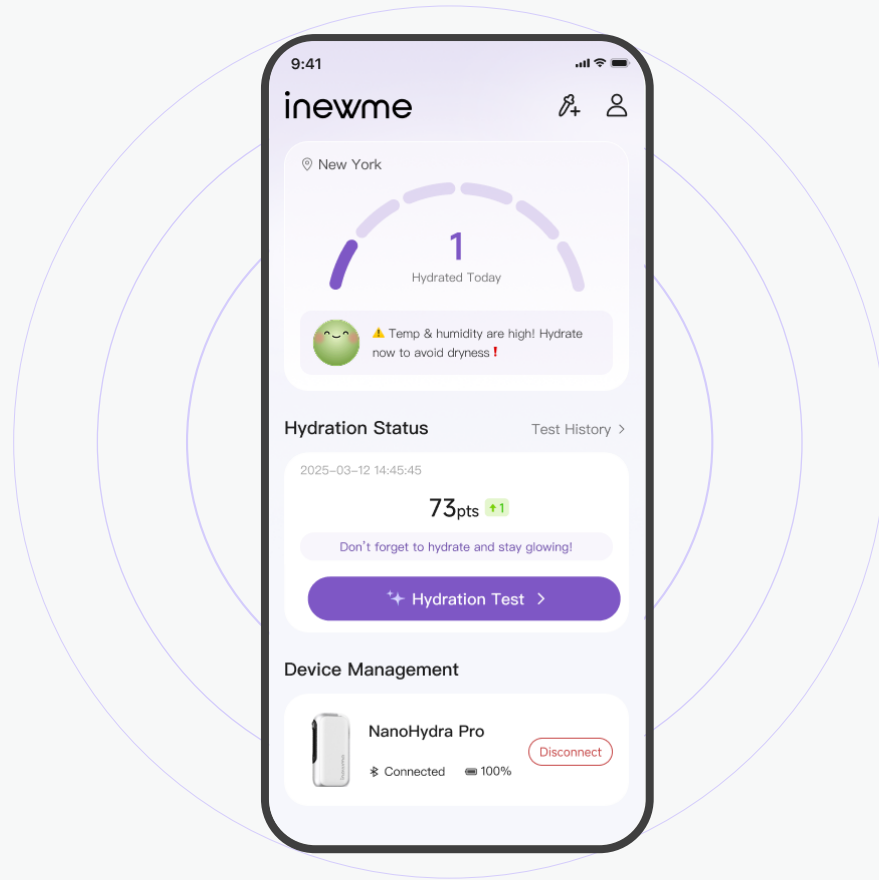


PIPPi Assistant
Based on environmental data results,
sends hydration recommendations.

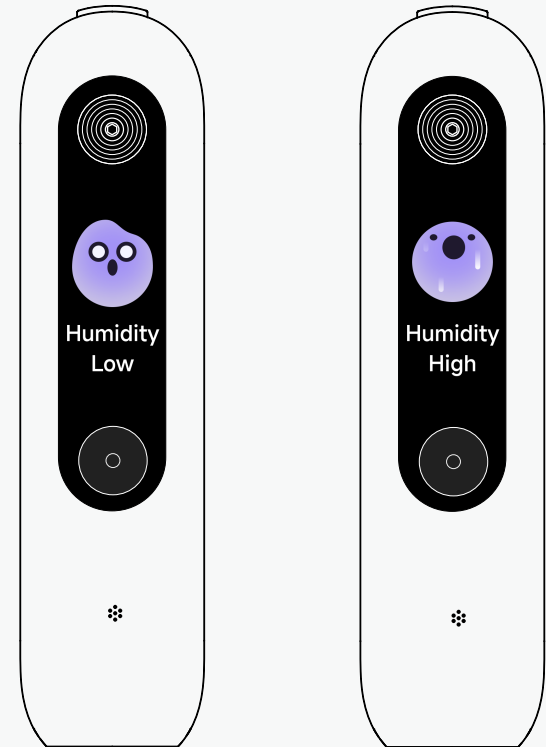


04 Operating Instructions

4.9 Smart Push Notifications

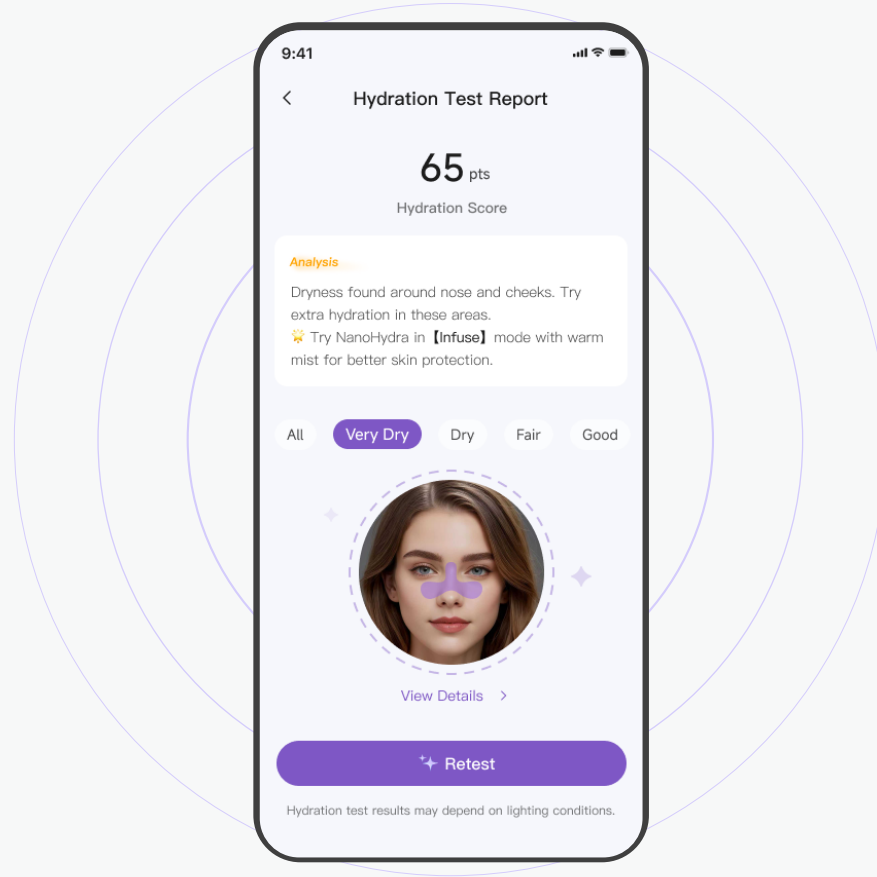

PIPPi Assistant

Based on facial moisture test results,
sends hydration recommendations.

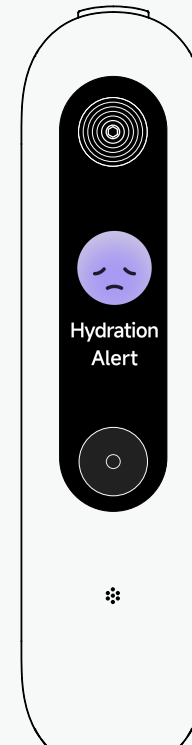


04 Operating Instructions

Restore Factory Settings

To restore factory settings

Press and hold the function button for 5 seconds on the mode selection screen.

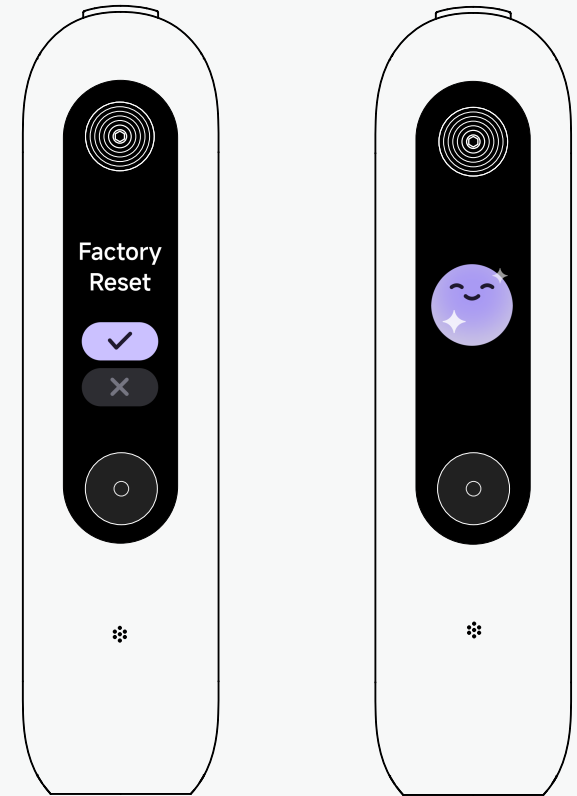


05 Cleaning & Maintenance

5.1 Product Cleaning & Care

Care Recommendation

To extend the product's lifespan,
Press and hold the nozzle and follow the Smart Cleaning
Mode instructions for cleaning.

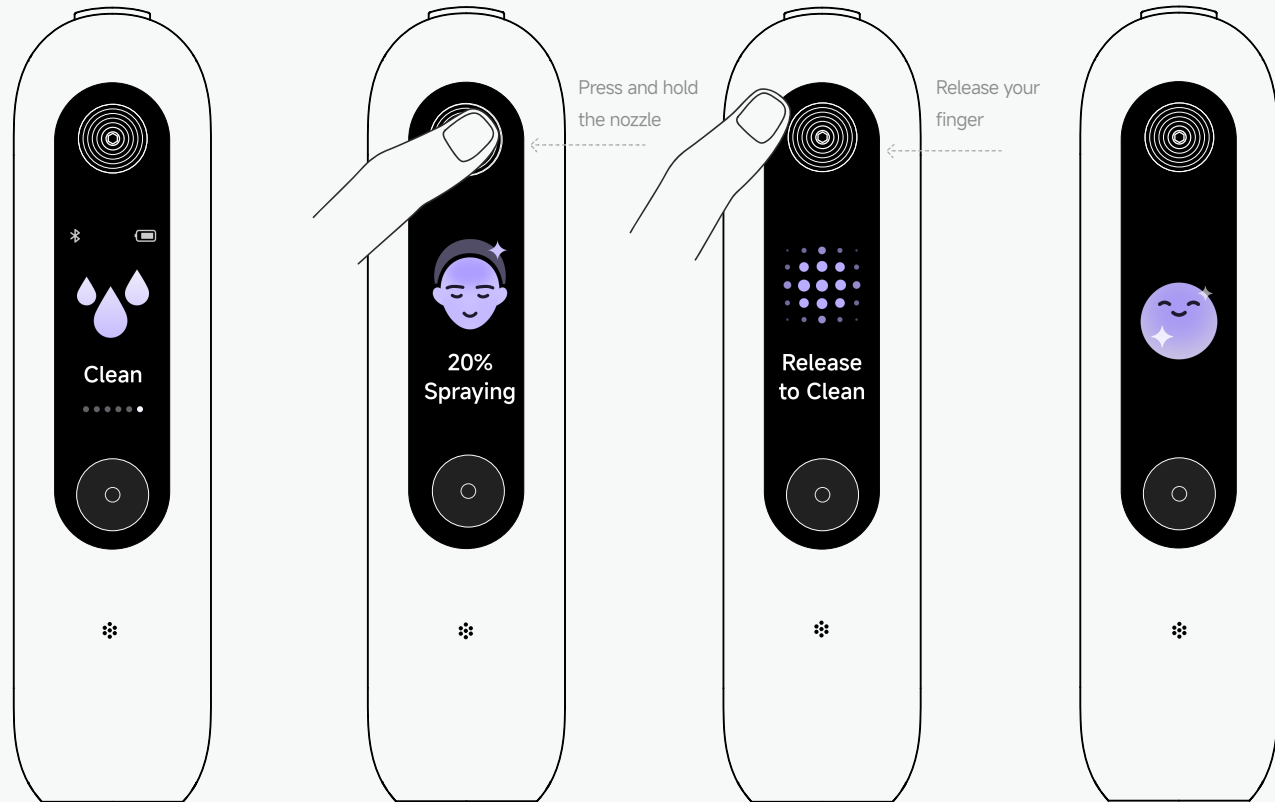

05 Cleaning & Maintenance


5.2 Nozzle Replacement

Replacement Steps


If the nozzle sprays unevenly or becomes clogged, please follow the steps below for cleaning:

1. Use the included Allen wrench to carefully remove the nozzle.
2. Place the nozzle in warm water to soak and clean gently.
3. Ensure the nozzle is completely dry before reinstalling it onto the device.


*Note: Do not use corrosive cleaning agents , as they may damage the nozzle.

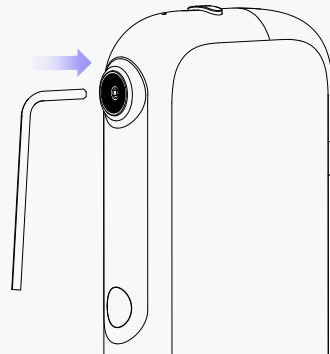


Align the wrench with the nozzle slot

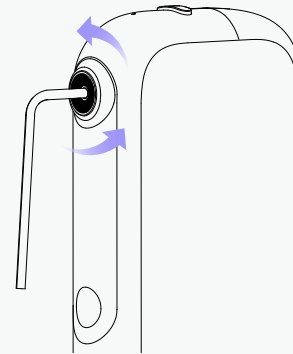

Rotate the wrench counterclockwise
3-4 turns

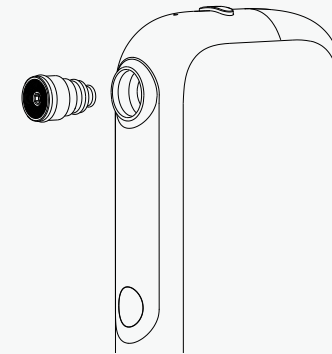

Remove the nozzle

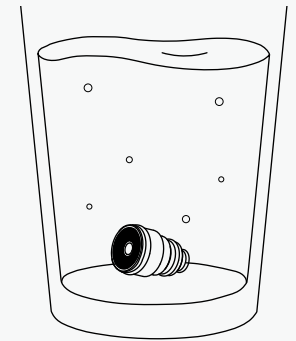

Soak in warm water

06 Maintenance Guide

Maintenance Guide

● Storage and Cleaning

1. Store the NanoHydra Pro and its accessories in a cool, dry place away from direct sunlight.
2. Wipe the device with a soft cloth dampened with water to remove dirt before normal use.

● Precautions

1. The NanoHydra Pro is not fully waterproof. Do not rinse the device directly with water.
2. Do not add corrosive or flammable liquids into this product.
3. Avoid dropping or subjecting the device to impact.
4. When using a newly purchased skincare water, apply a small amount behind the ear for testing.
Use with the device only if no adverse skin reaction occurs.

● Maintenance & Inspection

1. If any issues occur during use, please contact and consult your distributor or after-sales service advisor.
2. Do not attempt to repair or disassemble the device at home. If a malfunction occurs, stop using it immediately and contact after-sales service.

● FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference.
2. this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction
FCC ID: 2BSBN-PQ100-H

● After-sales service warranty information

This product strictly follows the “Law of the People’s Republic of China on the Protection of Consumer Rights and Interests” and the “Product Quality Law of the People’s Republic of China” to provide the Three Guarantees service (repair, replacement, and return).

Within the valid period of the Three Guarantees, you are entitled to request a return, replacement, or repair in accordance with the regulations.

Returns, replacements, or repairs must be processed with the purchase certificate or a valid invoice, so please keep your proof of purchase properly.

● After-Sales Service Process

Contact after-sales customer service to explain the reason for return, replacement, or repair, and reach an agreement. Customer service will provide the after-sales return address.

For returns or replacements, please ensure that the product, gifts, original packaging, and proof of purchase are complete and intact, and send them to the designated address.

inewme After-Sales Service will confirm receipt and inspection of the product, and verify whether it meets the return, replacement, or repair service policy.

● Situations Not Covered by the “Three Guarantees” Service Commitment (including but not limited to the following cases)

Exceeding the valid period of the Three Guarantees.

No proof of purchase or valid invoice.

Damage caused by use in abnormal environments, or by incorrect installation, use, maintenance, or storage.

Damage caused by unauthorized disassembly, repair, misuse, or modification.

Damage caused by force majeure (such as floods, fires, earthquakes, lightning, etc.).

Product labels or serial numbers are torn off or altered.

Natural wear and tear during normal use (including but not limited to the battery, packaging, etc.).

08 Warranty Card

Warranty Card

● **Official Contact**

Dear customer, thank you for your purchase. To fully enjoy our comprehensive after-sales service and support,

Please carefully read the instructions on the product warranty card and keep it safe. If you encounter any problems during use, please contact us via the official website: <https://www.inewme.com>

● **Warranty Card Instructions**

- 1、This card entitles you to enjoy free warranty services during the warranty period and discount after the warranty period.
- 2、Customers enjoy a one-year free warranty service for quality issues from the date of purchase.
- 3、The following situations that cause product failure are not covered by the free warranty: Product failures caused by human factors, accidents, negligence, disasters, or improper operations; product failures caused by installation, repair, modification, and disassembly by personnel not authorized by this company; product that exceeds the warranty period or conditions specified by the company.

NanoHydra Pro

User information

Name _____

Telephone _____

Email _____

Address _____

Purchase information

Product model _____

Purchase date _____

Purchase channel _____

Maintenance record


Date	Reason	Remarks
_____	_____	_____

09 Certificate of Conformity

Certificate of Conformity

inewme

Brand Owner: Shenzhen inewme Technology Co., Ltd
Address: Building 6, West Wing 801, TianAn Cloud Park , Gangtou Community,
Bantian Street, Longgang District, Shenzhen
Official website: <https://www.inewme.com>



Product name	<u>NanoHydra Pro</u>	Product model	<u>PQ100-H</u>
Production date	<u> </u>	Inspection date	<u> </u>

This product has been inspected and meets technical standards, and is hereby approved for release.

THANKS