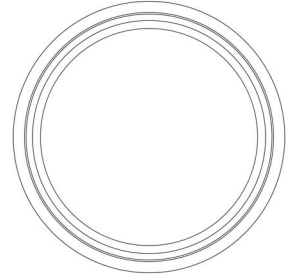
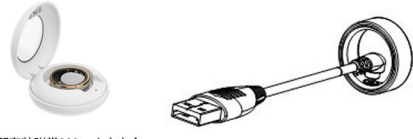
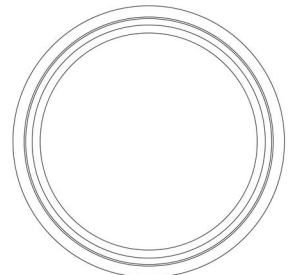
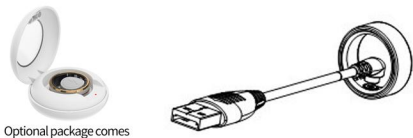
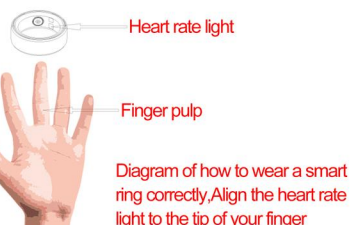


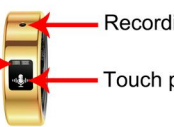


说明书 智能戒指 	充电激活 ·首次使用时,请将设备进行充电激活 如果在应用程序上恢复了出厂设置,请充电重新激活 1.戒指充电配套有两种方式: 您(购买的)产品USB线充或者无线充(充电仓) 2.接通电源后,戒指指示灯红灯常亮 3.指示灯状态: 充电中红灯常亮 · 充电完成绿灯亮3秒 4.充电时长: 120分钟 5.电量查看:在 APP 的“我的”页面中的设备连接部分查看电量 6.充电仓: 盒充没电需插上Type-C线充电, 红灯关闭表示盒充已完成充电  选配套装附带200mah充电仓	请注意, 戒指服务不是用来诊断、治疗或预防任何疾病或医疗状况服务中的资讯和数据仅供参考, 无法取代健康专业人员或医师的服务若您对医疗状况有任何问题, 建议咨询专业医师  心率灯 指腹 正确佩戴智能戒指示意图, 心率灯对准手指指腹佩戴	1.首次使用先给戒指充电120分钟 2.在Google Play/App Store搜索LoraFit或者扫描下面的二维码下载APP 3.在手机APP选择戒指并配对 4.闪烁红灯表示戒指正在充电 5.闪烁绿灯表示戒指已完成充电 盒充-内置200毫安电池 	LoraFit 连接戒指 打开APP点击连接, 会跳转到系统蓝牙界面, 找到设备蓝牙名点击连接, 连接成功返回APP即可使用。	运动 在手机APP界面, 找到运动界面, 可以选择多种运动模式, 包括: 步行、跑步、骑行、登山、游泳等, 点击运动按钮开始记录运动的距离, 配速, 时长, 以及心率信息。 	运动数据 在手机APP首页显示当天记录的步数、距离、运动时长、卡路里数据。 心率 点击心率进入, 点击测量开始, 指示灯亮绿光, 开始测试30~60秒完成测量。 血氧 点击血氧进入, 点击测量开始, 指示灯亮红光, 开始测试30~60秒完成测量。 睡眠 显示昨夜的睡眠总时长、评分以及浅睡眠和深睡眠等时长。 	一键翻译 长按戒指一秒, APP就自动识别内容翻译。 翻译工具 内置多种翻译工具, 涵盖文本翻译、语音翻译、拍照翻译等, 适配不同场景。可直接与AI助手语音对话、查询信息, 咨询问题。 	操作说明  指示灯 录音孔 触摸点 1.离线录音: 四击触发录音, 绿灯持续闪烁指示录制状态。再次四击停止录制/录制满30分钟自动停止录音, 文件保存成功后绿灯闪烁1次。 2.离线录音上传: 蓝牙数据传输期间, 红灯绿灯保持交替闪烁。数据包传输无误, 绿灯闪烁2次确认完成。 3.在线录音: 在线录音不通过戒指mic,APP上点击录音, 使用手机mic录制, APP上点击停止录音。录制即上传, 边录音边同步上传至app (不显示在文件数量里) 4.异常/错误: 文件数超限/存储空间不足, 拒绝录音, 红灯闪烁3次。操作指令发出时未连接蓝牙, 红灯闪烁1次。	5.存储空间不足/电量低于15%时, 自动关闭离线录音, 关闭灯光。 6.短视频控制: 单击向上滑动切换到下一个, 双击向下滑动返回上一个。 7.拍照控制: 连上系统蓝牙后, 打开APP上拍照界面, 三击触控板触发, 模拟蓝牙快门指令, 绿灯闪烁1次。 8.翻译: 长按触发翻译, 绿灯常亮指示收音状态。松手停止收音, 绿灯关闭, 开始翻译并播报结果。 9.离线录音和在线录音: (1) 在线录音和离线录音不能同时开启。 (2) 上传离线文件时也可以同时开启离线录制。 (3) 上传离线文件时也可以同时开启在线录音在线AI。 (4) 开启离线录制时去开启在线录音, 会把离线录制停止并保存。	注意 1、请勿在潮湿有水的环境下充电 2、请定期用干净的绒布清洁戒指背面的磁吸充电孔, 确保戒指磁吸充电孔磁吸充电器贴合, 以保证正常充电, 本产品不配备电源适配器, 为保证家人及财产安全, 在充电时可使用电脑USB接口或选用输出不超过5V1A的电源适配器。请通过正规渠道购买电源适配器, 杜绝使用低质、伪劣的电源适配器, 避免引起爆裂或起火。 注意事项 1、本产品的测量结果仅供参考, 不作为任何医疗用途及依据, 请遵从医生指导, 切不可以此测量结果自我诊断及治疗。 2、本产品防水等级为IP68防水, 深度防水。 3、本公司保留不做任何通知的情况下, 对本说明书内容进行修改的权利, 恕不另行通知。部分功能在对应的软件版本中有区别, 为正常情况。
Manual Smart Ring 	Charging activation ·When using for the first time, please charge and activate the device If the factory settings are restored on the app, please charge and reactivate (charging box) of your (purchased) product 1. There are two ways to charge the ring: USB cable charging or wireless charging (charging box) of your (purchased) product 2. After connecting to the power supply, the ring indicator light is always red 3. Indicator status: -Red light stays on during charging -Green light lights for 3 seconds when fully charged. 4. Charging time: 120minutes 5. Check battery level: View battery status at the device connection section on the Mine page of the APP. 6. Charging box: If the box charger is out of power, you need to plug in the Type-C cable to charge. The red light is off, indicating that the box charger has completed charging  Optional package comes with 200mah charging case	Please note that the Ring Services are not intended to diagnose, treat or prevent any disease or medical condition. The information and data in the Services are for reference only and are not intended to replace the services of a health professional or physician. If you have any questions about a medical condition, it is recommended that you consult a professional physician.  Heart rate light Finger pulp Diagram of how to wear a smart ring correctly.Align the heart rate light to the tip of your finger	1. Charge the ring for 120 minutes before first use 2. Search LoraFit on Google Play/App Store or scan the QR code below to download the APP 3. Select the ring and pair it on the mobile app 4. Flashing red light means the ring is charging 5. Flashing green light indicates the ring is fully charged Box charger - built-in 200 mAh battery 	LoraFit Connect the ring Open the APP and tap Connect to jump to the system Bluetooth page. Locate the device's Bluetooth name and tap to pair, then return to the APP after successful connection to start using.	Sports On the mobile app interface, find the sports section. You can choose from various sports modes, including walking, running, cycling, hiking, and swimming. Click the sports button to start recording your distance, pace, duration, and heart rate information. 	Exercise data The mobile app's homepage displays the number of steps, distance, exercise duration, and calories recorded for the day. Heart rate Click on heart rate to enter, then click on measurement start. The indicator light will turn green, and the test will complete in 30-60 seconds. Blood oxygen Click on Blood Oxygen to enter, then click on Start Measurement. The indicator light will turn red, and the test will complete in 30-60 seconds. Sleep It displays the total sleep duration, score, and duration of light sleep and deep sleep from last night. 	One-click translation Press and hold the ring for one second, and the app will automatically recognize and translate the content. Translation tool It has multiple built-in translation tools, covering text translation, voice translation, and photo translation, adapting to different scenarios. Users can directly engage in voice conversations with the AI assistant, query information, and ask questions. 	Operating Instructions  Indicator light Recording hole Touch point 1. Offline Recording: Quadruple-tap to start recording, with the green light flashing continuously to indicate recording status. Tap four times again to stop recording; it will also stop automatically after 30 minutes. The green light will flash once when the file is saved successfully. 2. Offline Recording Upload: The red and green lights flash alternately during Bluetooth data transmission. When data transfer completes successfully, the green light flashes twice for confirmation. 3. Online Recording: This mode does not use the ring's built-in microphone. Start recording in the APP to use your phone's microphone, and stop recording via the APP as well. Audio is uploaded in real time during recording and will not be counted in the file list.	4. Errors & Exceptions: Recording will be disabled when the maximum file count is reached or storage space is insufficient, accompanied by the red light flashing 3 times. 5. Offline recording will be automatically disabled and indicator lights turned off when storage is insufficient or battery level drops below 15%. 6. Short Video Control: Single tap: swipe up gesture to switch to next; Double tap: swipe down gesture to return to previous. 7. Camera Control: After connecting to system Bluetooth, open the camera page in the APP. Triple-tap the touchpad to trigger the Bluetooth shutter. The green light will flash once. 8. Translate: Long press to activate translation. The green light stays on to indicate audio recording. Release to stop recording; the green light turns off, then translation result will be generated and played aloud. 9. Offline & Online Recording: (1) Cannot run online and offline recording at the same time. (2) Offline recording can be started while uploading offline files. (3) Online recording and online AI functions can be enabled during offline file upload. (4)If you turn on online recording during active offline recording, the ongoing offline recording will be stopped and saved.	Note 1. Do not charge in a humid and wet environment 2. Please clean the magnetic charging hole on the back of the ring with a clean flannel regularly to ensure that the magnetic charging hole of the ring fits the magnetic charger to ensure normal charging. This product is not equipped with a power adapter. To ensure the safety of your family and property, you can use the computer USB port or choose a power adapter with an output of no more than 5V1A when charging. Please purchase power adapters through formal channels and avoid using low-quality and counterfeit power adapters to avoid explosions or fires. Precautions 1. The measurement results of this product are for reference only and are not used as any medical purpose or basis. Please follow the doctor's instructions and do not use this measurement result for self-diagnosis and treatment. 2. This product features IP68 deep waterproof rating. 3. The company reserves the right to modify the contents of this manual without any notice. Some functions are different in the corresponding software version, which is normal.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.