

120*65mm

封面

正面

Y01 AI 太阳眼镜
Y01 AI SUN GLASS



用户手册 USER MANUAL
中文/ENGLISH

1 装箱清单 Packing list

- 1 x AI 太阳眼镜 1 x AI SUN GLASS
- 1 x 充电线 1 xCharging Cable
- 1 x 用户手册 1 xUser Manual
- 1 x 眼镜布 1 xGlasses cloth

2 产品概括 Product Overview

1. 出音孔 sound hole
2. 触控区域 Touch zone
3. 电源/视频/拍照开关 Power/Video/Photo Switch
4. AI 语音助手/录音开关 AI voice assistant/Recording switch
5. 摄像头 Camera
6. 补光灯 Fill light
7. 指示灯 Indicator light
8. 上、下麦克风风孔 Upper&Lower Microphone hole
9. 充电接口 Charging POGO PIN



3 为您的 AI 太阳眼镜充电
Charging your AI SUN GLASS

- 3.1 请确保充电线上的 POGO 引脚能正确地安装到 SUN GLASS 设备的充电端口上。
Make sure the POGO-pins on the charging cable fit correctly onto the charging terminals of AI SUN GLASS.
- 3.2 将 USB 数据线的粗端插入电源插座中。
Plug the big end of the USB cable to a power source.

1



4 连接或断开和安装 App Connect or Disconnect and Install the App

- 4.1 佩戴眼镜后右侧按钮长按 3 秒开机,当开/关机后会从两侧出音口发出提示音。红蓝灯交替闪烁。
After wearing the glasses, press and hold the right button for 3 seconds to turn on the glasses. A prompt tone will be emitted from the audio outlets on both sides when the glasses are turned on/off. The red and blue lights will flash alternately.
- 4.2 苹果商店、谷歌商店下载 DA ECHO 应用程序并完成安装。
Download the DA ECHO App from the Apple Store or Google Play Store and complete the installation.
- 4.3 打开 App,设置中添加设备,搜索眼镜设备点击连接,配对成功后即可使用。移除设备,可解除设备绑定。苹果手机注意需要忽略设备。
Open the App, add the device in the settings, search for the glasses device and click connect. After pairing is successful, you can use it. Remove the device to unbind the device. Note that for Apple phones, you need to ignore the device.

2

5 使用方法 How to Use

5.1 拍照 Photograph

按键拍照: 短按右键拍照

Button to take photo: Short press the right button to take photo

语音拍照: 唤醒 AI 语言后, 语音输入“拍照”后会进行拍照一次

Voice photo taking: After waking up the AI language, voice input "take a photo" will take a photo once

5.2 录像 Video


按键录像: 右键双击开始, 再次单击结束录像

Video recording: Double-click the right button to start, click again to end recording

5.3 录音 Record

按键录音: 左键双击开始, 再次单击结束录音

Button recording: Double-click the left button to start, and click again to end recording

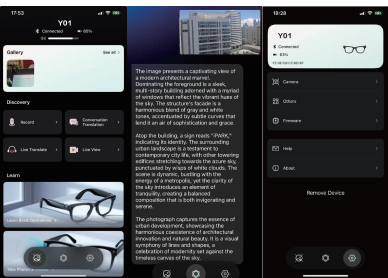

3

App 录音: 点击进入录音界面, 点击开始录音, 再次点击结束录音

App recording: Click to enter the recording interface, click to start recording, and click again to end recording

5.4 导入媒体及操作 Importing media and operations

导入媒体: 录制好后点击 App 主页导入按钮, 建立 WIFI 连接, 同时把相片、录音、录像导入到本地。可在 App 和本地相册等进行查看
Import media: After recording, click the Import button on the App homepage to establish a Wi-Fi connection and import photos, audio and video to the local computer. You can view them in the App and local albums.

多媒体文件操作: Multimedia file operations:
主页预览图显示最近拍摄的照片、视频, 点击预览图可直接查看。
The homepage preview image shows the most recently taken photos and videos. Click the preview image to view them directly.

点击查看全部展示全部相片、视频。点击选择, 可进行单选、全选, 进行删除、分享操作。主页预览图显示最近拍摄的照片、视频, 点击预览图可直接查看。
Click View All to display all photos and videos. Click Select to select a single photo or all photos, delete them, or share them. The homepage preview shows the most recently taken photos and videos. Click a preview to view them directly.

4

反面


5.5 对话翻译 Conversation Translation

选择语言: 你使用眼镜说话, 对方使用手机说话, 选择各自的语言

Select language: You use the glasses to speak, and the other party uses the phone to speak, and select their respective languages

戴着眼镜说话: 你说话时眼镜自动录音, 对方会在手机上看到翻译内容


Talking with glasses: The glasses automatically record when you speak, and the other party will see the translated content on the phone



对方使用手机说话: 对方在 App 上按住按钮说话, 翻译成你选择的语言在眼镜上播报, 并在 App 界面展示翻译内容。

The other party speaks on their phone: They press and hold the button on the app to speak, which is then translated into the language you selected and read

on the glasses. The translated content is also displayed on the app interface.

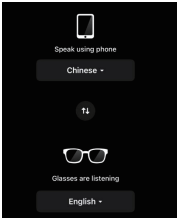


5

5.6 同声传译 Live Translate



同声传译适用于会议演讲。单一讲话人说话。佩戴眼镜点击开始并选择对应语言, 眼镜自动收录眼镜佩戴者或对方语音, 可以在 App 上实时看到翻译内容。眼镜进行语音播报。

Live Translate is suitable for conference presentations and single-speaker conversations. Wear the glasses, tap Start, and select the language. The glasses automatically record the wearer's or the other person's voice. The translated content can be viewed in real time on the app, and the glasses provide a voice broadcast.



5.7 AI 对话、万物识别 AI dialogue, Large language model



语音唤醒“你好, 小可”, 也可短按左键直接唤醒 AI 进行对话, 如询问“今天的天气怎么样?”, “香港有什么好玩的地方?”, 可在 App AI 对话框中查看相关内容。

You can wake up the AI with voice "Hello, Echo" or short press the left button to directly wake up the AI for a conversation. For example, you can ask "What's the weather like today?" or "What fun places are there in Hong Kong?" You can view relevant content in the App AI dialog box.

6



万物识别: 语音输入“我前面是什么”, 眼镜自动拍摄并识别, 眼镜播报语音。

Large language model: Input the voice "What's in front of me?" and the glasses will automatically take a picture, recognize it, and read the voice message.


5.8 语音通话 Voice calls

接听电话: 来电时, 右侧触控区双击

Answer a call: Double-tap the right touch area when a call come in

拒接/挂断电话: 右侧触控区长按

Reject/Hang up: Press and hold the right touch area

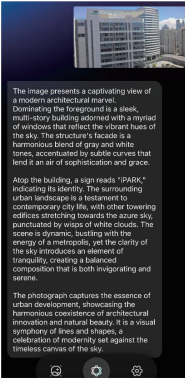

7

5.9 媒体播放控制 Media playback control

播放音乐时, 可通过右侧触控区域控制音量大小、播放和暂停、下一曲等。
When playing music, you can control the volume, play and pause, next song, etc. through the touch area on the right.

增大音量: 右侧触控区向前滑动

Increase volume: Swipe forward on the right touch area

降低音量: 右侧触控区向后滑动

Decrease volume: Swipe backward the right touch area

播放/暂停: 右侧触控区双击

Play/Pause: Double-tap the right touch area

下一曲: 右侧触控区三击

Next track: Triple-tap the right touch area



5.10 实况画面 Live View



建立 WIFI 连接。App 上实时显示眼镜摄像头传出的影像

Establish a WIFI connection, and the image transmitted by the glasses camera will be displayed in real time on the App

8

5.11 设置 Settings



点击 App 设置, 可进行设备连接和解绑, 设置视频时长、AI 语音唤醒开关、AI 音色, 可查看设备信息、进行固件 OTA 升级、重置设备。
Tap App Settings to connect or disconnect devices, configure video duration, Voice Wake-up, AI voice Style. You may also view device information, perform firmware OTA updates, or reset the device.

恢复出厂设置: 眼镜左右按键同时长按 5 秒清除数据重置眼镜, 重新进入配对状态。

Factory Reset: Press and hold both temples for 5 seconds. All data will be erased and the device will return to pairing mode.



9

封底

FCC Statement

Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Shenzhen Youshi Yuanyu Technology Co.,Ltd may void the FCC

authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user ' s authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.