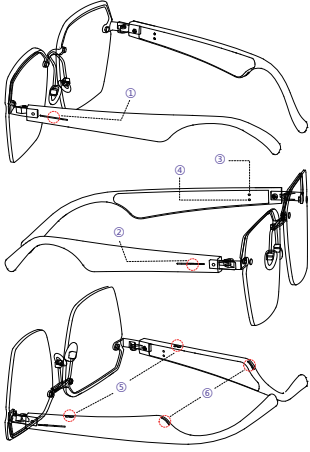
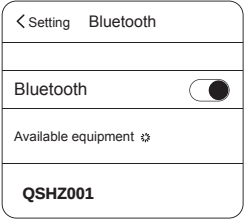


Smart Glasses Smart Glasses Manual • Disclaimer First of all, we would like to thank you for using our products! Please read this manual in detail before use and use this product correctly. The contents of this user's manual are subject to change for better service. Changes due to the performance and function of the product will be made without prior notice. • Product Introduction TWS Smart Glasses, using Bluetooth chip, compatible with mainstream brands of cell phones and tablets and other bluetooth devices, support aptX audio decoding technology, to achieve CD-level high-quality sound quality, long-lasting life, left and right dual speakers, open directional articulation, no obstacles to receive external sound, you can always access to the surrounding environment information, safe, smart, healthy, convenient. TWS Smart Glasses, this product is bluetooth glasses with stereo sound function, easy to operate, beautiful and practical, easy to carry. • Packing List TWS Smart Glasses, Smart Glasses Charging Cable, User Manual, Glasses Cleaning Cloth, buggy bag	Product features overview  ❶ Left touch point (Power on/off / TWS connection / Play / Pause / Previous song/ Volume down / Call answer / Call reject / Call hang up / Voice wake up) ❷ Right touch point (Power on/off / TWS connection / Play / Pause / Next song / Volume up / Call answer / Call reject / Call hang up / Voice wake up) ❸ LED indicator ❹ Microphones ❺ Magnetic charging port ❻ Back outlet Tips for using the product • Please read the manual carefully before using this product and keep this manual. • For the first use, please fully charge the product first. • If the product is not charged for a long time (more than two weeks), please charge it before use. Awaken by voice Bluetooth has been connected to the phone, standby state, any long press the left (right) touch point for 2 seconds, the voice prompt [beep] can wake up the phone Ai voice assistant.	Product parameters Frame Material: Metal + PC Control mode: Single point touch Bluetooth version: V5.3 Bluetooth effective distance: 10 Meters Charging method: Magnetic charging Battery capacity: 80mAh Charging time: 1.5~2 hours Music time: about 5~6 hours Talking time: about 4~5 hours Battery level indication • Low battery reminder: Voice prompts [beep, beep], LED red light flashes once, 5 seconds between reminders. • Low power shutdown: Voice prompt tone, red light blinking three times shutdown. • Charging: LED indicator red light is on for a long time. • Charging is complete: The red LED turns off automatically. Switching and pairing • Power on Simultaneously long press the left and right touch points of the glasses for 2 seconds the beep sounds and the red and blue lights flash to boot successfully. • Power off Simultaneously long press the left and right touch points of the glasses for 5 seconds the beep sounds and the red light blinks three times and then turns off. • Intelligent energy saving shutdown Power on state, not connected to the device state 3 minutes automatically shut down, the red light flashes three times, that is, disconnected from the phone.	• TWS connection pairing The left and right mirror legs will be paired automatically under power-on condition, within 5 seconds, "beep" beep, main (red and blue blinking) and vice (off), on behalf of the successful pairing of mirror legs. Bluetooth pairing 1. Open Settings and enter Bluetooth; 2. make sure the glasses are on, turn on your cell phone, computer, learning machine and other Bluetooth devices to search for the device name:QSHZ001, click on the bluetooth name to enter the connection; after the Bluetooth device is connected successfully, the LED light goes off.  Music manipulation • To play the previous song: Tap the left touch point 2 times; • To play the next song: Tap the right touch point 2 times; • Pause/Play: Tap left (right) touch point 1 at any time; • Volume up: Tap the right touch point 3 times to increase one level; • Volume down: Tap the left touch point 3 times to decrease one level; Call control • Incoming call answer: Under the incoming call status, tap any left (right) touch point 2 times to answer the call; • Incoming call rejection: Under the incoming call status, long press the left (right) touch point 2 times to reject the call;
---	---	--	---

• Hang up: Under the call status, tap the left (right) touch point 2 times at any time to hang up.	areas such as bathrooms as this may cause electric shock, personal injury, fire and damage to the charger.	Product warranty	Product warranty													
Warnings	• Observe the laws and regulations that explicitly prohibit the use of the charger in any environment.	The following three packages are available for performancefailures within the product warranty period that are not due to human damage:	Dear users, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill out and keep it in a safe place.													
1. Do not dismantle or repair or modify this product for any reason, as doing so may result in fire, electronic breakdown or even complete damage to the product.	Important safety information	• Within 7 days from the date of receipt of the product, the product is not man-made damage to the performance of the failure, the user can choose a one-time refund, replacement failure, the user can choose a one-time refund, replacement of the same model and specifications of the product.	<table><tr><td rowspan="5">User Information</td><td>User name</td><td></td></tr><tr><td>Contact number</td><td></td></tr><tr><td>Mail address</td><td></td></tr><tr><td>E-mail address</td><td></td></tr><tr><td>Postal code</td><td></td></tr></table>	User Information	User name		Contact number		Mail address		E-mail address		Postal code			
User Information	User name															
	Contact number															
	Mail address															
	E-mail address															
	Postal code															
2. Do not expose the device to temperatures that are too low or too high (below 0 ℃ or above 45 ℃).	1. Before using this product, please read all safety information to ensure proper and safe use.	• Within 15 days from the date of receipt of the product, the product is not man-made damage performance failure, the user can choose to replace the same model with the same specifications of the product.	<table><tr><td rowspan="3">Products Information</td><td>Product name</td><td></td></tr><tr><td>Product model</td><td></td></tr><tr><td>Product bar code</td><td></td></tr></table>	Products Information	Product name		Product model		Product bar code							
Products Information	Product name															
	Product model															
	Product bar code															
3. Do not expose the product to liquids or even immerse it in liquids.	2. use of power supplies, chargers or batteries not approved by the original manufacturer may cause fire, explosion or other hazards.	• Within one year from the date of receipt of the product, the product performance failure of non-man-made damage, the user can send merchants to repair.	<table><tr><td rowspan="6">Sellers Information</td><td>Name</td><td></td></tr><tr><td>Address</td><td></td></tr><tr><td>Contact number</td><td></td></tr><tr><td>Postal code</td><td></td></tr><tr><td>Sale date</td><td></td></tr><tr><td>Invoice number</td><td></td></tr></table>	Sellers Information	Name		Address		Contact number		Postal code		Sale date		Invoice number	
Sellers Information	Name															
	Address															
	Contact number															
	Postal code															
	Sale date															
	Invoice number															
4. Do not put the glasses under the sunlight for a long time, otherwise it will be easily deformed, aged and broken.	3. Use accessories approved by the manufacturer and compatible with this model of equipment.	The following conditions are not covered by the “Three Guarantees” service:	<table><tr><td>Note</td><td></td></tr></table>	Note												
Note																
5. Do not place the magnetic end of the charging cable near metal objects to prevent the danger of short circuit caused by magnetic attraction to metal objects.	4. Use the product at temperatures ranging from 0℃ to 35℃ and store the equipment and its accessories at temperatures ranging from -20℃ to 45℃. If the ambient temperature is too high or too low, it may cause the equipment to malfunction.	• Unauthorized maintenance, misuse, collision, negligence, abuse, liquid ingestion, accident, alteration or tearing, alteration of product labels and seals.														
Use of warnings	When the ambient temperature is too high or too low, it may cause the device to malfunction.	• Exceeding the validity period of the “Three Guarantees” service.														
	5. If the device uses a non-removable built-in battery, do not replace the battery by yourself to avoid damaging the battery or the device; the battery can only be replaced by an authorized service center.	• Damage caused by fire, flood, lightning and other force majeure.														
Do not use the product in the following environments in accordance with the relevant laws and regulations.	6. If charging is complete, disconnect the charger from the device and unplug the charger from the power outlet. Do not charge continuously for more than 12 hours.	• Failure of product performance due to man-made reasons.														
	7. Keep the equipment dry.	• Damage caused by failure to use the product in accordance with the requirements of the product manual.														
• It is strictly prohibited to use the device in environmentswhere flammable and explosive oils, gases or chemicals are stored, such as near gasoline stations, oil depots and chemical warehouses.	8. If the equipment or any other parts do not work properly, please do not repair any products by yourself.															
	9. When connecting to other equipment, please refer to the instruction manual for the connection method, and do not connect to mismatched equipment at will.															
• Do not use this device in hospital operating rooms, emergency rooms, intensive care units, etc. To avoid interference with the work of medical equipment, please keep this device away from pacemakers, hearing aids, cochlear implants and other medical equipment, and keep a distance of more than 15 cm between this device and pacemakers.	⚠ To avoid hearing damage, do not use high volume for long periods of time.															
• Consult your physician and the manufacturer of the device if this device is to be used in the vicinity of personal medical equipment.																
• Observe all safety warnings and regulations regarding the use of this device while driving.																
• Do not use this device outdoors during thunderstorms to avoid lightning accidents.																
• Do not talk while charging.																
• Do not use the charger in high humidity																

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

•Reorient or relocate the receiving antenna.

•Increase the separation between the equipment and receiver.

•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.