



AI Pointer Operation Instruction



Product list



AI Pointer
M-CTR100

Receiver
M-CTR101

Charging
Cable



Portable bag

Product
Instruction

Start to Use

Step 1

Receiver Installation Instructions

Place the receiver with the front arrow facing up according to the installation prompt instructions

If placed above the TV, fix it by means of a clip. (As shown in Figure 1)

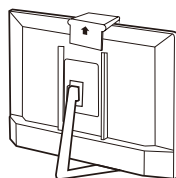


Figure 1


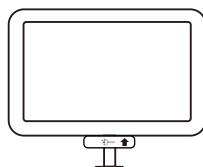


Figure 2

If placed under the TV, it should be fixed by magnetic attraction. If the TV cannot be directly attached, a magnetic sheet needs to be attached to the intended location of the TV, and then the receiver should be fixed by magnetic attraction. (As shown in Figure 2)

Step 2

Plug the USB interface of the receiver into the USB port of the computer, and connect the computer to the projector or smart TV

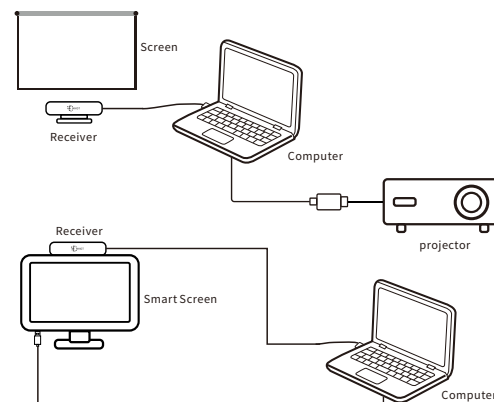

Step 3

Turn the power button on the left side of the AI pointer to the ON icon to start the demonstration pen. The indicator light at the top will light up green


Step 4

Switch the mode button on the right side of the AI teaching stick to the corresponding computer system. For Windows, switch it to the bottom; for Apple Mac Os, switch it to the top

After the above steps are completed the product starts to work normally

Key function description

Introduction to the button functions of the AI pointer

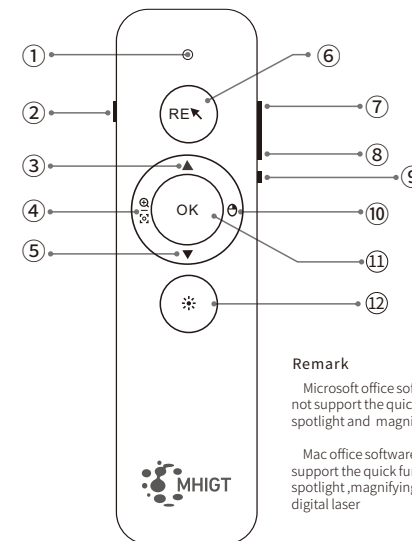

Remark



Microsoft office software does not support the quick functions of spotlight and magnifying glass

Mac office software does not support the quick functions of spotlight, magnifying glass and digital laser

number	operation	Corresponding function description
①	No operation	Power light
②	Push/Pull	Power
③	Click	PPT PageUp
④	Short press	Magnifying glass/aperture
	Long press	Exit PPT Projector
⑤	Click	PPT PageDown
⑥	Click	Pointer return to center

number	operation	Corresponding function description	
⑦	Short press	Eraser function	
	Long press	Cleaning All	
⑧	Short press	Brush	
	Long press	Blank Screen	
⑨	Switched	Switch up	Mac system
		Switch down	Windows system
⑩	Click	The right mouse button	
	Long press	Enter PPT Projector	
⑪	Short Press	Confirm key, left mouse button	
⑫	Long Press	Digital Cursor	

Indicator light status description

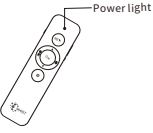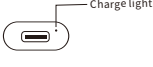The green light is always on	Working condition	
The red light remains on constantly	Low battery state	
Blinking red light	System Error	
The red light remains on constantly	Charging	
The white light remains on constantly	Charge complete	

receiver

The blue light is flashing	Pending connection status
The blue light remains on constantly	working condition
	

FCC Caution:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation . If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
FCC Radiation Exposure Statement:
For AI Pointer(M-CTR100),this equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
For Receiver(M-CTR101),this equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.
UWB devices may not be employed for the operation of toys.
Operation onboard an aircraft, a ship or a satellite is prohibited.

This equipment may only be operated indoors. Operation outdoors is in violation of 47 U.S.C. 301 and could subject the operator to serious legal penalties.



AI Pointer M-CTR100

Make Presentation More Brilliant
And Intelligent

