


Assembly Instructions

READ THIS MANUAL

Do not use this product until you read and understand the instructions in this manual.

KEEP THIS MANUAL FOR FUTURE REFERENCE.

TIPS: Some accessories are placed in the armrests.

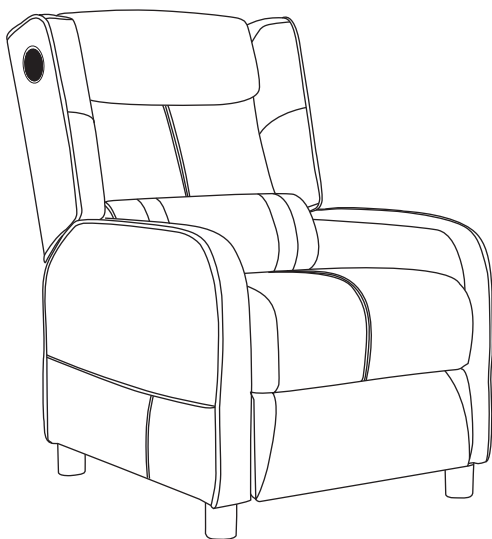

GTP208M

This manual is intended for installation and use.
Actual product appearance may vary slightly from the images shown.



WhatsApp
Service QR Code



Installation Video QR

Customer Service Support

✉ E-mail: us@gtplayer.com

🌐 Web: www.gtplayer.com

For any initial defects or issues, please contact us (the manufacturer) promptly:

- Our U.S. warehouses ensure quick parts supply.
- We know our products best.
- We will strive to resolve your problem within 24 hours on business days.

WARNING:

This recliner is intended for relaxation purposes only.

- DO NOT allow children to play on this recliner or operate the recliner.
- Leg rest folds down on closing so that a child could possibly be injured.
- Always leave in an upright and closed position. Keep hands and feet clear of telescoping support and all moving parts. Leg rest must be completely closed before getting in or out of the recliner. Only the occupant should operate the recliner.
- Never sit on the leg rest when open.
- DO NOT sit on the arms of the recliner.
- Be careful when operating the recliner near children and pets.
- Close and secure the recliner completely before moving.
- Avoid exposing upholstered furniture to lit cigarettes, cigars, open flames, and high temperatures.
- Do not exceed recommended weight limit.

DANGER

- DO NOT use rough cleaning tools or corrosive detergent to clean the recliner.
- Some of the parts are heavy and / or have a sharp edge. Please install it carefully to avoid hurting you and people around you.
- Only use the recliner when fully assembled as described in this assembly instructions. Please stop using it immediately if the recliner is damaged. You can contact our customer service for guidance.




FCC COMPLIANCE


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PARTS AND ACCESSORIES

◆ Please check and ensure all the things are all in the package. Please contact us if something is not included. We will reply within 24 hours and try our best to solve it.


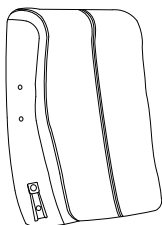


A Backrest
* 1pc

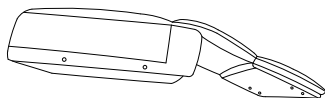


B Seat Cushion * 1pc

The seat cushion **B** you received has been vacuum-packed. Open the plastic bag, take out the seat cushion and let it breathe to the normal state.

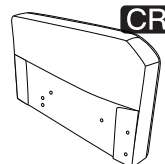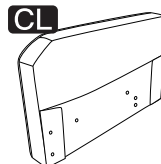


C Armrest L&R * 1set

Note: Some accessories are located inside the both armrests.

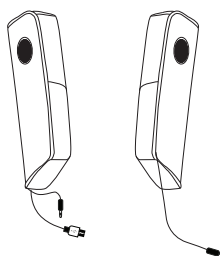

D Armrest Ear Part
R & L * 2pcs

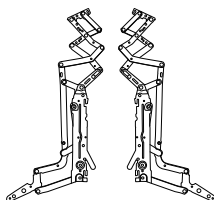

E Telescoping Support
R & L * 2pcs




F Rear Bracket * 1pc



G Front Bracket * 1pc


E F G are placed inside the armrests. Please take them out before installation.

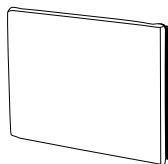

H Seat Base
* 1pc



I Headrest
* 1pc




J Lumbar Pillow
* 1pc



K Pad
* 4pcs



M M6x16
Screw
* 4pcs



N M6x35
Screw
* 16pcs



P Pad
Washer
* 4pcs



Q Wrench
* 1pc



R Gloves
* 1pair

ASSEMBLY INSTRUCTIONS

CAUTION: At least two adults are required to safely assemble this recliner chair.



Other lifting attempts may risk back safety due to large and heavy part(s).



BEFORE YOU BEGIN

(Read these instructions completely and carefully.)




IMPORTANT INFORMATION




Some accessories and parts are located **INSIDE** both armrests. Please unfasten the Velcro and **take out all the items** to ensure proper installation.

Armrest

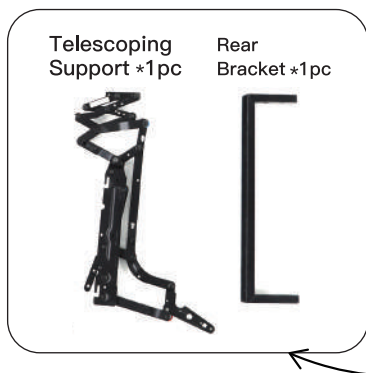

Armrest

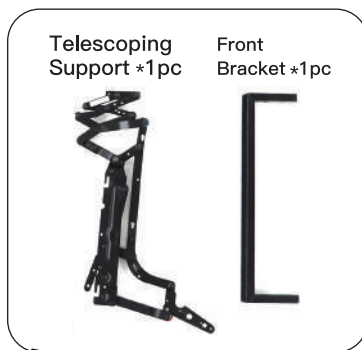

3

Customer Service Support

(Lines may be busy during peak hours, please wait patiently)




us@gtplayer.com




(877) 236-5969 (9:00-5:30 M-F PST)

1. Unpack and place parts on a clean flat surface carefully.
2. Unstick the Velcro of the armrests, take out the telescoping supports **E** and brackets **F** **G** as shown.

unstick the Velcro

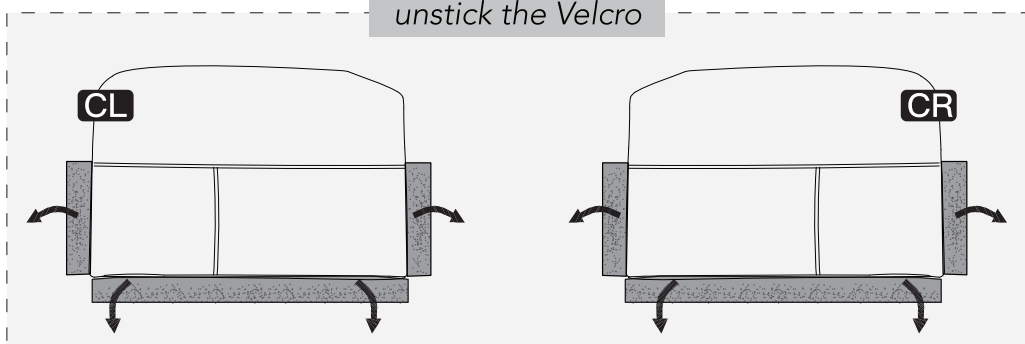

take out accessories

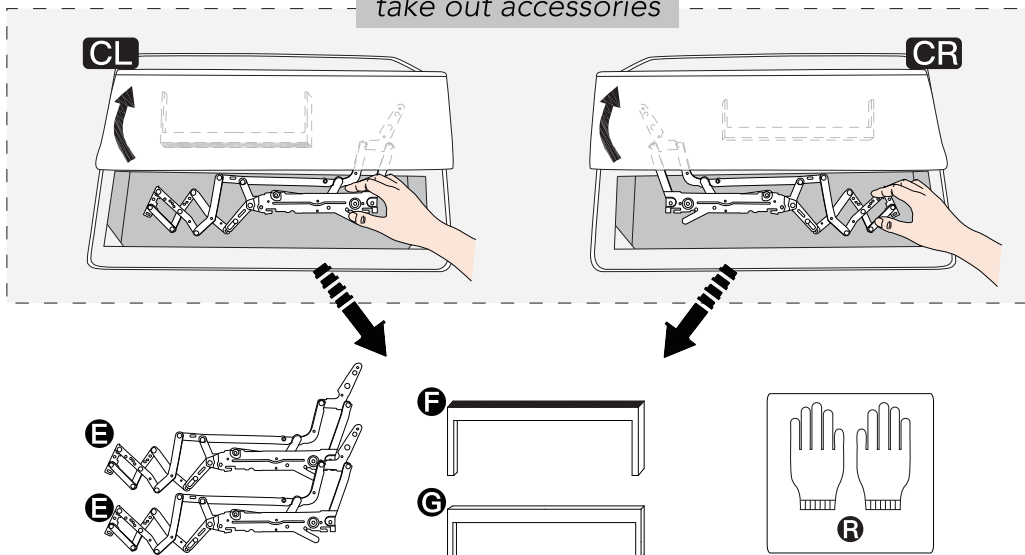

NOTE: 1.Wear gloves when handling.
2.After taking out the accessories, stick the armrests for later use.

RIGHT PART

label align


R3 to R3 , R4 to R4

M6x35



N x 2

3. Install the right telescoping support E on the seat base H with N.

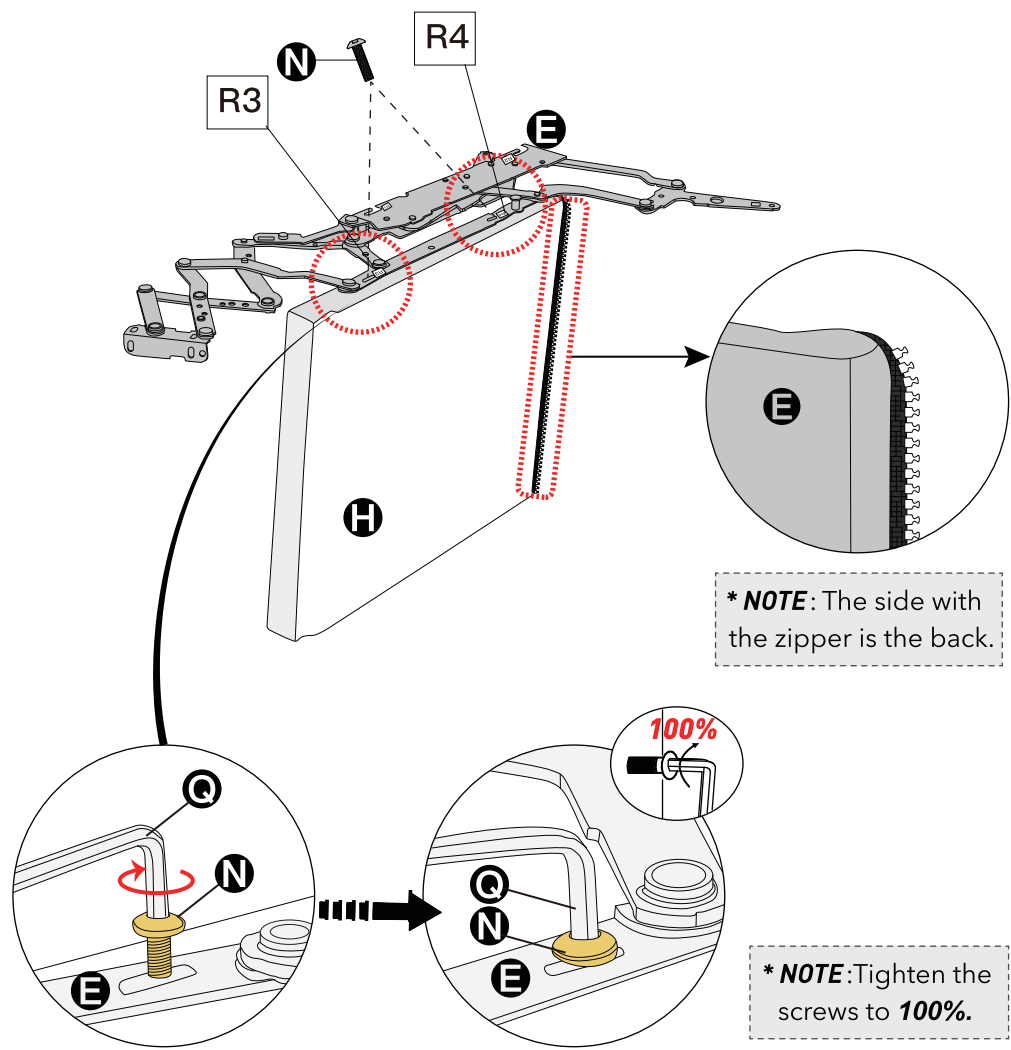

LEFT PART

label align


L3 to L3 , L4 to L4

M6x35




N x 2

4. Install the left telescoping support **E** on the seat base **H** with **N**.

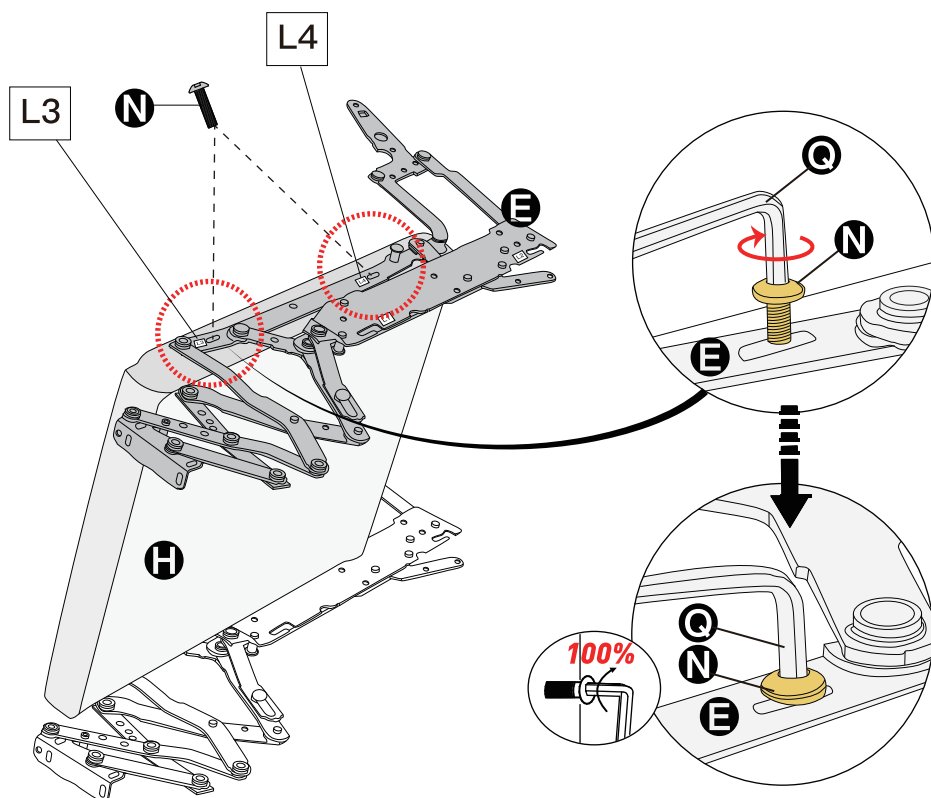

* **NOTE:** Tighten the screws to **100%**.

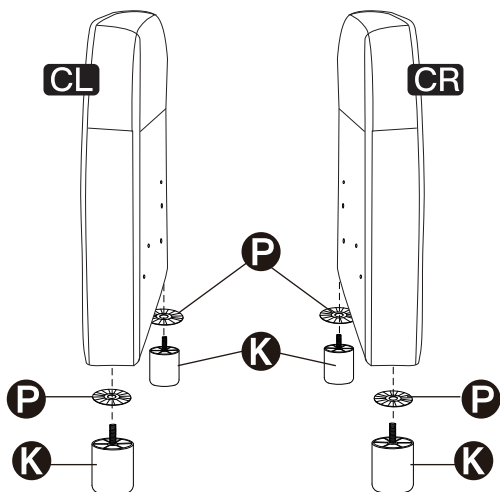

Pad

K x 4

Pad Washer


P x 4

5. Install the pad washers **P** and pads **K** on the armrests **C**.

LEFT PART


label align

L1 to L1, L2 to L2

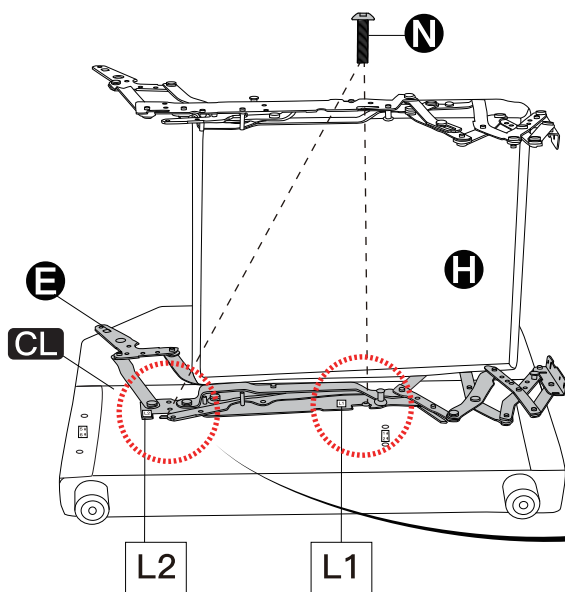

M6x35

N x 2

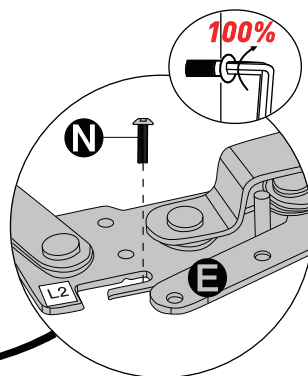

6. Align the left telescoping support **E** to the left armrest **CL** with **N**.

*** NOTE:** Tighten the screws to **100%**.

LEFT PART

label align

↑ 1
↓ 2

↑ 1
↓ 2

↑ 5
↓ 6


↑ 5
↓ 6

M6x35




N x 4

7. Install the brackets **G** & **F** on the left armrest **CL**.

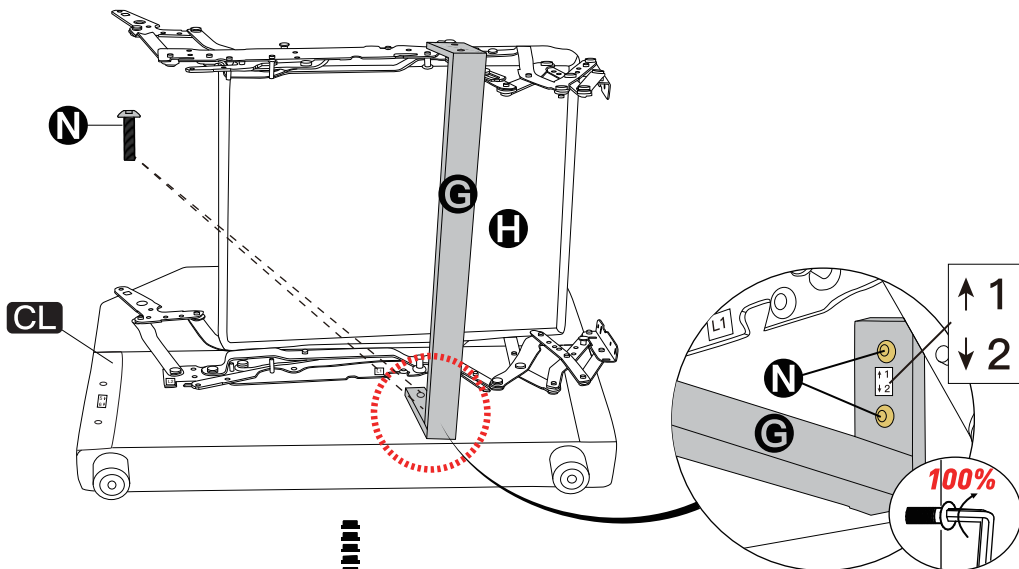

*** NOTE:** Tighten the screws to **100%**.

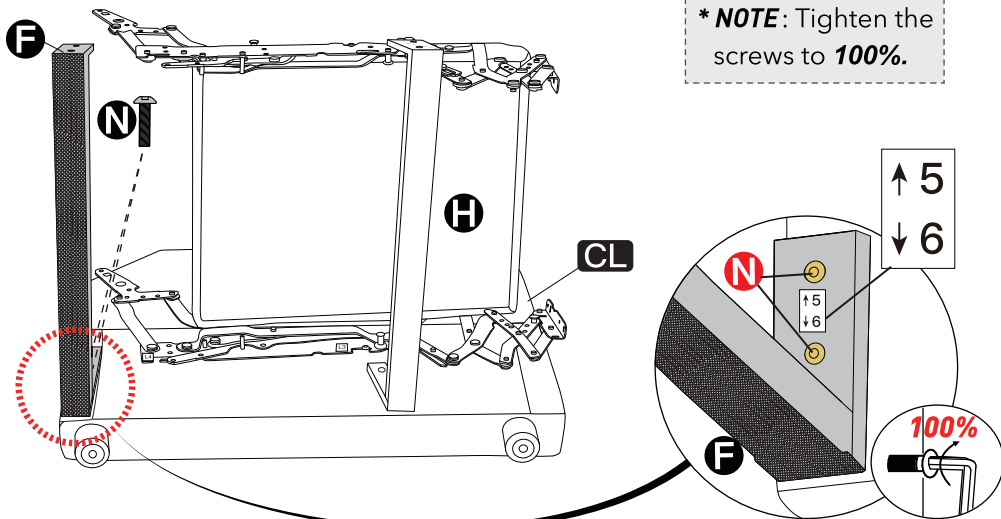

RIGHT PART

label align


R1 to R1 , R2 to R2

M6x35




N x 2

8. Align the right telescoping support **E** to the right armrest **CR** with **N**.

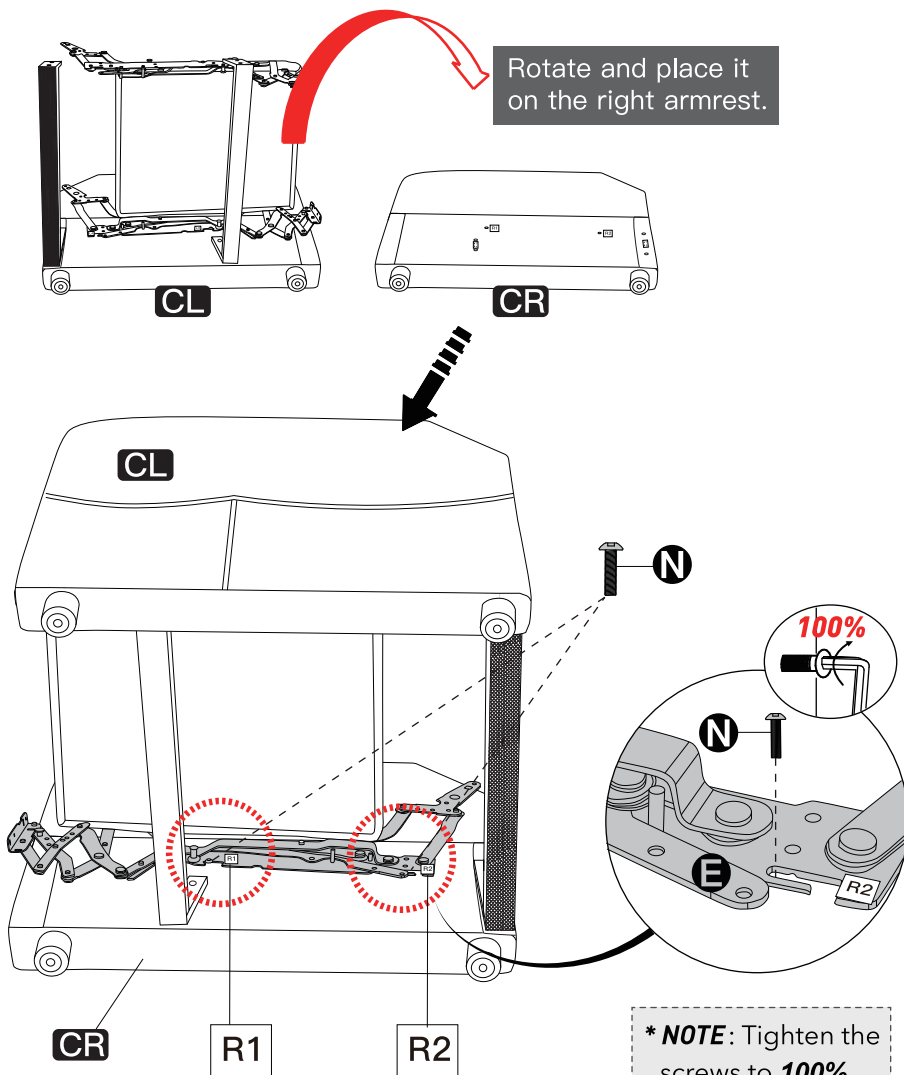

RIGHT PART

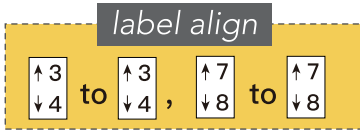


M6x35



N x 4

9. Install the brackets **G** & **F**
on the right armrest **CR**.


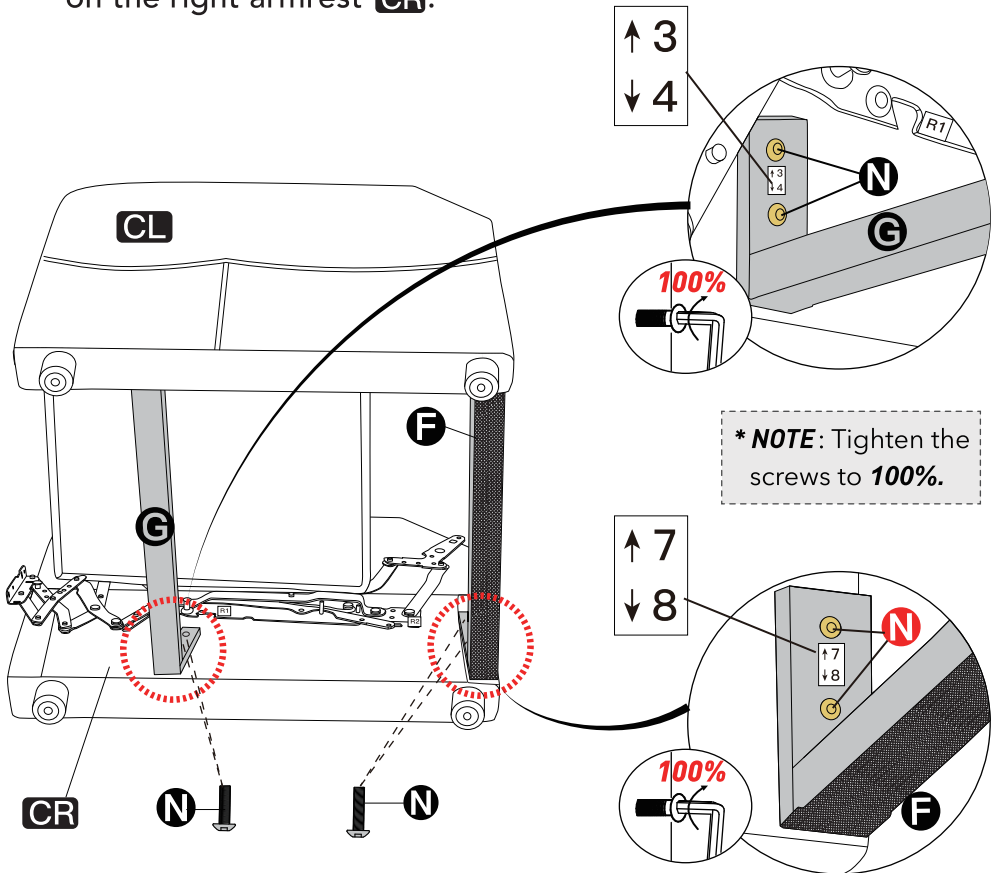


10. Insert and zip up the seat cushion **B**.


Rotate body to this position

a. Zip up


*** NOTE:** The Velcro side of the seat cushion should face up.

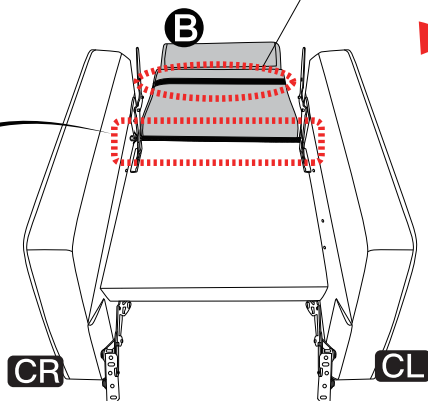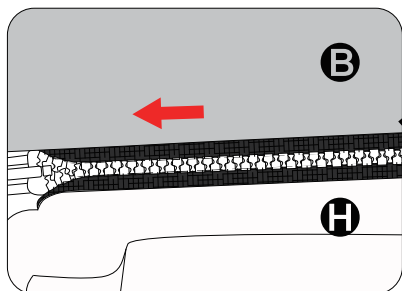



b. Flip

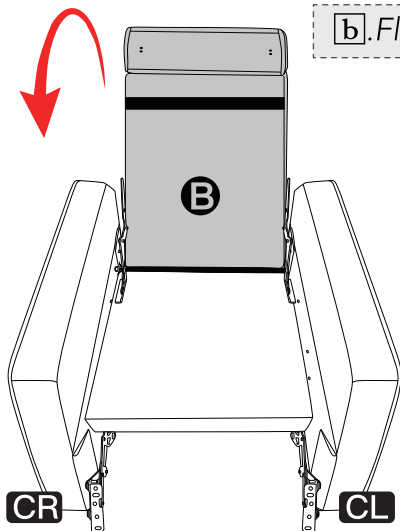




c. Stick the Velcro

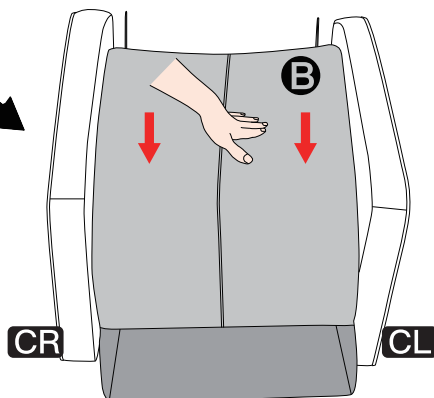

Rotate body to
this position

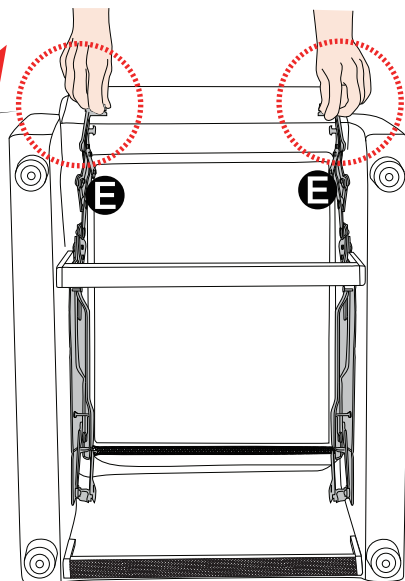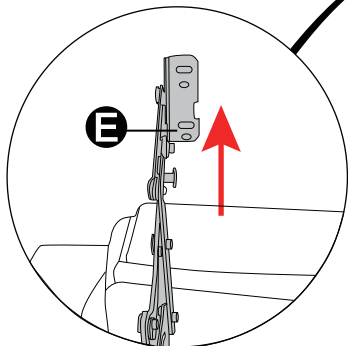


11. Extend the telescoping supports **E**.

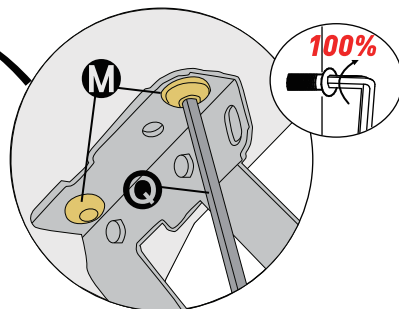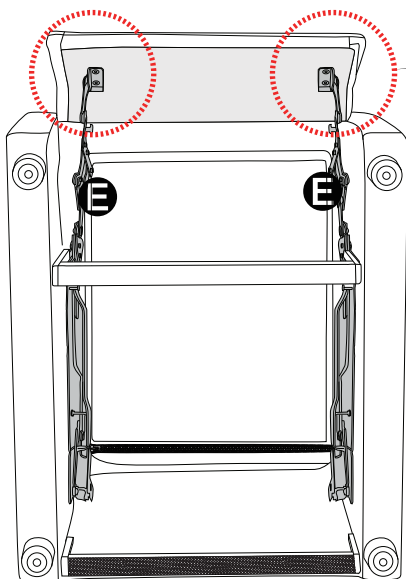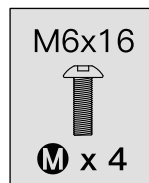


*** NOTE:** Tighten the
screws to **100%**.


12. Secure the seat cushion **B** and telescoping support **E** with **M**.

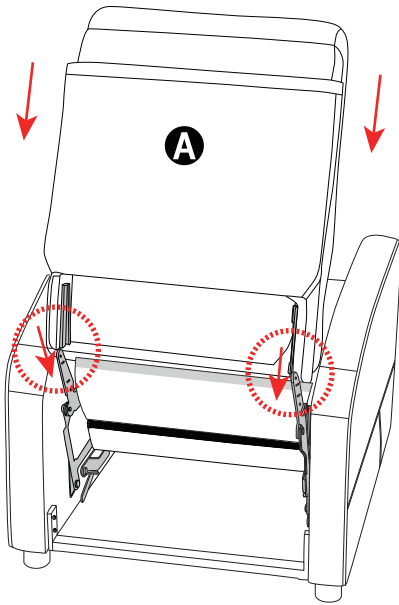


- 13.** Connect the metal bolts on backrest **A** with the telescoping support **E**.

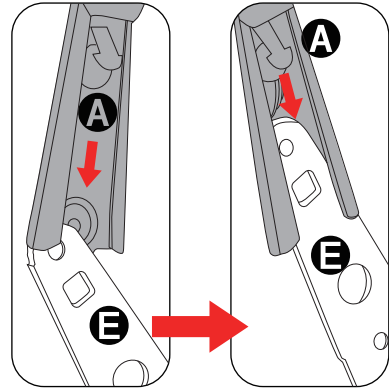

- 14.** Attach the headrest **I** to the backrest **A**.

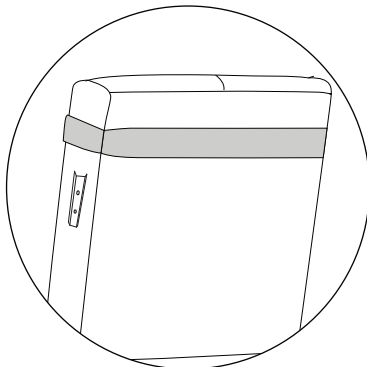


(back view)


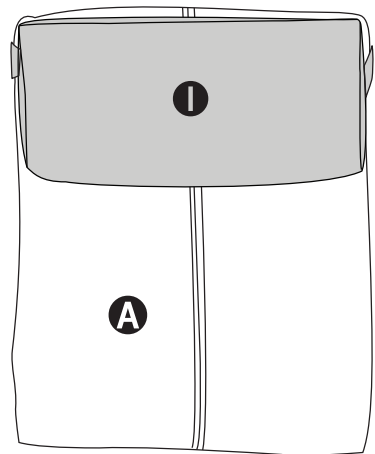


- 15.** Insert the metal bolts of armrest ear parts (both) to the backrest.



Ensure they are put correctly.

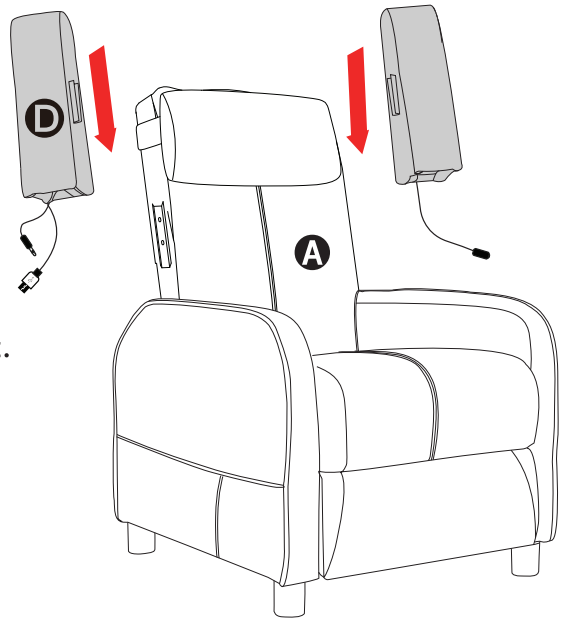

- 16.** Attach the lumbar pillow. Plug in the power supply to enable the massage function. Check that the cable is connected properly.


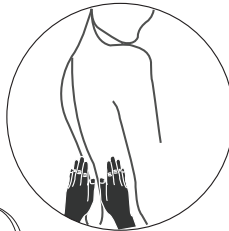
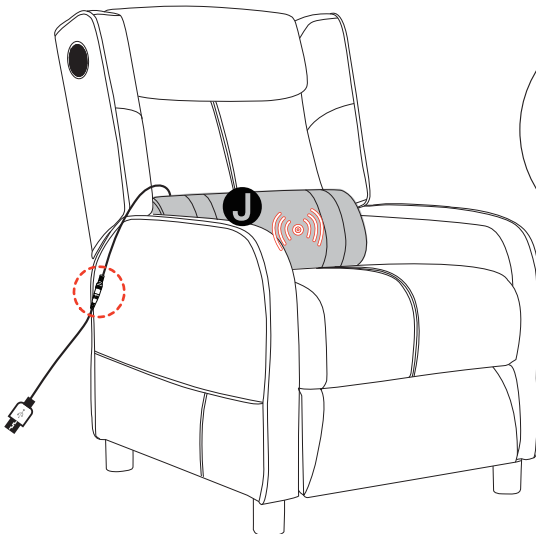


- 17.** Connect the cable of ③ and fix it on the backrest with Velcro of ①.

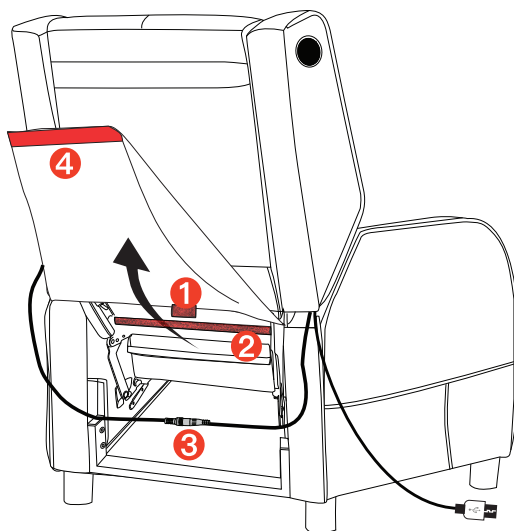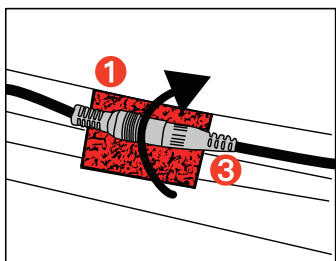


- 18.** Stick the Velcro. Fix the seat and the backrest of ②, the backrest and the rear bracket of ④.

Assembly is complete.

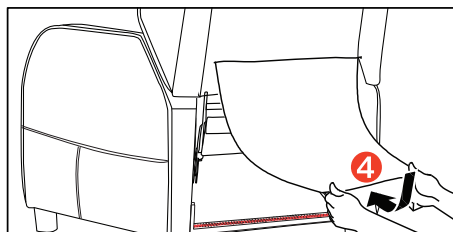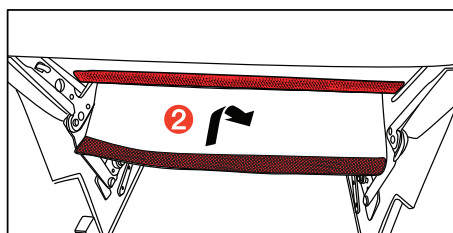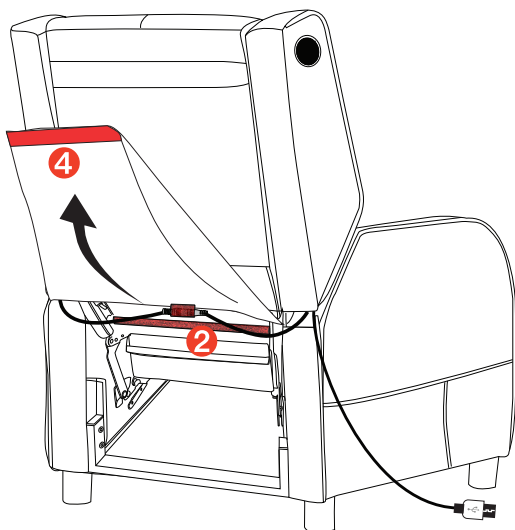


RECLINE & FOOTREST OPERATING

A. How to recline?

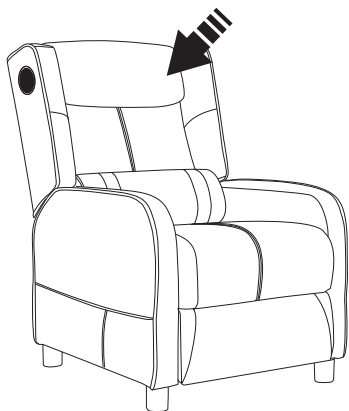


1. Put some pressure onto the backrest to recline back.

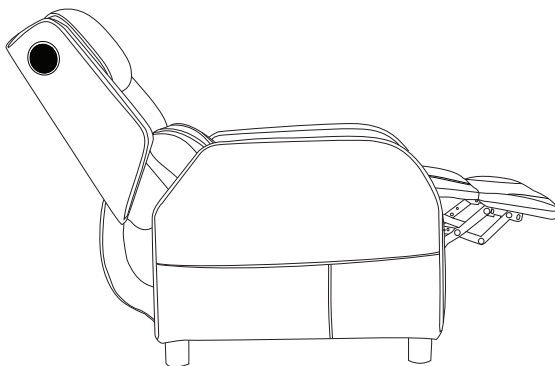


2. Relax and enjoy.

B. How to close the footrest?

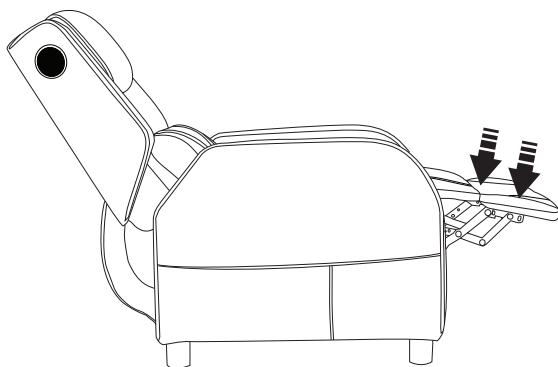

1. Push the footrest down firmly with your legs until it locks into place.

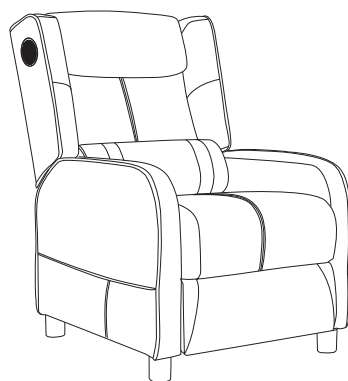

2. The recliner returns to the upright position.

C. Bluetooth Speakers Instructions

SPEAKERS TECHNIQUE SPECIFICATION

Power Input	USB 5V	Wireless Streaming Range Distance	5m
Voltage	3.7V	Support Mobile System	Android / ios

Connecting to smartphones and other devices:

1. Plug in the power or USB port,the Bluetooth speakers will open automatically, and voice will prompt, **"Power On"**.
2. Activate the Bluetooth function on your phone and search for Bluetooth devices. Pair your phone to **"GT208M or GTP208M "**.
3. Once the pairing is successful, and voice will prompt, **"Connected"**.
4. If the connection is broken, voice will prompt, **"Disconnected"**.




APP QR CODE


This unit can be controlled through APP.
If you are interested, scan the APP QR
code to get the APP.




D. Massage Function

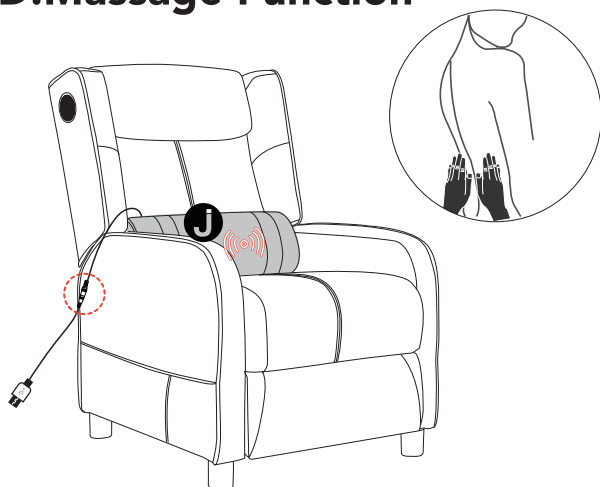

Power option 1



Power option 2

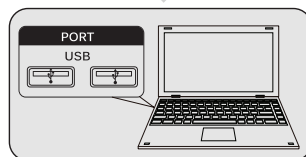

* Plug in the power supply to enable the massage function.
Check that the cable is connected properly.

E. Massage Unit Safety Information

- ◆ **CAUTION:** Keep the massage unit dry. Do not expose to water, liquids, or excessive humidity to prevent malfunction
- ◆ Discontinue use immediately if the device overheats. Allow it to cool completely before next operation.
- ◆ **KEEP OUT OF REACH OF CHILDREN.** Do not allow unsupervised use by children or persons with limited mobility.
- ◆ Limit continuous use to 15 minutes per session. Prolonged use may cause discomfort or skin irritation.
- ◆ Regularly inspect the Massage cord and Massage controller for wear. Replace damaged components immediately.




WARNING: Do Not disassemble or modify the massage unit. Tampering voids the warranty and may cause hazards.

NOTICE: This product is not a medical device. Consult a physician before use if you have chronic pain, pregnancy, or medical implants.

◆ **STOP USE** if the device is damaged (e.g., frayed wires, cracked casing). Contact customer service for repair or replacement.

USAGE


18in
Leave enough space for reclining back

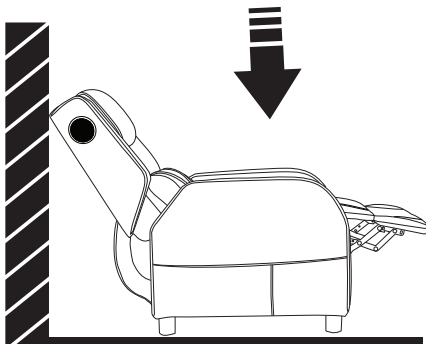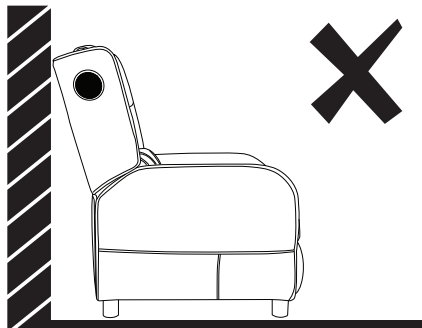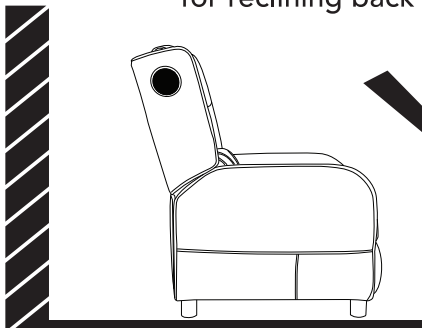

The recliner should be placed 18in away from the wall, so the reclining function can be used normally.

* Fabric will fade in direct sunlight. Minimize exposure to direct sunlight to extend the life of your furniture.

As most parts of the chair can be moved, handle all items with care when moving.

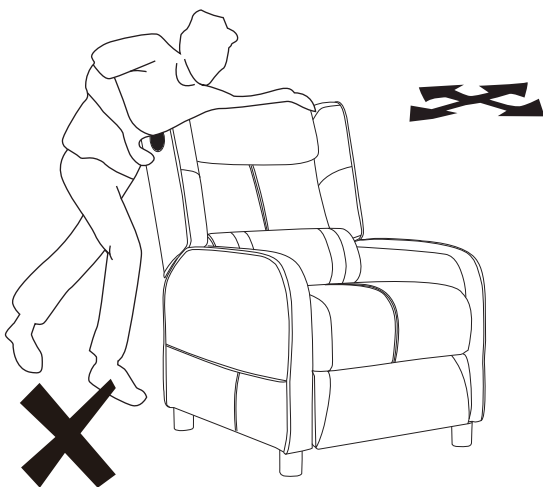


- * Keep the protective film on the footrest—it keeps dust out and wipes clean easily.
- * Only move the recliner when it is in the upright position. Never attempt to move the recliner when it is in any of the reclining position. Always use the armrests to move the recliner.

Note: * DO NOT place objects under the recliner, the footrest when the recliner is in the fully reclined position.

Make sure the area is clear of obstructions, including pets and children during operation.

- * DO NOT use the backrest or backrest ear parts to move the recliner.
- * Be careful not to damage the cables when moving.


PROPER USAGE

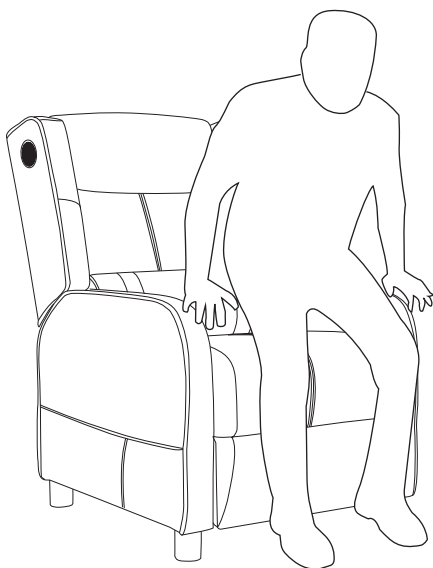

Steps to safely stand up from your Recliner Chair



1. Store the Bluetooth and massager cables safely in the seat's side pocket.
2. Plant feet firmly on the ground.
3. Evenly distribute weight on both arms of the chair.
4. Slowly stand up from upright position.

IMPROPER USAGE

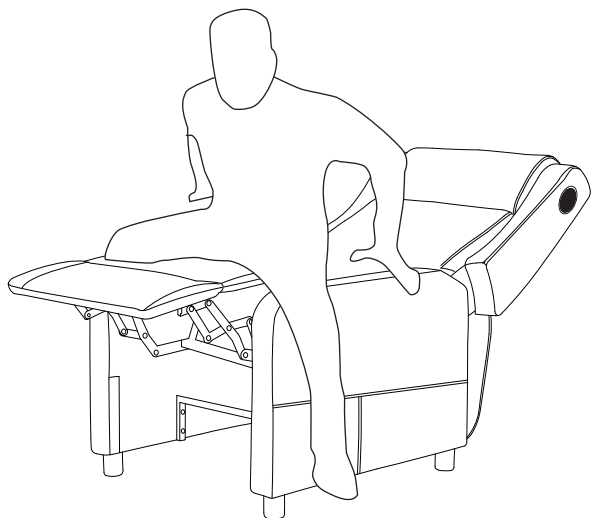

DO NOT stand up when the footrest is in the upright position.


DO NOT stand up from your recliner chair with uneven weight.

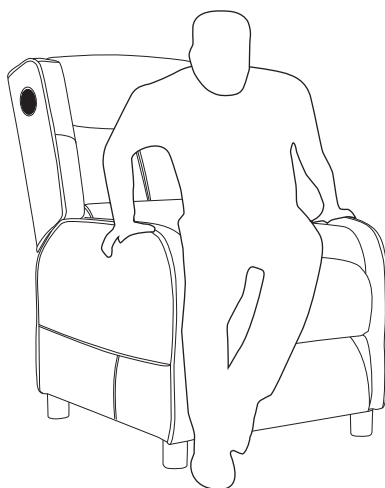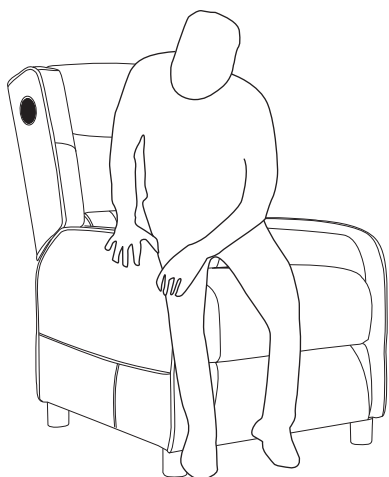

DO NOT stand up from your recliner chair with only one arm.

USE, MAINTENANCE & ASSEMBLY

- Keep these instructions for future reference.
- Please dispose of all packaging safely.
- Wipe clean with a slightly damp cloth.
- Avoid the use of all household cleaners and abrasives.
- Periodically check all screw & fixings to ensure they are secure.
- When moving your product, carefully lift into place. Never drag or push the product across the floor as this will cause damage to the joints. If the product is used on hard flooring, such as wood or laminated floor, you must place some protection under the legs to stop the product from moving. If this is not adhered to, it could result in failure to the product that will invalidate the warranty.

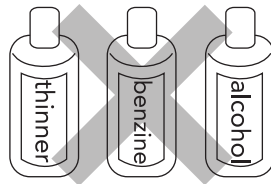

※ Please read these instructions completely before operating this recliner chair. Keep this manual for future reference.

Dear Customer,

Thank you for choosing us.

For safe use, please read this manual before installation and keep it properly for future reference. Please feel free to email us if you have any concerns about our products. We'll reply within 24 hours.

The following are the things you need to pay attention to so that we can provide you with services when you encounter problems during the installation and use of the product:

- When the product is damaged due to courier problems, please contact our customer service in time for verification.
- We will resolve the issue as soon as possible;
- We give 1 year quality assurance.

We offer product explanations, installation instructions, product maintenance and maintenance methods.

If you feel satisfied with our product and service,

- Please set our store as your favorites;
- Please recommend our products to your friends;
- Feel free to share your purchase experience on our store or product page.

Feedback or reviews from you will greatly help us offer better services to players around the world.

Best regards!

** All information stated is correct at the time of print and is subject to change without notice.*



Assembly? Tips? After-sales?

Scan & we're here for you anytime!

Customer Service Support

✉ E-mail: us@gtplayer.com

🌐 Web: www.gtplayer.com



If you have any questions about the product, please contact us through the contact information on the left. We will try our best to solve your problem within 24H (except weekends and holidays).

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.