


ABA001 使用指南

GloryGlass2

使用指南

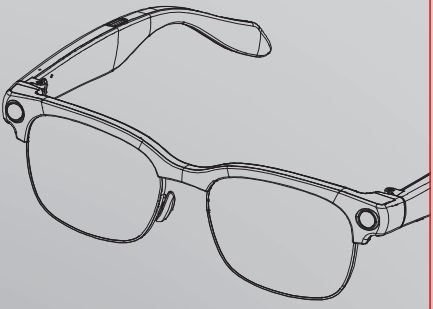


物品清单


眼镜




充电线

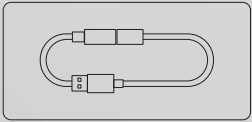


擦镜布

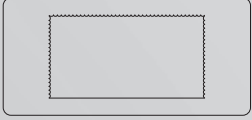

眼镜盒

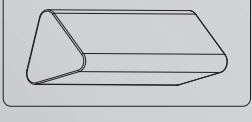

使用指南

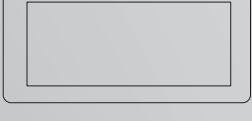

产品概况


摄像头




闪光灯



左按键

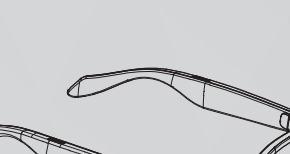


充电口

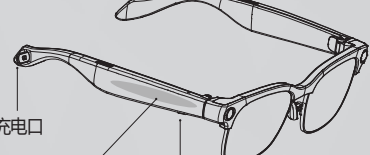

触控区



右按键

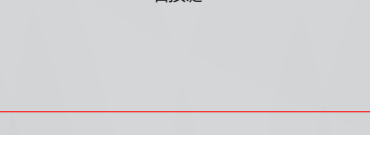

功能介绍

开机

按住电源键2秒，直到语音提示：power on

配对连接

手机下载 glory view APP 搜索设备名称：GloryGlass2；APP和眼镜设备绑定成功后，眼镜蓝灯闪烁2秒

恢复出厂

开机状态下，眼镜设备绑定APP后，在右上角设置栏点击恢复出厂设置即可完成

关机

长按电源键3s，直到红灯闪烁2秒，语音提示：power off

右按键（红色电源键）

单击：1.拍照，提示音：咔嚓
2.如在录像状态中，单击停止录像，提示音：咚咚

双击：摄像头开启录像，提示音：叮咚；

左按键

长按2秒：开始录音，提示音：叮咚，正面指示灯呼吸闪烁

单击：录音状态时，单击结束录音。提示音：咚咚

双击：拍照识图，提示音：咔嚓。

如未连接，提示失败音：请连接APP

触控媒体控制

双击：播放/暂停音乐
三击：下一首

长按2秒：唤醒语音助手提示音：叮咚

单指：前后滑动，调整音量大小，向前增大，向后减小

触控通话控制

双击：1.电话呼入：接听 2.通话状态：挂断

长按：电话呼入：拒接

语音助手

唤醒方式，参考APP语音助手说明

AI基础功能

例如：AI聊天，AI识图，多国语音翻译，会议转录总结
音乐播放控制，视频直播，新功能持续新增中.....

指示灯页

拍照

白灯亮下，提示音：咔嚓

录像

白灯常亮，开始提示音：叮咚

录音

白灯呼吸灯闪烁

充电

绿灯呼吸闪烁，充满绿灯常亮

低电量5%

红灯闪烁3秒，关机，提示音：power off

安全须知

1. 安全注意事项（必读）

为保障您的人身安全、设备安全及合规使用，请在使用设备前完整阅读以下规范：

1.1 拍摄隐私安全规范

本设备搭载第一视角拍摄功能，设备正面配备白色隐私指示灯。
设备启动拍照、录像、录音、AI实时记录时，隐私灯将持续点亮/闪烁，用于提示周边人员。禁止在涉密场所、禁止拍摄区域、隐私敏感场景使用拍摄记录功能；请勿遮挡、改装、屏蔽隐私指示灯，违规使用后果由用户自行承担。

1.2 用眼与佩戴安全

长时间佩戴使用，建议每连续使用2小时休息10分钟，缓解眼部疲劳。严禁直视强光、烈日、激光光源，避免造成眼部损伤。本设备非医疗护眼设备，不可用于视力矫正。

1.3 行车与运动安全

驾驶车辆、骑行、高速运动场景下，请勿进行复杂操作、专注查看画面，仅可使用语音播报、音乐播放等被动听感功能，优先保障出行安全。

1.4 充电与设备安全

请使用正规5V/1A、5V/2A合规充电器，禁止使用高压快充头、劣质充电设备。设备支持IP54防尘防泼溅，可应对日常汗水、雨水飞溅，禁止浸泡、水洗、水下使用。设备内置锂电池，禁止私自拆机、挤压、穿刺、高温烘烤。

1.5 环境合规使用

请严格遵守当地法律法规，文明拍摄、合规记录，不得用于偷拍、窃听、违规取证等违法行为。


APP下载

名称：Glory View
APP二维码




GloryGlass2

User Manual

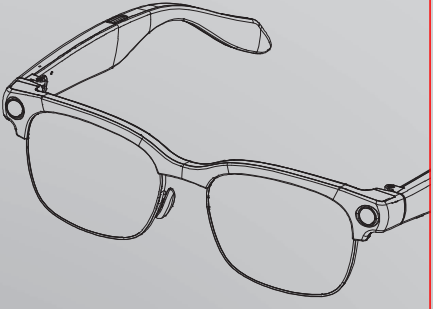


Packing List


smart glasses

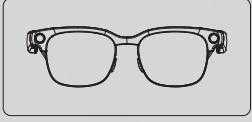


charging cable

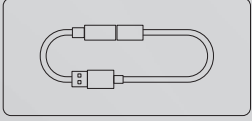


Lens cleaning cloth

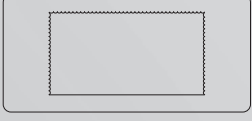

Eyeglasses box

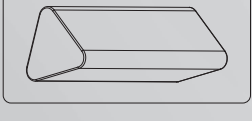

User Manual

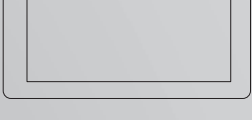

Product overview


Camera




Flash light




Left Button

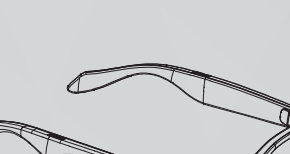


Charging Port

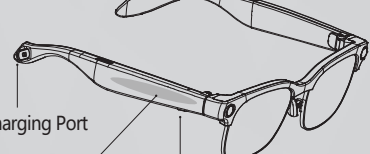

Touch-sensitive Area

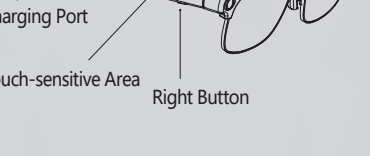

Right Button

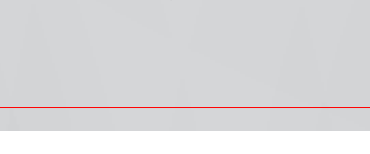

Function

Power on

Hold the power key for 2 seconds until the voice prompt "Power on" is heard

Connection

Download the glory view App, search for device: GloryGlass2; Upon successful binding between the App and the glasses, the blue Led flashes for 2 seconds.

Factory Reset

With the glasses powered on and paired with the App, tap factory reset in the upper right settings menu to restore factory defaults.

Power off

Hold the power button for 3 seconds until until the red indicator flashes for 2 seconds with the voice prompt" power off"

Right button (Red power key)

Single-click: 1.Take photos with shutter sound: Click.
2.Stop video recording if in recording mode with prompt sound: Dong-dong.

Double-click: Start video recording of the camera with prompt sound: Ding-dong.

Left Button

Hold for 2 seconds: Star audio recording with prompt sound: Ding-dong: the front indicator light breathes and flashes.

Single-click: Stop audio recording when in recording mode with prompt sound: Dong-dong.

Double-click: Take photos for image recognition with shutter sound: Click.

If not connected, failure prompt tone: Please connect to the APP

Touch-Controlled Media Control

Double-tap: Play/Pause music
Triple-tap: Next track

Hold for 2 seconds: Activate voice assistant prompt tone：Ding-dong

Single-finger swipe: Adjust volume by sliding forward/backward; slide forward to increase volume; slide backward to decrease volume

Touch call control

Double-tap: 1.Incoming call: Answer
2.During call: Hang up

Press and hold: Incoming call: Reject

Voice Assistant

For wake-up modes, refer to the Voice Assistant instructions in the APP

AI Basic Functions

AI Chat, AI Image Recognition, Multilingual Voice Translation, Meeting Transcription & Summary, Music playback control, live video streaming. More new functions are coming soon...

Indicator Lights

Take photo

White light flashes once, prompt tone: Click

Video recording

White light stays on, start prompt tone: Ding-dong

Audio recording

White light breathes

Charging

Green light breathes; steady green light when fully charged

Low battery (5%)

Red light flashes for 3 seconds, device powers off with prompt tone: Power Off

Safety Instructions

1. Safety Precautions (Must Read)

To ensure your personal safety, device safety and c ompliant use, please read the following specifications in full before using the device

1.1 Shooting Privacy Safety Specifications

This device is equipped with a first-person shooting function and a white privacy indicator light on the front. The privacy light will stay on or flash continuously when taking photos, recording videos, recording audio or performing real-time AI recording to notify surrounding people.Do not use the recording function in confidential places or privacy-sensitive areas. Do not cover, modify or shield the privacy indicator light. Users shall bear all consequences for improper use.

1.2 Eye & Wearing Safety

For long-time wearing and use, take a 10-minute break every 2 consecutive hours to relieve eye strain.Do not stare directly at strong light, harsh sunlight or laser sources to avoid eye injury.This device is not a medical eye-care device and cannot be used for vision correction.

1.3 Driving & Sports Safety

Do not perform complex operations or focus on screen viewing while driving, cycling or engaging in high-speed sports. Only use passive audio functions such as voice broadcast and music playback to ensure travel safety first.

1.4 Charging & Device Safety

Please use certified 5V/1A or 5V/2A chargers. Do not use high-voltage fast chargers or inferior charging devices. The device features IP54 dustproof and splash-proof performance, suitable for daily sweat and rain splashes. Do not immerse, wash or use it underwater.Built-in lithium battery: Do not disassemble, squeeze, puncture or expose the device to high temperatures

1.5 Environmental Compliance Usage

Please strictly abide by local laws and regulations. Take photos and make recordings in a civilized and compliant manner. Do not use the device for illegal activities such as secret photography, eavesdropping, or illegal evidence collection

APP download

App Name: Glory View
Q R



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.