

User Manual

AI Nutriscale Ring0

Model No.: KS33


IMPORTANT SAFEGUARDS

Please read and follow all instructions and safety guidelines in this manual.

- Do not exceed the 11 lb / 5 kg weight capacity, as it will damage the scale. An error indicator will appear on the LED display if the limit is exceeded.
- Do not immerse the scale in water or any liquid. If liquid is spilled on the digital display or buttons, immediately wipe the scale dry with a soft cloth to avoid internal damage.
- Handle with care. This scale is not intended for commercial or heavy-duty use.
- Keep the scale in a cool, dry place. Avoid exposure to damp environments or extreme temperatures.
- Household use only.

GETTING TO KNOW YOUR KITCHEN SCALE

1. PRODUCT DIAGRAM

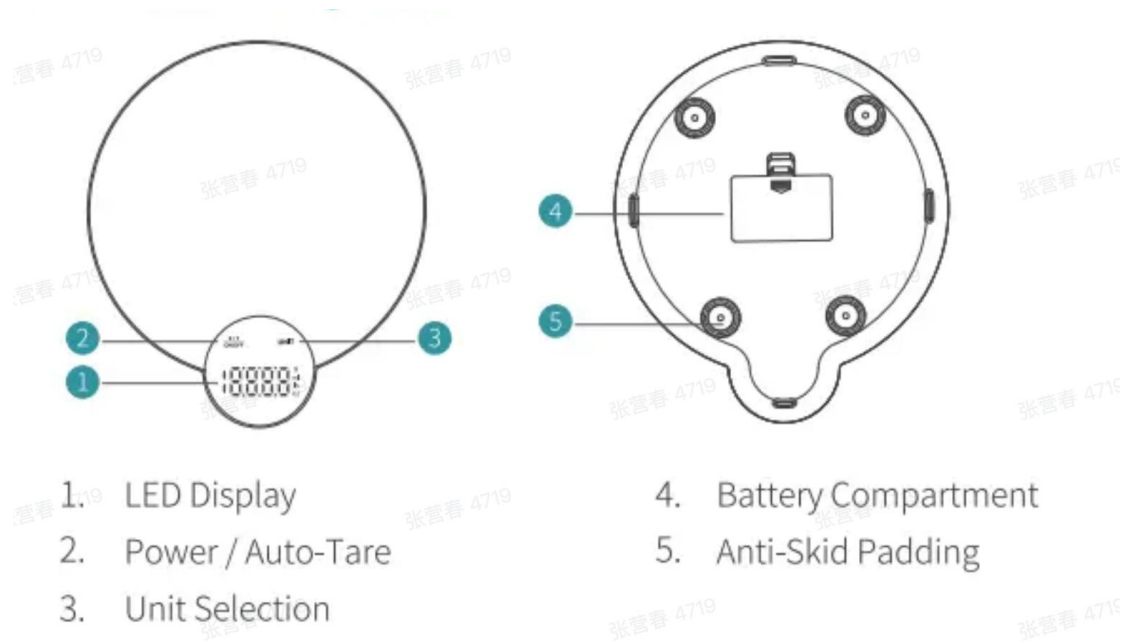

2.SPECIFICATIONS

Weight Capacity	5 kg / 11 lb
Units	g, lb, ml, oz
Increments	1 g
Auto Off	180 seconds
battery	USB charging: Built-in 500mAh rechargeable battery

OPERATING INSTRUCTIONS

App Setup

Note:

• The app is continually being improved and may change over time. If there are any differences, follow the in-app instructions.

1. To download the app, scan the QR code or search “NutriScale” in the Apple App Store® or Google Play Store.



2. Open the app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.
3. Make sure your phone has Bluetooth® turned on
4. Follow the in-app instructions to connect to your smart nutrition scale.

-

Battery

1. Connect the scale to a power source using the provided USB-C cable.
2. The charging indicator will flash, indicating that the scale is charging.
3. Once the charging is complete, the charging indicator will be solid on.

General Operation


Note:

- For accurate results, **always** place the scale on a hard, flat surface, and keep the scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
- When you turn on the scale, choose units, or use the tare function, wait for the display to read “0” before measuring.

1. Place the scale on a flat and level hard surface for measurement.
2. Press the **ON/OFF** button to turn on the scale. Wait until the screen displays zero before measuring.




3. Place the object of measurement on the center of the weighing platform.
4. Allow the scale to adjust to the weight of the object for a few seconds before it displays the final measured reading on the LED screen.

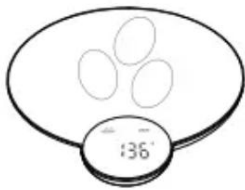


Zero / Tare Function

The tare function allows you to measure objects in a container without having to include the container's weight in the final measurement.

1. Turn on the scale and wait for the screen to display zero. If the screen does not display zero automatically, press the **Z/T** button to auto-adjust to zero.

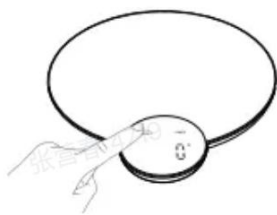

2. Place the desired object which is to be excluded, on the center of the measuring platform.
3. Press the **Z/T** button to tare the current weight of the object. The screen should now display zero.

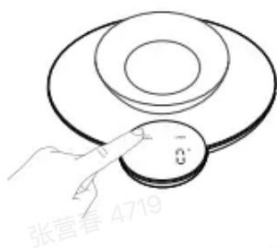

4. Place the desired item(s) to be weighed on the center of the measuring platform or within the tared container to calculate the net weight of the desired item(s).



Unit Conversion

To change the unit of measurement, press the **UNIT** button until the LED display indicates the desired unit of measurement.

Power Off

To conserve battery power, the scale will automatically turn off after 180 seconds of inactivity. Or you can press and hold the "Power" button for 2 seconds to manually turn off the digital scale at any time.

TROUBLESHOOTING

ERROR MESSAGE	REASON	SOLUTION
"Err"	scale overload max. weight of 5kg	Remove the object from the scale to avoid damage
"LO"	Battery power is low. Shutting down soon.	Install new batteries.
The LED light is very dim. Battery power is low.	Battery power is low.	Install new batteries.
Reading is inaccurate.	Incorrect Operation or External Environmental Effects.	Place scale on a level surface and make sure the screen displays "0" before measuring or keep scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
Scale cannot connect to the VeSync app.	The scale is positioned too far from the phone.	Make sure your mobile device is within 30 ft / 10 m of the scale.
	Some Bluetooth devices can only exchange data with one other Bluetooth device at a time.	Make sure the scale is not currently connected to any other phone or app.
VeSync app is not scanning food.	Camera permission is not granted to the app.	Make sure you grant the app permission to use your camera.
	The food in the photo is incomplete.	Confirm that the camera is pointed at the food and the area is well-lit.

If your problem is not listed, please contact Customer Support at support@Ultrean.com.

FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED Radio Frequency Exposure Statement:

This equipment complies with ISED exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

ISED Déclaration d'exposition aux radiofréquences:

Cet équipement est conforme aux limites d'exposition d'ISDE établies pour un environnement non contrôlé. Cet équipement peut être utilisé dans des conditions d'exposition portables.

Shenzhen Faray InfoTech Co.,Ltd.

Room 401, Building, No. 7025, Liuxian Avenue, Xili Community, Xili Street, Nanshan District, Shenzhen, China Block A, Xichuang Technology