

AI Oral Tutor
Instruction Manual



Product Introduction

Main Unit Instructions

- 1. Functions as a portable Bluetooth omnidirectional microphone. Bluetooth-compatible with phones, tablets, PCs for audio calls, serving as an external microphone and speaker for smart devices.
- 2. Paired with the "Joy Audio" APP, it delivers one-on-one immersive oral-English practice with real-time grammar correction. Connect to your phone or tablet via Bluetooth and launch the App for live bilingual exercises. The clip-on, portable design frees kids' hands, enabling direct voice-to-device oral practice.



1

Operating Instructions

Step 1>

Press and hold the power key to turn on the device. The rear indicator flashes blue.

Step 2>

Download and install the APP:

Method 1: Scan the QR code on the package back or manual front for APP installation.

Method 2: Search for "Joy Audio" in app stores to download and install.

Note: Enable required permissions during installation (Microphone, Bluetooth, Location).

Step 3>

APP Pairing: Open the APP and tap Connect Device. Select Bluetooth device "YDB-06" to connect. On some Android phones, confirm pairing in the pop-up window.(Note: If no pop-up appears, perform pairing in phone system Settings.)


Bluetooth Pairing: Go to Settings → Bluetooth on your phone or tablet, then pair with "YDB-06". A voice prompt confirms connection and the indicator turns off. (Note: The Bluetooth name is unmodifiable.)

Step 4>

Usage: Launch the installed APP. Once Bluetooth connection is confirmed, tap the green call icon to start real-time bilingual practice and speak to the device.

2

APP Interface Introduction

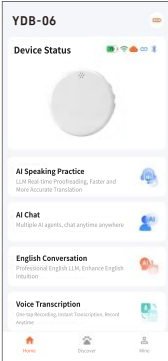

Top-right Icons



- Bluetooth: Blue=Connected, Grey=Disconnected
- App Link: Blue=Connected, Grey=Disconnected
- Network: Green=Connected, Grey=Disconnected
- AI Service: Orange=Active, Grey=Disconnected
- Tap to unbind

3

Status & Check

Tap the Bluetooth icon to view operating status

Tap the permission-management icon to check permissions

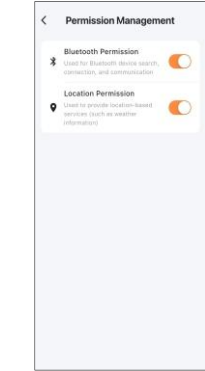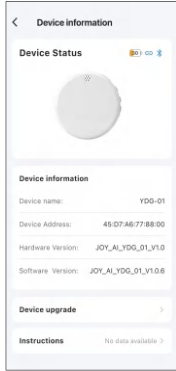

4

Common Functions

1.Oral Practice

Supports real-time two-way multi-language translation for daily chats, business talks, travel and learning scenarios. Without complex operations, it accurately recognizes speech and outputs standard voice translation with synchronized text display for smooth cross-language communication.

2.AI Chat

Powered by dedicated English AI agents with 10 role profiles including listening-speaking trainer, oral evaluator and cross-border conversation assistant. It enables real-time interaction, flexible responses and intelligent error correction for natural, efficient and engaging English learning.

3.English Dialogue


Immersive AI oral training for learners. Provides on-demand one-on-one English conversations, solving problems of no practice partners and rigid expressions, delivering high-simulation oral practice anytime.

4.Audio Transcription

Built on AI speech recognition, it converts real-time audio into text. Integrated with multi-language translation and smart summary, it provides all-in-one "transcription-translation-summary" service to boost efficiency for study, work and creation.

5

Wearing & Clamping

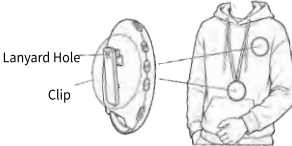

Connect Phone → Download APP → Register




APP Download QR Code

6

Charging

Fully charge before first-time use. Charge promptly when low-power alert appears.



Use 5V/1A USB-A power adapter (not included).


LED Indicator

AI active: Blue LED ON; AI off: Blue LED OFF

Power-on waiting for connection: Blue LED blinks; LED off once connected

Charging (power-off state): Red LED ON; Red LED OFF when fully charged

Package Contents



7

Specifications

- Operating Temp: 0°C-44°C
- Storage Temp: -10°C-55°C
- Humidity: 20%-85% (non-condensing)
- Dimension: 70.5*70*20.5mm (with clip)
- Weight: 40g
- USB: Version 2.0 and above
- Rated Input: DC 5V 400mA
- Wireless Line-of-Sight Range: up to 10m
- Battery Life: up to 8 hours
- Built-in Battery: 600mAh rated capacity
- Wireless Frequency: 2.4GHz band
- Audio Features: 360° pickup, echo cancellation, dynamic noise reduction, AGC, full-duplex call

Safety Information

This device contains built-in rechargeable Li-ion battery.

Do not disassemble, strike, squeeze or throw into fire. Do not immerse in water or liquids.

Use USB adapters with valid safety certification.

If unused for long periods, charge-discharge the battery every 3 months to maintain battery health.

8

Hazardous Substance Content Statement

Component Name	Hazardous Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Cables & Wires	○	○	○	○	○	○
Plastic Housing	○	○	○	○	○	○
PCB Assembly	○	○	○	○	○	○
Speaker	○	○	○	○	○	○
Other Accessories	○	○	○	○	○	○
○ : Substance content below limit specified in GB/T26572 X : Substance content exceeds limit specified in GB/T26572						
Note: 1.PCB Assembly includes printed-circuit boards, components and solder joints. 2.Actual components vary by product model. 3.Environmental-friendly service life: 10 years. Removable parts may carry separate labels. 4.The service life applies only under conditions specified in product manual.						

Manufacturer:

Address:

Postal Code:

Tel:

Website:

9

Warranty Card

Thank you for purchasing our product. Please read the instructions carefully and keep this warranty card properly for better service.

Tips: To protect your rights, please fill in carefully and keep it as maintenance voucher.

Purchase Information

User Name _____
Postal Code _____
Contact Phone _____
Contact Address _____
Product Model _____
Product Code _____
Purchase Date _____
Invoice Number _____
Dealer Name _____

Maintenance Record

Repair Date _____
Fault Description _____
Solution _____
Technician _____

Notes:

- 1.This warranty card must be fully filled and stamped by the authorized dealer. No warranty service will be provided without stamp.
- 2.When the product is used in accordance with user manual, quality-related failures within warranty period entitle you to free repair with this card and valid purchase proof (e.g. invoice). Paid repair service is available after warranty expiry.
- 3.We provide 1-year free warranty from date of sale. If signed contract specifies a different warranty term, the contract shall prevail.
- 4.Please contact your dealer for after-sales support for any product issues.

Free warranty shall NOT apply under any of the following conditions:

- A.Damage caused by failure to follow user-manual instructions
- B.Hardware damage due to improper assembly
- C.Damage from unauthorized modification or self-repair
- D.Damage caused by operating / storing beyond specified environment limits
- E.Damage caused by abnormal external force
- F.Damage caused by natural disasters or force majeure
- G.Failure to present this warranty card and valid purchase proof
- H.Unauthorized removal or damage of tamper-proof label
- I.Other circumstances excluded from free-warranty coverage



These warranty terms are subject to change. Please refer to "Service Policy" on official website for latest version.

Warning:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.