

metabo **HPT**

metabo HPT Tracker Pro 383312M



Item-Nr. 383312M

170 28 9010 - 1125



ENGLISH

Original instructions

The Metabo HPT Tracker Pro is an object finder that helps you find your Metabo HPT tools or personal items ...

... using the Apple Find My app on your iPhone, iPad, iPod touch or Mac, or using the Find Items app on your Apple Watch

... or using the Android - Find Hub app on your Android device.

LET'S GET STARTED

iOS (Apple) - Find My app:

1. **Open the Find My app on your iPhone or iPad, tap + and "Add Other Item (+)".**
2. **While the Find My app is searching, press button 1 (=“metabo HPT” logo on your tracker) once and you will hear a beep.**
3. **After setup, you can locate your Metabo HPT Tracker in the Find My app on your iPhone, iPad, iPod touch, or Mac, and the Find Items app on Apple Watch.**

Android/Google - Find Hub app:

1. **Press button 1 (=“metabo HPT” logo on your tracker) once and place it beside your Android device.**
2. **Wait until the pop-up window appears, then follow the instructions on the screen. If the pop-up window does not appear, visit www.metabo-hpt.com/no-popup**
3. **After setup, you can find the Tracker in the Find Hub app.**

BASIC FEATURES

The Metabo HPT Tracker works exclusively with the Apple Find My network or the Android Find Hub network.

iOS: The Find My network provides an easy, secure way to locate your personal items using the Find My app on your iPhone, iPad, iPod touch or Mac, as well as using the Find Items app on Apple Watch. Simply pair your Metabo HPT Tracker with the Find My app to view it right alongside your Apple devices. If a personal item connected to the Metabo HPT Tracker ever goes missing, use the Find My app to locate it on a map and play a sound if the item is nearby. You can also put your Metabo HPT Tracker in Lost Mode to display a message and a phone number to anyone who might find it.

Android: The Find Hub network from Android offers a simple and secure way to find personal objects – even if you are offline.

Simply pair your Metabo HPT Tracker with the Find Hub app to display it right alongside your Android devices. If an object connected to the Metabo HPT Tracker goes missing, you can locate it on a map and play a sound if it is nearby.

With the help of millions of Android devices worldwide, the Find Hub network helps you find your things quickly and reliably.

ATTACHING THE DEVICE

See illustration on the last page. 1) Unscrew the clip and fasten in a metaBOX. (To disassemble: press the clips towards the tracker using a Phillips head screwdriver.)

2) Secure with a screw. 3) Use double-sided tape or (4) a cable tie to attach the device to an object.

REPLACING THE BATTERY

(Australia: the battery should only be exchanged by Metabo HPT Service.)

See illustration on the last page. This product has a replaceable CR2450 battery that will last up to 3 years. When the battery runs out you can replace it in three simple steps.

Only use the specified battery type: CR2450 (3 V).

1. Unscrew the 4 screws on the front side and remove the base plate.
2. Replace the battery with a new CR2450 type battery. Ensure correct polarity, see the image on the back.
3. Use the 4 screws to screw the base plate back in place.

Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries. and keep them away from children.

FACTORY RESET

How to complete a factory reset:

Case A: if there **is** a Bluetooth connection to the Tracker:

Open the app on your device, tap "Remove object".

Case B: if there **is not** a Bluetooth connection to the Tracker:

1. Open the app on your device, tap "Remove object".
2. Press button 1 for 10 seconds (= "metabo HPT" logo on the Tracker).
3. The tracker will begin to beep in 1-second intervals.
4. Release the button right after you hear the 5th beep.
5. After a successful factory reset you will hear a confirmation sound.

REQUIREMENTS

iOS: To use the Find My-app to locate this item, the latest version of iOS, iPadOS, watchOS or macOS is recommended.

Android: To use the Find Hub app, the latest Android version is recommended.

PRIVACY

iOS: The Apple Find My network uses advanced encryption to ensure that no one else, not even Apple or Metabo HPT can view the location of your Tracker.

Android: The Find Hub network uses advanced encryption to ensure that no one else, not even Google or Metabo HPT can view the location of your Tracker.

Note: Using the Tracker to track a person without their approval is considered a crime in many countries and regions of the world.

SPECIFICATIONS

Range: up to 200 ft (60 m) - line of sight

Temperature range: 5 °F to 131 °F (-15 °C to +55°C)

Modulation method: GFSK

Operating frequency band: 2402-2480 MHz

WARNING

This product is not a toy. Do not ingest. Large metal parts near your mobile device or Tracker can interfere with the Bluetooth signal. Warning! Lithium battery inside. Risk of explosion in case of incorrect use. Please do not expose the product to a direct heat source. Please do not expose the product to any mechanical stress or impact. Do not attempt to disassemble your Tracker (exchanging the battery is permitted. Australia: the battery should only be exchanged by Metabo HPT Service.). You run the risk of electric shock and voiding your warranty.

Even used batteries may cause severe injury or death.

Call a local poison control center for treatment information.

Non-rechargeable batteries are not to be recharged.

Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Ensure the batteries are installed correctly according to polarity (+ and -).

Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

DECLARATION OF CONFORMITY

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC Caution:

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC/IC Radiation Exposure Statement:

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment.

L'appareil est conforme aux limites d'exposition aux rayonnements spécifiées par la FCC/ISED pour les environnements non contrôlés.

WEEE DIRECTIVE & PRODUCT DISPOSAL

Observe national regulations on environmentally compatible disposal and on the recycling of disused devices, packaging and accessories.

Packaging materials must be disposed of according to their labelling in accordance with municipal guidelines. Further information can be found at www.metabo-hpt.com in the "Service" section.

LEGAL APPROVAL

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards Apple, iPad, iPhone, iPod touch, Mac, iPadOS, macOS, watchOS and Find My are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. & other countries and is used under license.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Issued by

Koki Holdings Co., Ltd.

Shinagawa Intercity Tower A, 15-1, Konan 2-chome,
Minato-ku, Tokyo 108-6020, Japan

Distributed by


Koki Holdings America Ltd.

1111 Broadway Ave,
Braselton, Georgia 30517
www.metabo-hpt.com


Koki Holdings America Ltd. Canadian Branch

3405 American Drive, Units 9-10,
Mississauga, ON, L4V 1T6

en Attaching the device
fr Fixation
es Fijar

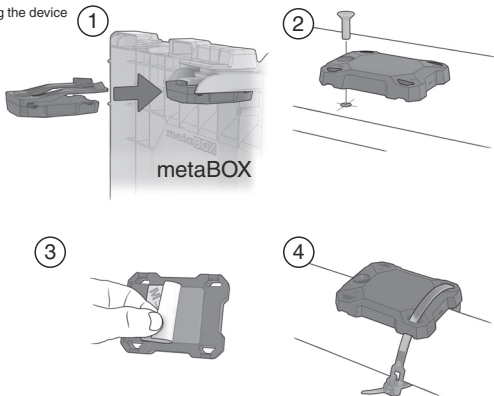

en Replacing the battery. (Not Australia)
fr Remplacement de la pile
es Cambiar pila

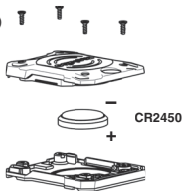

metabo **HPT**