

User's Guide [v0.2 2015/11/18](#)

Pet Training System

Model:PBT-100

The features described in this User's Guide are subject to modifications without prior notice.

Welcome . . .

To Pet-1st Remote Training & No Bark Control System!

Thank you for purchasing the PET-1st PBT-100. Your new set has two features, one will provide a quick and effective means of solving common problem behaviors and reinforcing basic obedience commands your pet already knows, and the other help you train your dog to stop the excessive barking.

Please retain your original dated sales receipt for your records. For warranty service of your PET-1st product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

US and Canada x-xxx-xxx-xxxx

Email: support@Pet1st.com


This User's Guide provides you with all the information you need to get the most from the product.

Please read and follow the instructions in this User's Guide along with the Safety Instructions on page 6 before you using this product.

Got everything?

- 1 x Pet Collar Unit (with CR2450 button battery installed)
- 1 x Collar Strap
- 1 x Remote controller(with LR2302 battery installed)
- 1 x Tightening Tool for Metal Contacts
- 2 pairs of Collar Metal Contacts (Short and Long)

Overview of the PBT-100 Collar Unit

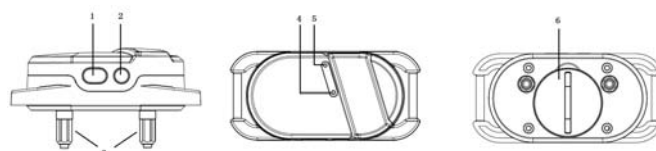

1. Mode Key

Press and hold to toggle between remote training mode and bark control mode.

2. Power Key

Press and hold to power the unit On/Off.

3. Metal Contacts

Deliver electric shocks as correction signal for dog.

4. MIC input

Microphone input for bark detection.

5. Indicator LED

The LED lights up in green for 3 seconds when the unit is powered on bark control mode and flashes slowly during standby.

The LED lights up in orange for 3 seconds when the unit is powered on remote training mode and flashes


slowly during standby.

The LED flashed slowly in red when battery is low.

The LED flashes alternately and quickly in green and red when delivering static correction.

6. Battery Cover

Overview of the PBT-100 Remote Trainer

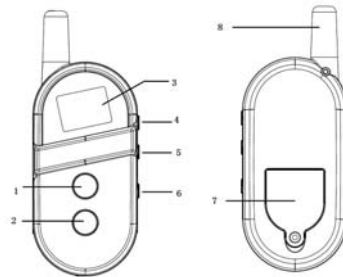

1 Static Correction Key

Remote training mode: Press and hold to make Pet Collar to deliver correction signal

Bark control mode: Hold for 3 seconds to confirm correction level used by bark control mode.

2 Tone key

Remote mode: Press to make pet collar unit beep.

Bark control mode: Invalid.

3 Display screen

Show current mode and correction level.

4 Mode key

Hold for 1 second to toggle between remote training mode and bark control mode.

5 Add key

Increase current correction level


6 Sub key

Decrease current correction level.

7 Battery cover

8 Antenna

Symbols on the Remote Trainer

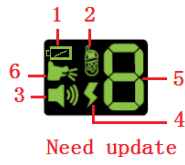

Number	Description
1	Battery low icon, flashes when battery is low.
2	Remote training mode icon, only lighted up in remote training mode
3	Tone icon, it is lighted up when sending beep signal
4	Shock icon, it blinks when sending correction shock signal.
5	Number of current correction level
6	Bark control mode icon, only lighted up in bark control mode

Table 1 Display Screen Icons

How the PBT-100 works

The Training System comes with a Remote Trainer that is paired with the Pet Collar Unit. There are two modes for PBT-100, named remote training mode and bark control mode.

In remote training mode, when push the **STATIC CORRECTION KEY** on the Remote Control Unit, a signal is sent to the Pet Collar Unit, which delivers static correction to your dog to assist you with shaping and modifying its behavior. When push the **TONE KEY**, a tone is sent to the Pet Collar Unit. The tone function is good for giving your dog an opportunity to respond to your commands prior to pressing **STATIC CORRECTION KEY**.

The bark control mode, is specially designed as an easy and fair way to reduce excessive barking behavior of your dog. It uses two sensor to detect both bark sounds and vibration from the vocal cord of dog, which provides a high reliability on bark detection. At the beginning of training routine, your dog is allowed to have about five seconds of free barking time, during which only warning beep will trigger. Should your dog continue to bark, the Pet Collar Unit will administer a brief level of static correction that you have selected, ranging in nine levels, from very gentle to firm to match your dog's personality. If your dog is quiet for two minutes, current training routine completes. The next time your dog barks, it start another training routine, once again, your dog is offered the same "free" barking time at the beginning of training. Our goal is to limit excessive barking, not to attempt to eliminate or suppress all barking.

Important guidelines when using the PBT-100

- Included in your PBT100 are Metal Contacts in three different lengths (short, medium and long) that deliver static correction to your dog. Choose the appropriate length for your dog's hair coat. The PBT-100 is shipped with medium Metal Contacts that are suitable for dogs with medium hair coats. *If your dog has dense coat or undercoat, use one of the longer Metal Contacts included with the product.*
- Proper fit is critical to the performance and effectiveness of the PBT-100. If the fit is too loose, the Pet Collar Unit will not be able to get sufficient contact with the skin to detect barking and deliver static correction. If the fit is too tight, it will irritate your dog's skin.
- Tighten the Pet Collar Unit high on your dog's neck, tight enough that you can get two fingers between the collar strap and your dog. It should not be able to rotate around the neck.
- Do not make your dog wear the Pet Collar Unit for more than 12 hours continuously to avoid skin irritation.
- Do not connect a leash to the Pet Collar Unit as this might pull the Metal Contacts too

tight against your dog's neck.

- When connecting a separate collar for the leash, make sure that it does not add pressure on the Pet Collar Unit.
- Check the contact area on your dog's neck for signs of irritation. If there is a rash or sore, discontinue use until the skin is completely healed. See a veterinarian if the condition persists.

Table of contents

1.	Safety Instructions.....	9
	WARNING:.....	9
	RISK OF SKIN DAMAGE	9
2.	Getting Started	10
3.	Using the PBT-100	15
4.	When Using the PBT-100 the First Few Times	19
5.	Disposal of the Device (Environment).....	19
6.	Cleaning and Care.....	19
7.	Frequently Asked Questions	21
8.	Troubleshooting.....	22
9.	General Information	22
	1.	

1. Safety Instructions



WARNING:

DO NOT USE ON AGGRESSIVE DOGS - This product is not for use on aggressive dogs. If you are not sure if this product is suitable for your dog, please consult a certified trainer or your veterinarian.

RISK OF SKIN DAMAGE

- Determine a proper fit of the Pet Collar Unit on your dog's neck. If worn for too long or the fit is too tight, it may cause skin damage.
- Check your dog's neck area daily for signs of skin irritation.
- Discontinue use immediately if a rash or sore is found on the neck area.
- AVOID wearing for more than 12 continuous hours a day.
- Clean your dog's neck area and the Metal Contacts on the Pet Collar Unit with a soft damp cloth weekly.

WARNING

The PBT-100 is suitable for use on healthy, non-aggressive dogs to control excessive barking when used as described in this User's Guide. Therefore, always read the instructions in this User's Guide carefully before using the product.

- This product is not a toy. Do not allow children to play with it.
- This product is not a substitute for responsible supervision of your dog.
- Test this product and all its functions so that you are familiar with it prior to actual use.
- Only use a battery of the same type. This product uses a replaceable battery (CR2450).
- Keep this User's Guide for future reference.

CAUTION

There is danger of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to their instructions.

2. Getting Started

Insert Batteries on the Remote Trainer


The Remote Trainer uses 1x LR2032-sized batteries.



2.1 Insert and Remove Battery on the Pet Collar Unit

IMPORTANT

Do not install the battery while the Pet Collar Unit is strapped to your dog. The Pet Collar Unit uses a replaceable battery (CR2450).

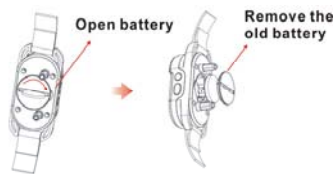

- 1.** Turn the battery compartment cover to the unlock position as shown above to release and remove the cover.
- 2** Place the battery into the collar with positive pole (+) facing upwards the battery door
- 3** Close the battery compartment cover and turn it to the lock position as shown above to lock it.

Battery Life

The average battery life of collar unit is up to 3 months, depending on how often you use them. The Indicator LED lights up in red when battery is low. To conserve battery life, press and hold the POWER KEY  to power off the Pet Collar Unit when it is not in use.

2.2 Fit the Pet Collar Unit on your Dog's Neck

IMPORTANT

For effective and reliable operation of the PBT-100, the Pet Collar Unit must be properly placed and fitted on your dog's neck with suitable Metal Contacts that are long enough to touch the dog's skin on the underside of its neck (not its hair).

1. Make sure that the Pet Collar Unit is powered off.
Press and hold the POWER KEY  to power it off.
2. Have your dog stand in a balanced position on a flat even surface.
3. Put the strap around your dog's neck, measure the proper strap length for your dog.
4. Adjust the length of strap according previous measuring.
5. Put the strap over your dog's neck, centering the Pet Collar Unit underneath its neck and making sure that the logo is upright facing you.
6. Try to buckle up the strap. If the tightness is not well, buckle down it, adjust the strap length again.
7. Check to ensure that the Pet Collar Unit is in the center underneath the neck of your dog.
8. Check the fit again after your dog has worn the Pet Collar Unit for several minutes or as your dog gets more comfortable with it.




NOTE

The Pet Collar Unit should fit snugly on your dog's neck such that you can only fit two fingers underneath it. It should not be able to rotate around the neck. If necessary, trim some of your dog's hair where the Pet Collar Unit makes contact with the skin to allow for consistent performance.

2.3 Trim Away Excess Strap Length

After you are satisfied with the fit of the Pet Collar Unit, you may want to trim away some of the excess nylon strap.

1. Mark the desired strap length with a pen. However, you may want to allow for growth especially when your dog is young or may grow a thicker winter coat.
2. Remove the Pet Collar Unit from your dog and trim away excess strap length. To seal the end of the strap, hold it about 1/4 inch away from a candle flame or lighter until the edge melts away.

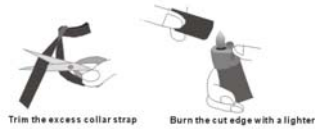

PLEASE USE CAUTION.

2.4 Change Metal Contacts

Included with the PBT-100 are Metal Contactors of three different length (short, medium and long) that deliver static correction to your dog. Choose the metal contactor of appropriate length for your dog's hair coat. If your dog has dense coats or undercoats, use one of the longer Metal Contacts included with your PBT-100.

Using your fingers twist the Metal Contacts counter anti-clockwise to loosen and remove them. Insert another pair of Metal Contacts of the appropriate length and gently twist clockwise with your fingers to tighten them.

IMPORTANT

Make sure that you power off the Pet Collar Unit before replacing the Metal Contacts (see "Powering On/Off the Pet Collar Unit" on page 12). Make sure that the Metal Contacts are securely fastened. Do not over tighten.

3. Using the PBT-100

There are two modes on PBT-100, called remote training mode and bark control mode.

On the collar side, these mode is distinguished by the LED color when powered up. The orange power led mean remote training mode, and the green power led mean bark control mode. You can hold MODE key for 1 seconds to toggle between the two modes after power up.

On the remote side, the two mode is indicated by icons (please refer [page 5](#) Display Screen Icons). You can hold remote unit MODE key for 1 seconds to select mode you wanted.

Hold POWER KEY for 1 second will toggle the collar unit on/off. When power on/off the collar, a beep tone would be heard, and the beep tone for power off is higher than tone for power on.

NOTE

After powering off the Pet Collar Unit, PBT-100 retains the last level of static correction that your dog responded to, and use that correction level the next time the Pet Collar Unit is powered on.

3.1 General concepts

The **remote training mode**, a mode allow you to send correction signal (static electric shock) at your will by remote unit on hand.

The **bark control mode**, a mode that deliver correction signal just when your dog barks. It works automatically according the predefined training strategy (Details in [page 4](#) How the PBT100 works). This mode is target for controlling excessive dog barks.

The **Correction level**, which decides the strength of electric shock for correction. PBT-100 contains nine correction levels from 1 to 9, and a level 0 for just deliver beep tones. The higher level it is, the stronger correction signal it delivers.

NOTE *It is important to find proper correction level for your dog. Correction signal of low level maybe not noted by your dog, and a correction signal of too high level would make your dog be startled.*

3.2 Training Your Dog through remote training mode

1 Enter remote training mode

Press and hold the POWER KEY for 1 seconds on the Collar Unit to power it on. The Indicator LED will lights up. If current mode is not remote training mode (the color of power led is not orange), hold MODE key for 1 seconds to enter remote training mode. In this mode, the orange indicator LED will lights up for 3 seconds, and then flashes once per 5 seconds.

For the remote unit, if the screen of is closed, press any key to wake up it, and then hold MODE key for 1 second to remote training mode if necessary.

2 Deliver Correction

Press Add/Sub key on the right side of remote unit to select correction level for your dog, then press and hold SHOCK KEY to send command to collar, which would deliver electric shocks as the correction signal, and the shock icon will blink at same time. The indicator LED on collar will display red and green alternately when issuing electric shock.

3 Deliver Tone

Press TONE KEY on your [Remote Trainer](#), it would delivers a beep tone to the Pet Collar Unit, at the same time TONE ICON will light up. You can press this key for a few seconds to give your dog an opportunity to respond to known commands before pressing the STATIC CORRECTION KEY.

3 Exit training mode

The remote unit would sleep if no operation within 30 seconds, and, in this mode, the collar unit will power off automatically when no signal received from remote unit for 15 minutes. You need do nothing to stop training. For power saving case, you should power off the collar unit manually by hold collar power key for 1 seconds.

You can also hold mode key on remote unit for 1 second and turn to bark control mode. The collar unit received the mode signal and changed to bark control mode at the same time.

Note:

The remote control is only valid when the collar is powered on within remote training mode or during the bark control mode setting time (see page 10).

The maximum duration you can deliver static correction continuously is 30 seconds. It is not encouraged to continuously deliver correction signal, for it consume much more power. Since your dog is not sensitive enough to current correction level, select a higher correction level would be better.

3.3 Work on bark control mode

Enter bark control mode

Press and hold the POWER KEY for 1 seconds on the Collar Unit to power it on. The Indicator LED will lights up for 3 seconds. If current mode is not bark control mode (the color of power led is not green), hold MODE key for 1 seconds to enter bark control mode. ***When the collar just enter bark control mode, there are 30 seconds named setting time for setting correction level for it, during which, the green led flash once per 1 seconds, and the collar can accept correction level setting and mode select signal from remote unit.***

If the 30 seconds expired, the collar start to work normally, the green led flashes once per 5 seconds and the collar can't be controlled by remote unit any more.

Set correction level for bark control mode

If the screen of remote unit is closed, press any key to wake up it, and then hold MODE key for 1 second to select bark control mode on remote side.

You can only set the bark control correction level when the collar unit is within the **setting time**, which is first 30 seconds after enter bark control mode.

Press Add/Sub key to change correction level you wanted showed on screen, and then hold SHOCK KEY for 3 seconds to confirm the setting. The collar unit will beep on success setting it. The setting would be stored, and be remained although the battery has been removed.

Trigger

When a dog bark detected, then the collar is triggered, the indicator LED on collar will display red and green alternately, the correction signal, beep tone or electric shock is delivered at the same time, which depends on the predefined train routine (see page 4)

"Free" Bark Duration

Your dog is allowed five seconds of "free" barking time, during which just warning beep will trigger. Should your dog continue to bark, the Pet Collar Unit will administer a static correction at the level that you have selected.

3.4 Low battery

When collar unit battery is low, the flashing power indicator led becomes red. When remote unit battery is low, the BATTERY LOW IOCN would blink.

4. When Using the PBT-100 the First Few Times

Dogs learn and adapt at different speeds. It may take several times for your dog to understand the purpose of the Pet Collar Unit. After a couple of days wearing the Pet Collar Unit, your dog will learn to relax and reduce its barking behavior. However, please remain consistent in your use of the Pet Collar Unit even after you noticed a reduction in your dog's barking.

Do not leave your dog alone when using the PBT-100 the first few times.

As the static correction from the Pet Collar Unit may be startling to some dogs, stay around your dog after placing the Pet Collar Unit on its neck for the first few times.

Reward your dog with treats, play and praise when it is not barking.

5. Disposal of the Device (Environment)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area. Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

6. Cleaning and Care

NOTE

Remove the battery and discharge the Pet Collar Unit before touching the Metal Contacts.

Cleaning and care

- Check Metal Contacts for tightness weekly.
- Clean Metal Contacts with alcohol weekly.

- Check your dog's neck area for irritation and wash neck weekly.
 - Every effort has been made to ensure high standards of reliability of yourPBT-100.
- However, if something does go wrong, please do not try to repair it yourself - contact Customer Service for assistance.

7. Frequently Asked Questions

Will the PBT-100 be effective on my dog?

- The PBT-100 Training System is designed to be a convenient and effective training device on all healthy breeds and sizes. However, it should not be used on aggressive dogs. And the Bark Control System of PBT-100 is best used on dogs that bark excessively.

• Will the barking from another dog trigger the sensor on the PBT-100 bark control mode?

- No. The sensor will trigger only when the vibration of the vocal chords matches the barking sound.

Is the correction shock harmful to dog?

- We usually feel a static electric shock in our lives, such as when we take off shirt in winter, when walk barefoot across a carpeted floor and feel a small shock after touching a doorknob. Static shock does not hurt, but it does startle us. As such, the static correction delivered to your dog through our PBT-100 is totally harmless and does not cause any damaging effect.

Will my dog stop barking completely?

- No. The PBT-100 bark control mode is specifically designed to reduce or discourage excessive barking behavior, but not eliminate barking all together.

My PBT-100 beeps in bark control mode, but my dog keeps barking (does not seem to respond to the static correction).

- Tighten the Pet Collar Unit and/or trim your dog's hair where the Metal Contacts touch its neck to ensure good skin contact.
- Replace the battery.
- If your dog still does not respond, contact Customer Service at x-xxx-xxx-xxxx.

8. Troubleshooting

When your dog does not seem to respond to the Static Correction

- Make sure that the Pet Collar Unit is properly fitted on your dog. Loosely fitted collar will affect performance. For proper fit, the collar should be snug yet loose enough to allow two fingers to fit between the strap and your dog's neck.
- Make sure that there is good skin contact where the Metal Contacts touch the neck area. If necessary, trim your dog's hair to ensure good contact.
- Check if the battery has drained out.
- If you are certain that your dog is feeling the static correction, however is still not responding, try the next level higher (see "Select Level of Static Correction" on page xx).
- If your dog still does not respond, contact Customer Service at x-xxx-xxx-xxxx.

The power indicator LED of collar turns to be red, what happened?

The battery is low, you need replace it by new one.

The collar unit somehow powered off or power off when it just power up

The battery is too low to work normally. Please replace the battery.

The collar unit does not response to remote unit

Make sure the collar unit is powered on, and is in remote training mode or within **setting time** of bark control mode. If you have more than one pairs PBT-100 on hand, make sure the remote unit and the collar unit is the original paired ones.

9. General Information

If your product is not working properly...

1. Read this User's Guide.
2. Contact Customer Service:

US and Canada x-xxx-xxx-xxxx

Email: support@xxxxxx.com

Consumer Products and Accessories Limited Warranty

Thank you for purchasing this PET-1st branded product manufactured under license by
xxxxx Electronics International LTD ("xxxxx").

What Does this Warranty Cover?

Subject to the exclusions contained below, xxxxxx warrants that this PET-1st branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will xxxxx do?

xxxxxx or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL PET-1st OR XXXXXX BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	One (1) year from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	Ninety (90) days from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of PET-1st or XXXXX, are excluded from coverage.

Use of Non- PET-1st branded Products and Accessories. Defects or damage that result from the use of Non- PET-1st branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than PET-1st, xxxxx or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non- **PET-1SM** branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada x-xxx-xxx-xxxx

Email: support@xxxx.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to xxxxx Authorized Repair Centre. To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and xxxxx regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by xxxxx or representations made by any agent employee or staff of xxxxx, that may have been made in connection with the said purchase.

Manufacture Date: as the serial number (please open the battery cover, it is shown on the inside of the device.)

FCC ID: LPV-PBT100 IC: 9724A-PBT100

IC warning:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. le dispositif de a été évalués à répondre général rf exposition exigence.

FCC NOTE:
FCC Part 15.19 Warning Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

FCC Part 15.21 Warning Statement

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part 15.105 Warning Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Technical Specifications

Power CR2450 Lithium Battery 3.0V

Compliance FCC Part 15C, RSS-210

Water resistance IP54

Manufactured, distributed or sold by
xxxx Electronics International LTD.,
official licensee for this product.
PET-1st and the Stylized PET-1st Logo,
are trademarks or registered trademarks
of Motorola Trademark Holdings, LLC,
and are used under license. All other
trademarks are the property of their
respective owners.
© 2014 PET-1st
All rights reserved.

Version 0.1

Printed in China