



SAR Evaluation Report

in accordance with the requirements of
FCC Report and Order: ET Docket 93-62, and OET Bulletin 65 Supplement C

for

802.11a/b/g Wireless LAN Cardbus Adaptor

MODEL: CB-500AG

FCC ID: NKRCB500AG

March 21, 2003

REPORT NO: 03T1781-3

Prepared for

**Wistron NeWeb Corporation
No. 10-1, Li-Hsin Road 1
Science-Based Industrial Park
Hsinchu, Taiwan, R. O. C.**

Prepared by

**COMPLIANCE CERTIFICATION SERVICES
561F MONTEREY ROAD
MORGAN HILL, CA 95037 USA
TEL: (408) 463-0885**



CERTIFICATE OF COMPLIANCE (SAR EVALUATION)**Date of Tests:** March 19 - 21, 2003**Report No:** 03T1781-3

APPLICANT:	Wistron NeWeb Corporation No. 10-1, Li-Hsin Road I Science-Based Industrial Park Hsinchu, Taiwan, R.O.C.
MODEL:	CB-500AG
FCC ID:	NKRCB500AG
DEVICE CATEGORY:	PORTABLE DEVICES
EXPOSURE CATEGORY:	GENERAL POPULATION/UNCONTROLLED EXPOSURE

Test Sample is a: Production unit

Modulation type: Direct Sequence Spread Spectrum (DSSS)

Operating mode: Maximum continuous output

Tx Frequency: 2412 – 2462 MHz

Max. O/P Power 802.11b – 19.86 dBm
(Conducted): 802.11g – 20.65 dBm

Max. SAR (1g): Max. SAR (mW/g)

11b / 11g	Host devices
0.856 / 0.736	Compaq
1.19 / 1.11	Toshiba
0.837 / 0.698	IBM

Application Type: Certification

FCC Rule Part(s): §15.247



Note: CCS tested on modes 802.11b/g only, the 802.11a was tested on other facility.

This wireless portable device has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC OET 65 Supplement C (released on 6/29/2001 see Test Report).

I attest to the accuracy of data. All measurements reported herein were performed by me or were made under my supervision and are correct to the best of my knowledge and belief. I assume full responsibility for the completeness of these measurements and vouch for the qualifications of all persons taking them.



Steve Cheng
EMC Engineering Manager

TABLE OF CONTENT

1.	EUT DESCRIPTION	4
2.	REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC	5
3.	DOSIMETRIC ASSESSMENT SYSTEM	5
3.1.	MEASUREMENT SYSTEM DIAGRAM	6
3.2.	SYSTEM COMPONENTS.....	7
4.	EVALUATION PROCEDURES.....	9
5.	MEASUREMENT UNCERTAINTY.....	12
6.	EXPOSURE LIMIT	13
7.	MEASUREMENT RESULTS.....	14
7.1.	SYSTEM VALIDATION.....	14
7.2.	TEST LIQUID CONFIRMATION	15
7.3.	EUT TUNE-UP PROCEDURES.....	16
7.4.	EUT SETUP PHOTOS.....	17
7.5.	SAR MEASUREMENT RESULTS.....	20
8.	EUT PHOTOS	26
9.	EQUIPMENTS LIST & CALIBRATION STATUS.....	28
10.	REFERENCES.....	29
11.	ATTACHMENTS.....	30

1. EUT DESCRIPTION

APPLICANT:	Wistron NeWeb Corporation No. 10-1, Li-Hsin Road I Science-Based Industrial Park Hsinchu, Taiwan, R.O.C.
MODEL:	CB-500AG
FCC ID:	NKRCB500AG
DEVICE CATEGORY:	PORTABLE DEVICES
EXPOSURE CATEGORY:	GENERAL POPULATION/UNCONTROLLED EXPOSURE

Test Sample is a: Production unit

Modulation type: Direct Sequence Spread Spectrum (DSSS)

Operating mode: Maximum continuous output

Tx Frequency: 2412 – 2462 MHz

Max. O/P Power 802.11b – 19.86 dBm

(Conducted): 802.11g – 20.65 dBm

Max. SAR (1g): Max. SAR (mW/g)



<u>11b / 11g</u>	<u>Host devices</u>
0.856 / 0.736	Compaq
1.19 / 1.11	Toshiba
0.837 / 0.698	IBM

Application Type: Certification

FCC Rule Part(s): §15.247

Host Device (s):	<u>Manufactured</u>	<u>Model Name</u>	<u>Serial Number</u>
	Compaq	Presario 1500	1V31LDLZ20PG
	Toshiba	TECRA 8200	51212942PU
	IBM	2659	AK-VND0G

- ¹ Specific Absorption Rate (SAR) is a measure of the rate of energy absorption due to exposure to an RF transmitting source (wireless portable device).
- ² IEEE/ANSI Std. C95.1-1992 limits are used to determine compliance with FCC ET Docket 93-62.

2. REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC

The US Federal Communications Commission has released the report and order "Guidelines for Evaluating the Environmental Effects of RF Radiation", ET Docket No. 93-62 in August 1996 [1]. The order requires routine SAR evaluation prior to equipment authorization of portable transmitter devices, including portable telephones. For consumer products, the applicable limit is 1.6 mW/g for an uncontrolled environment and 8.0 mW/g for an occupational/controlled environment as recommended by the ANSI/IEEE standard C95.1-1992 [6]. According to the Supplement C of OET Bulletin 65 "Evaluating Compliance with FCC Guide-lines for Human Exposure to Radio frequency Electromagnetic Fields", released on Jun 29, 2001 by the FCC, the device should be evaluated at maximum output power (radiated from the antenna) under "worst-case" conditions for normal or intended use, incorporating normal antenna operating positions, device peak performance frequencies and positions for maximum RF energy coupling.


3. DOSIMETRIC ASSESSMENT SYSTEM

These measurements were performed with the automated near-field scanning system DASY4 from Schmid & Partner Engineering AG (SPEAG). The system is based on a high precision robot (working range greater than 0.9 m) which positions the probes with a positional repeatability of better than ± 0.02 mm. Special E- and H-field probes have been developed for measurements close to material discontinuity, the sensors of which are directly loaded with a Schottky diode and connected via highly resistive lines to the data acquisition unit. The SAR measurements were conducted with the dosimetric probe ET3DV6 SN: 1577 (manufactured by SPEAG), designed in the classical triangular configuration [3] and optimized for dosimetric evaluation. The probe has been calibrated according to the procedure described in [7] with accuracy of better than $\pm 10\%$. The spherical isotropy was evaluated with the procedure described in [8] and found to be better than ± 0.25 dB. The phantom used was the SAM Twin Phantom as described in FCC supplement C, IEEE P1528 and EN50361.

The Tissue simulation liquid used for each test is in according with the FCC OET65 supplement C as listed below.

Ingredients (% by weight)	Frequency (MHz)									
	450		835		915		1900		2450	
Tissue Type	Head	Body	Head	Body	Head	Body	Head	Body	Head	Body
Water	38.56	51.16	41.45	52.4	41.05	56.0	54.9	40.4	62.7	73.2
Salt (NaCl)	3.95	1.49	1.45	1.4	1.35	0.76	0.18	0.5	0.5	0.04
Sugar	56.32	46.78	56.0	45.0	56.5	41.76	0.0	58.0	0.0	0.0
HEC	0.98	0.52	1.0	1.0	1.0	1.21	0.0	1.0	0.0	0.0
Bactericide	0.19	0.05	0.1	0.1	0.1	0.27	0.0	0.1	0.0	0.0
Triton X-100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	36.8	0.0
DGBE	0.0	0.0	0.0	0.0	0.0	0.0	44.92	0.0	0.0	26.7
Dielectric Constant	43.42	58.0	42.54	56.1	42.0	56.8	39.9	54.0	39.8	52.5
Conductivity (S/m)	0.85	0.83	0.91	0.95	1.0	1.07	1.42	1.45	1.88	1.78

3.1. MEASUREMENT SYSTEM DIAGRAM

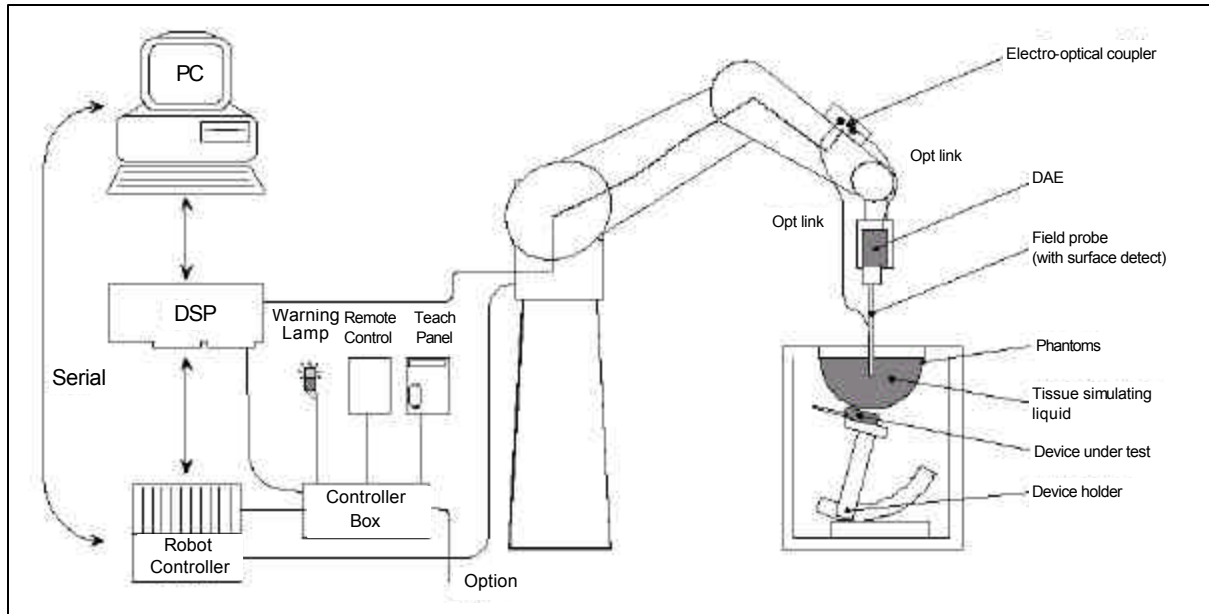

The DASY4 system for performing compliance tests consist of the following items:

1. A standard high precision 6-axis robot (Stäubli RX family) with controller and software.
2. An arm extension for accommodating the data acquisition electronics (DAE).
3. A dosimetric probe, i.e., an isotropic E-field probe optimized and calibrated for usage in tissue simulating liquid. The probe is equipped with an optical surface detector system.
4. A data acquisition electronic (DAE), which performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is battery powered with standard or rechargeable batteries. The signal is optically transmitted to the EOC.
5. A unit to operate the optical surface detector, which is connected to the EOC.
6. The Electro-optical coupler (EOC) performs the conversion from the optical into a digital electric signal of the DAE. The EOC is connected to the PC plug-in card.
7. The functions of the PC plug-in card based on a DSP is to perform the time critical task such as signal filtering, surveillance of the robot operation fast movement interrupts.
8. A computer operating Windows 95 or larger
9. DASY4 software
10. Remote control with teaches pendant and additional circuitry for robot safety such as warning lamps, etc.
11. The SAM phantom enabling testing left-hand and right-hand usage.
12. The device holder for handheld EUT.
13. Tissue simulating liquid mixed according to the given recipes (see Application Note).
14. System validation dipoles to validate the proper functioning of the system.


3.2. SYSTEM COMPONENTS

ET3DV6 Probe Specification

Construction Symmetrical design with triangular core
Built-in optical fiber for surface detection System
Built-in shielding against static charges
Calibration In air from 10 MHz to 2.5 GHz
In brain and muscle simulating tissue at
Frequencies of 450 MHz, 900 MHz and
1.8 GHz (accuracy $\pm 8\%$)
Frequency 10 MHz to > 6 GHz; Linearity: ± 0.2 dB
(30 MHz to 3 GHz)
Directivity ± 0.2 dB in brain tissue (rotation around probe axis)
 ± 0.4 dB in brain tissue (rotation normal probe axis)
Dynamic 5 mW/g to > 100 mW/g;
Range Linearity: ± 0.2 dB
Surface ± 0.2 mm repeatability in air and clear liquids
Detection over diffuse reflecting surfaces.
Dimensions Overall length: 330 mm
Tip length: 16 mm
Body diameter: 12 mm
Tip diameter: 6.8 mm
Distance from probe tip to dipole centers: 2.7 mm
Application General dosimetric up to 3 GHz
Compliance tests of mobile phones
Fast automatic scanning in arbitrary phantoms



Photograph of the probe

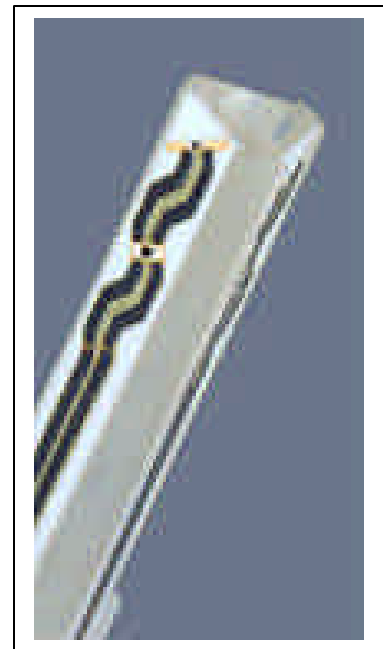

Inside view of
ET3DV6 E-field Probe

The SAR measurements were conducted with the dosimetric probe ET3DV6 designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe is constructed using the thick film technique; with printed resistive lines on ceramic substrates. The probe is equipped with an optical multi-fiber line ending at the front of the probe tip. It is connected to the EOC box on the robot arm and provides an automatic detection of the phantom surface. Half of the fibers are connected to a pulsed infrared transmitter, the other half to a synchronized receiver. As the probe approaches the surface, the reflection from the surface produces a coupling from the transmitting to the receiving fibers. This reflection increases first during the approach, reaches maximum and then decreases. If the probe is flatly touching the surface, the coupling is zero. The distance of the coupling maximum to the surface is independent of the surface reflectivity and largely independent of the surface to probe angle. The DASY4 software reads the reflection during a software approach and looks for the maximum using a 2-nd order fitting. The approach is stopped when reaching the maximum.

E-Field Probe Calibration Process

Each probe is calibrated according to a dosimetric assessment procedure described in [6] with accuracy better than $\pm 10\%$. The spherical isotropy was evaluated with the procedure described in [7] and found to be better than $\pm 0.25\text{dB}$. The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested.

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies below 1 GHz, and in a waveguide above 1 GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity and at the proper orientation with the field. The probe is then rotated 360 degrees.

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium correlates to temperature rise in dielectric medium. For temperature correlation calibration a RF transparent thermistor-based temperature probe is used in conjunction with the E-field probe.


SAM Phantom

The SAM Phantom V4.0 is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is in compliance with the specification set in IEEE P1528 and CENELEC EN50361. The phantom enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allow the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot.

Shell Thickness: $2 \pm 0.2 \text{ mm}$

Filling Volume: Approx. 25 liters

Dimensions (H x L x W): 810 x 1000 x 500 mm

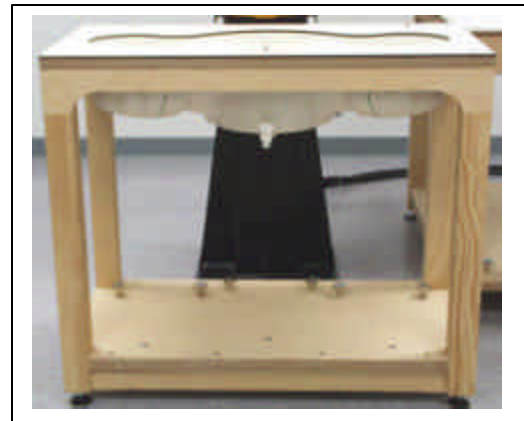


SAM Phantom

Device Holder for Transmitters

In combination with the Generic Twin Phantom V3.0, the Mounting Device enables the rotation of the mounted transmitter in spherical coordinates whereby the rotation points is the ear opening. The devices can be easily, accurately, and repeatedly positioned according to the FCC and CENELEC specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).

* Note: A simulating human hand is not used due to the complex anatomical and geometrical structure of the hand that may produced infinite number of configurations [10]. To produce the worst-case condition (the hand absorbs antenna output power), the hand is omitted during the tests.

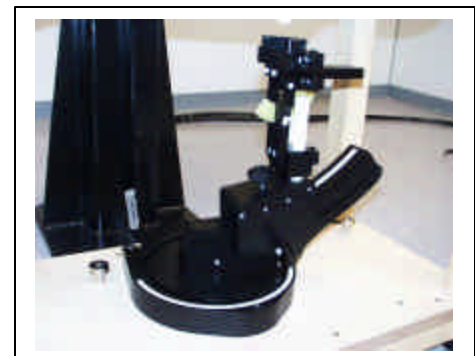

Device Holder

4. EVALUATION PROCEDURES

Data Evaluation

The DASY4 software automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe parameters:	- Sensitivity	Norm _i , a _{i10} , a _{i11} , a _{i12}
	- Conversion factor	ConvF _i
	- Diode compression point	Dcp _i
Device parameters:	- Frequency	f
	- Crest factor	cf
Media parameters:	- Conductivity	σ
	- Density	ρ

These parameters must be set correctly in the software. They can either be found in the component documents or be imported into the software from the configuration files issued for the DASY4 components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given as:

$$V_i = U_i + U_i^2 \cdot \frac{cf}{dcp_i}$$

with	V_i	= Compensated signal of channel i	(i = x, y, z)
	U_i	= Input signal of channel i	(i = x, y, z)
	cf	= Crest factor of exciting field	(DASY parameter)
	dcp _i	= Diode compression point	(DASY parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

E-field probes:

$$E_i = \sqrt{\frac{V_i}{Norm_i \cdot ConvF}}$$

H-field probes:

$$H_i = \sqrt{V_i} \cdot \frac{a_{i10} + a_{i11}f + a_{i12}f^2}{f}$$

with V_i = Compensated signal of channel i (i = x, y, z)

$Norm_i$ = Sensor sensitivity of channel i (i = x, y, z)

$\mu V/(V/m)^2$ for E0field Probes

$ConvF$ = Sensitivity enhancement in solution

a_{ij} = Sensor sensitivity factors for H-field probes

f = Carrier frequency (GHz)

E_i = Electric field strength of channel i in V/m

H_i = Magnetic field strength of channel i in A/m

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.

$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$$

with SAR = local specific absorption rate in mW/g

E_{tot} = total field strength in V/m

σ = conductivity in [mho/m] or [siemens/m]

ρ = equivalent tissue density in g/cm³

Note that the density is normally set to 1 (or 1.06), to account for actual brain density rather than the density of the simulation liquid.

The power flow density is calculated assuming the excitation field as a free space field.

$$P_{pwe} = \frac{E_{tot}^2}{3770} \quad \text{or} \quad P_{pwe} = H_{tot}^2 \cdot 37.7$$

with P_{pwe} = Equivalent power density of a plane wave in mW/cm²

E_{tot} = total electric field strength in V/m

H_{tot} = total magnetic field strength in A/m

SAR Evaluation Procedures

The evaluation was performed with the following procedure:

Step 1: Measurement of the SAR value at a fixed location above the central position was used as a reference value for assessing the power drop.

Step 2: The SAR distribution at the exposed side of the body was measured at a distance of 4 mm from the inner surface of the shell. The area covered the entire dimension of the EUT and the horizontal grid spacing was 10 mm x 10 mm. Based on the data, the area of the maximum absorption was determined by spline interpolation.

Step 3: Around this point, a volume of 32 mm x 32 mm x 34 mm was assessed by measuring 5 x 5 x 7 points. On the basis of this data set, the spatial peak SAR value was evaluated under the following procedure:

1. The data at the surface were extrapolated, since the center of the dipoles is 2.7 mm away from the tip of the probe and the distance between the surface and the lowest measuring point is 1.2 mm. The extrapolation was based on a least square algorithm [11]. A polynomial of the fourth order was calculated through the points in z-axes. This polynomial was then used to evaluate the points between the surface and the probe tip.
2. The maximum interpolated value was searched with a straightforward algorithm. Around this maximum the SAR values averaged over the spatial volumes (1 g or 10 g) were computed by the 3D-Spline interpolation algorithm. The 3D-Spline is composed of three one-dimensional splines with the "Not a knot"-condition (in x, y and z-directions) [11], [12]. The volume was integrated with the trapezoidal-algorithm. One thousand points (10 x 10 x 10) were interpolated to calculate the average.
3. All neighboring volumes were evaluated until no neighboring volume with a higher average value was found.

Step 4: Re-measurement of the SAR value at the same location as in Step 1. If the value changed by more than 5%, the evaluation was repeated.

5. MEASUREMENT UNCERTAINTY

Uncertainty Budget per IEEE P1528

Error Description	Uncertainty value $\pm\%$	Probability distribution	divisor	c_i 1g	Standard unc. (1g) $\pm\%$	v_i or v_{eff}
Measurement System						
Probe calibration	± 4.8	normal	1	1	± 4.8	∞
Axial isotropy of the probe	± 4.7	rectangular	$\sqrt{3}$	$(1-c_p)^{1/2}$	± 1.9	∞
Sph. isotropy of the probe	± 9.6	rectangular	$\sqrt{3}$	$(c_p)^{1/2}$	± 3.9	∞
Probe linearity	± 4.7	rectangular	$\sqrt{3}$	1	± 2.7	∞
Detection limit	± 1.0	rectangular	$\sqrt{3}$	1	± 0.6	∞
Boundary effects	± 8.3	rectangular	$\sqrt{3}$	1	± 4.8	∞
Readout electronics	± 1.0	normal	1	1	± 1.0	∞
Response time	± 0.8	rectangular	$\sqrt{3}$	1	± 0.5	∞
Integration time	± 1.4	rectangular	$\sqrt{3}$	1	± 0.8	∞
Mech. constrains of robot	± 0.4	rectangular	$\sqrt{3}$	1	± 0.2	∞
Probe positioning	± 2.9	rectangular	$\sqrt{3}$	1	± 1.7	∞
Extrap. and integration	± 3.9	rectangular	$\sqrt{3}$	1	± 2.3	∞
RF ambient conditions	± 0.75	rectangular	$\sqrt{3}$	1	± 0.43	∞
Test Sample Related						
Device positioning	± 2.23	normal	1	1	± 2.23	11
Device holder uncertainty	± 5.0	normal	1	1	± 5.0	7
Power drift	± 5.0	rectangular	$\sqrt{3}$	1	± 2.9	∞
Phantom and Setup						
Phantom uncertainty	± 4.0	rectangular	$\sqrt{3}$	1	± 2.3	∞
Liquid conductivity (target)	± 5.0	rectangular	$\sqrt{3}$	0.6	± 1.7	∞
Liquid conductivity (meas.)	$\pm 10.0/5.0$	rectangular	$\sqrt{3}$	0.6	$\pm 3.5/1.73$	∞
Liquid permittivity (target)	± 5.0	rectangular	$\sqrt{3}$	0.6	± 1.7	∞
Liquid permittivity (meas.)	± 5.0	rectangular	$\sqrt{3}$	0.6	± 1.7	∞
Combined Standard Uncertainty						
					$\pm 12.14/11.76$	
Coverage Factor for 95%		kp = 2				
Expanded Standard Uncertainty						$\pm 24.29/23.51$

Note: Due to the different spec for liquid above 2G (+/- 10%) and below the 2G (+/- 5%), the uncertainty budget is different accordingly.

6. EXPOSURE LIMIT

(A). Limits for Occupational/Controlled Exposure (W/kg)

Whole-Body	Partial-Body	Hands, Wrists, Feet and Ankles
0.4	8.0	20.0

(B). Limits for General Population/Uncontrolled Exposure (W/kg)

Whole-Body	Partial-Body	Hands, Wrists, Feet and Ankles
0.08	1.6	4.0

NOTE: **Whole-Body SAR** is averaged over the entire body, **partial-body SAR** is averaged over any 1 gram of tissue defined as a tissue volume in the shape of a cube. **SAR for hands, wrists, feet and ankles** is averaged over any 10 grams of tissue defined as a tissue volume in the shape of a cube.

Population/Uncontrolled Environments: are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure.

Occupational/Controlled Environments: are defined as locations where there is exposure that may be incurred by people who are aware of the potential for exposure, (i.e. as a result of employment or occupation).

NOTE
GENERAL POPULATION/UNCONTROLLED EXPOSURE
PARTIAL BODY LIMIT
1.6 mW/g

7. MEASUREMENT RESULTS

7.1. SYSTEM VALIDATION

Prior to the assessment, the system validation kit was used to test whether the system was operating within its specifications of $\pm 10\%$. The validation results are tabulated below. And also the corresponding SAR plot is attached as well in the SAR plots files.

IEEE P1528 Recommended Reference Value

Frequency (MHz)	1 g SAR	10 g SAR	Local SAR at surface (Above feed point)	Local SAR at surface (y=2cm offset from feed point)
300	3.0	2.0	4.4	2.1
450	4.9	3.3	7.2	3.2
835	9.5	6.2	14.1	4.9
900	10.8	6.9	16.4	5.4
1450	29.0	16.0	50.2	6.5
1800	38.1	19.8	69.5	6.8
1900	39.7	20.5	72.1	6.6
2000	41.1	21.1	74.6	6.5
2450	52.4	24.0	104.2	7.7
3000	63.8	25.7	140.2	9.5

System Validation Results

Ambient conduction: Temperature 25°C; Relative humidity 38%

System Validation Dipole: D2450V2 SN: 706

Date of measured: March 19, 2003

Medium			Parameters	Target	Measured	Deviation[%]	Limited[%]
Type	Temp. [°C]	Dipth [cm]					
Head	23.00	15.00	Permittivity:	39.2	38.64	-1.43	± 10
2450 MHz			Conductivity:	1.8	1.8577	3.21	± 5
			1g SAR:	52.4	52.4	0.00	± 10

Ambient conduction: Temperature 25°C; Relative humidity 39%

System Validation Dipole: D2450V2 SN: 706

Date of measured: March 20, 2003

Medium			Parameters	Target	Measured	Deviation[%]	Limited[%]
Type	Temp. [°C]	Dipth [cm]					
Head	23.00	15.00	Permittivity:	39.2	38.52	-1.73	± 10
2450 MHz			Conductivity:	1.8	1.8536	2.98	± 5
			1g SAR:	52.4	52	-0.76	± 10

Ambient conduction: Temperature 25°C; Relative humidity 40%

System Validation Dipole: D2450V2 SN: 706

Date of measured: March 21, 2003

Medium			Parameters	Target	Measured	Deviation[%]	Limited[%]
Type	Temp. [°C]	Dipth [cm]					
Head	23.00	15.00	Permittivity:	39.2	38.32	-2.24	± 10
2450 MHz			Conductivity:	1.8	1.8673	3.74	± 5
			1g SAR:	52.4	51.6	-1.53	± 10

7.2. TEST LIQUID CONFIRMATION

Simulated Tissue Liquid Parameter confirmation

The dielectric parameters were checked prior to assessment using the HP85070C dielectric probe kit. The dielectric parameters measured are reported in each correspondent section.

IEEE SCC-34/SC-2 P1528 recommended Tissue Dielectric Parameters

The head tissue dielectric parameters recommended by the IEEE SCC-34/SC-2 in P1528 have been incorporated in the following table. These head parameters are derived from planar layer models simulating the highest expected SAR for the dielectric properties and tissue thickness variations in a human head. Other head and body tissue parameters that have not been specified in P1528 are derived from the tissue dielectric parameters computed from the 4-Cole-Cole equations and extrapolated according to the head parameters specified in P1528

Target Frequency	Head		Body	
(MHz)	ϵ_r	σ (S/m)	ϵ_r	σ (S/m)
150	52.3	0.76	61.9	0.80
300	45.3	0.87	58.2	0.92
450	43.5	0.87	56.7	0.94
835	41.5	0.90	55.2	0.97
900	41.5	0.97	55.0	1.05
915	41.5	0.98	55.0	1.06
1450	40.5	1.20	54.0	1.30
1610	40.3	1.29	53.8	1.40
1800-2000	40.0	1.40	53.3	1.52
2450	39.2	1.80	52.7	1.95
3000	38.5	2.40	52.0	2.73
5800	45.3	5.27	48.2	6.00

(ϵ_r = relative permittivity, σ = conductivity and ρ = 1000 kg/m³)

Liquid Confirmation Results**Ambient conduction** – Temperature: 25°C; Relative humidity: 38%**Date:** March 19, 2003

Medium		Parameters	Target	Measured	Deviation[%]	Limited[%]
Type	Temp. [°C]					
Muscle	23	Permittivity:	52.7	50.45	-4.27	± 10
2450 MHz		Conductivity:	1.95	1.9899	2.05	± 5

Ambient conduction – Temperature: 25°C; Relative humidity: 39%**Date:** March 20, 2003

Medium		Parameters	Target	Measured	Deviation[%]	Limited[%]
Type	Temp. [°C]					
Muscle	23	Permittivity:	52.7	50.48	-4.21	± 10
2450 MHz		Conductivity:	1.95	1.9409	-0.47	± 5

Ambient conduction – Temperature: 25°C; Relative humidity: 40%**Date:** March 21, 2003

Medium		Parameters	Target	Measured	Deviation[%]	Limited[%]
Type	Temp. [°C]					
Muscle	23	Permittivity:	52.7	50.51	-4.16	± 10
2450 MHz		Conductivity:	1.95	1.9	-2.56	± 5

7.3. EUT TUNE-UP PROCEDURES

The following procedures had been used to prepare the EUT for the SAR test.

- The client supplied a special driving program (ART) to program the EUT to continually transmit the specified maximum power. And also to change the channel frequency.
- The conducted power was measured at the high, middle and low channel frequency before and after the SAR measurement.

7.4. EUT SETUP PHOTOS


EUT Set-up Configuration 1 (Compaq)

1. Installation conditions between host device and phantom - Bottom face in parallel with flat phantom.
2. Spacing between host device and phantom - In contact (0 cm).
3. Spacing between EUT and phantom - 11.4 mm
4. EUT location in the card slot - lower slot




EUT Set-up Configuration 2 (Compaq)

1. Installation conditions between host device and phantom - Host device perpendicular to flat phantom.
2. Spacing between EUT and phantom - 1.5 cm

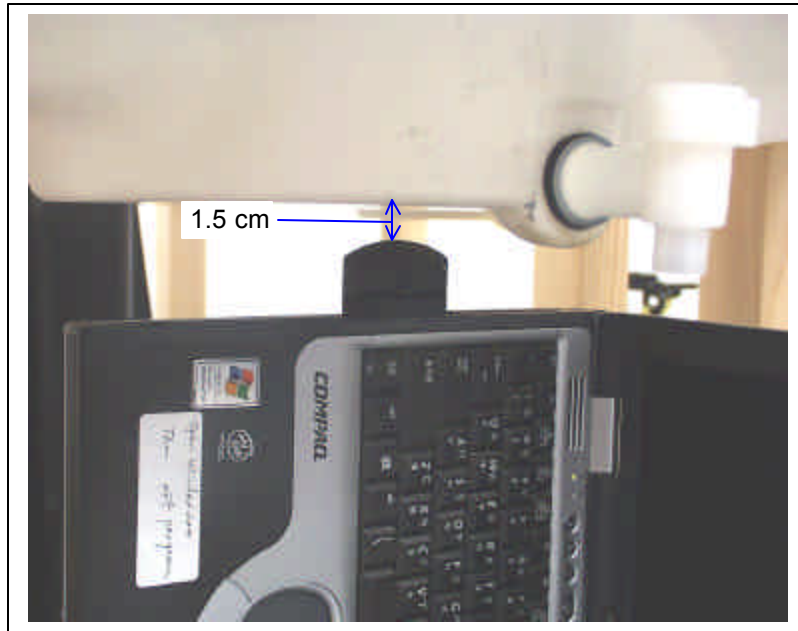


EUT Set-up Configuration 1 (Toshiba)

1. Installation conditions between host device and phantom - Bottom face in parallel with flat phantom.
2. Spacing between host device and phantom - In contact (0 cm).
3. Spacing between EUT and phantom - 11.3 mm
4. EUT location in the card slot - lower slot

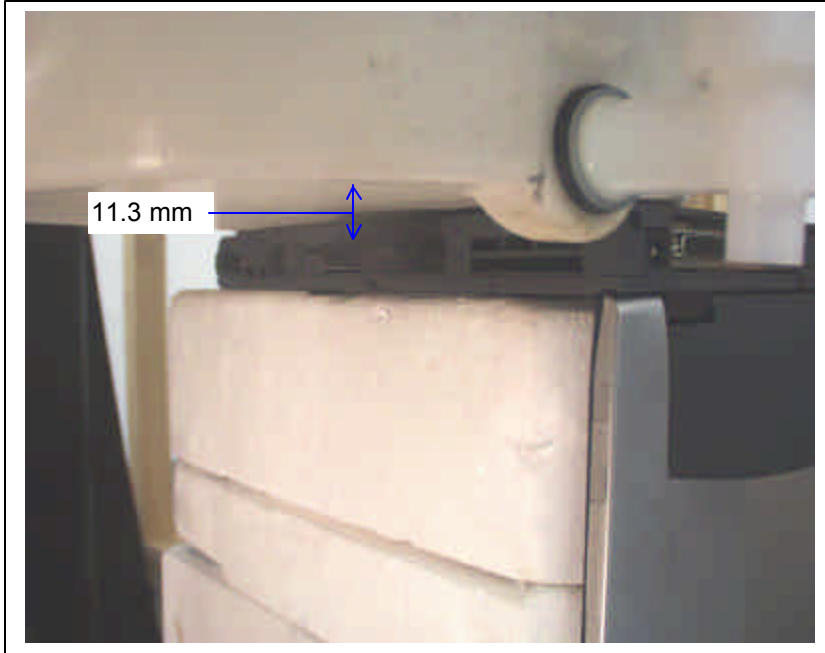
**EUT Set-up Configuration 2 (Toshiba)**

1. Installation conditions between EUT and phantom - Host device perpendicular to flat phantom.
2. Spacing between EUT and phantom – 1.5 cm

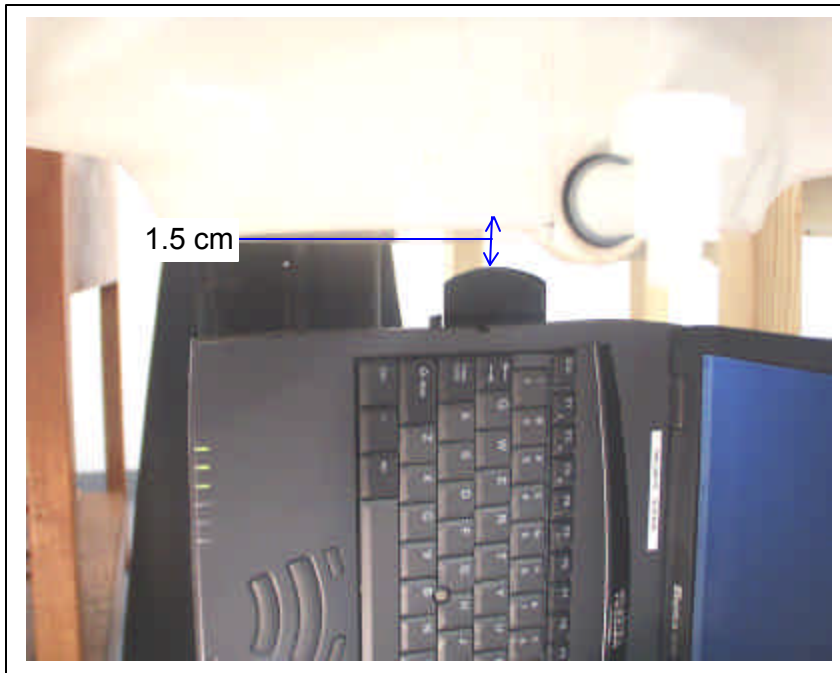


EUT Set-up Configuration 1 (IBM)

1. Installation conditions between host device and phantom - Bottom face in parallel with flat phantom.
2. Spacing between host device and phantom - In contact (0 cm).
3. Spacing between EUT and phantom – 12.6 mm
4. EUT location in the card slot - lower slot

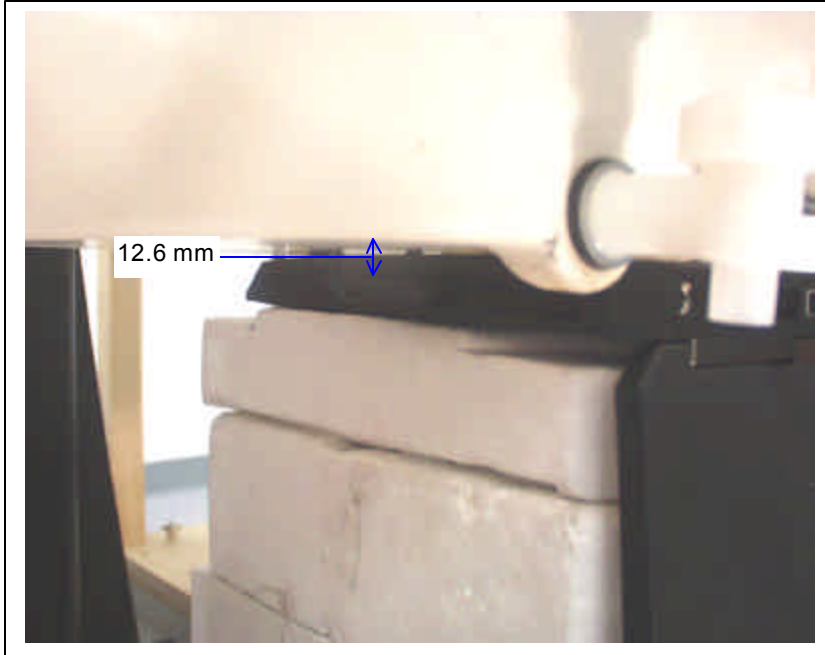**EUT Set-up Configuration 2 (IBM)**

1. Installation conditions between EUT and phantom - Host device perpendicular to flat phantom.
2. Spacing between EUT and phantom – 1.5 cm

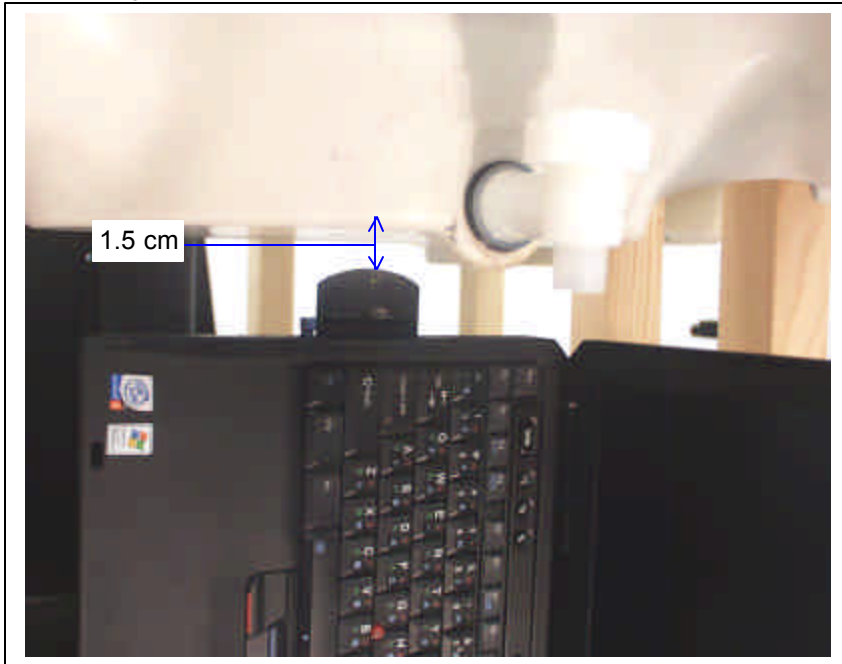

7.5. SAR MEASUREMENT RESULTS

Host device - Compaq (Model Presario 1500, S/N 1V31LDLZ20PG)

Part A - 802.11b							Depth of liquid: 15.0 cm	
Modulation type: <u>DSSS</u> (Duty cycle = 99%; Crest factor: 1)								
EUT Setup Configuration 1							Date: <u>March 19, 2003</u>	
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
11.4	A	1	2412	19.81	19.76	23.1	0.856	1.6
		6	2437	19.86	19.83	23.0	0.756	
		11	2462	19.37	19.32	23.0	0.667	
	B	1	2412	19.81	19.76	23.0	0.509	1.6
		6	2437	19.86	19.83	23.0	0.445	
		11	2462	19.37	19.32	23.0	0.352	

Part B - 802.11g								
Modulation type: <u>OFDM</u> (Duty cycle = 99%; Crest factor: 1)								
EUT Setup Configuration 1							Date: <u>March 19, 2003</u>	
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
11.4	A	1	2412	20.65	20.64	22.7	0.736	1.6
		6	2437	20.26	20.25	22.7	0.666	
		6	2437 (Turbo mode)	19.31	19.30	23.3	0.522	
		11	2462	20.07	20.05	22.7	0.601	
	B	1	2412	20.65	20.64	23.0	0.432	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Note (s):
Please refer to attachment for each configuration presentation in plot format.

Host device – Compaq (Model Presario 1500, S/N 1V31LDLZ20PG)

Part A - 802.11b							Depth of liquid: <u>15.0</u> cm	
Modulation type: <u>DSSS</u> (Duty cycle = <u>99</u> %; Crest factor: <u>1</u>)								
EUT Setup Configuration 2							Date: <u>March 19, 2003</u>	
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
15	A	1	2412	19.81	19.76	23.3	0.348	1.6
		6	2437	19.86	19.83	23.4	0.368	
		11	2462	19.37	19.32	23.5	0.343	
	B	1	2412	--	--	--	--	1.6
		6	2437	19.86	19.83	23.5	0.24	
		11	2462	--	--	--	--	

Part B - 802.11g								
Modulation type: <u>OFDM</u> (Duty cycle = <u>99</u> %; Crest factor: <u>1</u>)								
EUT Setup Configuration 2							Date: <u>March 19, 2003</u>	
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
15	A	1	2412	20.65	20.64	23.5	0.266	1.6
		6	2437	20.26	20.25	23.4	0.265	
		11	2462	20.07	20.05	23.5	0.243	
	B	1	2412	20.65	20.64	23.5	0.195	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Note (s):
Please refer to attachment for each configuration presentation in plot format.

Host device – Toshiba (Model TERCRA 8200, S/N 51212942PU)

Part A - 802.11b						Depth of liquid: <u>15.0</u> cm		
Modulation type: <u>DSSS</u> (Duty cycle = 99%; Crest factor: 1)								
EUT Setup Configuration 1						Date: <u>March 20, 2003</u>		
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
11.3	A	1	2412	19.81	19.76	23.7	1.19	1.6
		6	2437	19.86	19.83	23.5	1.14	
		11	2462	19.37	19.32	23.5	0.912	
	B	1	2412	19.81	19.76	23.4	0.393	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Part B - 802.11g								
Modulation type: <u>OFDM</u> (Duty cycle = 99%; Crest factor: 1)								
EUT Setup Configuration 1						Date: <u>March 20, 2003</u>		
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
11.3	A	1	2412	20.65	20.64	23.3	1.11	1.6
		6	2437	20.26	20.25	23.3	1.06	
		6	2437 (Turbo mode)	19.31	19.30	23	0.933	
		11	2462	20.07	20.05	23.2	0.928	
	B	1	2412	20.65	20.64	23.2	0.319	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Note (s):
Please refer to attachment for each configuration presentation in plot format.

Host device – Toshiba (Model TERCRA 8200, S/N 51212942PU)

Part A - 802.11b							Depth of liquid: <u>15.0</u> cm	
Modulation type: <u>DSSS</u> (Duty cycle = 99%; Crest factor: <u>1</u>)								
EUT Setup Configuration 2							Date: <u>March 20, 2003</u>	
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
15	A	1	2412	19.81	19.76	23.2	0.469	1.6
		6	2437	19.86	19.83	23.0	0.472	
		11	2462	19.37	19.32	23.0	0.455	
	B	1	2412	--	--	--	--	1.6
		6	2437	19.86	19.83	22.8	0.225	
		11	2462	--	--	--	--	

Part B - 802.11g								
Modulation type: <u>OFDM</u> (Duty cycle = 99%; Crest factor: <u>1</u>)							Date: <u>March 20, 2003</u>	
EUT Setup Configuration 2								
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
15	A	1	2412	20.65	20.64	22.8	0.359	1.6
		6	2437	20.26	20.25	23.1	0.353	
		11	2462	20.07	20.05	23.1	0.318	
	B	1	2412	20.65	20.64	23.2	0.217	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Note (s): Please refer to attachment for each configuration presentation in plot format.								
--	--	--	--	--	--	--	--	--

Host device – IBM (Model 2659, S/N AK-VND0G)

Part A - 802.11b							Depth of liquid: <u>15.0</u> cm	
Modulation type: <u>DSSS</u> (Duty cycle = 99%; Crest factor: 1)								
EUT Setup Configuration 1							Date: <u>March 21, 2003</u>	
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
12.6	A	1	2412	19.81	19.76	23.5	0.837	1.6
		6	2437	19.86	19.83	23.0	0.826	
		11	2462	19.37	19.32	23.0	0.702	
	B	1	2412	19.81	19.76	22.8	0.447	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Part B - 802.11g								
Modulation type: <u>OFDM</u> (Duty cycle = 99%; Crest factor: 1)							Date: <u>March 21, 2003</u>	
EUT Setup Configuration 1								
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
12.6	A	1	2412	20.65	20.64	22.6	0.698	1.6
		6	2437	20.26	20.25	22.6	0.679	1.6
		6	2437 (Turbo mode)	19.31	19.30	23.0	0.629	
		11	2462	20.07	20.05	22.6	0.558	
	B	1	2412	20.65	20.64	22.6	0.34	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Note (s):
Please refer to attachment for each configuration presentation in plot format.

Host device – IBM (Model 2659, S/N AK-VND0G)

Part A - 802.11b							Depth of liquid: <u>15.0</u> cm	
Modulation type: <u>DSSS</u> (Duty cycle = 99%; Crest factor: <u>1</u>)								
EUT Setup Configuration 2							Date: <u>March 21, 2003</u>	
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
15	A	1	2412	19.81	19.76	22.6	0.27	1.6
		6	2437	19.86	19.83	22.6	0.256	
		11	2462	19.37	19.32	22.6	0.218	
	B	1	2412	19.81	19.76	22.6	0.21	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Part B - 802.11g								
Modulation type: <u>OFDM</u> (Duty cycle = 99%; Crest factor: <u>1</u>)								
EUT Setup Configuration 2							Date: <u>March 21, 2003</u>	
EUT Set-up conditions		Frequency		Conducted Power [dBm] (Peak)		Liquid Temp [°C]	SAR (W/kg)	Limit (W/kg)
Sep. [mm]	Antenna	Channel	MHz	Before	After			
15	A	1	2412	20.65	20.64	22.6	0.211	1.6
		6	2437	20.26	20.25	22.6	0.19	
		11	2462	20.07	20.05	22.9	0.16	
	B	1	2412	20.65	20.64	23.0	0.16	1.6
		6	2437	--	--	--	--	
		11	2462	--	--	--	--	

Note (s):
Please refer to attachment for each configuration presentation in plot format.

8. EUT PHOTOS**EUT**

Host Devices

**Compaq**

Model: [Presario 1500](#), S/N: [1V31LDLZ20PG](#)

**Toshiba**

Model: [TECRA 8200](#), S/N: [51212942PU](#)

**IBM**

Model: [2659](#), S/N: [AK-VND0G](#)

9. EQUIPMENTS LIST & CALIBRATION STATUS

Name of Equipment	Manufacturer	Type/Model	Serial Number	Calibration	
				last cal.	due date
S-Parameter Network Analyzer	Agilent	8753ES	MY40001647	8/6/02	8/6/03
Electronic Probe kit	Hewlett Packard	85070C	N/A	N/A	N/A
3.5 mm Calibration Kit	Agilent	85033D	3423A07200	8/6/02	8/6/03
Power Meter	Agilent	E5516A	GB41291160	8/9/02	8/9/03
Power Sensor	Agilent	E9327A	US40440755	9/5/02	9/5/03
Universal Radio Communication Tester	Rohde & Schwarz	CMU 200	838114/032	2/14/03	2/14/04
Amplifier	Mini-Circuit	ZHL-42W	D072701-5	N/A	N/A
DC Power generator	Kenwood	PA36-3A	7060074	N/A	N/A
Data Acquisition Electronics (DAE)	SPEAG	DAE3 V1	427	2/4/03	2/4/04
Dosimetric E-Field Probe	SPEAG	ET3DV6	1577	2/7/02	2/7/04
450 MHz System Validation Dipole	SPEAG	D450V2	1003	4/5/02	4/19/04
900 MHz System Validation Dipole	SPEAG	D900V2	108	4/17/01	4/17/03
1800 MHz System Validation Dipole	SPEAG	D1800V2	294	4/19/01	4/19/03
2450 MHz System Validation Dipole	SPEAG	D2450V2	706	6/4/02	6/4/04
Probe Alignment Unit	SPEAG	LB (V2)	261	N/A	N/A
Robot	Staubli	RX90B L	F00/5H31A1/A/01	N/A	N/A
Generic Twin Phantom	SPEAG	N/A	N/A	N/A	N/A
SAM Phantom	SPEAG	N/A	N/A	N/A	N/A
Devices Holder	SPEAG	N/A	N/A	N/A	N/A
Head 450 MHz	CCS	H450A	N/A	Daily	N/A
Muscle 450 MHz	CCS	M450A	N/A	Daily	N/A
Head 835 MHz	CCS	H835A	N/A	Daily	N/A
Muscle 835 MHz	CCS	M835A	N/A	Daily	N/A
Head 900 MHz	CCS	H900A	N/A	Daily	N/A
Muscle 900 MHz	CCS	M900A	N/A	Daily	N/A
Head 1800 MHz	CCS	H1800A	N/A	Daily	N/A
Muscle 1800 MHz	CCS	M1800A	N/A	Daily	N/A
Head 1900 MHz	CCS	H1900A	N/A	Daily	N/A
Muscle 1900 MHz	CCS	M1900A	N/A	Daily	N/A
Head 2450 MHz	CCS	H2450A	N/A	Daily	N/A
Muscle 2450 MHz	CCS	M2450A	N/A	Daily	N/A

10. REFERENCES

- [1] Federal Communications Commission, \Report and order: Guidelines for evaluating the environmental effects of radiofrequency radiation", Tech. Rep. FCC 96-326, FCC, Washington, D.C. 20554, 1996.
- [2] David L. Means Kwok Chan, Robert F. Cleveland, \Evaluating compliance with FCC guidelines for human exposure to radiofrequency electromagnetic fields", Tech. Rep., Federal Communication Commision, O_cce of Engineering & Technology, Washington, DC, 1997.
- [3] Thomas Schmid, Oliver Egger, and Niels Kuster, \Automated E-_eld scanning system for dosimetric assessments", IEEE Transactions on Microwave Theory and Techniques, vol. 44, pp. 105{113, Jan. 1996.
- [4] Niels Kuster, Ralph K.astle, and Thomas Schmid, \Dosimetric evaluation of mobile communications equipment with known precision", IEICE Transactions on Communications, vol. E80-B, no. 5, pp. 645{652, May 1997.
- [5] CENELEC, \Considerations for evaluating of human exposure to electromagnetic fields (EMFs) from mobile telecommunication equipment (MTE) in the frequency range 30MHz - 6GHz", Tech. Rep., CENELEC, European Committee for Electrotechnical Standardization, Brussels, 1997.
- [6] ANSI, ANSI/IEEE C95.1-1992: IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz, The Institute of Electrical and Electronics Engineers, Inc., New York, NY 10017, 1992.
- [7] Katja Pokovic, Thomas Schmid, and Niels Kuster, \Robust setup for precise calibration of E-_eld probes in tissue simulating liquids at mobile communications frequencies", in ICECOM _ 97, Dubrovnik, October 15{17, 1997, pp. 120{124.
- [8] Katja Pokovic, Thomas Schmid, and Niels Kuster, \E-_eld probe with improved isotropy in brain simulating liquids", in Proceedings of the ELMAR, Zadar, Croatia, 23{25 June, 1996, pp. 172{175.
- [9] Volker Hombach, Klaus Meier, Michael Burkhardt, Eberhard K. uhn, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 900 MHz", IEEE Transactions onMicrowave Theory and Techniques, vol. 44, no. 10, pp. 1865{1873, Oct. 1996.
- [10] Klaus Meier, Ralf Kastle, Volker Hombach, Roger Tay, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 1800 MHz", IEEE Transactions on Microwave Theory and Techniques, Oct. 1997, in press.
- [11] W. Gander, Computermathematik, Birkhaeuser, Basel, 1992.
- [12] W. H. Press, S. A. Teukolsky, W. T. Vetterling, and B. P. Flannery, Numerical Recepies in C, The Art of Scientific Computing, Second Edition, Cambridge University Press, 1992..Dosimetric Evaluation of Sample device, month 1998 9
- [13] NIS81 NAMAS, \The treatment of uncertainty in EMC measurement", Tech. Rep., NAMAS Executive, National Physical Laboratory, Teddington, Middlesex, England, 1994.
- [14] Barry N. Taylor and Christ E. Kuyatt, \Guidelines for evaluating and expressing the uncertainty of NIST measurement results", Tech. Rep., National Institute of Standards and Technology, 1994. Dosimetric Evaluation of Sample device, month 1998 10

11. ATTACHMENTS

Exhibit	Contents	No. of page (s)
1	System Validation Plots	3
2	SAR Test Plots - Compaq	27
3	SAR Test Plots - Toshiba	25
4	SAR Test Plots - IBM	25
5	Dosimetric E-Field Probe - ET3DV6, S/N: 1577	14
6	Validation Dipole - D2450V2, S/N: 706	7

End of Report