

REH - 100 User Manual

2004 November 12

Hahntech. Co.,Ltd.

Contents

1. PRODUCT DESCRIPTION	4
1.1. Introduction	4
1.2. Protocol Support	4
1.2.1. ReFLEX™ Protocol	4
1.2.2. Communications Link Protocol (CLP)	5
1.2.3. GOTAP Support	5
1.3. Console Interface	6
1.3.1. COM Port Connection	6
1.3.2. to work with Console mode.....	6
1.4. Messaging Behaviour.....	6
1.5. Module Configuration	6
2. REH CONFIGURATOR SW OPERATION MANUAL	7
2.1. Introduction	7
2.2. System Parameters	8
2.3. Global Scan List Parameters	9
2.4. Information Service Address List Parameters	10
2.5. SPID Parameters	11
3. CLP COMMUNICATOR SW OPER MANUAL (UAR TX)	12
3.1. Introduction	12
3.2. Setting Connection	12
3.3. Connect	13
3.4. Send Message.....	14

APPENDIX 15

A.1. Supported CLP Commands List 15

A.2. RF Specifications 15[6](#)

A.3. Hardware Characteristics 1[7](#)

 A.3.1. Environmental [17](#)

 A.3.2. Electrical Interface.....[17](#)

1. Product Description

1.1. Introduction

- Max Outbound (Receive) Message Size : 10,000 bytes
- Max Inbound (Transmit) Message Size : 2,000 bytes (possible to limit with PPS)
- Forward MSN Window Size : 12
- Reverse MSN Window Size : 8

1.2. Protocol Support

1.2.1. ReFLEX™ Protocol

- The module implements Motorola's ReFLEX™ 25 protocol at Version 2.7.2
 - Coasting: Radio coasts up to 32 frames.
 - Number of Scan frequencies: 16 between 929-942 MHz
 - Number of Scan ID's (SCID): 5
 - MSN management functions
 - Transaction Status interactions
 - Memory status transactions
 - Reception of messages in the alphanumeric and binary vector formats.
 - Transmission of short inbound messages and scheduled inbound messages
 - One primary address, "personal" address, and 16 information addresses are provided.
-

1.2.2. Communications Link Protocol (CLP)

- This is the protocol developed for the Motorola Creatalink, as defined in FLEXSuite™.
- It has been adapted for use with the WAM and provides all of the required messaging, configuration and control functions.
- This interface has the following functions:
 - ✓ Messaging - Transmission
 - ✓ Messaging - Reception
 - ✓ Event signalling
 - ✓ Status and diagnostics information
 - ✓ Device configuration and control
- We insert additional CLP Commands (not include in FLEXSuite™)
 - ✓ Get-PPS : 0x90 - Get parameters of device.
 - ✓ Set-PPS : 0x91 - Set parameters of device.
 - ✓ UAR Message Transmission : 0x92 - Process UAR message

1.2.3. GOTAP Support

- The module recognizes the FLEXSuite™ GOTAP protocol for Over The Air (OTA) configuration and control.
- Registration Not Required Command
- Program Without ACK Command

GOTAP Write

- HIX, IS Add, Delete, Modify
- Delete All IS
- SPID Add, Modify, Delete, Delete All
- GSL Add, Modify, Delete, Delete All
- Software Patch Version Number Command
- Enable or disable privacy option

GOTAP Write Special Access

- Password Change
- multi-byte write

GOTAP Read

- HIX
 - IS
 - SPID
 - GSL
 - Model
 - Ver.
 - Patch
 - privacy flag
 - multi-byte read
-

1.3. Console Interface

1.3.1. COM Port Connection

- Baud Rate : 115200 bps
- Data Bits : 8
- Parity : None
- Stop Bits : 1
- Flow Control : None

1.3.2. to work with Console mode

- REH-100 have 2 types of mode, CLP mode and Console mode.
- CLP mode interface with CLP communicator through serial com port.
- Console mode can not support CLP protocol, and print debug message to serial com port.
- REH-100 works with **CLP mode** by default.
- To work with **Console mode**, you must connect COM port between REH-100 and PC.
- And after reset REH-100, you can find following message.

Press 'c' key to use console...

- If you press 'c', you can work REH-100 with Console mode.
- It must be happen in 3 seconds. After 3 seconds, this works with CLP mode.

1.4. Messaging Behaviour

- Messages are stored in NV (non-volatile) storage while they reside in the module.
- It is possible for a message to be received more than once with the same MSN.
- If automatic read ACKs are enabled, a read acknowledge is automatically transmitted to the network when a message is downloaded.
- Memory full rules - Device manage all possible message size. It can not be happened that device go to memory full state.


1.5. Module Configuration

- They are all stored in NV Store, are given default values at the factory, and may be modified in the field using the appropriate Windows application.
 - Field configuration shall be done using the provided "REH Configurator" application.
 - A serial port is required on the PC to connect to the module's configuration port.
-


2. REH Configurator SW Operation Manual

2.1. Introduction

- REH Configurator have 4 parts of configuration parameter.
 - ✓ System parameters
 - ✓ Global Scan List Parameters
 - ✓ Information Service Address List Parameters
 - ✓ SPID Parameters
- It can be selected by “View” menu or “Service Pane” directly.

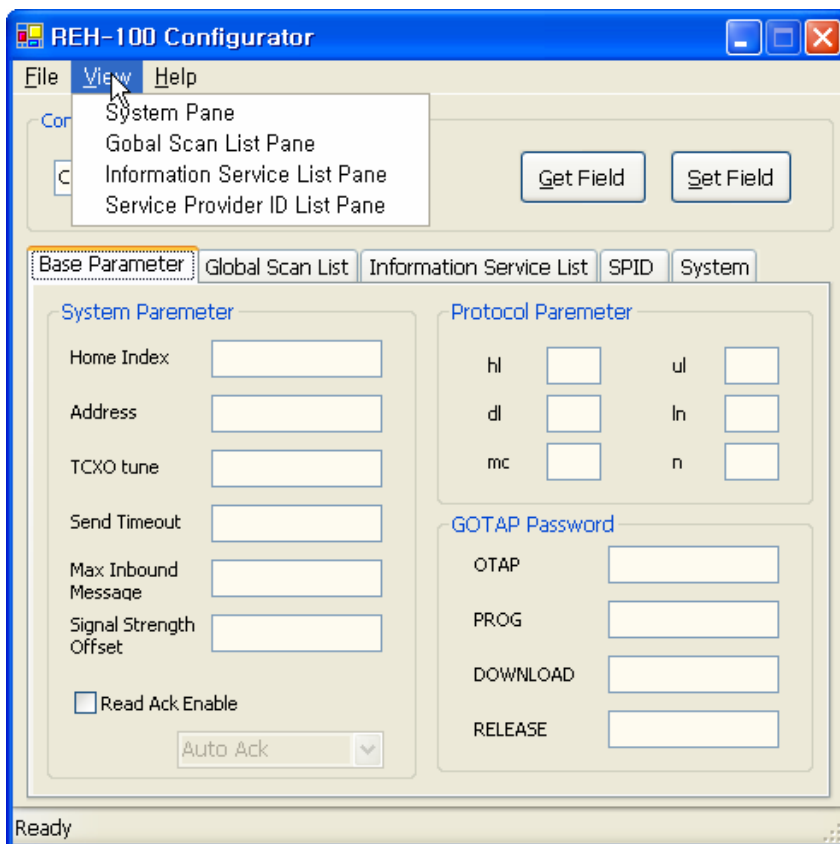


2.2. System Parameters

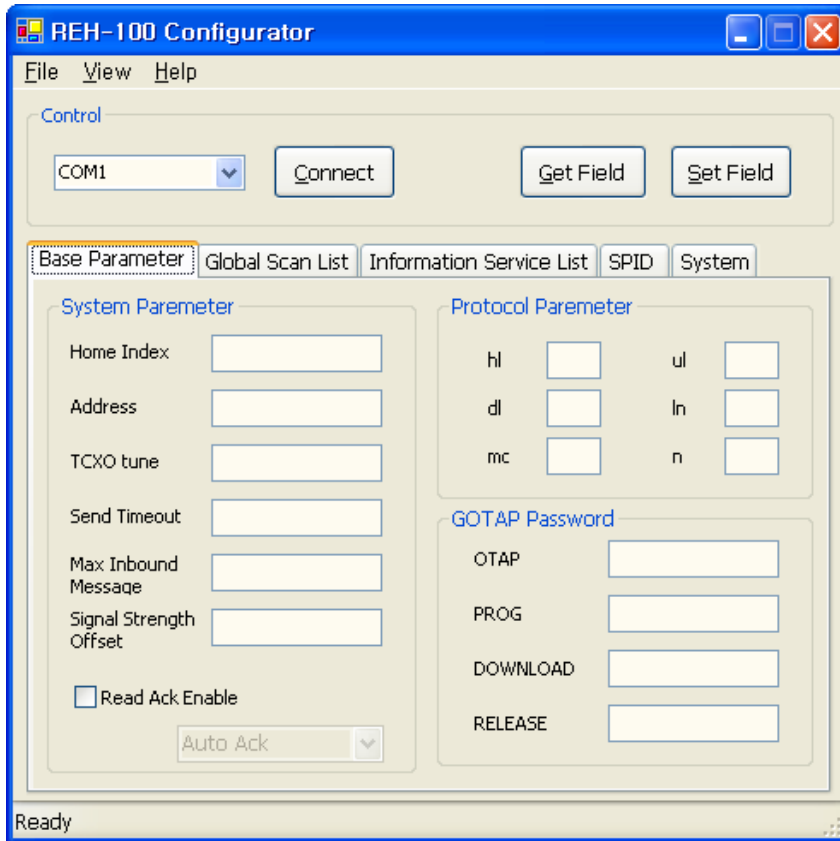

- System parameters consists of 3 parts
 - ✓ Main system parameters
 - ✓ Protocol parameters
 - ✓ GOTAP Passwords
- Home Index : HIX value
- Address : Personal device address
- TCXO tune : Independently, unique tuning value of devices
- Send Timeout : default 5 minutes
- Max Inbound Message : 2000 (max)
- Default Protocol Parameter
 - ✓ hl : 63
 - ✓ ul : 10
 - ✓ dl : 6
 - ✓ ln : 0
 - ✓ mc : 0
 - ✓ n : 8 - autocollapse value

2.3. Global Scan List Parameters

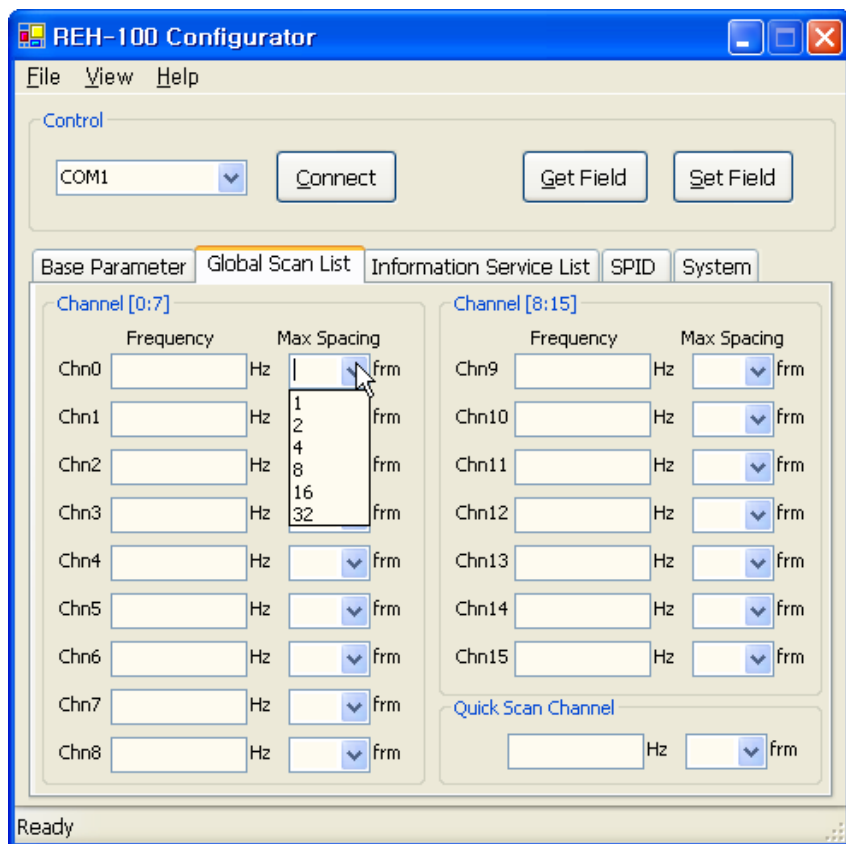

- Device can have 16 GSLs.
- You can choose “Max Spacing” - This is max non-sync frames.
- Quick Scan Channel : First of all device try connection to this frequency when start.


2.4. Information Service Address List Parameters

The screenshot shows the REH-100 Configurator window. At the top, there is a menu bar with 'File', 'View', and 'Help'. Below the menu bar is a 'Control' section with a dropdown menu set to 'COM1', and three buttons: 'Connect', 'Get Field', and 'Set Field'. Below this is a tabbed interface with five tabs: 'Base Parameter', 'Global Scan List', 'Information Service List' (which is selected), 'SPID', and 'System'. The 'Information Service List' tab is divided into two panels: 'ID[0:7]' and 'ID[8:15]'. Each panel contains a table with 8 rows (IS ID0 to IS ID7 for the first panel, and IS ID8 to IS ID15 for the second panel). Each row has a text input field for the ID and four checkboxes for 'PE', 'GE', 'En', and 'RM'. The status bar at the bottom left shows 'Ready'.

ID[0:7]					ID[8:15]				
IS ID	PE	GE	En	RM	IS ID	PE	GE	En	RM
IS ID0	☐	☐	☐	☐	IS ID8	☐	☐	☐	☐
IS ID1	☐	☐	☐	☐	IS ID9	☐	☐	☐	☐
IS ID2	☐	☐	☐	☐	IS ID10	☐	☐	☐	☐
IS ID3	☐	☐	☐	☐	IS ID11	☐	☐	☐	☐
IS ID4	☐	☐	☐	☐	IS ID12	☐	☐	☐	☐
IS ID5	☐	☐	☐	☐	IS ID13	☐	☐	☐	☐
IS ID6	☐	☐	☐	☐	IS ID14	☐	☐	☐	☐
IS ID7	☐	☐	☐	☐	IS ID15	☐	☐	☐	☐

- Device can have 16 Information Service Addresses.
 - ✓ PE : Priority Enable
 - ✓ GE : GOTAP Enable
 - ✓ En : address Enable
 - ✓ RM : Restricted Modify Enable

2.5. SPID Parameters

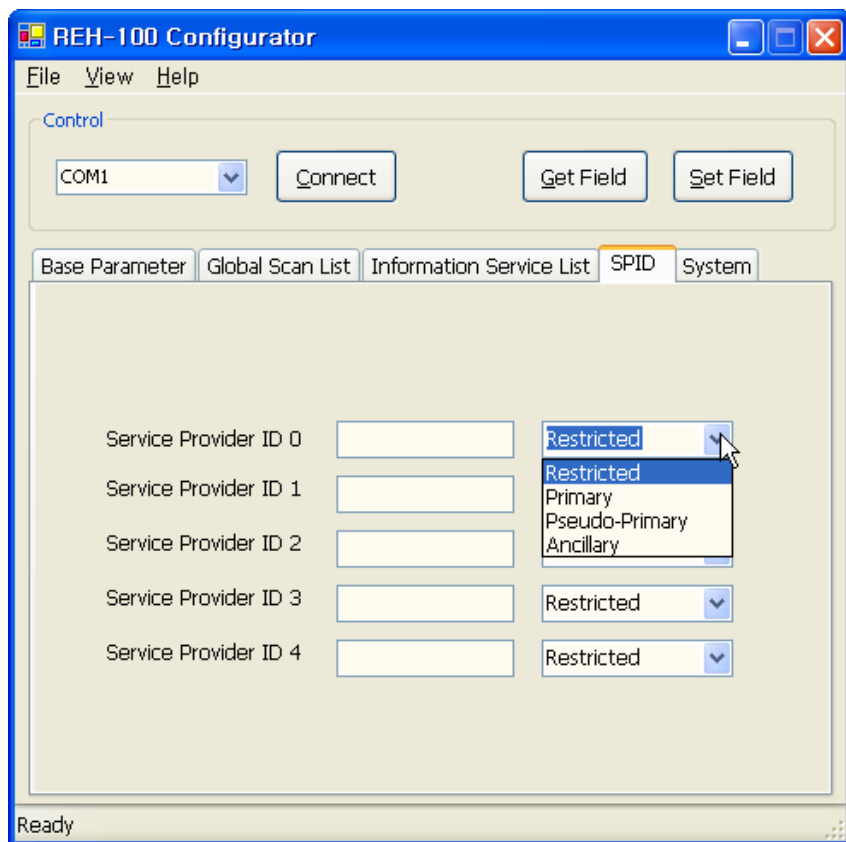

- Primary
- Pseudo-Primary
- Ancillary



3. CLP Communicator SW Oper Manual (UAR Tx)

3.1. Introduction

- This program transmit message to device, with E-mail address.
- Now it supports only e-mail address (not wireless address).


3.2. Setting Connection

- It connect to device through serial communication, 9600 bps.
- Menu "Setting"/"Connection"
- Default connection is COM1/9600 bps.

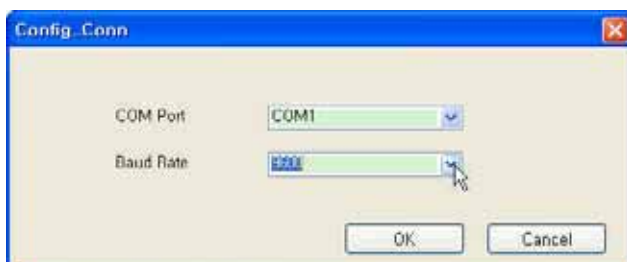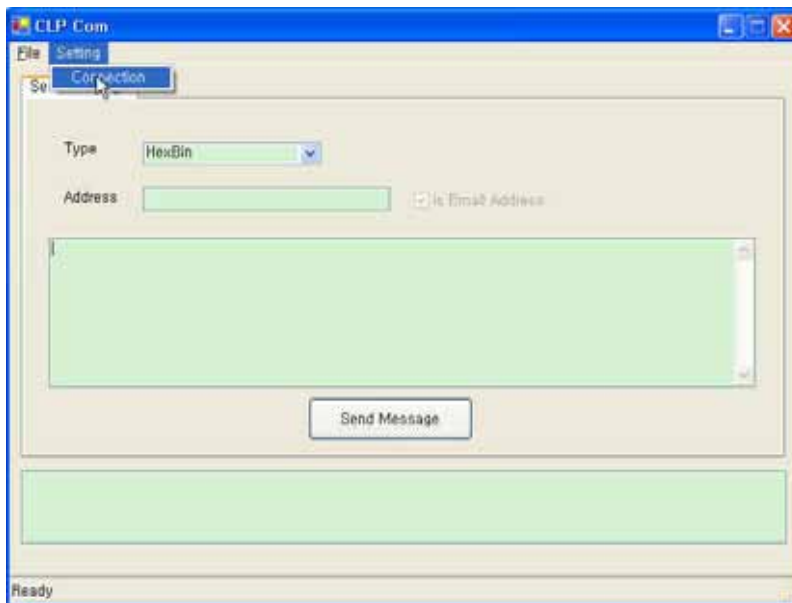



3.3. Connect

- Menu “File”/”Connect” : Connection
- Menu “File”/”Disconnect” : Connection close
- If you click menu “File”/”Connect”, you can see below message.
Connected – Port: COM1 BaudRate: 9600
(If you cannot find this message or see another message, connection fail)

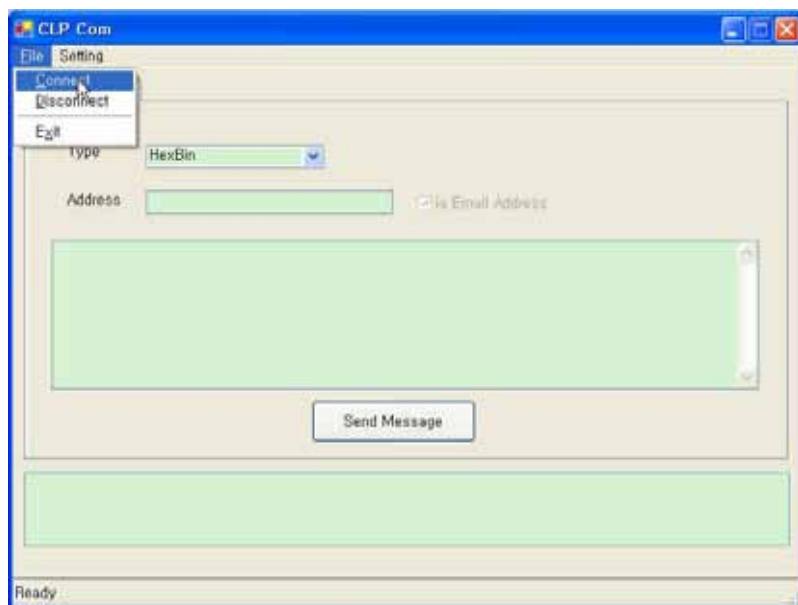

3.4. Send Message

- You first choice message type
 - ✓ Alphanumeric : Alpha-numeric message
 - ✓ HexBin : Binary message
- This communicator can support only e-mail address
- In binary message mode, characters must be numerics (0~9) and 12 characters (A~F, a~f).

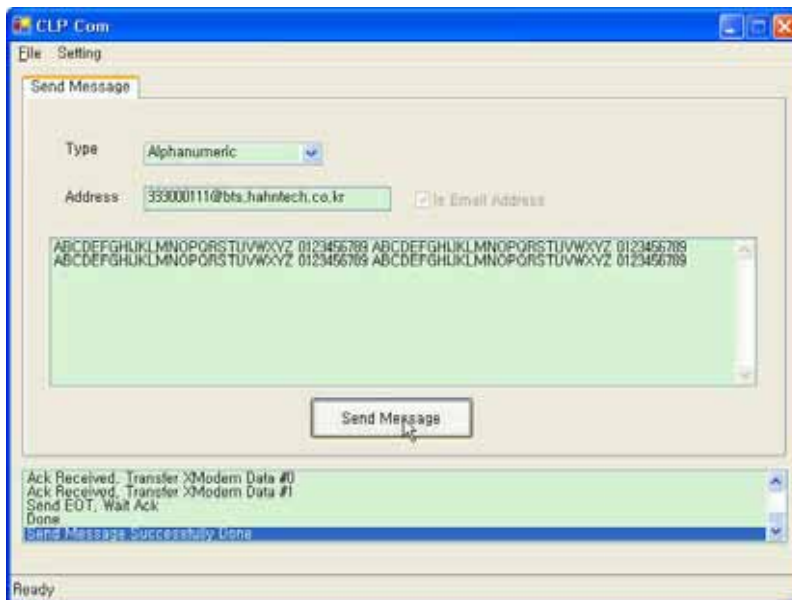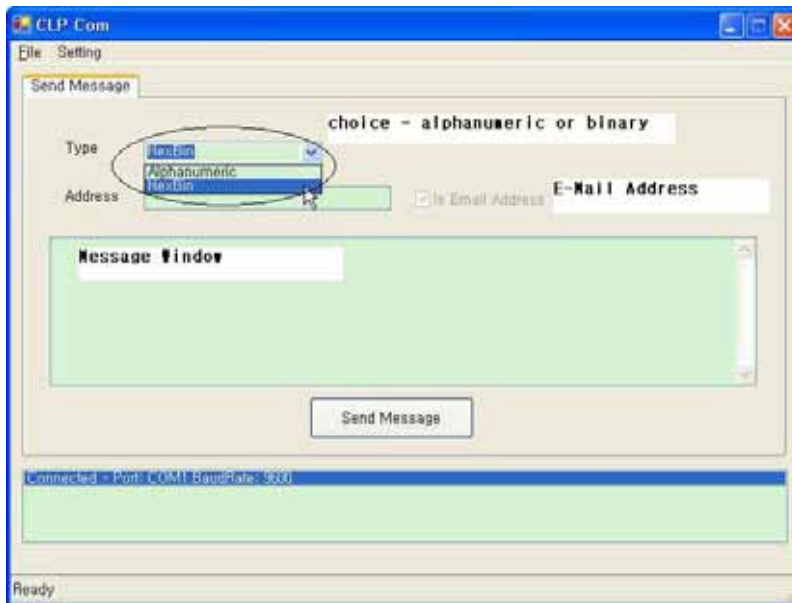

Appendix

A.1. Supported CLP Commands List

Model Name :	REH-100	2004.10.01	
CLP Doc Number / Date :	6881033B20	2004.05.17	
Command	Option	Implemented / Not Implemented	Comments
Acknowledge Message	read ack	○	
	multiple choice response	○	
	canned message	X	
	free form reply	○	
Configure LED		X	
Delete Message		○	
Download/Delete		○	
Get Canned Messages		X	
Get Configuration		○	Inventory control number : Module Product Code Electronic serial number (ESN) : Personal address RAM version number : Not used 0 Software version number 1 : Software Version Software version number 2 : Not used 0 Serial number : Module serial number
Get Directory		○	
Get Directory Entry		○	
Get Message		○	
Get Product Information		○	Product ID : '2' (REH-100) Protocol : 0x1B = ReFLEX 2.7
Get Status		○	
Move Message		X	
Read Analog Port		X	
Read Parallel Port		X	
Set Power		○	
Set Time and Date		○	
Transmit Message		○	
Transmit Short Message		○	
Write Parallel Port		X	
Get Option	Alert Enabled	○	
	Baud Serial Speed	○	
	Status Indicator	○	
	Indicator Options	○	
	Alert Interval	X	
	Alert Timeout	X	
	Alert Options	X	
	Auto Registration	○	
	Collapse Value	X	
	Time Correction	○	
Time Correction Reference	X		
Get RSSI (Signal Strength)		○	
Set Option	Baud Serial Speed	○	1200 ~ 9600 (in CLP) 0x5 : 19200 0x6 : 38400
	Status Indicator	○	0x0A : default as defined in CLP
	Indicator Options	○	
	Alert Interval	X	
	Alert Timeout	X	
	Alert Options	X	
	Auto Registration	○	
	Collapse Value	X	
	Time Correction	○	
Time Correction Reference	X		

A.2. RF Specifications

REH-100 RF Receiver SPECIFICATIONS	
Requirement	Minimum Acceptable Performance
Frequency Bands	929 ~ 942 MHz
Channel Spacing	6.25KHz / 10KHz / 12.5KHz available
Type of Modulation	2-level FSK @ 1600 & 3200 bit/s, $f_d \pm 2.4$ kHz
	4-level FSK @ 3200 & 6400 bit/s, $f_d \pm 0.8, \pm 2.4$ kHz
Paging Sensitivity	20uV/m 1% BER at 6400 bit/s
	-122dBm (Registration, 4-level FSK @ 6400 bit/s)
Spurious Emissions	<1000 μ V at the antenna from lowest internal frequency to 2.6 GHz with TX off
	<0.354 μ V at the antenna within ReFLEX device receive band
	<224 μ V at the antenna within ReFLEX device transmit band
Intermodulation Spurious Rjection	Desired at -107 dBm & 6400 bit/s
	Interferers at -50 dBm @ ± 50 kHz & ± 100 kHz
1MHz Blocking	80 dBc, typical
Image Rejection	40 dBc, typical
Spurious Rejection	40 dBc, typical
Selectivity	22dBc @ ± 10 KHz
	44dBc @ ± 20 KHz
	50dBc @ ± 25 KHz
Simulcast Delay (SDS) Performance	95% at Delay interval of 60us
Path 1: Dopler off, no delay.	87% at Delay interval of 80us
Path 2; Rayleigh on, 15 Hz dopler, time delay as 60us, 80us, 100us	68% at Delay interval of 100us received power level is -85dBm at the antenna port

REH-100 RF Transmitter SPECIFICATIONS	
Requirement	Minimum Acceptable Performance
Frequency Bands	896 ~ 902 MHz
Channel Spacing	12.5KHz in 6.25KHz steps
Type of Modulation	4-level FSK @ 800 & 1600 & 6400 & 9600 bit/s, $f_d \pm 0.8, \pm 2.4$ kHz
Adjacent and Alternate Channel Power due to Modulation	≤ -26 dBc in either 10 kHz adjacent channel (± 10 kHz) ≤ -45 dBc in either 10 kHz alternate channel (± 20 kHz) ≤ -13 dBm in either 10 kHz 2nd alternate channel (± 30 kHz)
Harmonic & Spurious Emissions	Meets Narrowband PCS FCC Part 24D Generally, ≤ -13 dBm ≤ -50 dBc in any 10kHz band 40kHz or more from f_c ≤ -80 dBm in any 10kHz band in device Rx band
Carrier-On State	≤ -60 dBm when inactive
Frequency Stability	0.5 ppm
Transmitter Power Output	> 750mW at the antenna port

A.3. Hardware Characteristics

A.3.1. Environmental

Operating Temperature Range	-10 ~ +60 °C
Storage Temperature Range	-40 ~ +95 °C
Relative Humidity	95% non-condensing
Vibration specification	TIA/EIA 603 3.3.4
Shock specification	TIA/EIA 603 3.3.5

A.3.2. Electrical Interface

Pin Number	Signal Name	Description
1	UART_TX	Transmit Data
2	TEST0	Reserved
3	UART_RX	Received Data
4	TEST1	Reserved
5	OPEN	OPEN
6	OPEN	OPEN
7	IO3	Input-Output Port3/Reserved
8	IO2	Input-Output Port2/Reserved
9	TEST2	Reserved
10	IO1	Input-Output Port1/Reserved
11	EN	Enable Device
12	IO0	Input-Output Port0/Reserved
13	GND	Ground
14	MRESET	Module Reset
15	GND	Ground
16	VEE_IN	Power to the board
17	GND	Ground
18	VEE_IN	Power to the board
19	GND	Ground
20	VEE_IN	Power to the board

NOTE TO OEM INTEGRATORS

A Class II Permissive Change is required and must be granted prior to marketing of any final host products operating at closer than 20 cm. to any persons.

Safety Information

1. SAFETY INFORMATION FOR FIXED WIRELESS TERMINALS

POTENTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

INTERFERENCE TO MEDICAL DEVICES

Certain electronic equipment may be shielded against RF signal from you wireless phone. (pacemakers, Hearing Aids, and so on) Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so.

RF signals may affect improperly installed or inadequately shielded electronic system in motor vehicles.

EXPOSURE TO RF ENERGY

Use only the supplied or an approved replacement antenna.

Do not touch the antenna unnecessarily when the phone is in use.

Do not move the antenna close to, or touching any exposed part of the body when making a call.

SAFETY INFORMATION FOR RF EXPOSURE

This equipment has been approved for mobile operation, and requires a minimum of 20 cm. spacing between antenna(s) and all person's body (excluding extremities of hands, wrist and feet) during wireless modes of operation.