

Catalogues:

1 Safety and Efficient Operation Guide	28
1.1 EMI	28
1.2 Safety Instruction	29
2 Brief Introduction	29
2.1 Bluetooth Technology	29
2.2 Bluetooth Headset	29
2.3 Stuff in the Package	30
3 Using Your Headset	31
3.1 Overview	31
3.2 Attention before Use	31
3.3 Choosing Wearing Preference	32
3.4 Adjusting Hanging Angle	32
3.5 Battery Charge	32
3.6 Turn On or Off Your Headset	33
3.7 Pairing Your Headset and Phone	34
3.8 Making a Call	34
3.9 Answering an Incoming Call	35
3.10 Ending a Call	36
3.11 Call Divert	36
3.12 Headset Volume Adjustment	36
3.13 Tone Off	37
3.14 Low Power Alert	37
4 Important Notices	37
4.1 Maintenance	37
4.2 Battery	38
4.3 Power Supply	38
4.4 Frequently Asked Questions	38
4.5 Other Instructions	40
4.6 Contact Us	40

1. Safety and Efficient Operation Guide

Note: Please Read This Handbook before Using Goer GBH100 Bluetooth Headset

Users do not have the right to enjoy the service after sale if they are not permitted by the manufacturer to make changes or modify the device in any way.

1.1 EMI

Note: Nearly every modern electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Electronic Devices

To avoid electromagnetic interference, please turn off your Bluetooth headset in any places where posted notices instruct you to do so.

Aircraft

Turn off your Bluetooth headset when on board an aircraft. The use of Bluetooth headset might interfere the telecommunication system of an aircraft.

Medical Instruments

Please keep away from the medical instruments in the hospital or medical units when using Bluetooth headset without being allowed. If you use any other personal medical device, such as pacemaker, please consult the manufacturer of your device to determine if it is adequately shielded from electromagnetic interference. Your physician might assist you in obtaining this information.

1.2 Safety Instruction

Placement

You are advised to put the Bluetooth headset in the place where no extrusion happened when it is not be used. Extrusion may lead to headset damage or body hurt.

Children

Keep the Bluetooth headset away from children. Some small knockdown parts might be swallowed and result in danger.

2. Brief Introduction

2.1 Bluetooth Technology

Bluetooth technology is a short-distance wireless communication technology. Bluetooth products are used in the frequencies of industry, science and medical industry (ISM). It applies technology of frequency-jump in order to avoid interference, the frequency band of 2.4GHz~2.4835GHz is divided into 79 channels and transfer data by the frequency of 1600 times per second with the transmission distance of about 10m(Class II).

2.2 Bluetooth Headset

Bluetooth headset is a wireless headset developed with Bluetooth technology. Your Bluetooth wireless headset can communicate with other Bluetooth devices such as mobile phone, PDA, and PC etc., within a range of approximately 10 meters (33 feet).

2.3 Stuff in the Package

—Bluetooth headset 	—charging cradle 
—ear-hook 	—silicon rubber holder 
—charging adapter 	—user's manual —hanging line

3. Using the Headset

3.1Overview

- 1-**Multi-function Button**
To turn on /off the headset, answering call or ending call, To indicate operating mode by the inside indicator light
- 2-**Ear-hook**
- 3-**Microphone**
To transfer sound into electronic signal
- 4- **Volume-Increase Button**
To increase the volume during conversation
- 5- **Volume-Decrease Button**
To decrease the volume during conversation
- 6- **Ornament Hole**
- 7-**Receiver**
To transfer electronic into sound
- 8-**Charging Interface**

3.2 Attention Before Use

1. Goer GBH 100 Bluetooth Headset accords with Bluetooth Ver. 1.1 and supports Bluetooth Headset Profile and Bluetooth Hand-free Profile) .
2. Goer GBH 100 headset must be fully charged (at least 2.5 hours) before you use it for the first time.
3. Pairing Goer GBH100 headset signal with your Bluetooth phone or other Bluetooth devices as 3.7 before use the headset.
4. Make sure the distance between headset and phone or other Bluetooth devices is less than 10m. Distance should be shortened if there is any barrier in between.

3.3 Adjust the Headset to Your Ear

The weight of GBH100 is just 10g. Wearing positions could be adjusted referring to the following figures.



3.4 Adjust Earhook Angle

Adjust earhook angle as shown in the figure below:
Note: Intensive care should be taken during this process in order not to break it.



3.5 Battery Charge


To charge the battery:

1. Plug the charging adapter into the headset's charging cradle.
2. Plug the charging adapter into an AC outlet. The red indicator light is on when connected.
3. Insert Goer GBH 100 Bluetooth headset into the charging cradle as shown in the below figures :
 - 1) Open up the lid of charging cradle;
 - 2) Insert headset to charging cradle;
 - 3) Press down the lid of charging cradle slightly.
4. The red indicator light flashes twice a second during charging.
5. Headset is fully charged when red indicator light stops flash to continuous light.
6. Unplug the charging adapter from outlet.

7. Remove the Bluetooth headset from charging cradle.

Note 1: The headset will be fully charged more than 2.5 hours before you use the headset for the first time.

Note 2: The red indicator light on headset will flash once every three seconds and make a caution alert when the battery is running out of power.

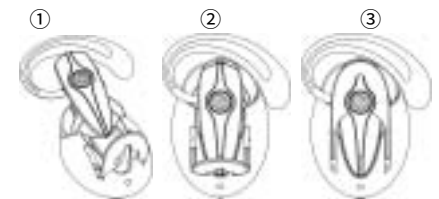

3.6 Turning on or off Bluetooth Headset

1. **Turn headset ON:** Press multi-function button for 5 seconds until blue light blinks 5 times and headset beeps twice, then release the multifunction button. The power is on.
2. **Turn headset OFF:** Press the multi-function button for 3 seconds until red light blinks quickly and headset beeps twice, then release the key. The power is off.

3.7 Pairing Your Headset and Phone

Before using the headset, make sure that the headset is paired to your phone or other Bluetooth devices.

1. Ensure the headset power is off before pairing.
2. Press the multi-function button until red and blue lights blink alternately; this process takes about 7

seconds, then release. The headset starts pairing. The blue light blinks first and please don't release the button until red and blue lights blink alternately. The headset beeps two times during pairing if you wore the headset.

3. Set your Bluetooth phone to discover the headset by the phone's instruction guide. It will take several seconds to pair headset to your phone.
4. Your phone will display blue-tooth's name after pairing. Choose "GBH 100" and confirm.
5. PIN=0000 is required to be entered; pairing is started after PIN confirmation.
6. Blue light is on instead of red and blue lights blinking alternately until pairing is done.

Note 1: Your phone cannot find the headset when your headset is not in the function of pairing.

Note 2 : If pairing is unsuccessful in about one minute, the headset will automatically transfer to the function of “waiting”.

Note 3 :Pairing is necessary because it guarantees communication security. Pin exchange can assure connection between your phone and headset merely.

3.8 Making a Call

Make sure the headset is connected to your phone before you make a call. The headset can support the function of “voice dialing” if your phone had this function too. For details on voice-dialing, see your phone’s user’s guide.

1. Voice dialing

Press multi-function button until headset beeps, indicating that you can say the name.

Note: Suggest using headset to record your

dialing voice.

2. Using phone’s keyboard

Dial numbers in the normal way. Your can hear on the headset when the call is connected.

3. Re-dialing the last dialed number

Press “volume increase” or “volume decrease” key.

Note: Your phone’ setting determines whether there is keypad tone or not. Adjust volume during your call is connected as shown 3.12

3.9 Answering An Incoming Call

Before using the headset to answer an incoming call, make sure that your headset is connected to your phone or phone has stored the pairing information of Bluetooth headset.

1. When there is an incoming call, the ring tone is

heard from the headset and the blue indicator light blinks quickly. Press the multi-function key and then release to answer the phone.

2. If “automatic answer” function is set on your phone, the headset automatically answers the call when it rings.
3. If the headset is off when there is an incoming call, press the multi-function key to turn on the headset, and then press it again to answer a call.

Note 1 : After being paired to the headset, some brands of phones don’t ring when there is an incoming call; the headset rings only, press the multi-function key to answer a call.

Note 2 : Some brand of phones, e.g. SonyEricsson/P800, don’t have the function of incoming call signal notice on the headset, just press the multi-function key to answer a call when the phone rings.

3.10 Ending a Call

When using Goer GBH 100 Bluetooth headset, you can end a call as following:

1. Press the multi-function key on the headset;
2. Press the end key on the phone;
3. Automatically end a call when the caller hangs up.

3.11 Call transferring from phone to headset

1. Press the multi-function key on the headset or the relevant key on the phone to transfer a call from phone to headset.
2. Turn off the headset or use relevant function on the phone to transfer a call from headset to phone.

Note: This mobile function is different from brand to brand.

3.12 Volume Adjustment

When having a call, you can control volume through volume button.

1. Press the “volume increase” button to increase volume.
2. Press the “volume decrease” button to decrease volume.

Note 1: There will be low and short sound each time pressing the volume button, and the same time volume will be higher and lower.

Note 2: Please tune your Bluetooth headset to a suitable volume between max. and min.

Note 3: You can tune the volume of mobile phone to control the volume of Bluetooth headset.

3.13 Silence

1. When having a call, press the volume control button until hearing inflexion, then microphone will be in whist state. The other side will not hear your voice.
2. When having a call, press the volume control button to bring to the normal state from whist state.

3.14 Low Battery Alert

When the battery is running out of power, the headset indicator will flash from blue to red and beep sound will be heard every 20 seconds indicating that the battery needs to be charged.

4. Important Information

4.1 Maintenance

1. Please keep the headset in a dry place, clean it with soft cloth.
2. Please do not keep the headset in a dusty place, neither with very high nor low air temperature.
3. Please do not disassemble the headset by yourself. The headset will be damaged in an unprofessional way.
4. Please do not have rough operation like dropping, knocking or shaking the headset to the Bluetooth headset. like drop, knock or shake the headset
5. Please do not short circuit the charging interface to protect the battery from being damaged.

4.2 Battery

1. Before the headset is being used for the first time, please make sure the battery is fully charged at least 2.5 hours.
2. Battery maintenance:
 - Only professional can change battery.
 - When the headset is not used for a long time, it needs to be charged at least once every two months.
 - Never dispose of batteries in a fire in case of explosion.
3. The headset call duration is up to about 5 hours, and standby time is up to 150 hours

4.3 Power Supply

1. Alternative power adapter can only connect with its compatible power source.

2. Hold the adapter not the cable when you remove the adapter from power socket.
3. Please do not use liquid or spray cleanser when cleaning the headset, and it must be removed from the power socket.

4.4 Frequently Asked Questions

1. Does Bluetooth headset can be used for all mobile phones?

—No, it is only suitable to mobile phones which have function of Bluetooth.

2. How long is effective distance from the handset to mobile phones?

—Effective distance is 10 meters (30 feet, Class II), with no barriers.

3. Can other Bluetooth phone user hear my conversation?

—No. You create a private link between the headset to Bluetooth phone after they got being paired.

4. Why does red light turn on and flash?

—It shows that the battery is running out of power. Please charge it.

5. Why can not mobile phone search the headset when the is under pairing?

—Bluetooth headset can be searched only when it is in the function under pairing, please refer to 3.7 for the details.

6. Is pairing needed each time when you use the Bluetooth headset?

—No. They will store the paired information even one or two of them are power off after two Bluetooth devices have paired.

7. Is it needed to reconnect when there is interruption between mobile phones and the headset?

—Different brand handset has different requirement.

Some handsets can be connected automatically if the headset is in the effective distance. While some mobile phones are needed to input password to reconnect it.

8. Why is there noise in my Bluetooth headset ?

- When the distance between mobile phones and headset exceeds operating range or in the area of limit, the noise will be louder.
- If the signal for mobile phone is not very good in your region, the headset will have bad calling quality either.

9.What to do if the handset is not clear ?

- Tune the phone volume or the headset volume, at the same time please check if your mobile phone is in the region with good signal.

4.5 Other instructions

Different mobile phones have different functions; the above instructions may not cover all the matters. For further information please refer to mobile

phone's manual, or consult with GoerTek.

The copyright and brand name are owned by the register. All information in this manual is subjected to change without prior notice. GoerTek has the authority to explain the above information.
Our website : www.goertek.com

4.6 Contact us

If you need other help, please contact us by the following means.

1. Qingdao GoerTek

Qingdao GoerTek Electronics Co., Ltd.

Tel: 86-532-8997277

Fax: 86-532-8997217

E-mail: market_qd@goertek.com

Add: Room 605, Innovation Building, Hi-tech Industrial Park, Qingdao, China

2. Taiwan GoerTek

GoerTek Electronics Inc.

Tel: 886-3-3398912

Fax: 886-3-3393216

E-mail: market_tw@goertek.com

Add: 7F.-8, No.51, Fuxing Rd., Taoyuan City, Taoyuan County 330, Taiwan

FCC Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Notice: Any changes or modification not expressly approved by the party responsible could void the user's authority to operate the device.