

## Appendix Test Data

|                  |                 |                    |                   |
|------------------|-----------------|--------------------|-------------------|
| Report No.:      | 18220WC20016302 | Test Sample No.:   | 1-2-2             |
| Start Test Date: | 2022.2.14       | Finish Test Date:  | 2022.2.22         |
| Test Engineer:   | <i>Jony He</i>  | Auditor:           | <i>Edward Pan</i> |
| Temperature:     | 24.3°C          | Relative Humidity: | 56.5 %            |
| Pressure:        | 1012 hPa        |                    |                   |

## Appendix A: DTS Bandwidth

## Test Result

| Test Mode | Antenna | Channel | DTS BW [MHz] | FL[MHz]  | FH[MHz]  | Limit[MHz] | Verdict |
|-----------|---------|---------|--------------|----------|----------|------------|---------|
| 11B       | Ant1    | 2412    | 7.480        | 2408.240 | 2415.720 | ≥0.5       | PASS    |
|           | Ant2    | 2412    | 8.400        | 2407.760 | 2416.160 | ≥0.5       | PASS    |
|           | Ant1    | 2437    | 8.440        | 2432.680 | 2441.120 | ≥0.5       | PASS    |
|           | Ant2    | 2437    | 8.760        | 2432.520 | 2441.280 | ≥0.5       | PASS    |
|           | Ant1    | 2462    | 8.640        | 2457.800 | 2466.440 | ≥0.5       | PASS    |
|           | Ant2    | 2462    | 8.120        | 2458.080 | 2466.200 | ≥0.5       | PASS    |
| 11G       | Ant1    | 2412    | 16.440       | 2403.760 | 2420.200 | ≥0.5       | PASS    |
|           | Ant2    | 2412    | 16.440       | 2403.760 | 2420.200 | ≥0.5       | PASS    |
|           | Ant1    | 2437    | 16.440       | 2428.760 | 2445.200 | ≥0.5       | PASS    |
|           | Ant2    | 2437    | 16.400       | 2428.800 | 2445.200 | ≥0.5       | PASS    |
|           | Ant1    | 2462    | 16.440       | 2453.800 | 2470.240 | ≥0.5       | PASS    |
|           | Ant2    | 2462    | 16.440       | 2453.800 | 2470.240 | ≥0.5       | PASS    |
| 11N20     | Ant1    | 2412    | 17.800       | 2403.120 | 2420.920 | ≥0.5       | PASS    |
|           | Ant2    | 2412    | 17.760       | 2403.120 | 2420.880 | ≥0.5       | PASS    |
|           | Ant1    | 2437    | 17.760       | 2428.120 | 2445.880 | ≥0.5       | PASS    |
|           | Ant2    | 2437    | 17.800       | 2428.120 | 2445.920 | ≥0.5       | PASS    |
|           | Ant1    | 2462    | 17.760       | 2453.160 | 2470.920 | ≥0.5       | PASS    |
|           | Ant2    | 2462    | 17.760       | 2453.160 | 2470.920 | ≥0.5       | PASS    |
| 11N40     | Ant1    | 2422    | 36.540       | 2403.760 | 2440.300 | ≥0.5       | PASS    |
|           | Ant2    | 2422    | 36.480       | 2403.760 | 2440.240 | ≥0.5       | PASS    |
|           | Ant1    | 2437    | 36.480       | 2418.760 | 2455.240 | ≥0.5       | PASS    |
|           | Ant2    | 2437    | 36.540       | 2418.760 | 2455.300 | ≥0.5       | PASS    |
|           | Ant1    | 2452    | 36.480       | 2433.760 | 2470.240 | ≥0.5       | PASS    |
|           | Ant2    | 2452    | 36.480       | 2433.760 | 2470.240 | ≥0.5       | PASS    |

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com



Hotline

400-003-0500

www.anbotech.com

## Test Graphs

11B\_Ant1\_2412



11B\_Ant2\_2412



11B\_Ant1\_2437



11B Ant2 2437



11B Ant1 2462



**Shenzhen Anbotek Compliance Laboratory Limited**

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: [service@anbotek.com](mailto:service@anbotek.com)



Hotline

400-003-0500

www.anbotech.com

11B\_Ant2\_2462



11G\_Ant1\_2412



11G\_Ant2\_2412



11G\_Ant1\_2437



11G\_Ant2\_2437



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11G\_Ant1\_2462



11G\_Ant2\_2462



11N20\_Ant1\_2412

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com



11N20\_Ant2\_2412



11N20\_Ant1\_2437



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11N20\_Ant2\_2437



11N20\_Ant1\_2462



11N20\_Ant2\_2462

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com




Hotline

400-003-0500


www.anbotek.com



11N40\_Ant1\_2422

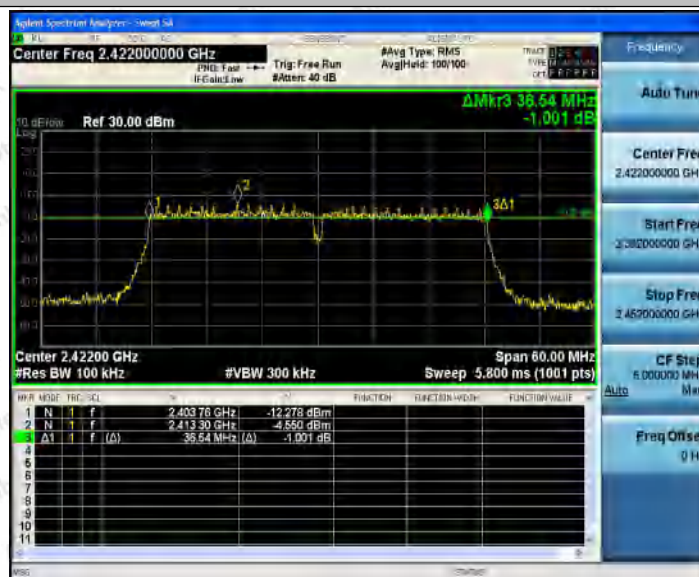

11N40\_Ant2\_2422

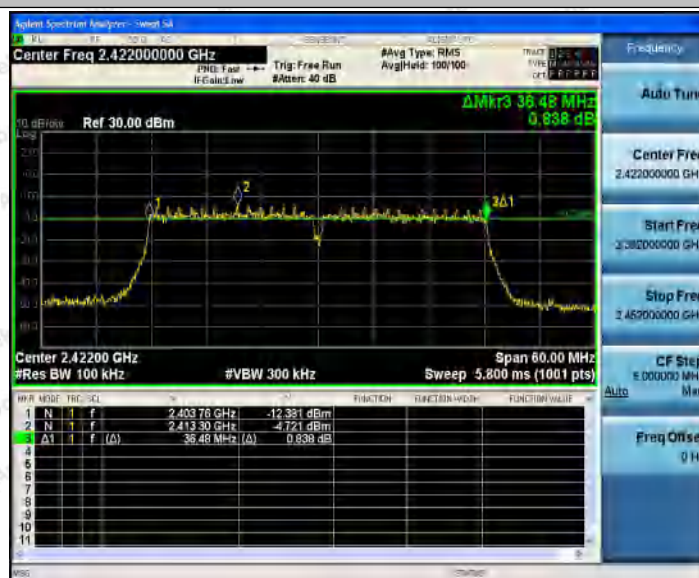


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11N40\_Ant1\_2437

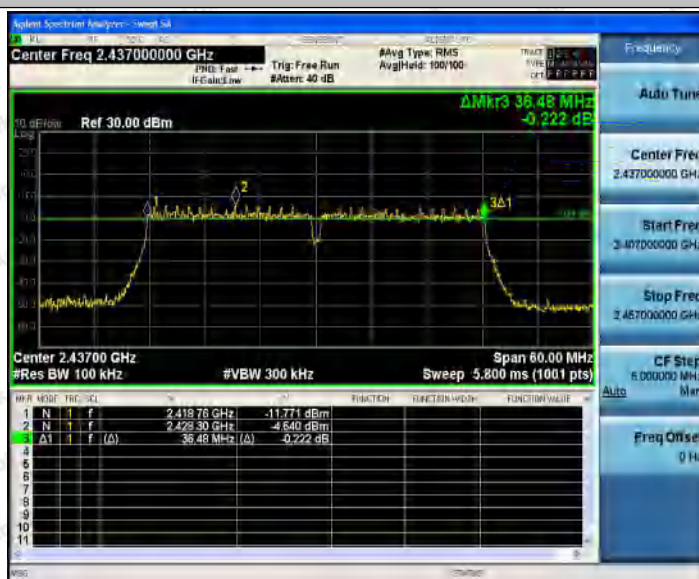

11N40\_Ant2\_2437



11N40\_Ant1\_2452



11N40\_Ant2\_2452




## Appendix B: Occupied Channel Bandwidth

### Test Result


| Test Mode | Antenna | Channel | OCB [MHz] | FL[MHz]  | FH[MHz]  | Limit[MHz] | Verdict |
|-----------|---------|---------|-----------|----------|----------|------------|---------|
| 11B       | Ant1    | 2412    | 11.533    | 2406.228 | 2417.761 | ---        | PASS    |
|           | Ant2    | 2412    | 11.531    | 2406.250 | 2417.781 | ---        | PASS    |
|           | Ant1    | 2437    | 11.541    | 2431.235 | 2442.776 | ---        | PASS    |
|           | Ant2    | 2437    | 11.565    | 2431.218 | 2442.783 | ---        | PASS    |
|           | Ant1    | 2462    | 11.525    | 2456.285 | 2467.810 | ---        | PASS    |
|           | Ant2    | 2462    | 11.569    | 2456.259 | 2467.828 | ---        | PASS    |
| 11G       | Ant1    | 2412    | 16.895    | 2403.594 | 2420.489 | ---        | PASS    |
|           | Ant2    | 2412    | 16.908    | 2403.588 | 2420.496 | ---        | PASS    |
|           | Ant1    | 2437    | 16.874    | 2428.577 | 2445.451 | ---        | PASS    |
|           | Ant2    | 2437    | 16.910    | 2428.580 | 2445.490 | ---        | PASS    |
|           | Ant1    | 2462    | 16.856    | 2453.649 | 2470.505 | ---        | PASS    |
|           | Ant2    | 2462    | 16.913    | 2453.633 | 2470.546 | ---        | PASS    |
| 11N20     | Ant1    | 2412    | 18.130    | 2402.955 | 2421.085 | ---        | PASS    |
|           | Ant2    | 2412    | 18.206    | 2402.928 | 2421.134 | ---        | PASS    |
|           | Ant1    | 2437    | 18.092    | 2427.922 | 2446.014 | ---        | PASS    |
|           | Ant2    | 2437    | 18.179    | 2427.933 | 2446.112 | ---        | PASS    |
|           | Ant1    | 2462    | 18.104    | 2453.026 | 2471.130 | ---        | PASS    |
|           | Ant2    | 2462    | 18.151    | 2453.005 | 2471.156 | ---        | PASS    |
| 11N40     | Ant1    | 2422    | 36.312    | 2403.819 | 2440.131 | ---        | PASS    |
|           | Ant2    | 2422    | 36.294    | 2403.848 | 2440.142 | ---        | PASS    |
|           | Ant1    | 2437    | 36.370    | 2418.793 | 2455.163 | ---        | PASS    |
|           | Ant2    | 2437    | 36.342    | 2418.849 | 2455.191 | ---        | PASS    |
|           | Ant1    | 2452    | 36.347    | 2433.874 | 2470.221 | ---        | PASS    |
|           | Ant2    | 2452    | 36.369    | 2433.835 | 2470.204 | ---        | PASS    |

## Test Graphs

11B\_Ant1\_2412

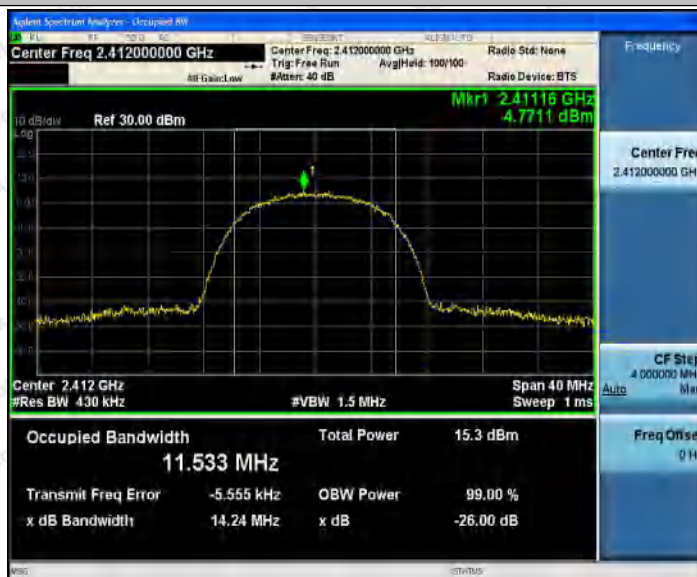

11B\_Ant2\_2412

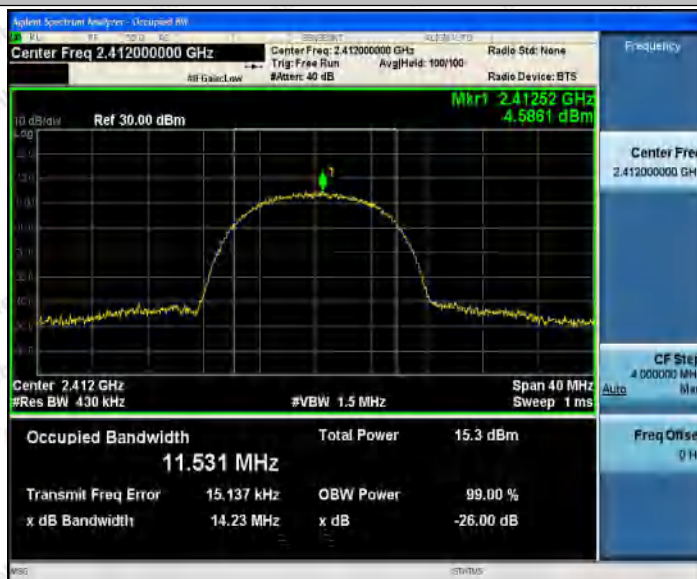


11B\_Ant1\_2437

### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com


Hotline  
400-003-0500  
www.anbotek.com

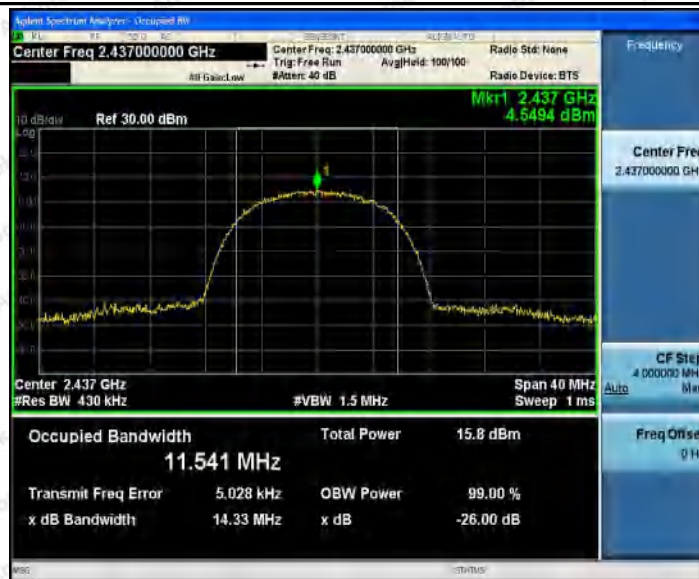

11B\_Ant2\_2437



11B\_Ant1\_2462

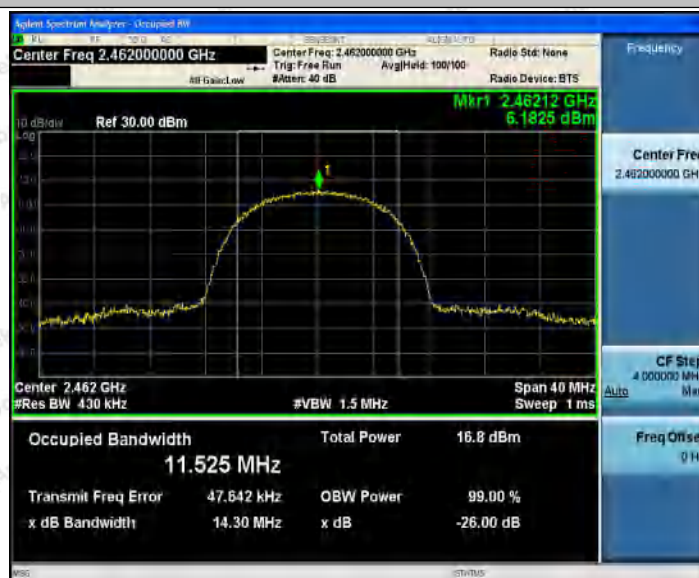

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

11B\_Ant2\_2462



11G\_Ant1\_2412



11G\_Ant2\_2412

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com



11G\_Ant1\_2437



11G\_Ant2\_2437



## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

11G\_Ant1\_2462



11G\_Ant2\_2462



11N20\_Ant1\_2412

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com


Hotline  
400-003-0500  
www.anbotek.com



11N20\_Ant2\_2412



11N20\_Ant1\_2437

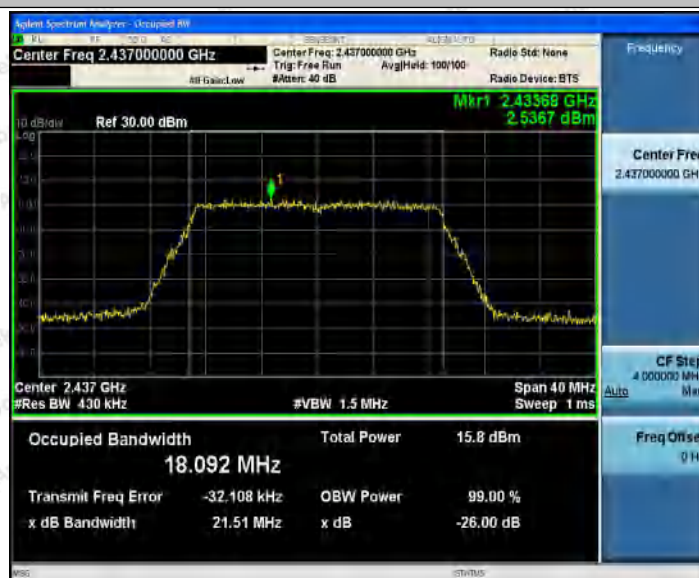

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com


11N20\_Ant2\_2437



11N20\_Ant1\_2462



11N20\_Ant2\_2462

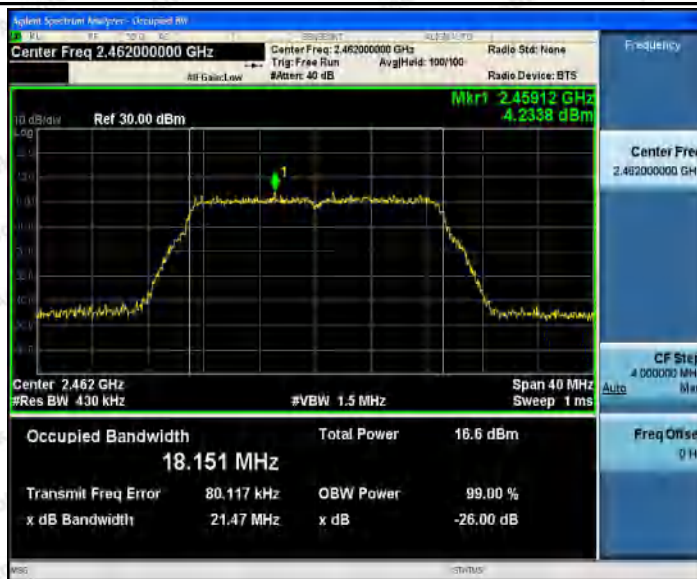

11N40\_Ant1\_2422



11N40\_Ant2\_2422



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com


11N40\_Ant1\_2437



11N40\_Ant2\_2437



11N40\_Ant1\_2452

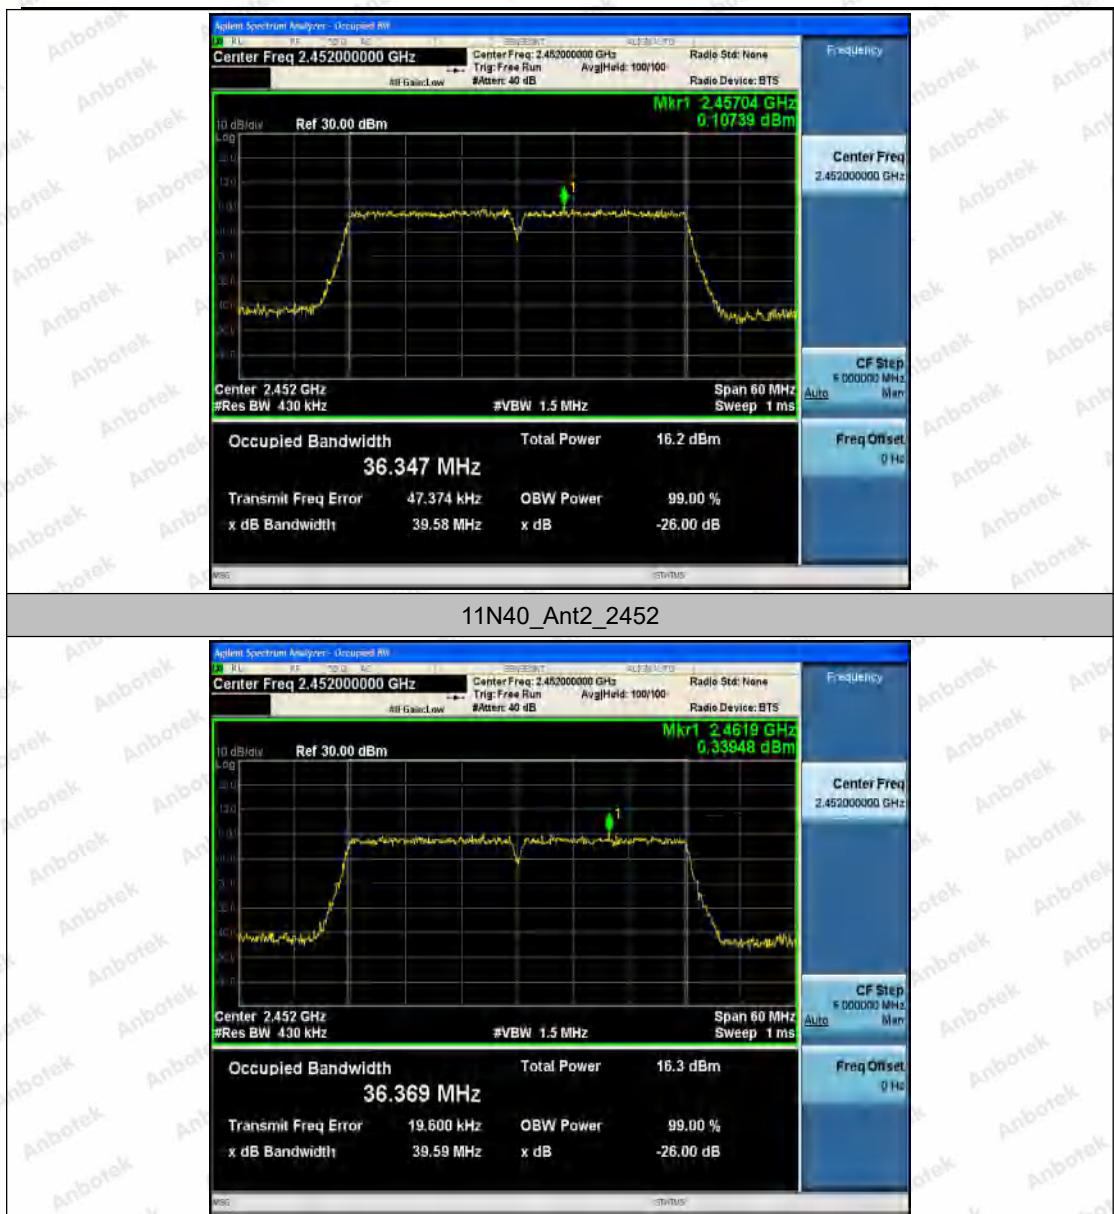

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

## Appendix C: Maximum conducted output power

### Test Result

| Test Mode | Antenna | Channel | Result[dBm] | Limit[dBm] | Verdict |
|-----------|---------|---------|-------------|------------|---------|
| 11B       | Ant1    | 2412    | 14.75       | ≤30        | PASS    |
|           | Ant2    | 2412    | 15.09       | ≤30        | PASS    |
|           | Ant1    | 2437    | 15.33       | ≤30        | PASS    |
|           | Ant2    | 2437    | 15.40       | ≤30        | PASS    |
|           | Ant1    | 2462    | 16.38       | ≤30        | PASS    |
|           | Ant2    | 2462    | 16.29       | ≤30        | PASS    |
| 11G       | Ant1    | 2412    | 15.99       | ≤30        | PASS    |
|           | Ant2    | 2412    | 16.06       | ≤30        | PASS    |
|           | Ant1    | 2437    | 16.71       | ≤30        | PASS    |
|           | Ant2    | 2437    | 16.58       | ≤30        | PASS    |
|           | Ant1    | 2462    | 17.58       | ≤30        | PASS    |
|           | Ant2    | 2462    | 17.07       | ≤30        | PASS    |
| 11N20     | Ant1    | 2412    | 16.13       | ≤30        | PASS    |
|           | Ant2    | 2412    | 15.99       | ≤30        | PASS    |
|           | Ant1    | 2437    | 16.56       | ≤30        | PASS    |
|           | Ant2    | 2437    | 16.26       | ≤30        | PASS    |
|           | Ant1    | 2462    | 17.16       | ≤30        | PASS    |
|           | Ant2    | 2462    | 17.33       | ≤30        | PASS    |
| 11N40     | Ant1    | 2422    | 13.85       | ≤30        | PASS    |
|           | Ant2    | 2422    | 13.77       | ≤30        | PASS    |
|           | Ant1    | 2437    | 13.82       | ≤30        | PASS    |
|           | Ant2    | 2437    | 13.91       | ≤30        | PASS    |
|           | Ant1    | 2452    | 14.40       | ≤30        | PASS    |
|           | Ant2    | 2452    | 14.50       | ≤30        | PASS    |

### MIMO:

| Test Condition | Test Mode | Channel | Result[dBm] | Limit[dBm] | Verdict |
|----------------|-----------|---------|-------------|------------|---------|
| NTNV           | 11N20MIMO | 2412    | 19.071      | ≤30        | PASS    |
|                |           | 2437    | 19.423      | ≤30        | PASS    |
|                |           | 2462    | 20.256      | ≤30        | PASS    |
|                | 11N40MIMO | 2422    | 16.820      | ≤30        | PASS    |
|                |           | 2437    | 16.876      | ≤30        | PASS    |
|                |           | 2452    | 17.461      | ≤30        | PASS    |

## Appendix D: Maximum power spectral density


### Test Result


| Test Mode | Antenna | Channel | Result[dBm/3kHz] | Limit[dBm/3kHz] | Verdict |
|-----------|---------|---------|------------------|-----------------|---------|
| 11B       | Ant1    | 2412    | -14.05           | ≤8              | PASS    |
|           | Ant2    | 2412    | -14.57           | ≤8              | PASS    |
|           | Ant1    | 2437    | -13.41           | ≤8              | PASS    |
|           | Ant2    | 2437    | -13.19           | ≤8              | PASS    |
|           | Ant1    | 2462    | -12.77           | ≤8              | PASS    |
|           | Ant2    | 2462    | -12.34           | ≤8              | PASS    |
| 11G       | Ant1    | 2412    | -17.45           | ≤8              | PASS    |
|           | Ant2    | 2412    | -17.21           | ≤8              | PASS    |
|           | Ant1    | 2437    | -16.36           | ≤8              | PASS    |
|           | Ant2    | 2437    | -17.15           | ≤8              | PASS    |
|           | Ant1    | 2462    | -15.89           | ≤8              | PASS    |
|           | Ant2    | 2462    | -16.31           | ≤8              | PASS    |
| 11N20     | Ant1    | 2412    | -16.97           | ≤8              | PASS    |
|           | Ant2    | 2412    | -16.87           | ≤8              | PASS    |
|           | Ant1    | 2437    | -16.24           | ≤8              | PASS    |
|           | Ant2    | 2437    | -16.95           | ≤8              | PASS    |
|           | Ant1    | 2462    | -15.7            | ≤8              | PASS    |
|           | Ant2    | 2462    | -14.26           | ≤8              | PASS    |
| 11N40     | Ant1    | 2422    | -18.79           | ≤8              | PASS    |
|           | Ant2    | 2422    | -17.78           | ≤8              | PASS    |
|           | Ant1    | 2437    | -17.41           | ≤8              | PASS    |
|           | Ant2    | 2437    | -18.29           | ≤8              | PASS    |
|           | Ant1    | 2452    | -17.71           | ≤8              | PASS    |
|           | Ant2    | 2452    | -17.23           | ≤8              | PASS    |

### MIMO:


| Test Condition | Test Mode | Channel | Result [dBm/MHz] | Limit[dBm/MHz] | Verdict |
|----------------|-----------|---------|------------------|----------------|---------|
| NTNV           | 11N20MIMO | 2412    | -13.909          | ≤8             | PASS    |
|                |           | 2437    | -13.570          | ≤8             | PASS    |
|                |           | 2462    | -11.910          | ≤8             | PASS    |
|                | 11N40MIMO | 2422    | -15.245          | ≤8             | PASS    |
|                |           | 2437    | -14.817          | ≤8             | PASS    |
|                |           | 2452    | -14.453          | ≤8             | PASS    |

## Test Graphs

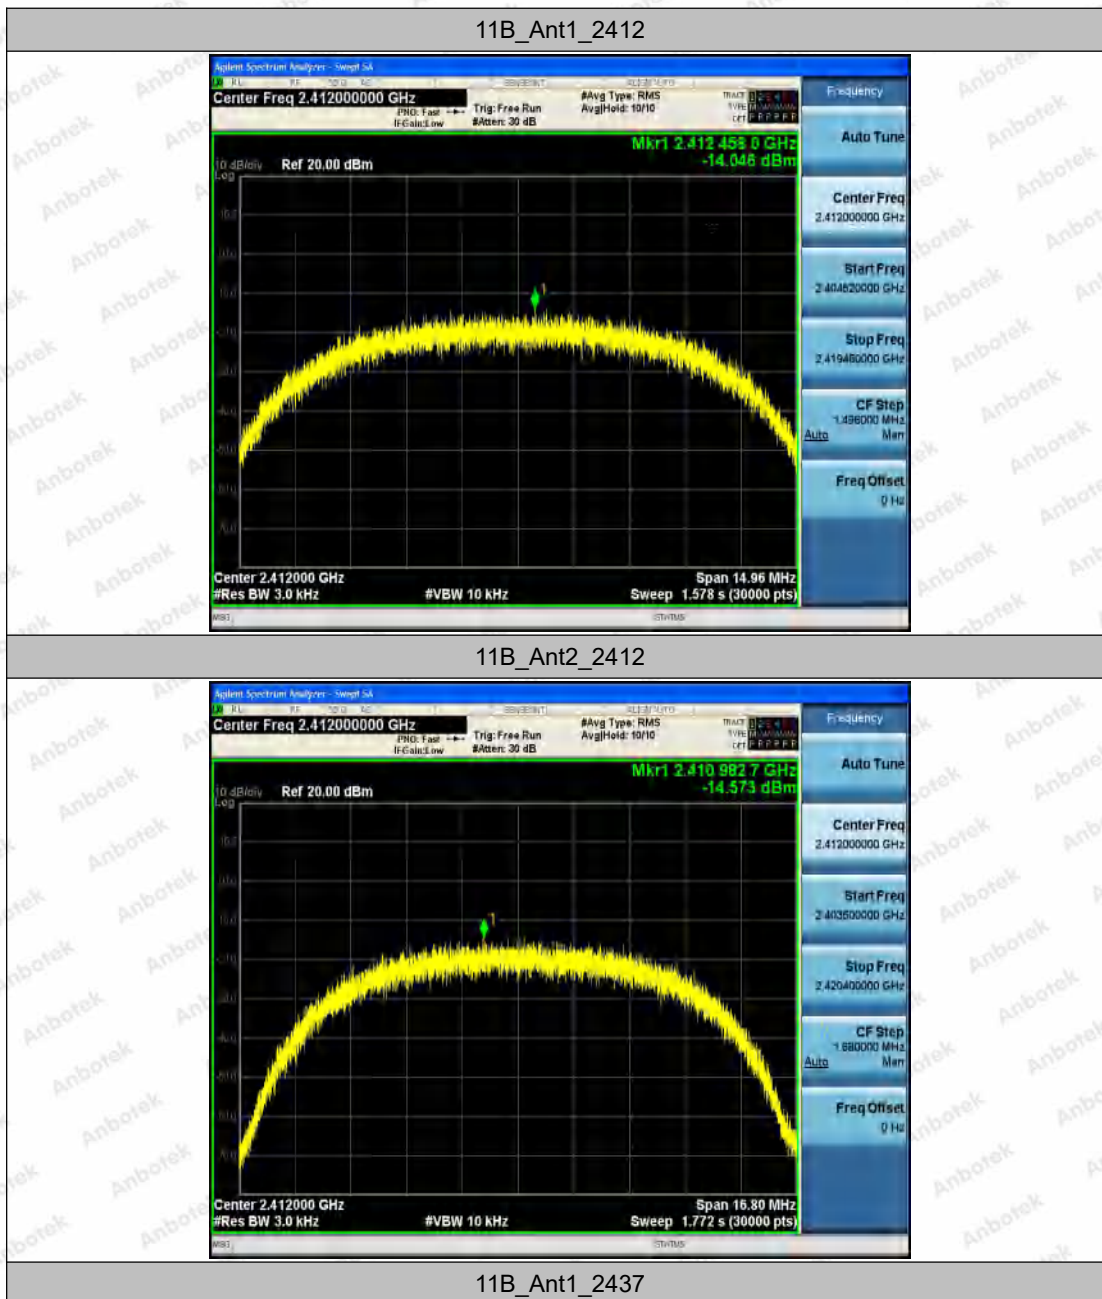


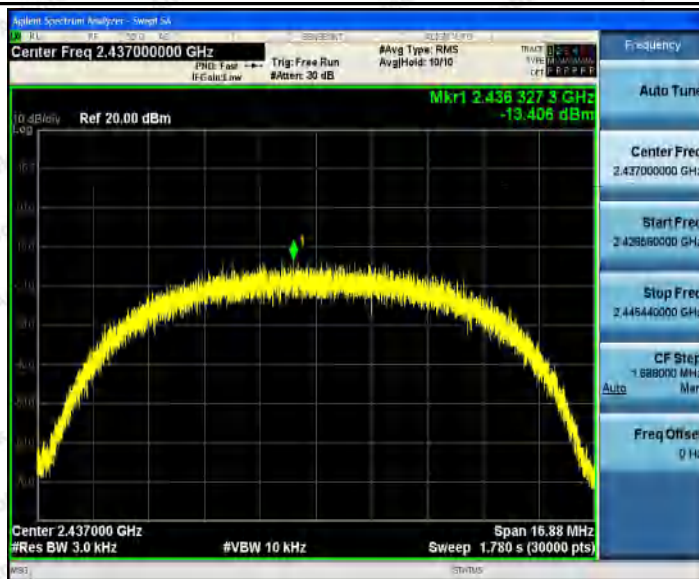

11B\_Ant2\_2437

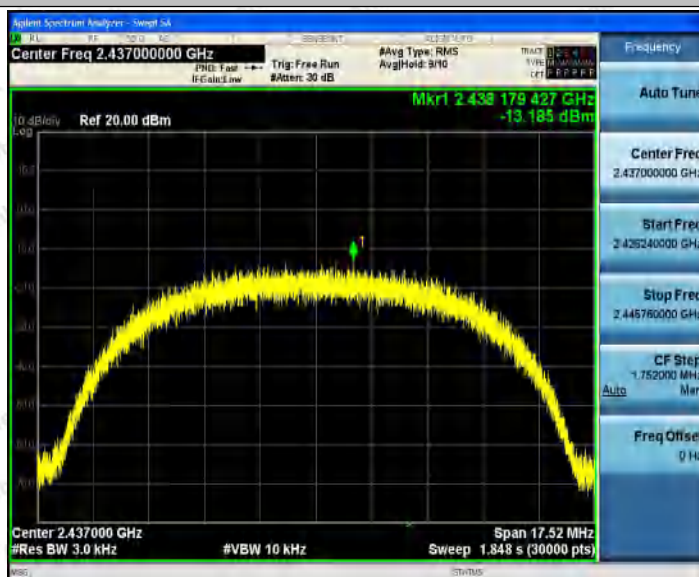

11B\_Ant1\_2462

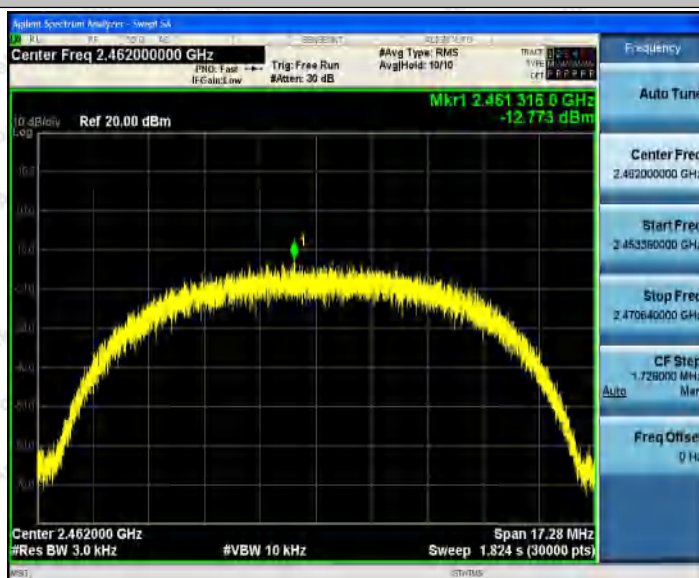


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

11B\_Ant2\_2462

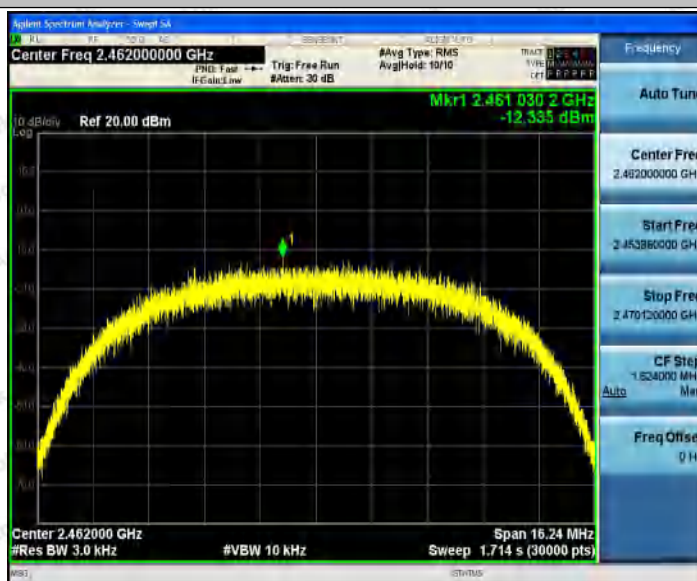

11G\_Ant1\_2412

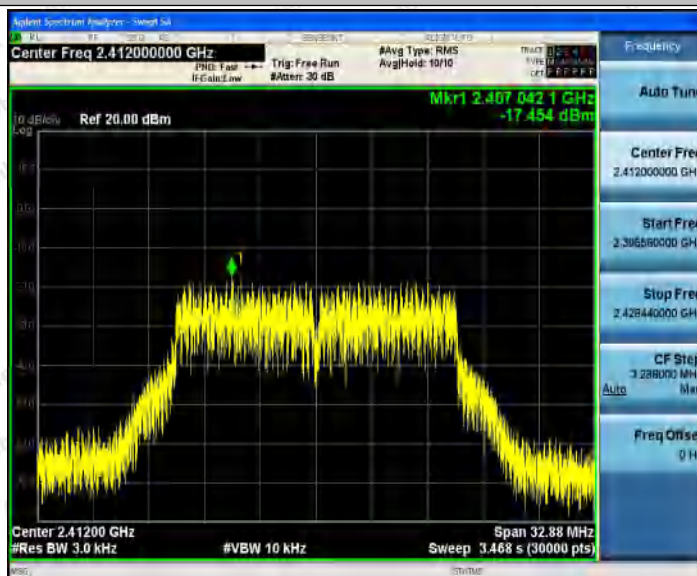


11G\_Ant2\_2412

## Shenzhen Anbotech Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com


Hotline  
400-003-0500  
www.anbotech.com

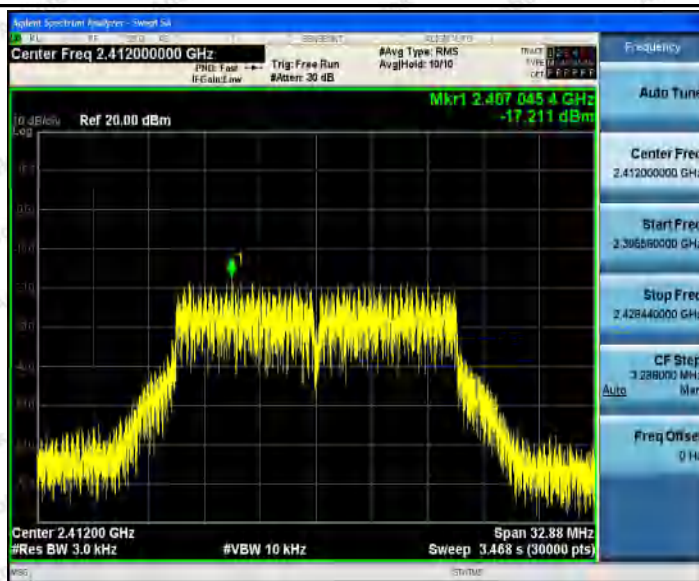

11G\_Ant1\_2437

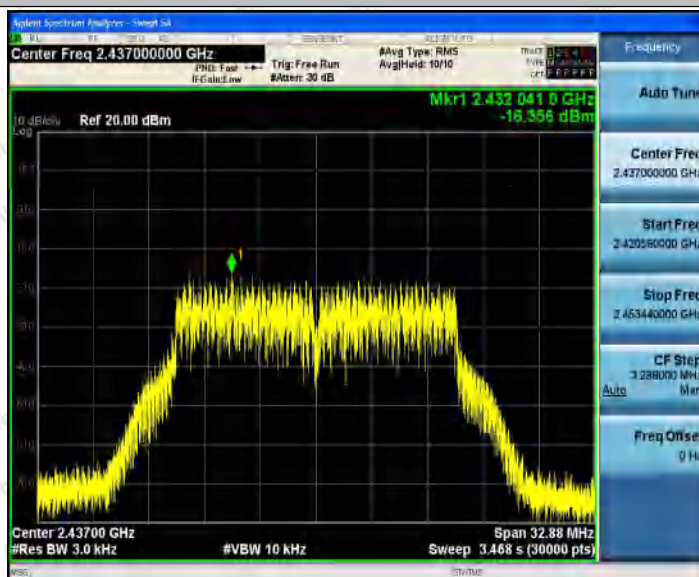

11G\_Ant2\_2437

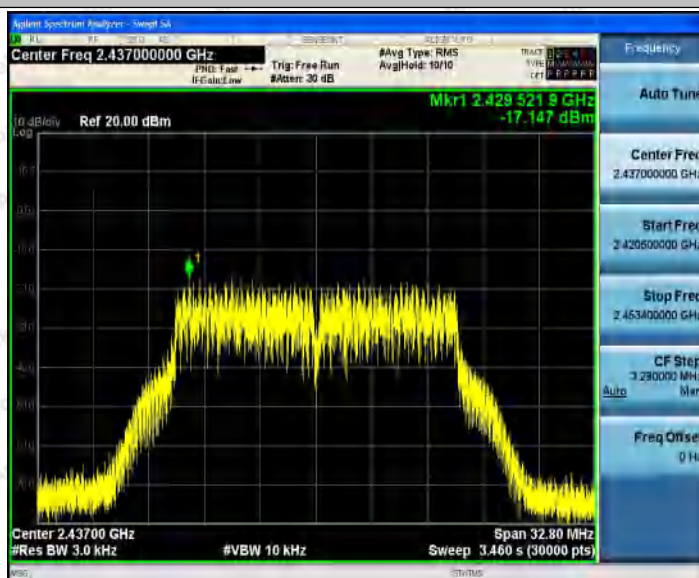


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com


11G\_Ant1\_2462

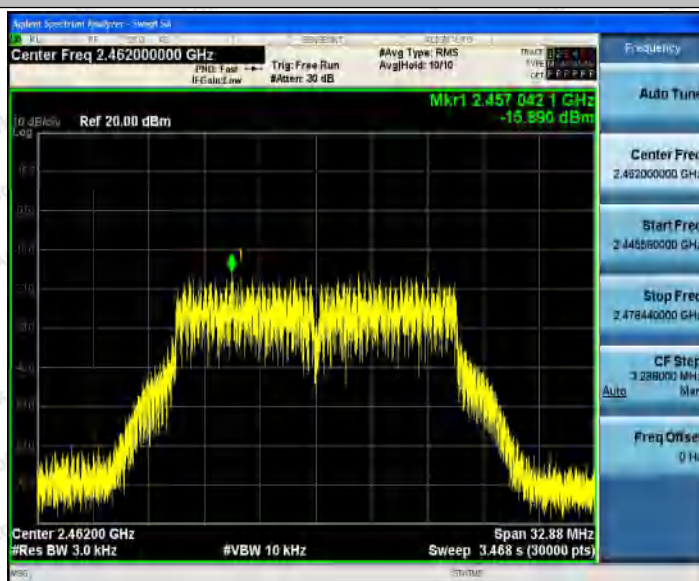


11G\_Ant2\_2462

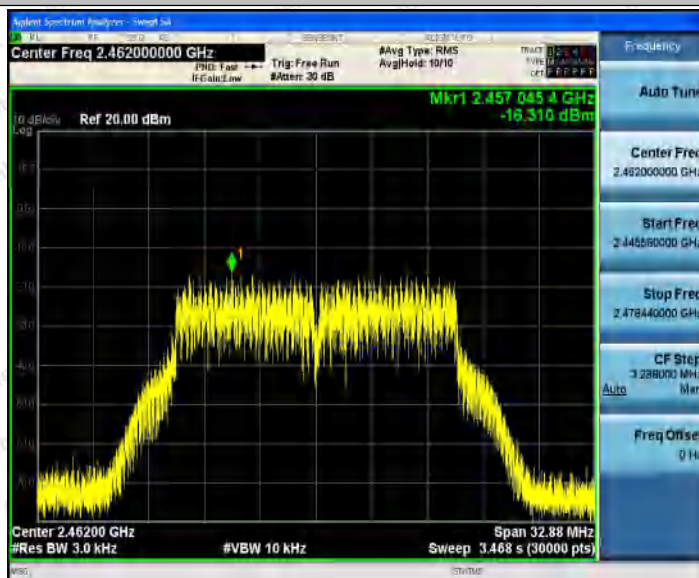


11N20\_Ant1\_2412

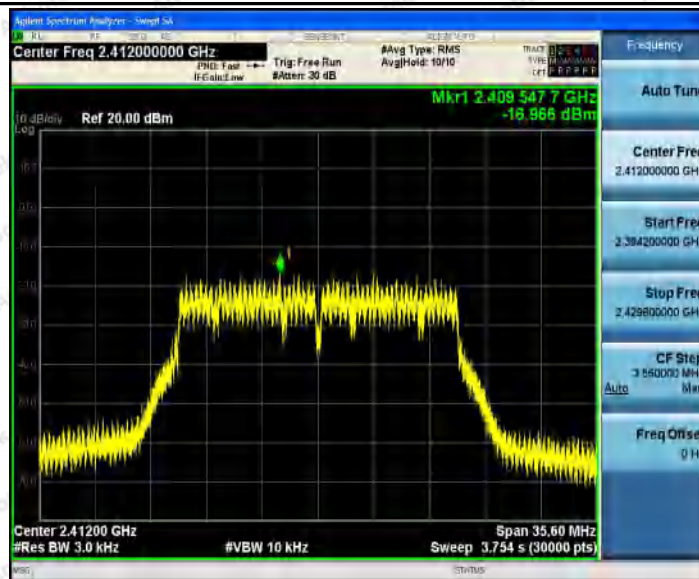

11N20\_Ant2\_2412

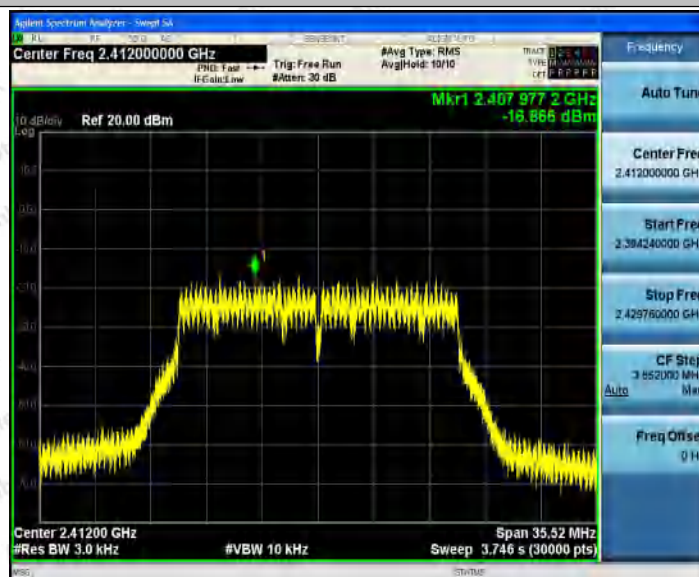

11N20\_Ant1\_2437

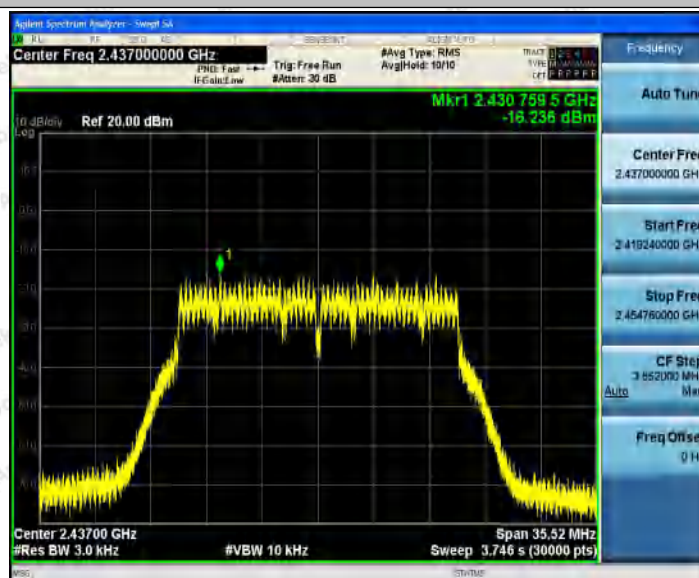


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com


11N20\_Ant2\_2437

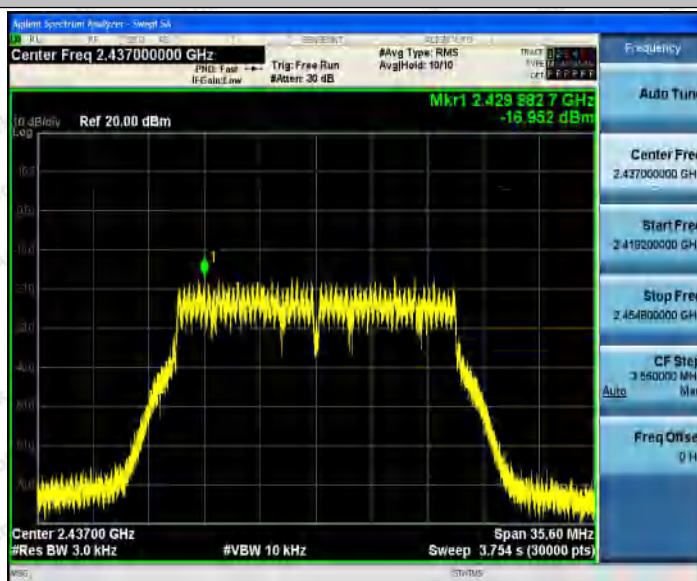


11N20\_Ant1\_2462

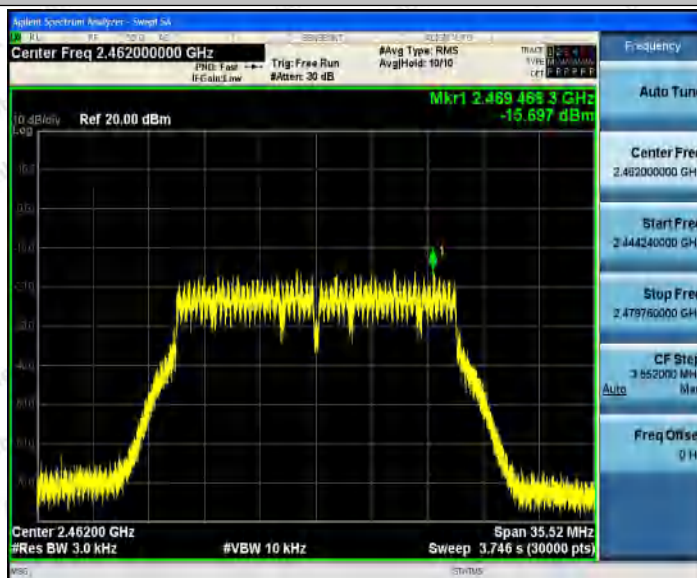


11N20\_Ant2\_2462

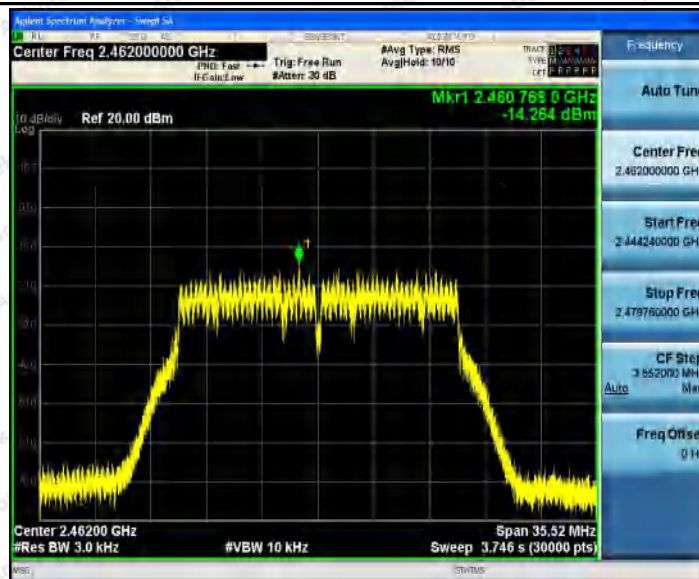

11N40\_Ant1\_2422

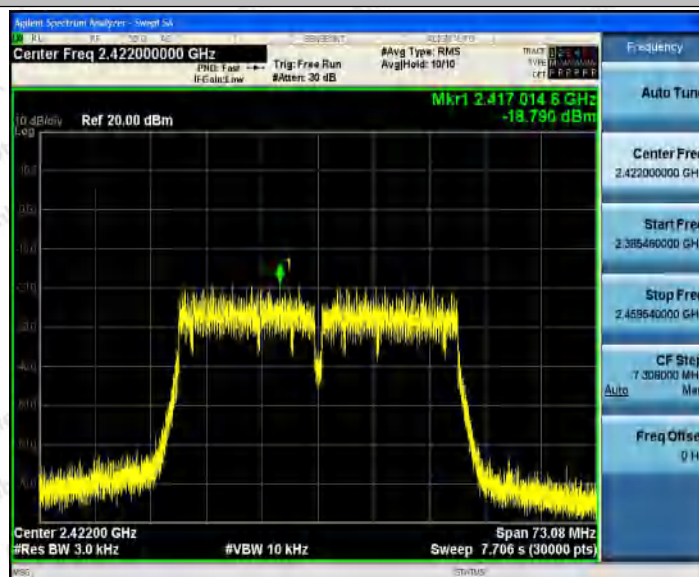

11N40\_Ant2\_2422

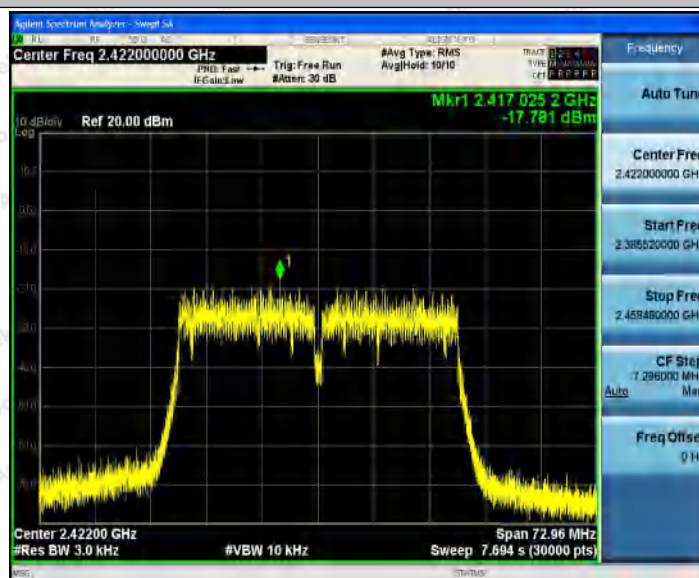


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com


11N40\_Ant1\_2437

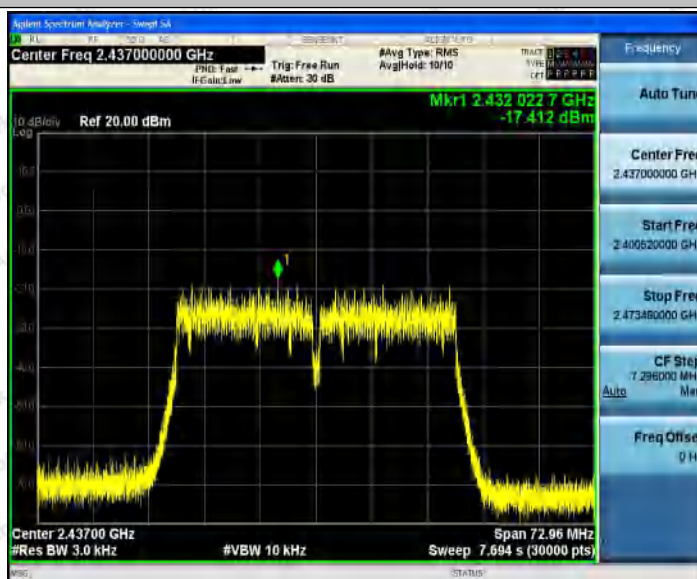

11N40\_Ant2\_2437

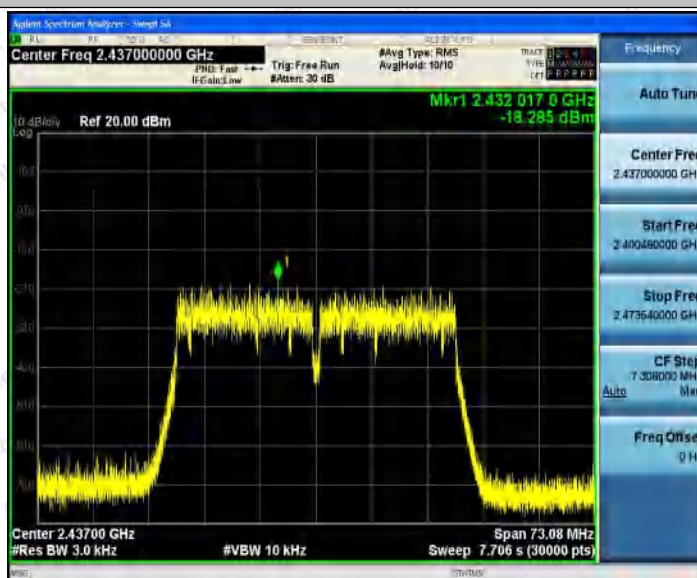

11N40\_Ant1\_2452

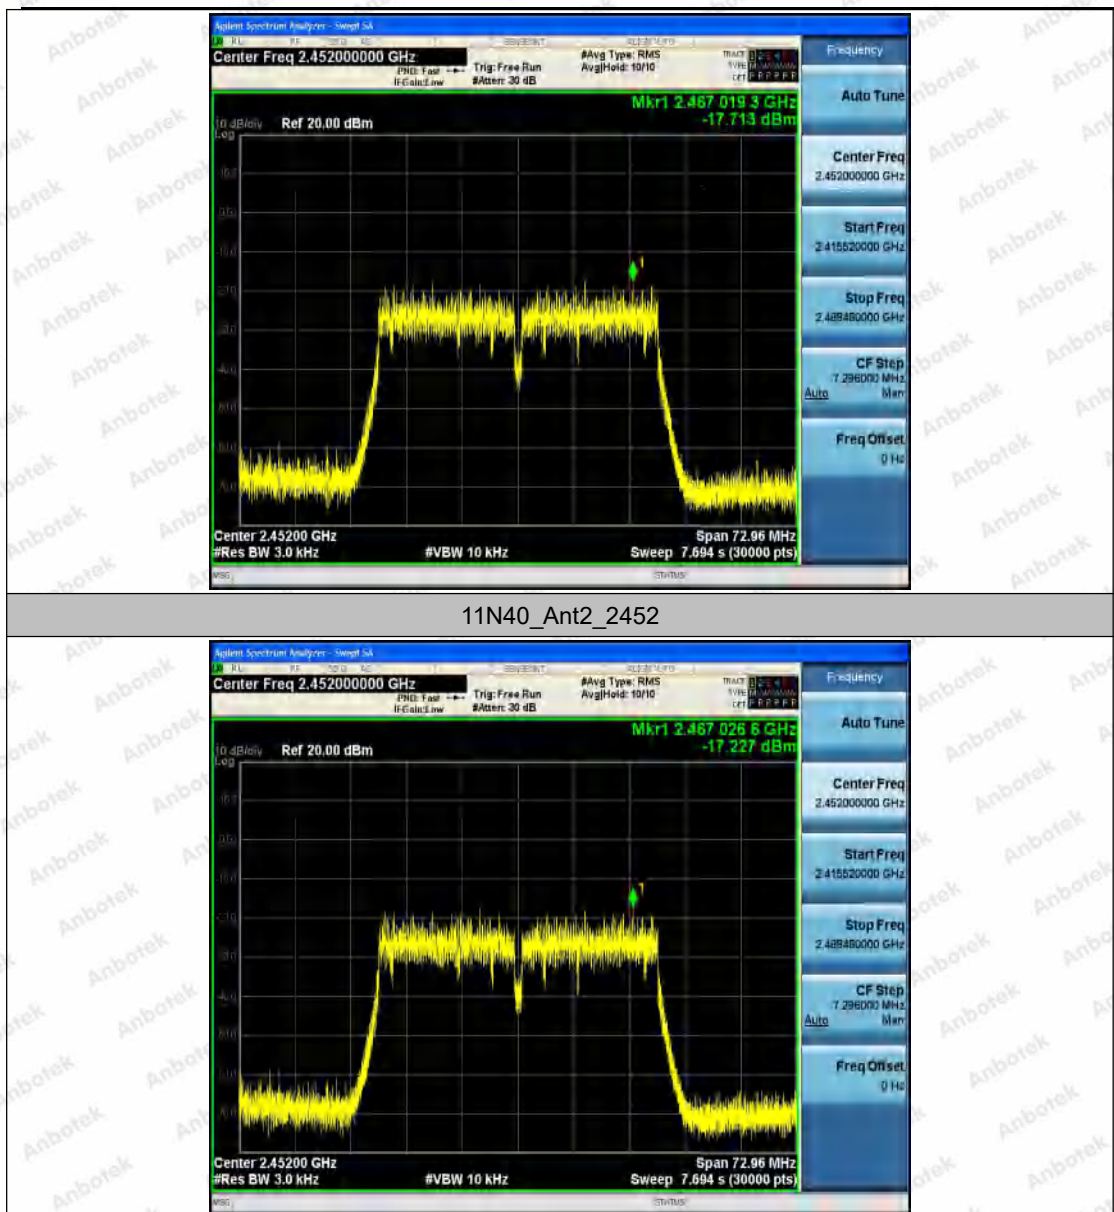

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

## Appendix E: Band edge measurements

### Test Result


| Test Mode | Antenna | Ch Name | Channel | Ref Level[dBm] | Result[dBm] | Limit[dBm]    | Verdict |
|-----------|---------|---------|---------|----------------|-------------|---------------|---------|
| 11B       | Ant1    | Low     | 2412    | 0.58           | -48.56      | $\leq -19.42$ | PASS    |
|           | Ant2    | Low     | 2412    | -0.16          | -47.9       | $\leq -20.16$ | PASS    |
|           | Ant1    | High    | 2462    | 2.87           | -56.33      | $\leq -17.13$ | PASS    |
|           | Ant2    | High    | 2462    | 1.24           | -57.24      | $\leq -18.76$ | PASS    |
| 11G       | Ant1    | Low     | 2412    | -2.55          | -39.26      | $\leq -22.55$ | PASS    |
|           | Ant2    | Low     | 2412    | -2.74          | -38.8       | $\leq -22.74$ | PASS    |
|           | Ant1    | High    | 2462    | -0.82          | -53.75      | $\leq -20.82$ | PASS    |
|           | Ant2    | High    | 2462    | -1.33          | -54.07      | $\leq -21.33$ | PASS    |
| 11N20     | Ant1    | Low     | 2412    | -2.40          | -37.29      | $\leq -22.4$  | PASS    |
|           | Ant2    | Low     | 2412    | -2.57          | -38.11      | $\leq -22.57$ | PASS    |
|           | Ant1    | High    | 2462    | -1.11          | -54.23      | $\leq -21.11$ | PASS    |
|           | Ant2    | High    | 2462    | -1.17          | -52.36      | $\leq -21.17$ | PASS    |
| 11N40     | Ant1    | Low     | 2422    | -4.72          | -46.44      | $\leq -24.72$ | PASS    |
|           | Ant2    | Low     | 2422    | -4.92          | -46.54      | $\leq -24.92$ | PASS    |
|           | Ant1    | High    | 2452    | -4.29          | -48.15      | $\leq -24.29$ | PASS    |
|           | Ant2    | High    | 2452    | -4.31          | -48.36      | $\leq -24.31$ | PASS    |

## Test Graphs

11B\_Ant1\_Low\_2412



11B\_Ant2\_Low\_2412

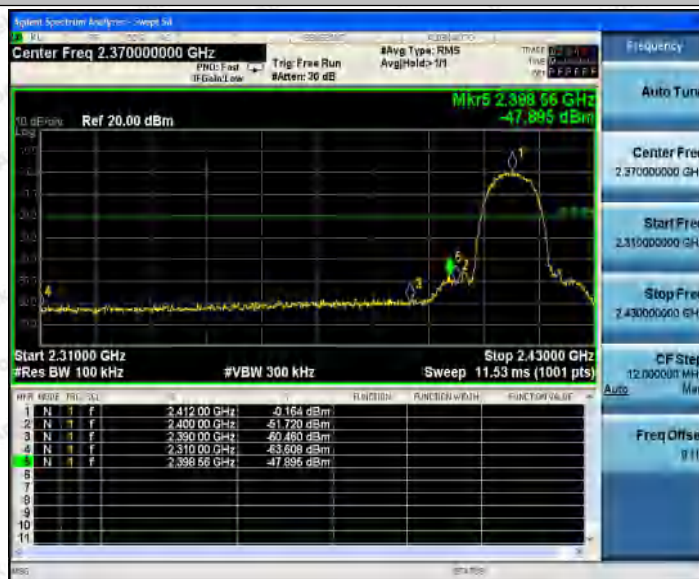

11B\_Ant1\_High\_2462



11B\_Ant2\_High\_2462



11G\_Ant1\_Low\_2412



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11G\_Ant2\_Low\_2412



11G\_Ant1\_High\_2462



11G\_Ant2\_High\_2462



11N20\_Ant1\_Low\_2412



11N20\_Ant2\_Low\_2412



## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11N20\_Ant1\_High\_2462



11N20\_Ant2\_High\_2462



11N40\_Ant1\_Low\_2422

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com


Hotline  
400-003-0500  
www.anbotech.com



11N40\_Ant2\_Low\_2422



11N40\_Ant1\_High\_2452

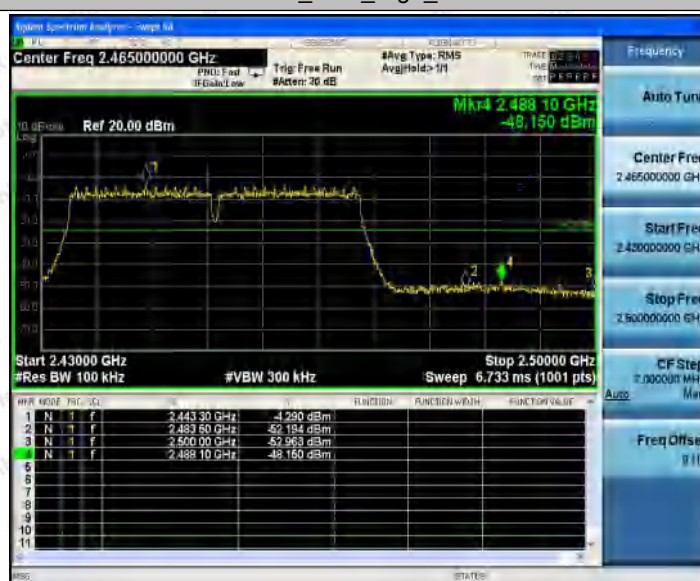


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

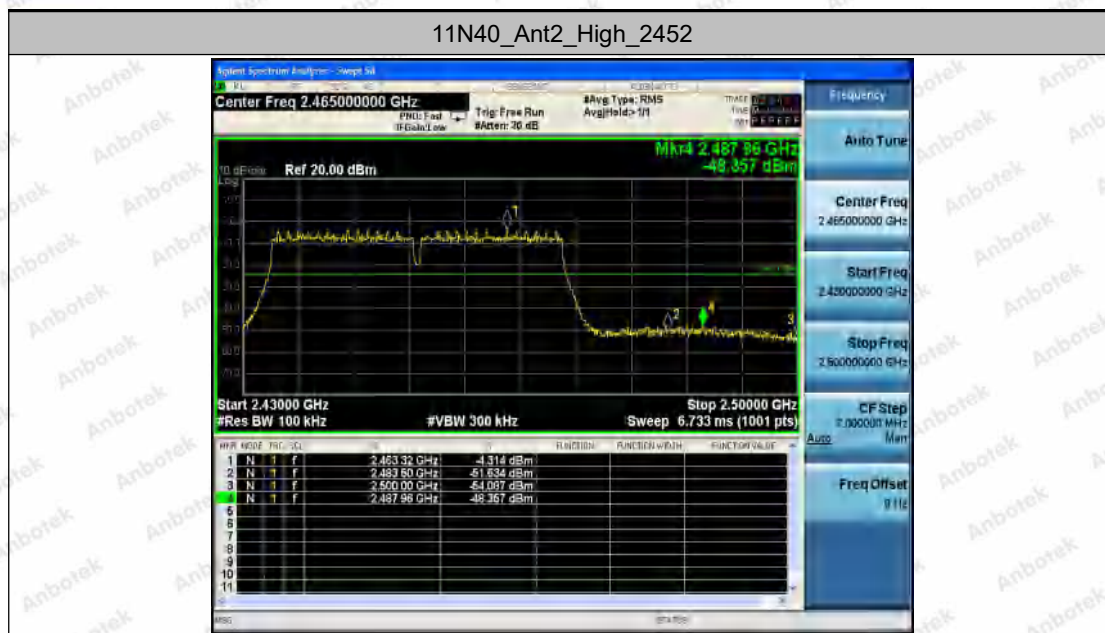

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

## Appendix F: Conducted Spurious Emission

### Test Result

| Test Mode | Antenna | Channel | Freq Range<br>[Mhz] | Ref Level<br>[dBm] | Result<br>[dBm] | Limit<br>[dBm] | Verdict |
|-----------|---------|---------|---------------------|--------------------|-----------------|----------------|---------|
| 11B       | Ant1    | 2412    | Reference           | 0.17               | 0.17            | ---            | PASS    |
|           |         |         | 30~1000             | 0.17               | -70.51          | ≤-19.83        | PASS    |
|           |         |         | 1000~26500          | 0.17               | -55.94          | ≤-19.83        | PASS    |
|           | Ant2    | 2412    | Reference           | 1.24               | 1.24            | ---            | PASS    |
|           |         |         | 30~1000             | 1.24               | -68.59          | ≤-18.76        | PASS    |
|           |         |         | 1000~26500          | 1.24               | -56.75          | ≤-18.76        | PASS    |
|           | Ant1    | 2437    | Reference           | 0.50               | 0.50            | ---            | PASS    |
|           |         |         | 30~1000             | 0.50               | -70.79          | ≤-19.5         | PASS    |
|           |         |         | 1000~26500          | 0.50               | -55.3           | ≤-19.5         | PASS    |
|           | Ant2    | 2437    | Reference           | 0.41               | 0.41            | ---            | PASS    |
|           |         |         | 30~1000             | 0.41               | -68.01          | ≤-19.59        | PASS    |
|           |         |         | 1000~26500          | 0.41               | -56.34          | ≤-19.59        | PASS    |
|           | Ant1    | 2462    | Reference           | 1.28               | 1.28            | ---            | PASS    |
|           |         |         | 30~1000             | 1.28               | -70.5           | ≤-18.72        | PASS    |
|           |         |         | 1000~26500          | 1.28               | -56.1           | ≤-18.72        | PASS    |
|           | Ant2    | 2462    | Reference           | 2.26               | 2.26            | ---            | PASS    |
|           |         |         | 30~1000             | 2.26               | -69.25          | ≤-17.74        | PASS    |
|           |         |         | 1000~26500          | 2.26               | -56.93          | ≤-17.74        | PASS    |
| 11G       | Ant1    | 2412    | Reference           | -2.55              | -2.55           | ---            | PASS    |
|           |         |         | 30~1000             | -2.55              | -70.03          | ≤-22.55        | PASS    |
|           |         |         | 1000~26500          | -2.55              | -55.63          | ≤-22.55        | PASS    |
|           | Ant2    | 2412    | Reference           | -2.74              | -2.74           | ---            | PASS    |
|           |         |         | 30~1000             | -2.74              | -69.92          | ≤-22.74        | PASS    |
|           |         |         | 1000~26500          | -2.74              | -56.99          | ≤-22.74        | PASS    |
|           | Ant1    | 2437    | Reference           | -1.94              | -1.94           | ---            | PASS    |
|           |         |         | 30~1000             | -1.94              | -70.67          | ≤-21.94        | PASS    |
|           |         |         | 1000~26500          | -1.94              | -55.73          | ≤-21.94        | PASS    |
|           | Ant2    | 2437    | Reference           | -1.90              | -1.90           | ---            | PASS    |
|           |         |         | 30~1000             | -1.90              | -70.13          | ≤-21.9         | PASS    |
|           |         |         | 1000~26500          | -1.90              | -56.1           | ≤-21.9         | PASS    |
|           | Ant1    | 2462    | Reference           | -1.12              | -1.12           | ---            | PASS    |
|           |         |         | 30~1000             | -1.12              | -69.13          | ≤-21.12        | PASS    |
|           |         |         | 1000~26500          | -1.12              | -56.39          | ≤-21.12        | PASS    |
|           | Ant2    | 2462    | Reference           | -1.35              | -1.35           | ---            | PASS    |
|           |         |         | 30~1000             | -1.35              | -69.43          | ≤-21.35        | PASS    |
|           |         |         | 1000~26500          | -1.35              | -55.93          | ≤-21.35        | PASS    |
| 11N20     | Ant1    | 2412    | Reference           | -2.45              | -2.45           | ---            | PASS    |

#### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com

|       |      |      |            |       |        |               |      |
|-------|------|------|------------|-------|--------|---------------|------|
| 11N40 | Ant2 | 2412 | 30~1000    | -2.45 | -70.75 | $\leq -22.45$ | PASS |
|       |      |      | 1000~26500 | -2.45 | -54.92 | $\leq -22.45$ | PASS |
|       |      |      | Reference  | -2.61 | -2.61  | ---           | PASS |
|       |      |      | 30~1000    | -2.61 | -69.52 | $\leq -22.61$ | PASS |
|       |      |      | 1000~26500 | -2.61 | -55.36 | $\leq -22.61$ | PASS |
|       |      |      | Reference  | -2.01 | -2.01  | ---           | PASS |
|       | Ant1 | 2437 | 30~1000    | -2.01 | -70.84 | $\leq -22.01$ | PASS |
|       |      |      | 1000~26500 | -2.01 | -56.28 | $\leq -22.01$ | PASS |
|       |      |      | Reference  | -2.23 | -2.23  | ---           | PASS |
|       | Ant2 | 2437 | 30~1000    | -2.23 | -69.88 | $\leq -22.23$ | PASS |
|       |      |      | 1000~26500 | -2.23 | -55.76 | $\leq -22.23$ | PASS |
|       |      |      | Reference  | -1.18 | -1.18  | ---           | PASS |
|       | Ant1 | 2462 | 30~1000    | -1.18 | -70.2  | $\leq -21.18$ | PASS |
|       |      |      | 1000~26500 | -1.18 | -54.97 | $\leq -21.18$ | PASS |
|       |      |      | Reference  | -1.20 | -1.20  | ---           | PASS |
|       | Ant2 | 2462 | 30~1000    | -1.20 | -69.17 | $\leq -21.2$  | PASS |
|       |      |      | 1000~26500 | -1.20 | -55.83 | $\leq -21.2$  | PASS |
|       |      |      | Reference  | -4.67 | -4.67  | ---           | PASS |
|       | Ant1 | 2422 | 30~1000    | -4.67 | -69.76 | $\leq -24.67$ | PASS |
|       |      |      | 1000~26500 | -4.67 | -54.96 | $\leq -24.67$ | PASS |
|       |      |      | Reference  | -5.00 | -5.00  | ---           | PASS |
|       | Ant2 | 2422 | 30~1000    | -5.00 | -70.39 | $\leq -25$    | PASS |
|       |      |      | 1000~26500 | -5.00 | -55.06 | $\leq -25$    | PASS |
|       |      |      | Reference  | -4.47 | -4.47  | ---           | PASS |
|       | Ant1 | 2437 | 30~1000    | -4.47 | -70.81 | $\leq -24.47$ | PASS |
|       |      |      | 1000~26500 | -4.47 | -56.07 | $\leq -24.47$ | PASS |
|       |      |      | Reference  | -4.37 | -4.37  | ---           | PASS |
|       | Ant2 | 2437 | 30~1000    | -4.37 | -70.91 | $\leq -24.37$ | PASS |
|       |      |      | 1000~26500 | -4.37 | -55.93 | $\leq -24.37$ | PASS |
|       |      |      | Reference  | -4.29 | -4.29  | ---           | PASS |
|       | Ant1 | 2452 | 30~1000    | -4.29 | -70.75 | $\leq -24.29$ | PASS |
|       |      |      | 1000~26500 | -4.29 | -55.67 | $\leq -24.29$ | PASS |
|       |      |      | Reference  | -4.30 | -4.30  | ---           | PASS |
|       | Ant2 | 2452 | 30~1000    | -4.30 | -70.55 | $\leq -24.3$  | PASS |
|       |      |      | 1000~26500 | -4.30 | -56.17 | $\leq -24.3$  | PASS |
|       |      |      | Reference  | -4.30 | -4.30  | ---           | PASS |

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com



Hotline

400-003-0500


www.anbotek.com

## Test Graphs


11B\_Ant1\_2412\_0~Reference



11B\_Ant1\_2412\_30~1000

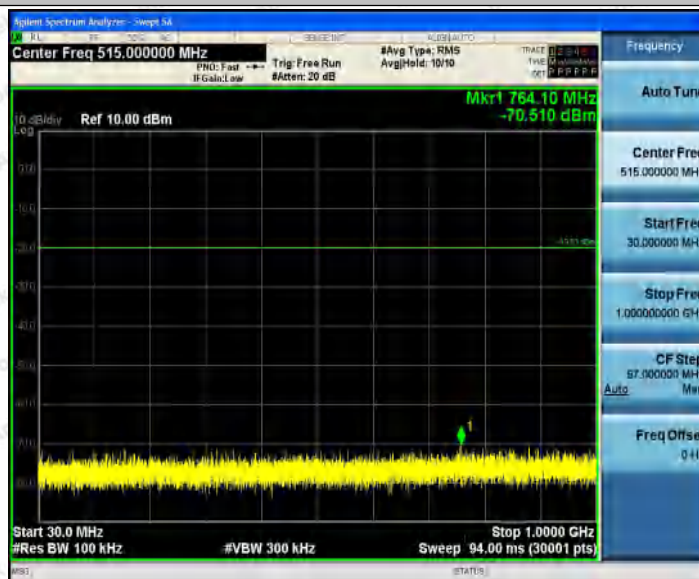


11B\_Ant1\_2412\_1000~26500

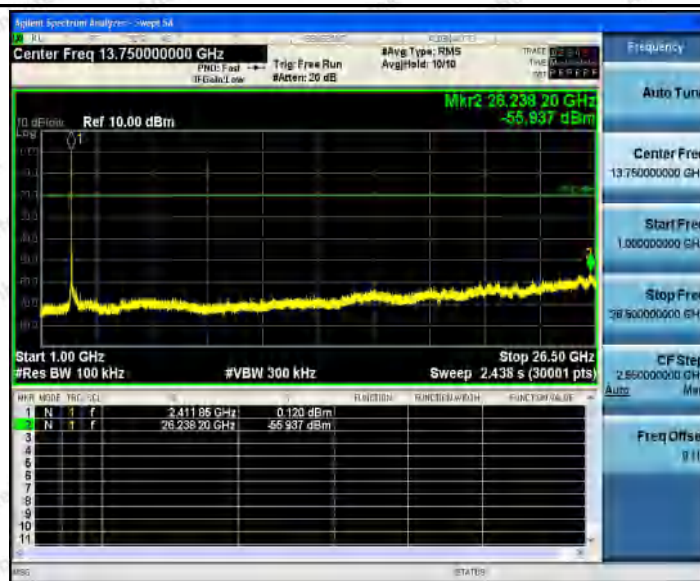

11B\_Ant2\_2412\_0~Reference



11B\_Ant2\_2412\_30~1000

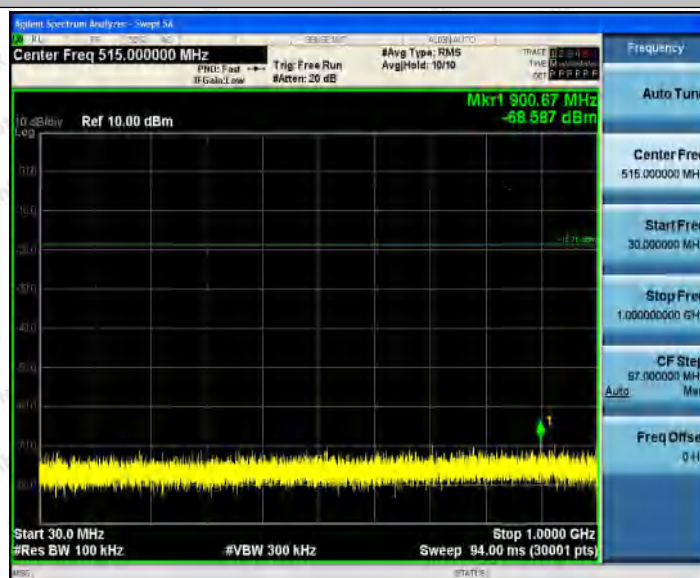


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com


11B\_Ant2\_2412\_1000~26500

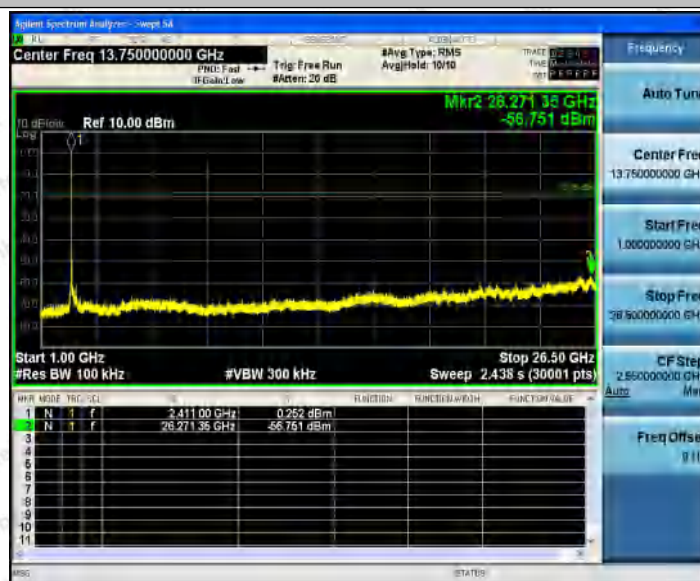

11B\_Ant1\_2437\_0~Reference



11B\_Ant1\_2437\_30~1000

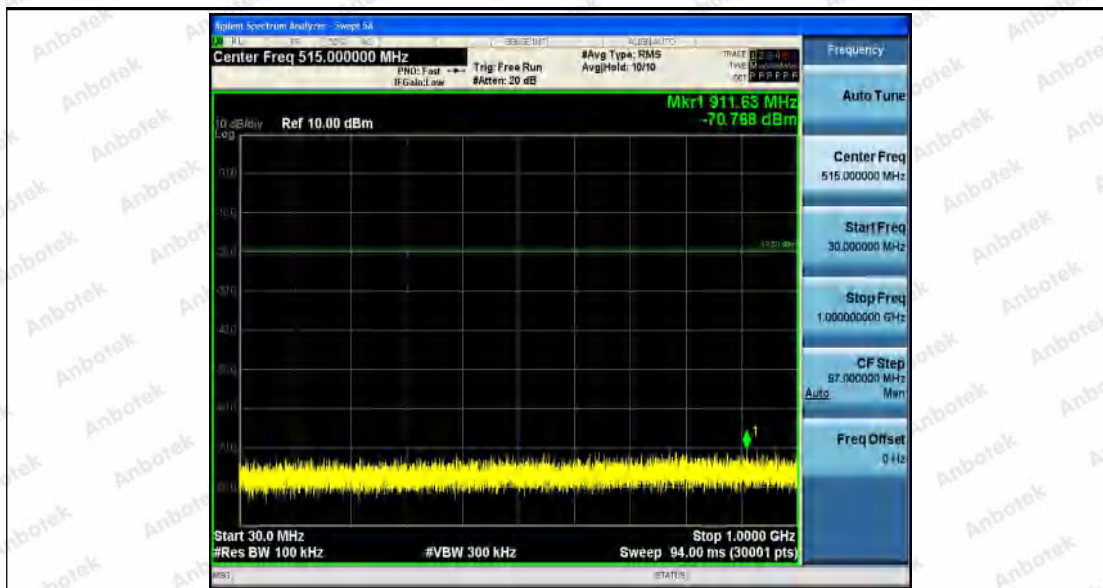

11B\_Ant1\_2437\_1000~26500



11B\_Ant2\_2437\_0~Reference




## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11B\_Ant2\_2437\_30~1000

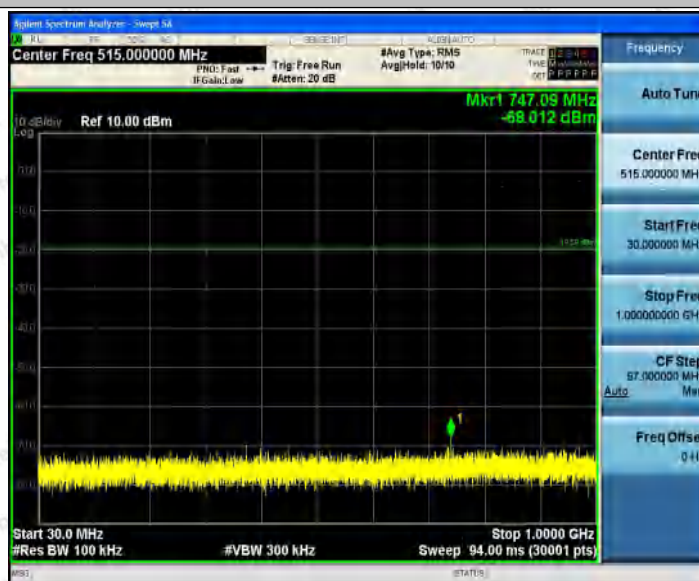

11B\_Ant2\_2437\_1000~26500



11B\_Ant1\_2462\_0~Reference



11B\_Ant1\_2462\_30~1000



11B\_Ant1\_2462\_1000~26500



## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com


11B\_Ant2\_2462\_0~Reference



11B\_Ant2\_2462\_30~1000

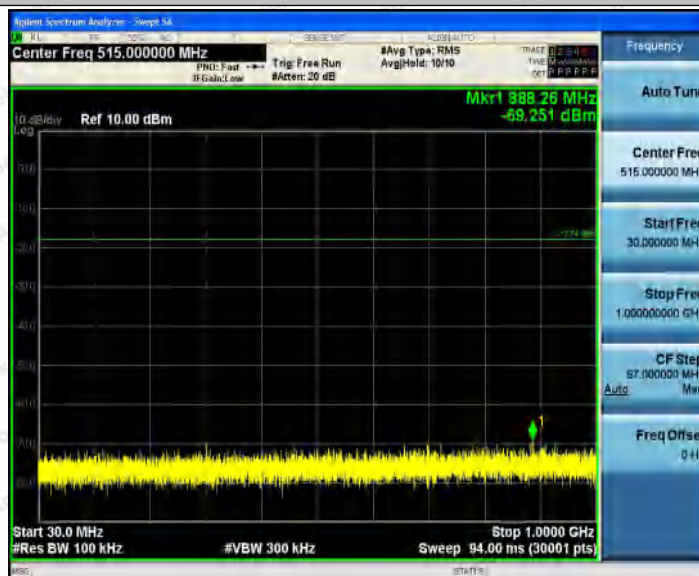


11B\_Ant2\_2462\_1000~26500

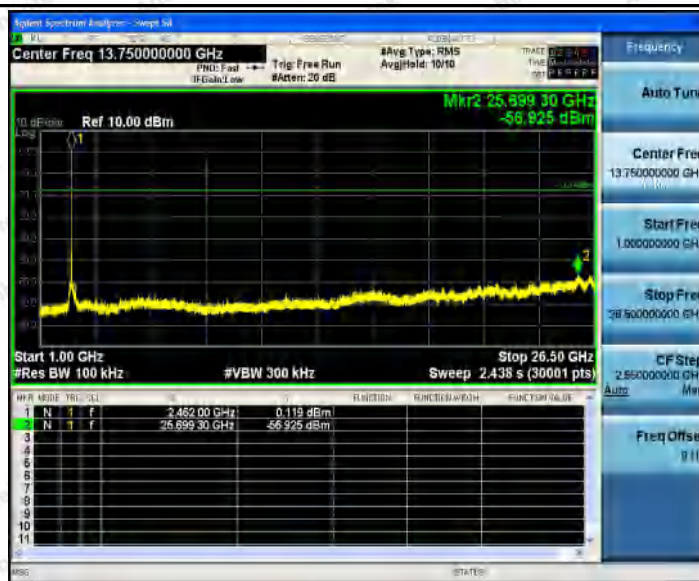

11G\_Ant1\_2412\_0~Reference



11G\_Ant1\_2412\_30~1000

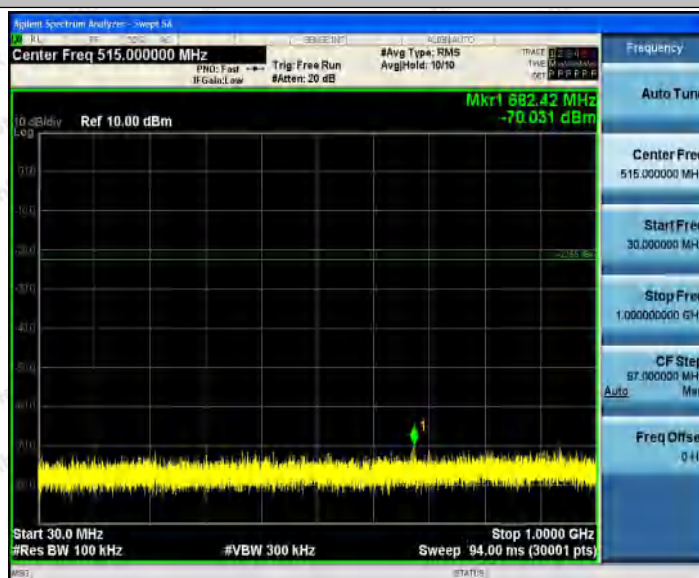


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com



11G\_Ant1\_2412\_1000~26500

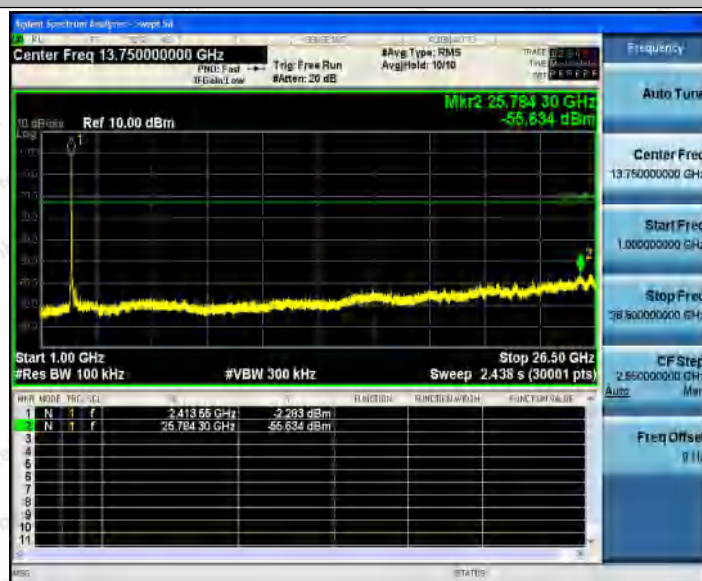

11G\_Ant2\_2412\_0~Reference



11G\_Ant2\_2412\_30~1000

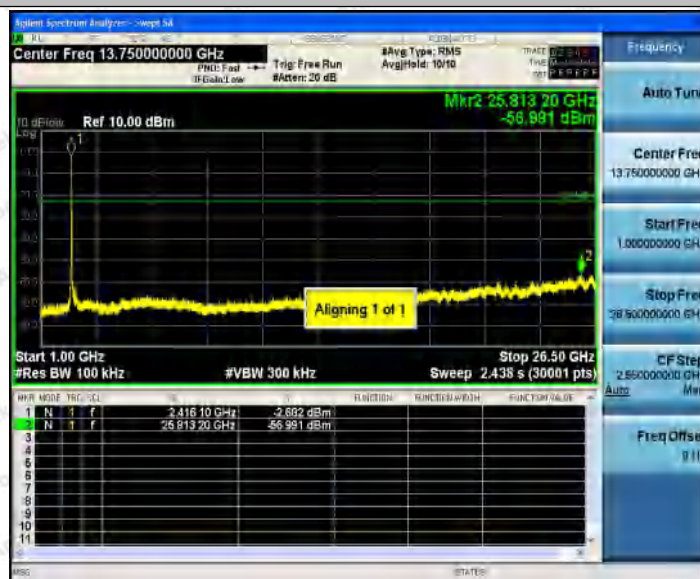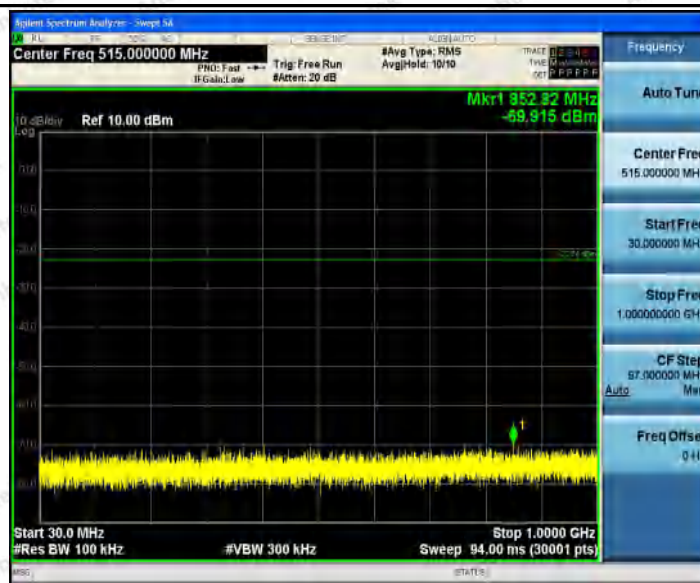


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11G\_Ant1\_2437\_30~1000

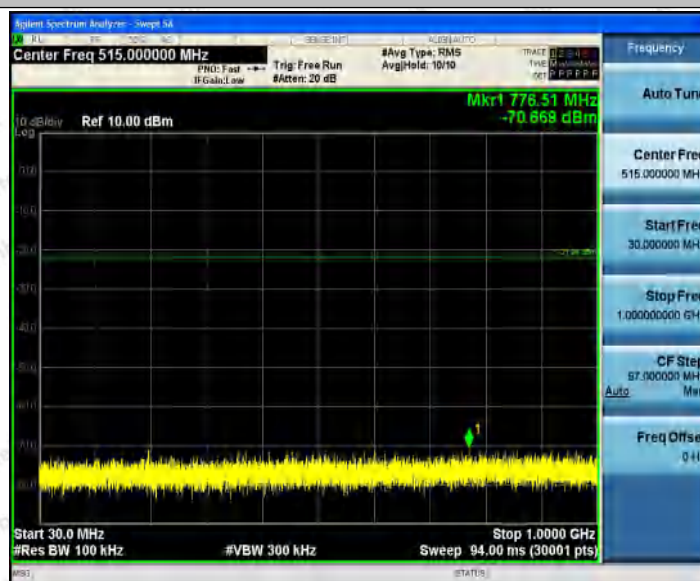

11G\_Ant1\_2437\_1000~26500

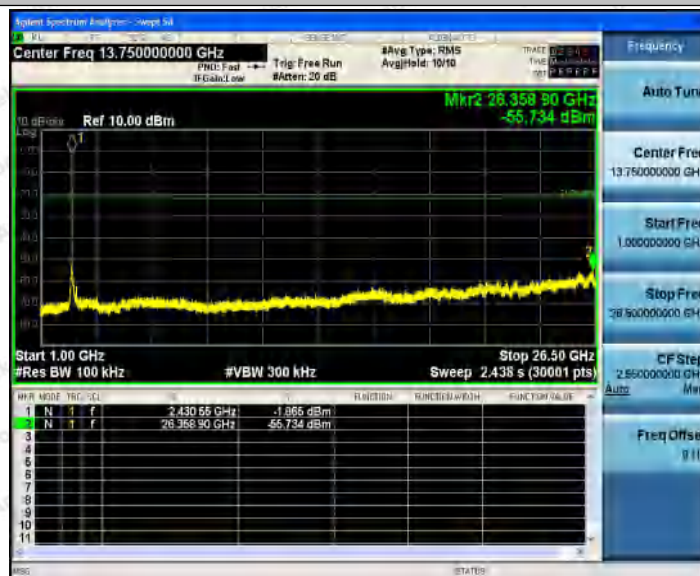

11G\_Ant2\_2437\_0~Reference

## Shenzhen Anbotech Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com


Hotline  
400-003-0500  
www.anbotech.com



11G\_Ant2\_2437\_30~1000

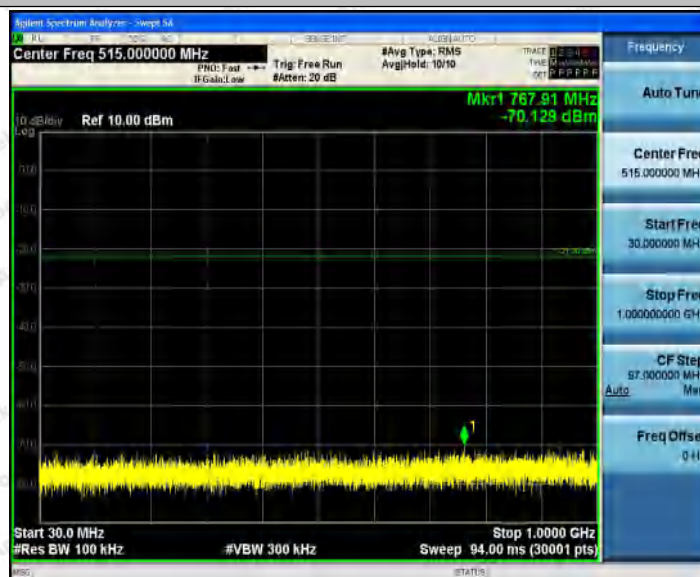

11G\_Ant2\_2437\_1000~26500

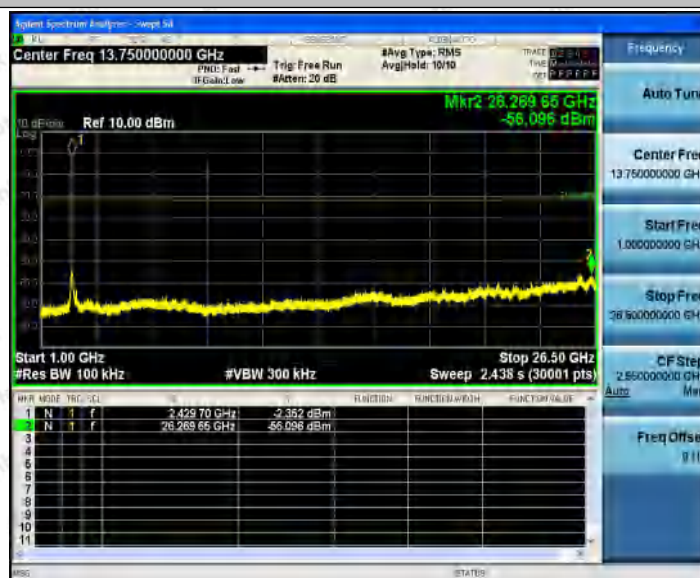

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

11G\_Ant1\_2462\_0~Reference



11G\_Ant1\_2462\_30~1000

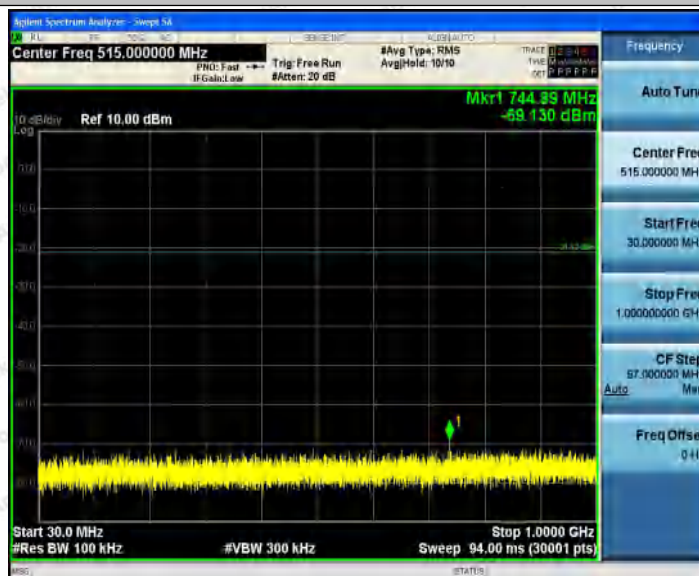



11G\_Ant1\_2462\_1000~26500

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

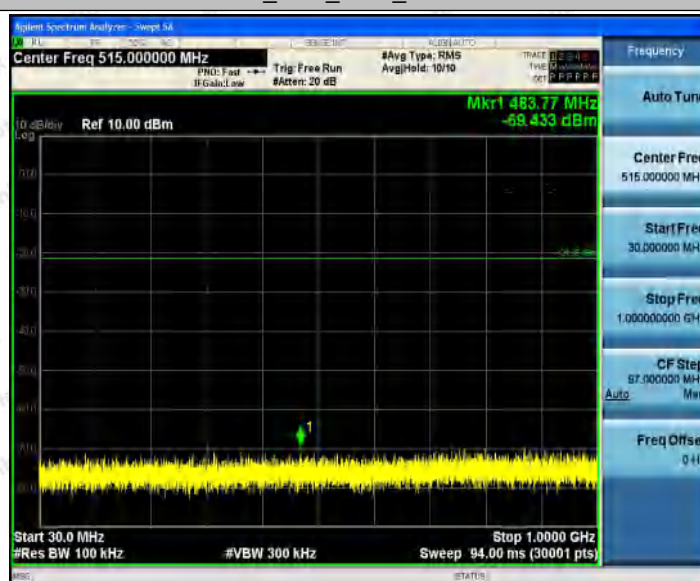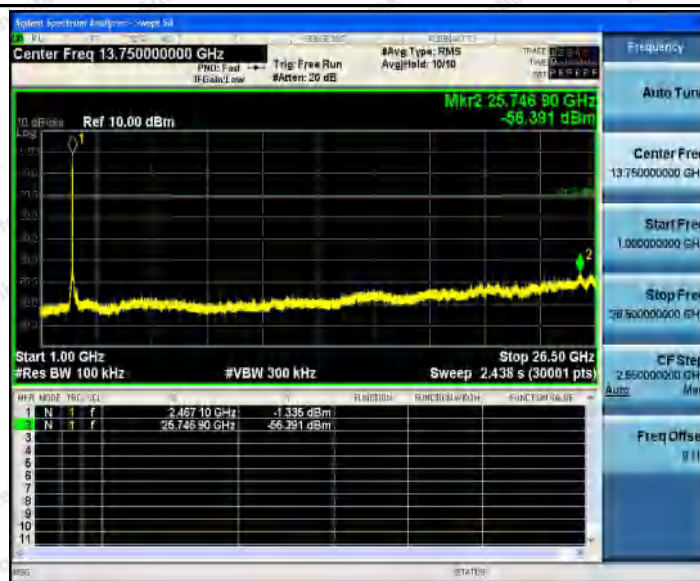


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com



11G\_Ant2\_2462\_1000~26500

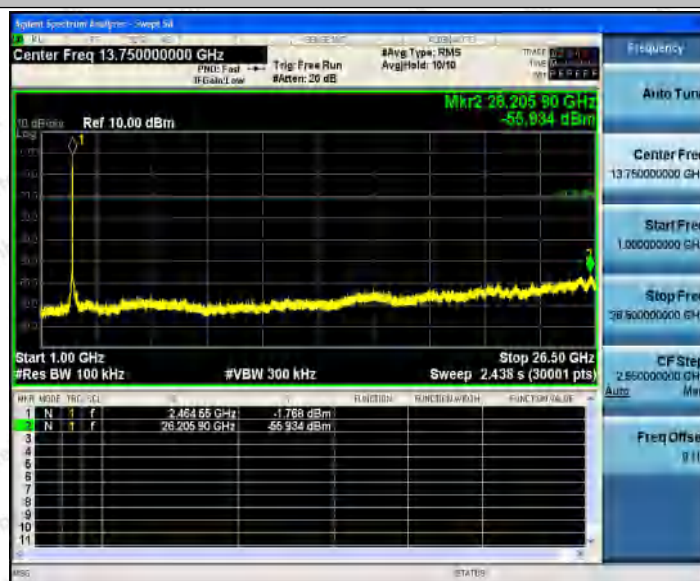

11N20\_Ant1\_2412\_0~Reference



11N20\_Ant1\_2412\_30~1000

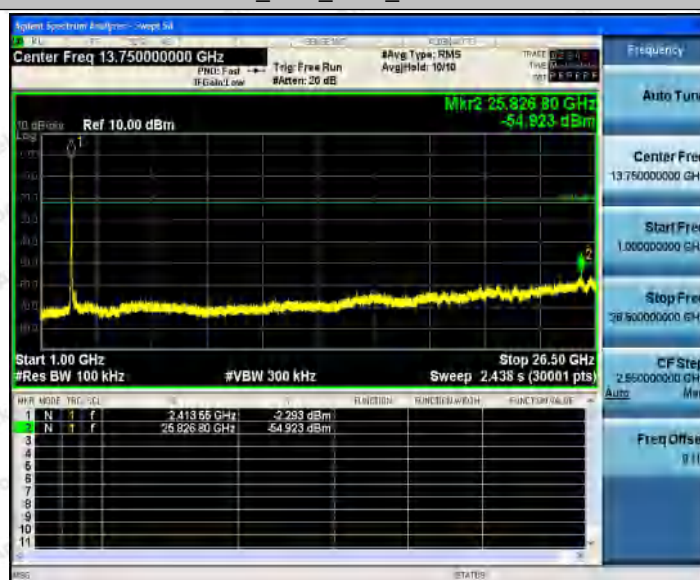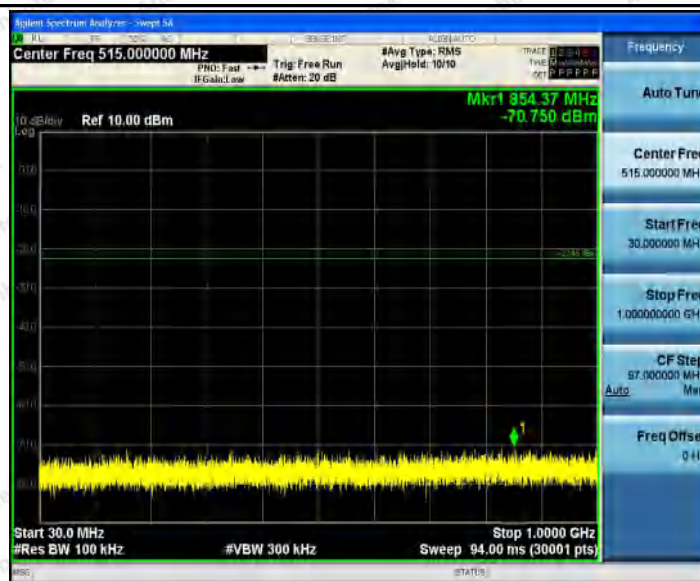


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11N20\_Ant2\_2412\_30~1000

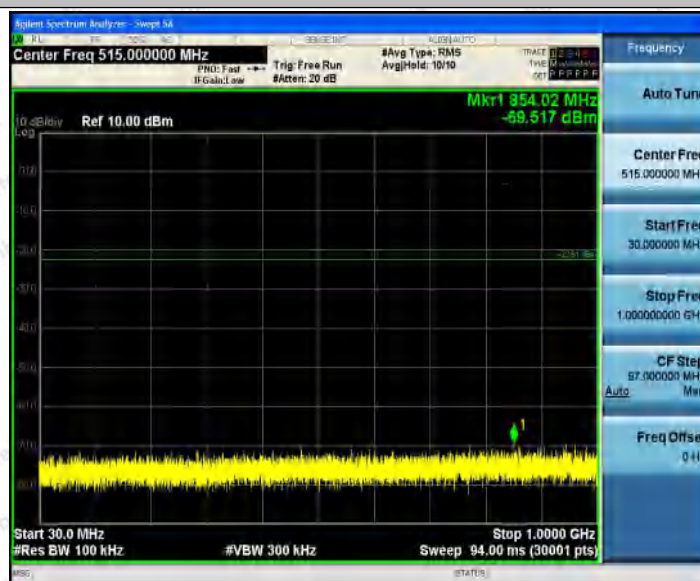


11N20\_Ant2\_2412\_1000~26500

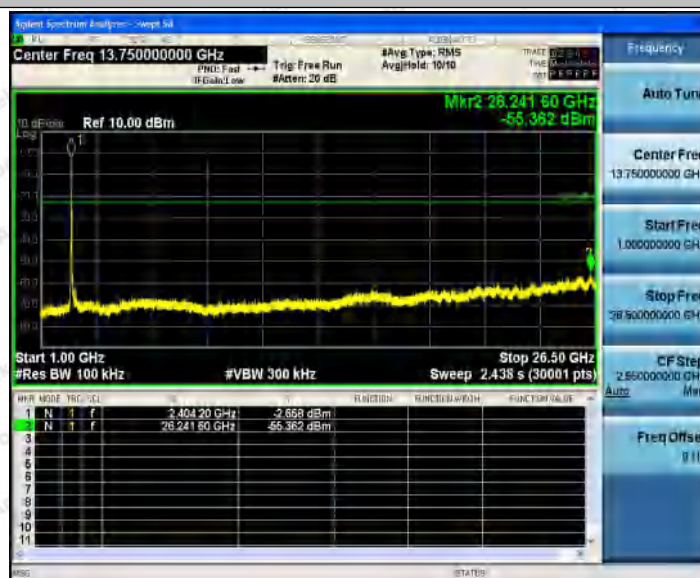


11N20\_Ant1\_2437\_0~Reference



11N20\_Ant1\_2437\_30~1000

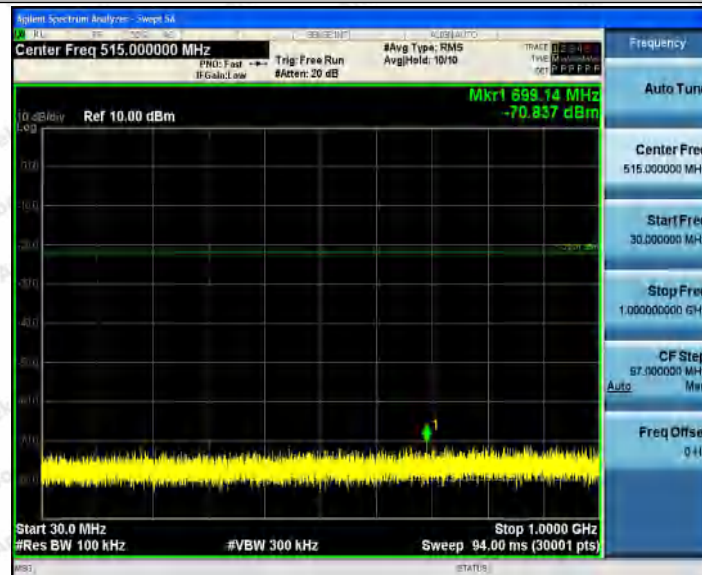

11N20\_Ant1\_2437\_1000~26500

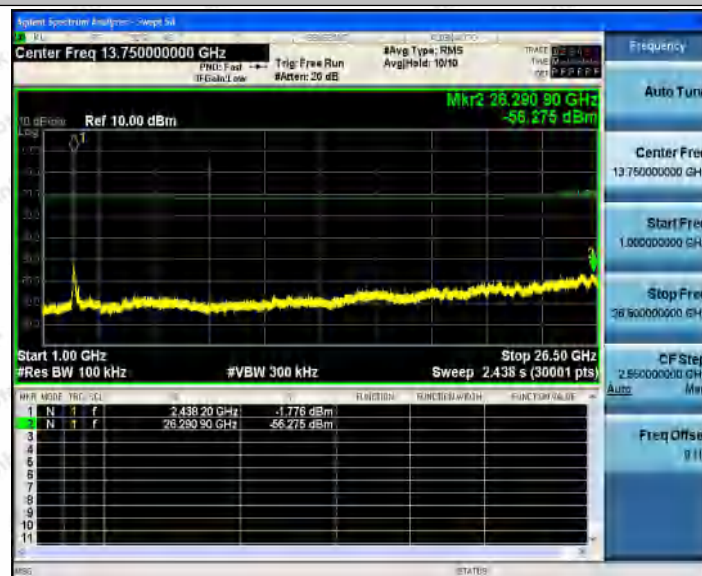

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com


11N20\_Ant2\_2437\_0~Reference



11N20\_Ant2\_2437\_30~1000

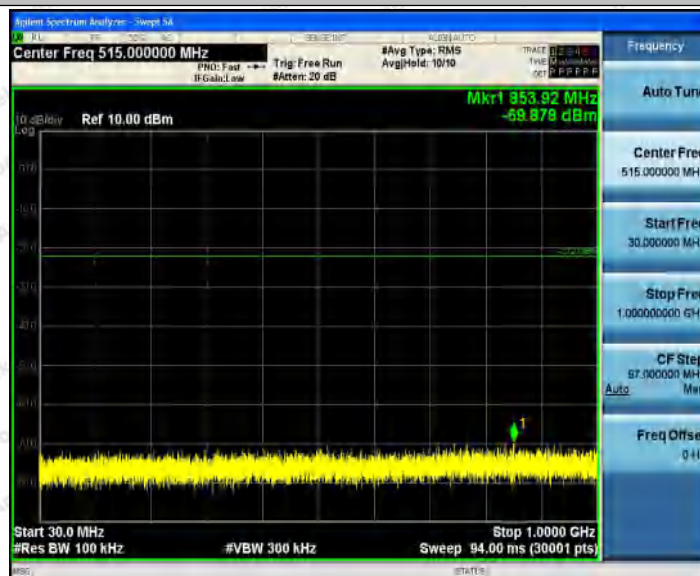


11N20\_Ant2\_2437\_1000~26500

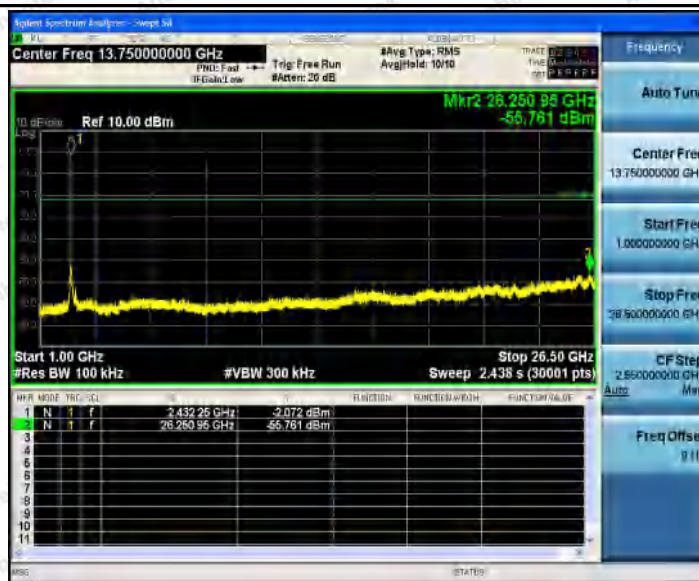

11N20\_Ant1\_2462\_0~Reference



11N20\_Ant1\_2462\_30~1000

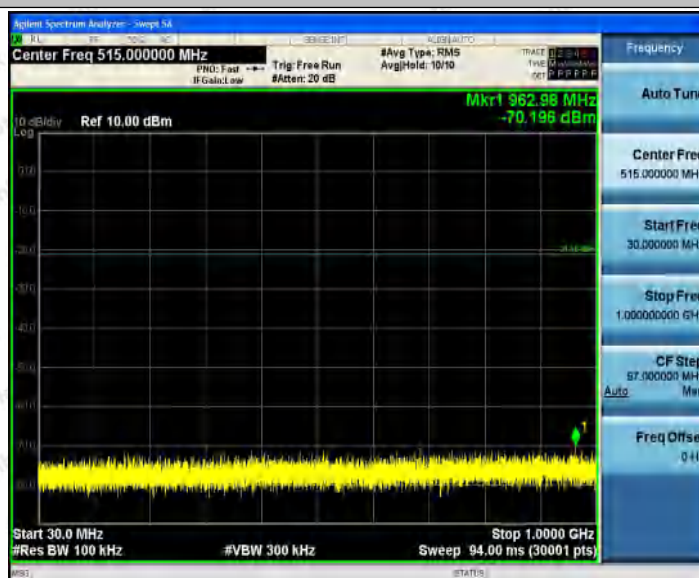

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com



Hotline

400-003-0500

www.anbotech.com

11N20\_Ant1\_2462\_1000~26500



11N20\_Ant2\_2462\_0~Reference




11N20\_Ant2\_2462\_30~1000

## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

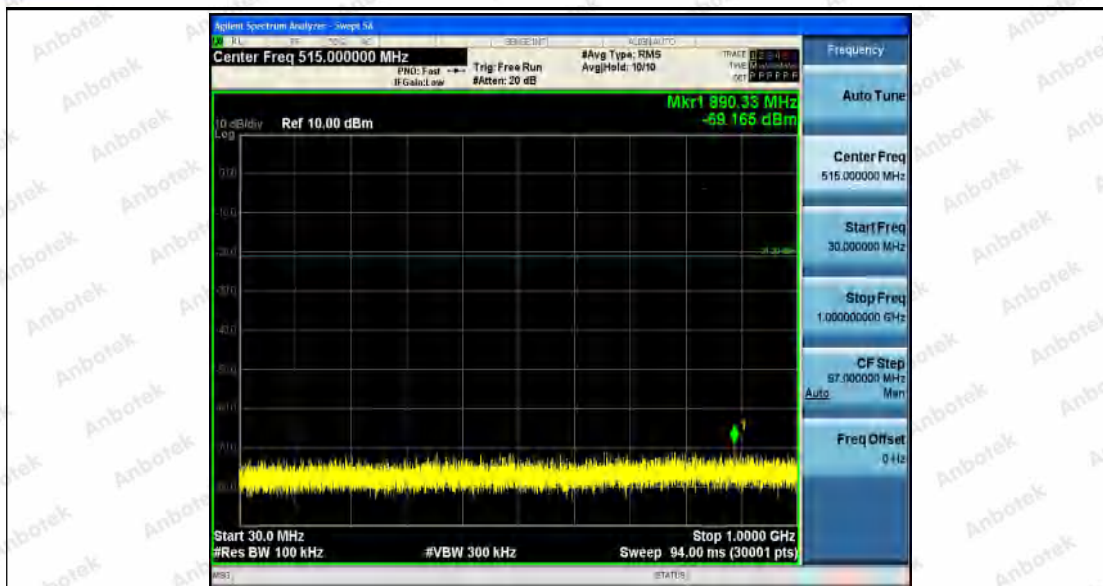


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

11N40\_Ant1\_2422\_30~1000

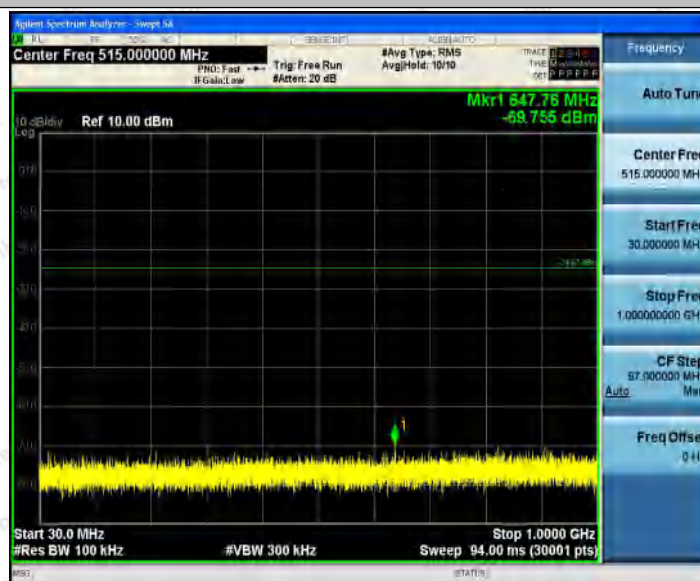


11N40\_Ant1\_2422\_1000~26500

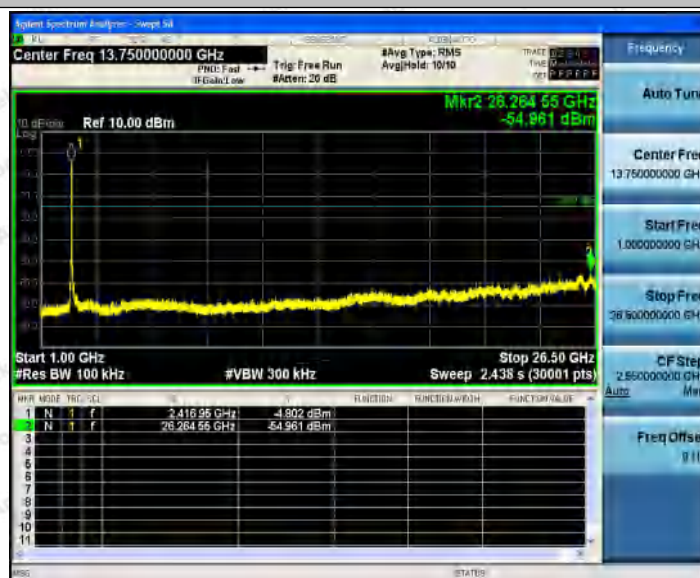


11N40\_Ant2\_2422\_0~Reference



11N40\_Ant2\_2422\_30~1000

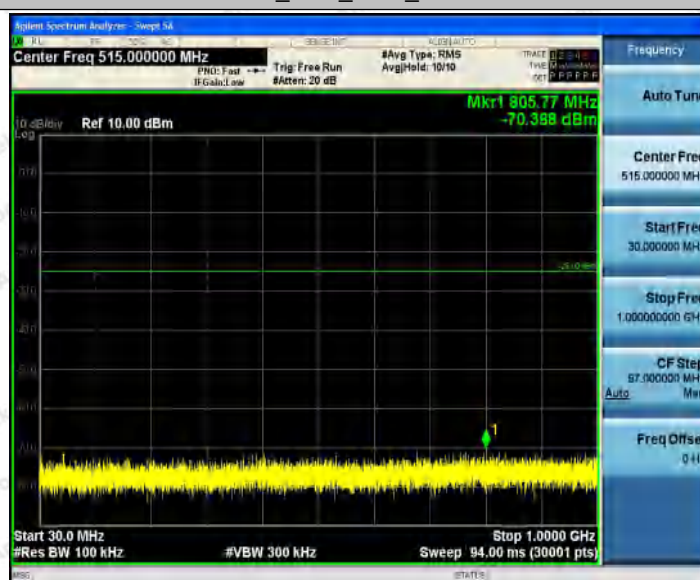

11N40\_Ant2\_2422\_1000~26500

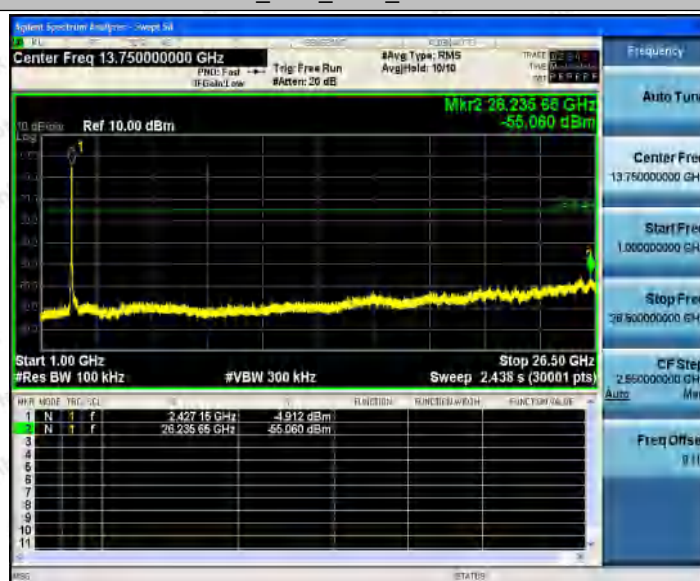

## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com


11N40\_Ant1\_2437\_0~Reference



11N40\_Ant1\_2437\_30~1000




11N40\_Ant1\_2437\_1000~26500

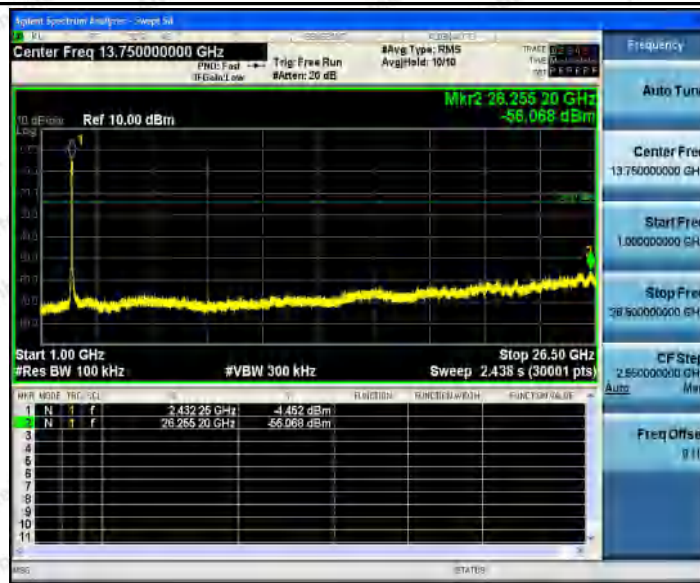

11N40\_Ant2\_2437\_0~Reference



11N40\_Ant2\_2437\_30~1000

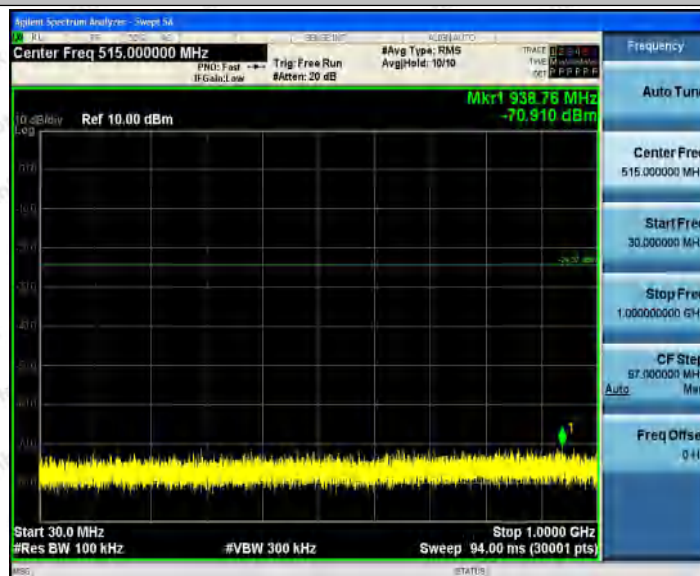


## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com


11N40\_Ant2\_2437\_1000~26500

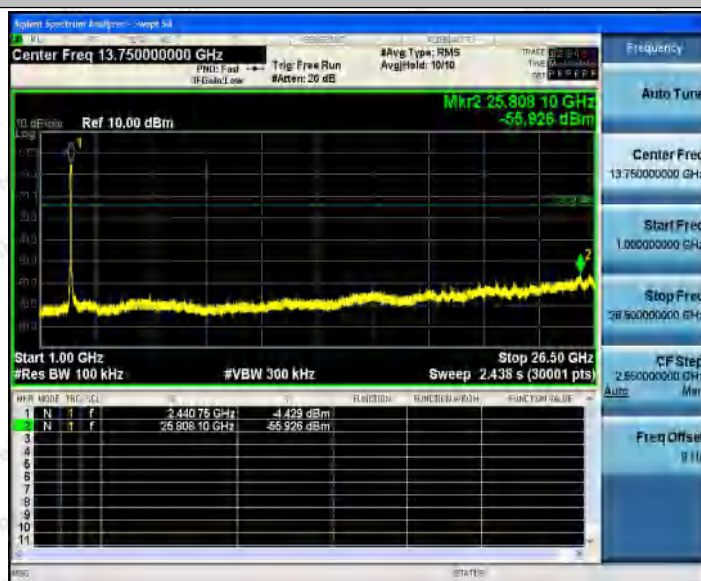


11N40\_Ant1\_2452\_0~Reference



11N40\_Ant1\_2452\_30~1000

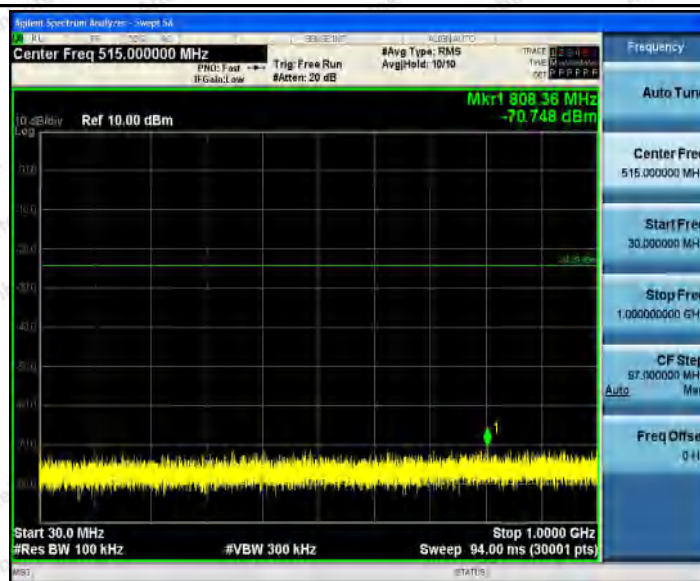

11N40\_Ant1\_2452\_1000~26500

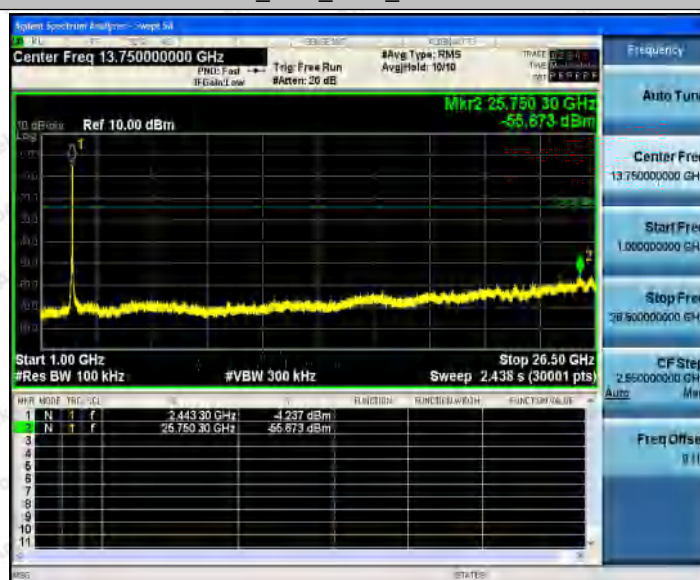

11N40\_Ant2\_2452\_0~Reference




## Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com

Hotline  
400-003-0500  
www.anbotek.com

11N40\_Ant2\_2452\_30~1000

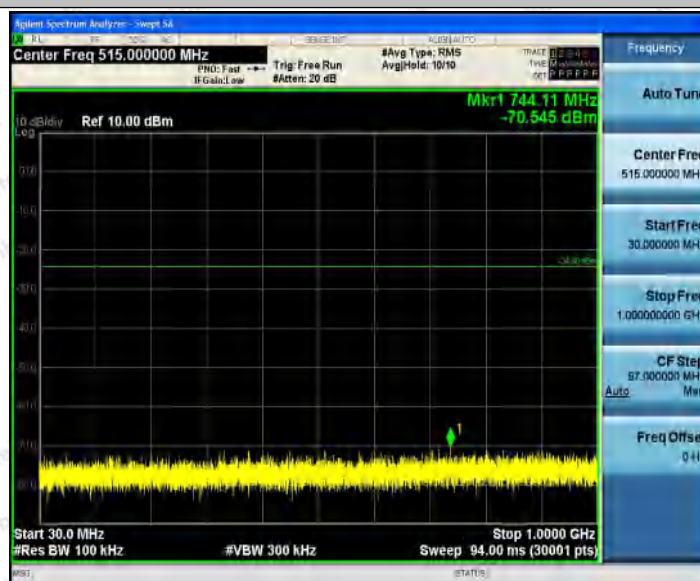

11N40\_Ant2\_2452\_1000~26500

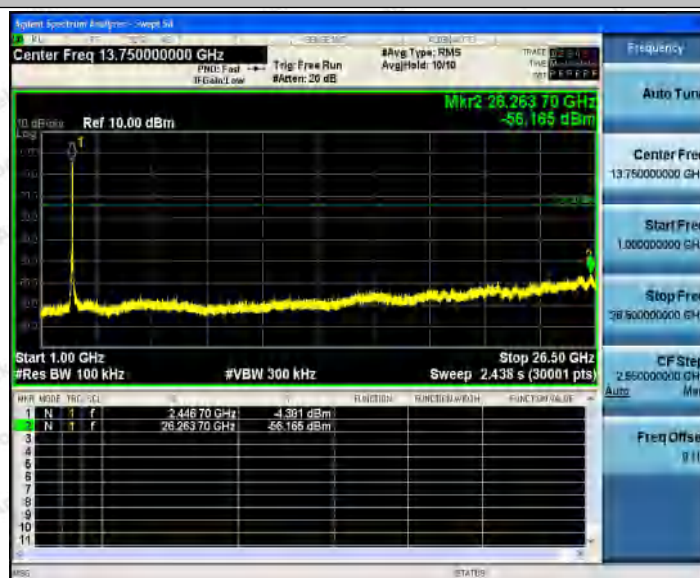


## Appendix G: Duty Cycle

### Test Result


| Test Mode | Antenna | Channel | Transmission Duration [ms] | Transmission Period [ms] | Duty Cycle [%] | Limit | Verdict |
|-----------|---------|---------|----------------------------|--------------------------|----------------|-------|---------|
| 11B       | Ant1    | 2412    | 0.84                       | 0.88                     | 95.45          | ---   | PASS    |
|           | Ant2    | 2412    | 0.84                       | 0.88                     | 95.45          | ---   | PASS    |
|           | Ant1    | 2437    | 0.84                       | 0.88                     | 95.45          | ---   | PASS    |
|           | Ant2    | 2437    | 0.84                       | 0.88                     | 95.45          | ---   | PASS    |
|           | Ant1    | 2462    | 0.84                       | 0.88                     | 95.45          | ---   | PASS    |
|           | Ant2    | 2462    | 0.84                       | 0.88                     | 95.45          | ---   | PASS    |
| 11G       | Ant1    | 2412    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
|           | Ant2    | 2412    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
|           | Ant1    | 2437    | 0.18                       | 0.22                     | 81.82          | ---   | PASS    |
|           | Ant2    | 2437    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
|           | Ant1    | 2462    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
|           | Ant2    | 2462    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
| 11N20     | Ant1    | 2412    | 0.16                       | 0.20                     | 80.00          | ---   | PASS    |
|           | Ant2    | 2412    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
|           | Ant1    | 2437    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
|           | Ant2    | 2437    | 0.16                       | 0.21                     | 76.19          | ---   | PASS    |
|           | Ant1    | 2462    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
|           | Ant2    | 2462    | 0.17                       | 0.21                     | 80.95          | ---   | PASS    |
| 11N40     | Ant1    | 2422    | 0.10                       | 0.14                     | 71.43          | ---   | PASS    |
|           | Ant2    | 2422    | 0.10                       | 0.14                     | 71.43          | ---   | PASS    |
|           | Ant1    | 2437    | 0.09                       | 0.14                     | 64.29          | ---   | PASS    |
|           | Ant2    | 2437    | 0.10                       | 0.15                     | 66.67          | ---   | PASS    |
|           | Ant1    | 2452    | 0.10                       | 0.14                     | 71.43          | ---   | PASS    |
|           | Ant2    | 2452    | 0.10                       | 0.14                     | 71.43          | ---   | PASS    |

## Test Graphs


11B\_Ant1\_2412

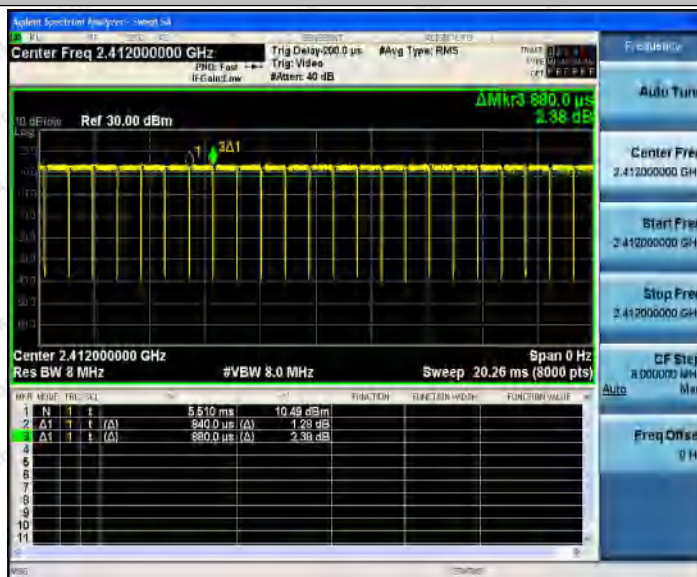


11B\_Ant2\_2412

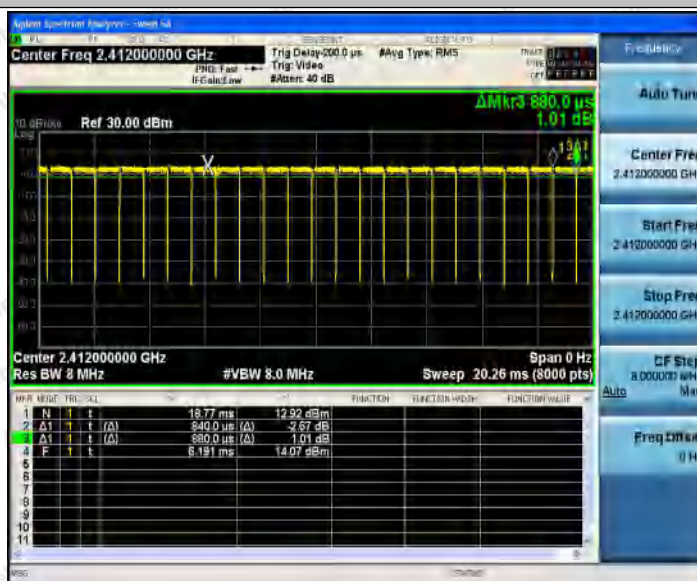


11B\_Ant1\_2437

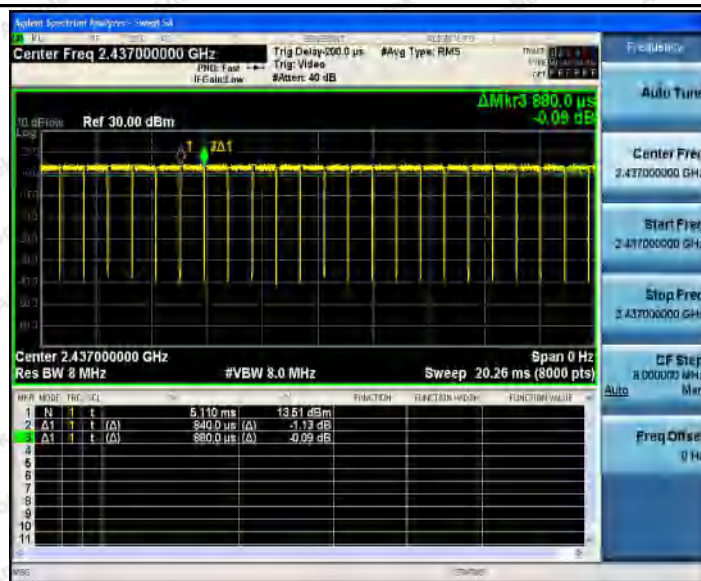

11B\_Ant2\_2437

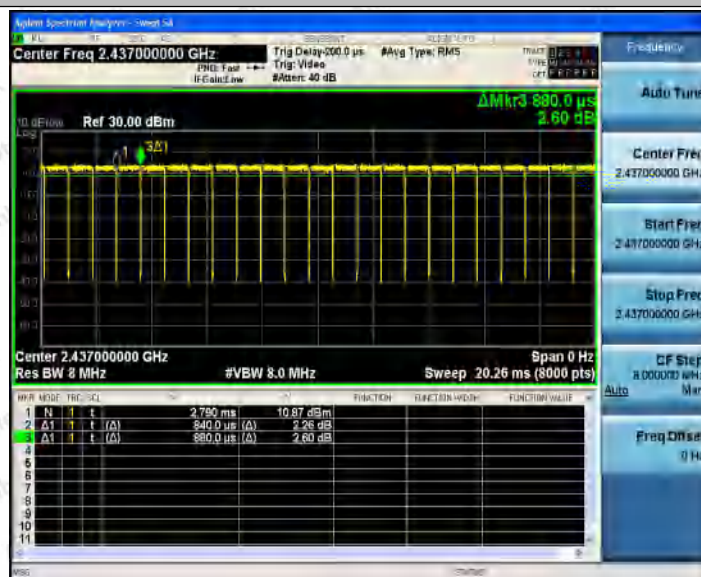

11B\_Ant1\_2462

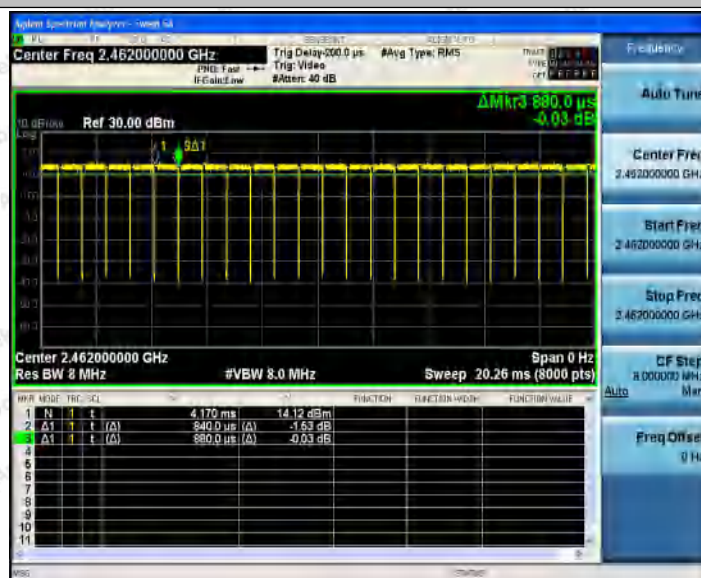


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com

11B\_Ant2\_2462

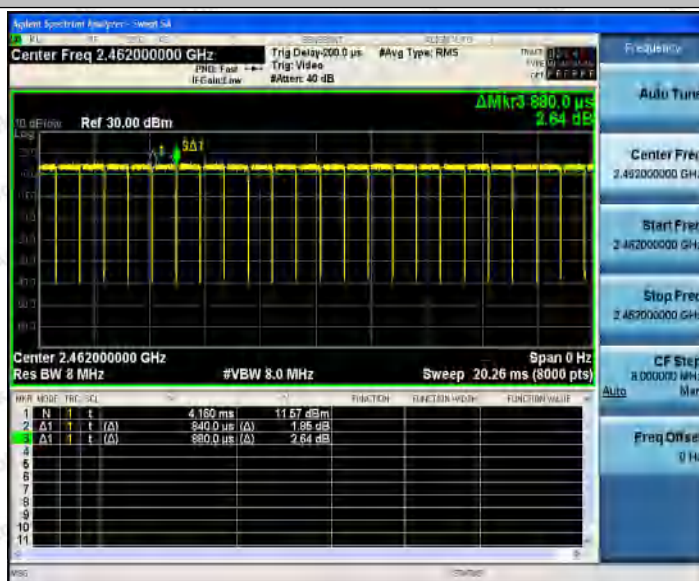

11G\_Ant1\_2412

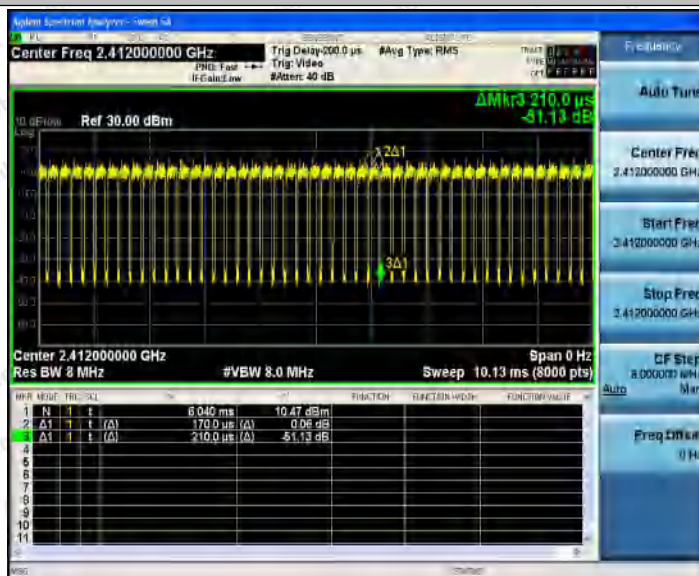


11G\_Ant2\_2412

## Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotek.com


Hotline  
400-003-0500  
www.anbotek.com

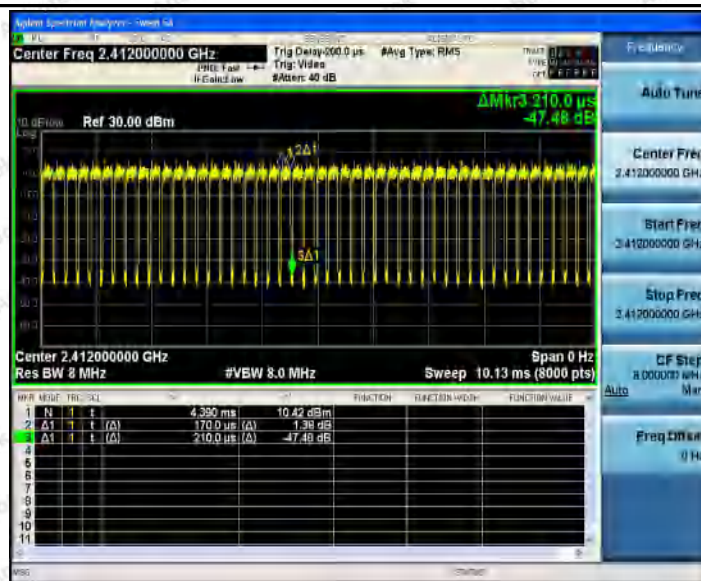

11G\_Ant1\_2437

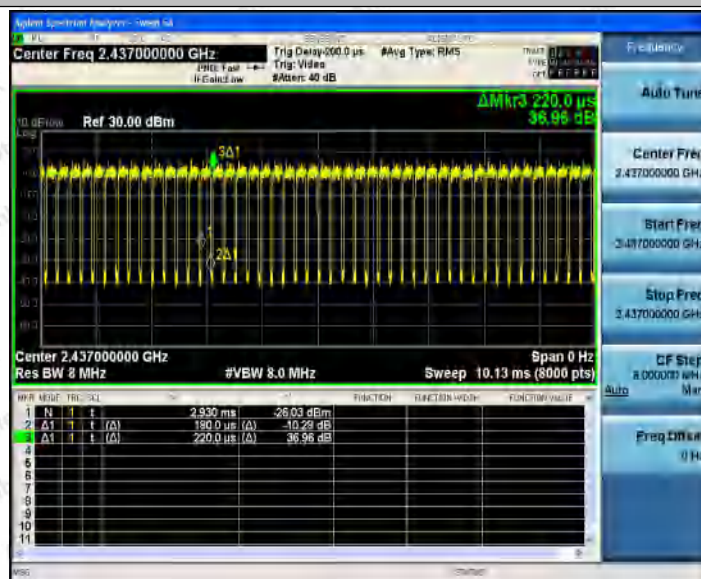

11G\_Ant2\_2437

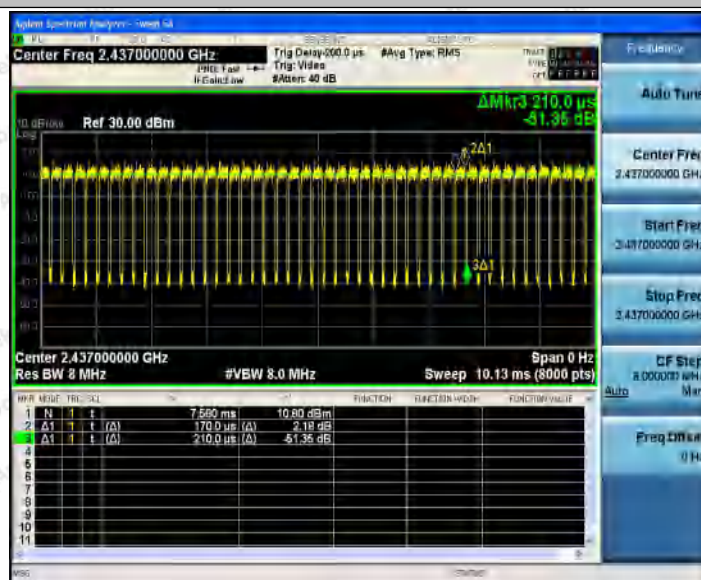


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com


11G\_Ant1\_2462

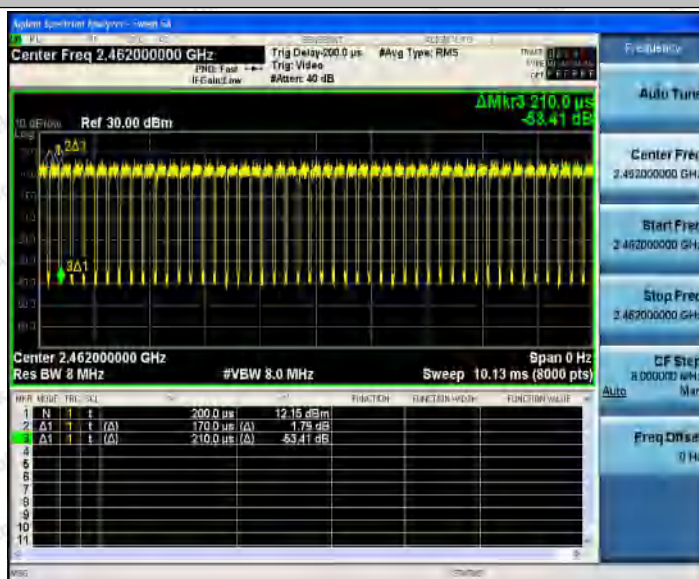


11G\_Ant2\_2462

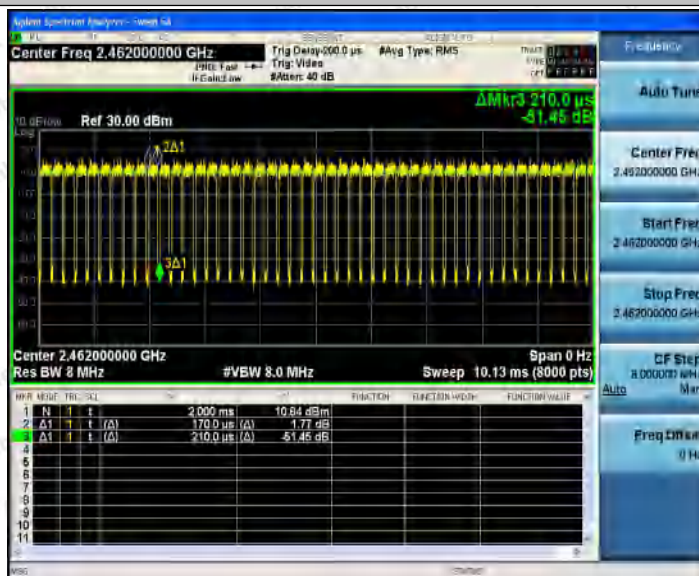


11N20\_Ant1\_2412

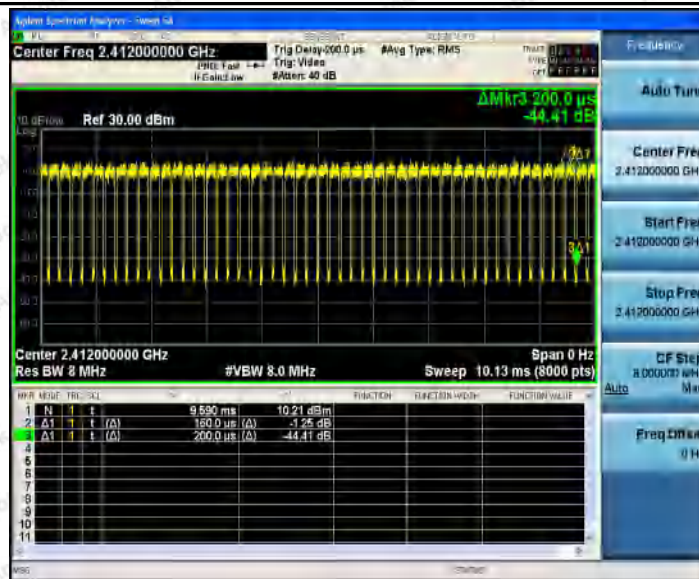

11N20\_Ant2\_2412

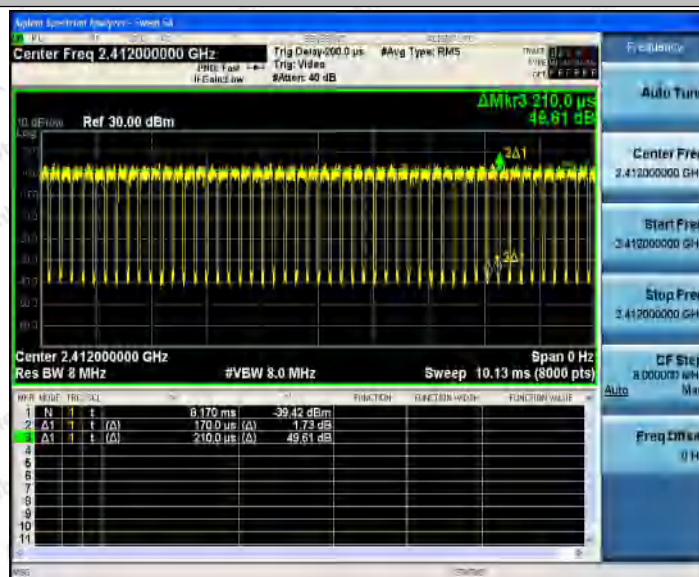

11N20\_Ant1\_2437

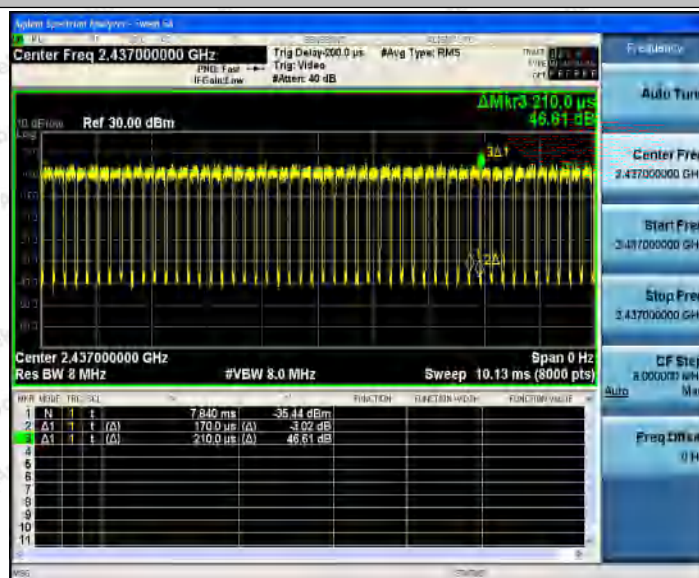


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com


11N20\_Ant2\_2437

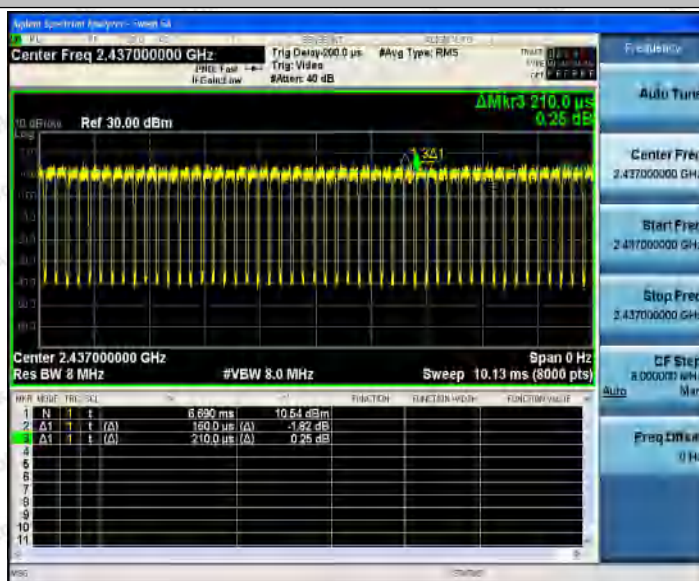


11N20\_Ant1\_2462

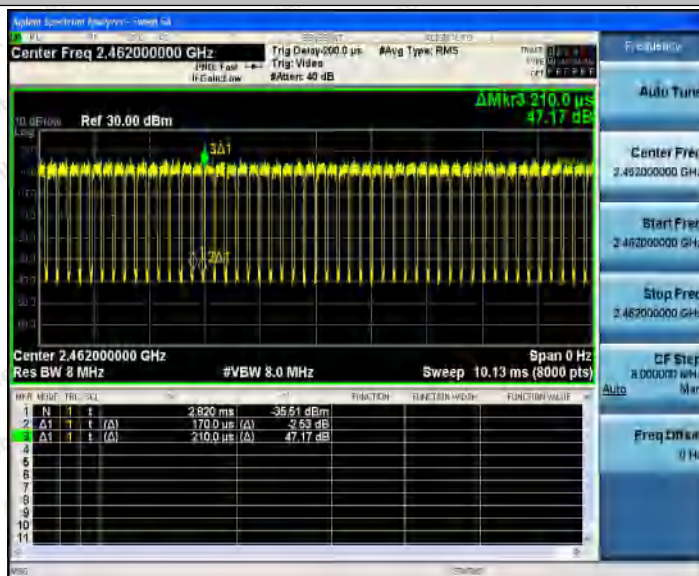


11N20\_Ant2\_2462

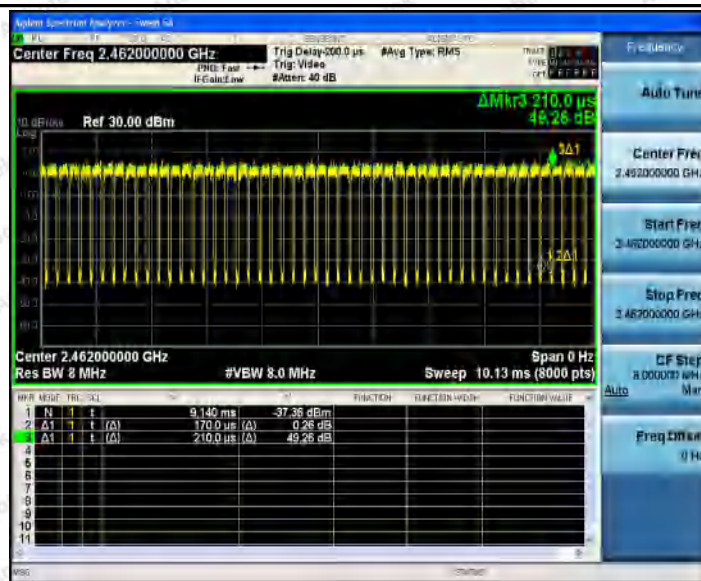

11N40\_Ant1\_2422

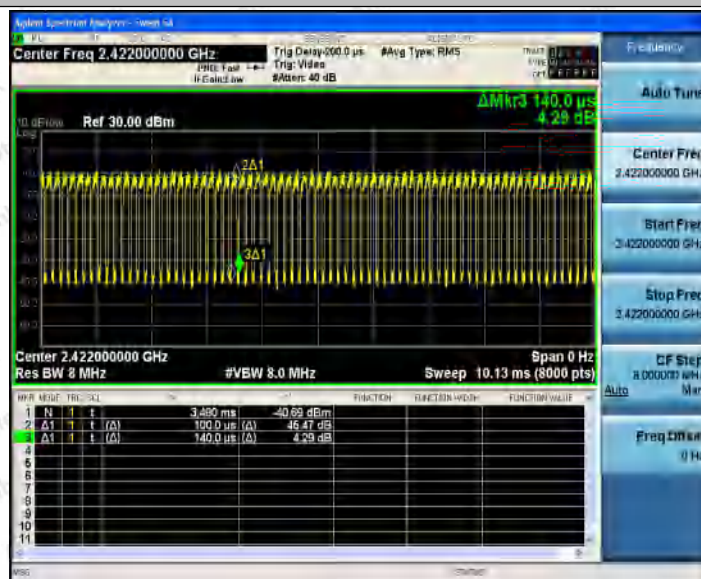

11N40\_Ant2\_2422

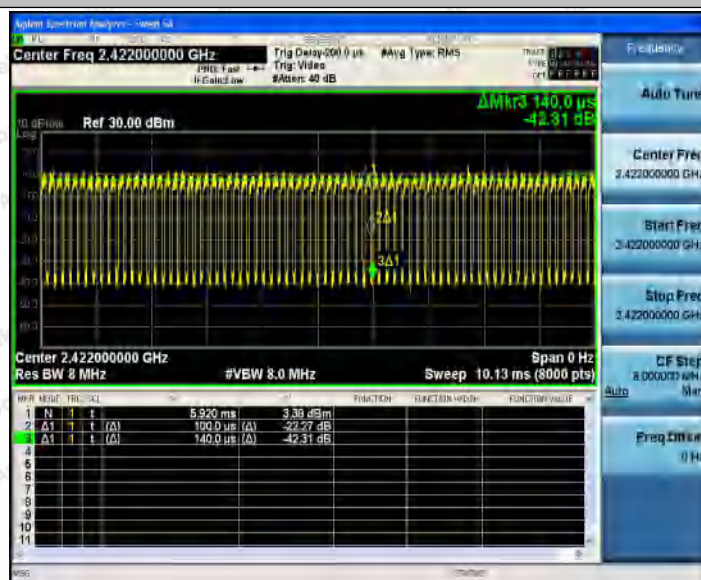


## Shenzhen Anbotech Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.


Tel: (86) 755-26066440 Fax: (86) 755-26014772 Email: service@anbotech.com

Hotline  
400-003-0500  
www.anbotech.com


11N40\_Ant1\_2437

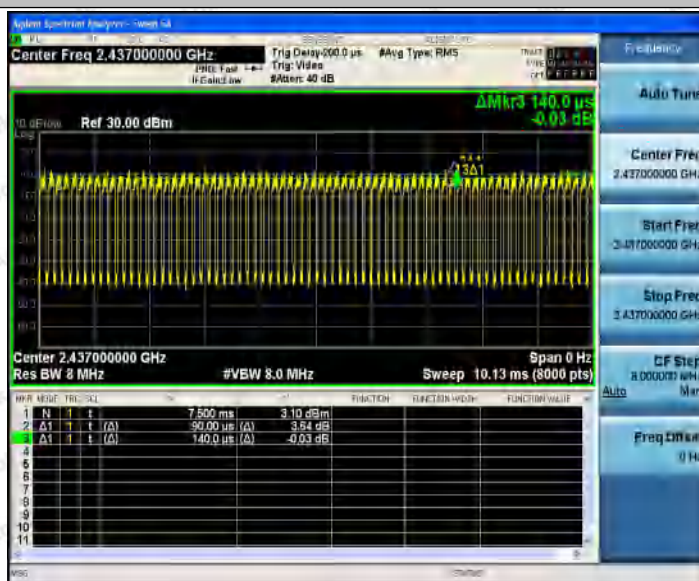

11N40\_Ant2\_2437

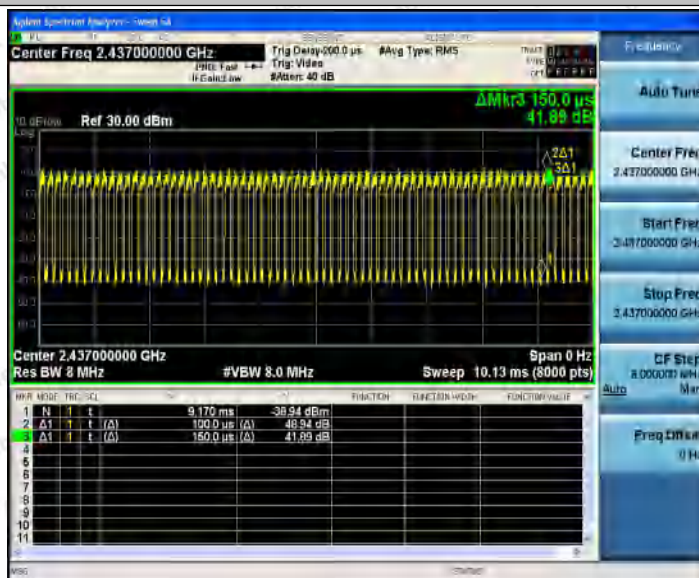

11N40\_Ant1\_2452

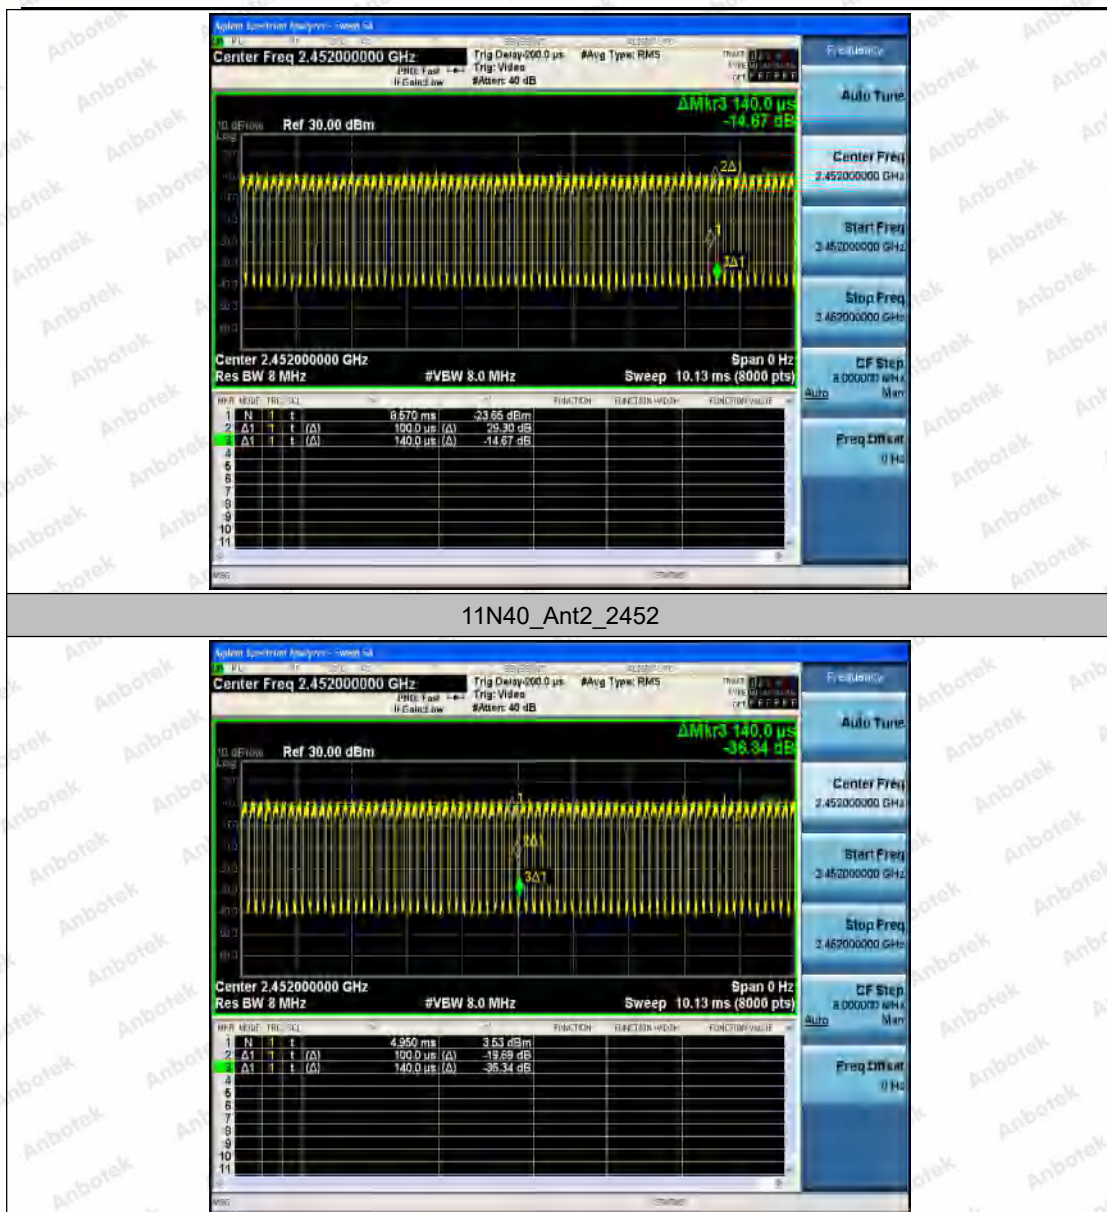

---End---