




Pencllic Mouse R2.1™ Quickguide

EN Quickguide

2

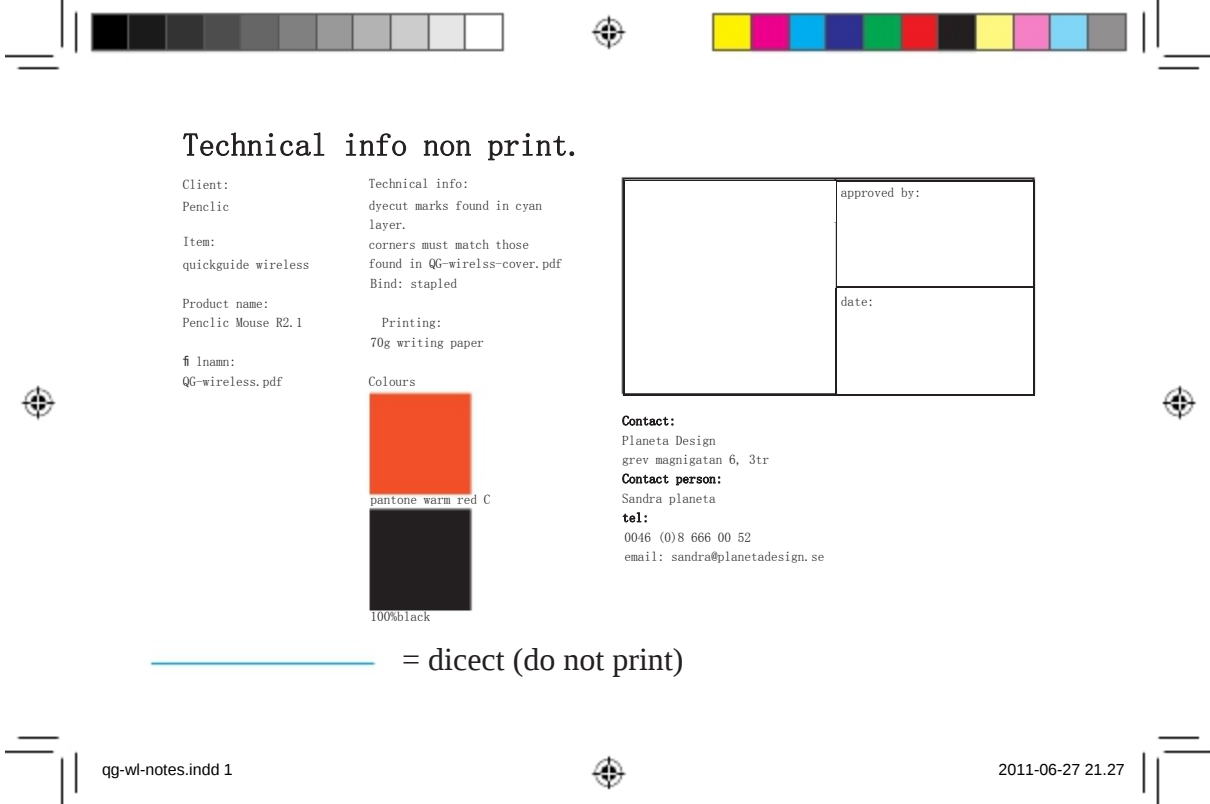

EN

Welcome to the quick guide. Penclic Mouse™ combines ergonomically sound design with modern mouse technology to bring you unparalleled precision, comfort and efficiency.


Mouse setup

Remove plastic film from the installed battery., then set the mouse power switch on the bottom of the mouse to ON. The wireless connection activates automatically.

How to use your Penclic Mouse™

1. Hold Penclic Mouse™ like a pen, the bottom part acts like a traditional mouse.
2. Let your forearm and your hand rest on a surface, while keeping your shoulders relaxed.
3. The pen par can be adjusted to suit specific grips. Fixate the bottom part with one hand and rotate the pen to the preferred angle with the other.

- 1 Left click
2 Right click
3 Middle click
4 Backward click
5 Forward click
6 Scroll wheel
7 On-off switch

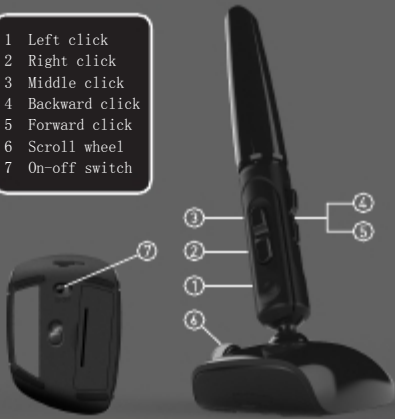

Troubleshooting

www.Penclic.se/troubleshooting

- Connect to another computer.
- Cursor movement may be effected by very glossy surfaces.
- Check the battery.
-
- When the battery needs charging the LED on the mouse will show red. When the battery is fully charged a green light will be displayed.



Technical specifications

The supported platforms for Penclic Mouse[®] are all operating systems that support HID 1.1. These include Windows XP or later, Mac OSX version 10.1 or later and most Linux/BSD flavors. No extra software/driver installation is needed.

- Operates on almost any surface without any pad or tablet.
- Implements a 5-button and scroll wheel.
-
- AAA 1.2V NiMH Recharging battery (Everyday use last approximately 3 months before charging is needed).

- Charging via USB.
- LR 03/AAA/1.5V Alkaline None rechargeable battery can be used. **NOTE:** do not recharge.
- Energy saving mode starts after 10 min, press a button to start.
- Wireless reach, minimum 5 metres.
- Dpi setting 800-1200-1600-2400.

NOTE: the dpi setting can be changed by holding in the left and right button at the same time for 3 sec, the cursor will move faster for each setting. It will rotate around from 800-2400 and then go back to low 800. Once the power is shut of the dpi setting will return to its default setting, 1200 dpi.

Measurements:
Height: 140 mm, Base: 44.1 x 20 mm.
Weight: 41 g

Technical support

Should you require additional technical support with your Penclic Mouse[®], please use our Web site for further information or contact our support group through e-mail.

Call Technical Support during business hours, central European time plus one hour.

Contact:
0046 8 544 98 995
email: contact@penclic.se



PenClic Technology AB
Vendevägen. 90 / 182 32 DANDERYD
contact@penclic.se / www.penclic.se
tel: 0046 8 544 98 995

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.