

Appendix Test Data

Report No.:	1812C60355412504-01	Test Sample No.:	1-2-2
Start Test Date:	2026-7-8	Finish Test Date:	2026-7-13
Test Engineer:	Tracy Liang	Auditor:	Justin Feng
Temperature:	25.6°C	Relative Humidity:	51%
Pressure:	101kPa		

Appendix A: Frequency Error

Test Result

Test Condition	Test Mode	Antenna	Frequency [MHz]	Center Freq. [MHz]	Result [ppm]	Limit [ppm]	Verdict
NTNV	CW	Ant1	5180	5179.978	-4.24710	±20	PASS
NTNV	CW	Ant2	5180	5179.984	-3.08880	±20	PASS
NTNV	CW	Ant1	5190	5189.986	-2.69750	±20	PASS
NTNV	CW	Ant2	5190	5189.985	-2.89017	±20	PASS
NTNV	CW	Ant1	5200	5199.978	-4.23077	±20	PASS
NTNV	CW	Ant2	5200	5199.984	-3.07692	±20	PASS
NTNV	CW	Ant2	5210	5209.987	-2.49520	±20	PASS
NTNV	CW	Ant1	5210	5209.983	-3.26296	±20	PASS
NTNV	CW	Ant1	5220	5219.978	-4.21456	±20	PASS
NTNV	CW	Ant2	5220	5219.984	-3.06513	±20	PASS
NTNV	CW	Ant1	5230	5229.985	-2.86807	±20	PASS
NTNV	CW	Ant2	5230	5229.985	-2.86807	±20	PASS
NTNV	CW	Ant1	5240	5239.989	-2.09924	±20	PASS
NTNV	CW	Ant2	5240	5239.983	-3.24428	±20	PASS
NTNV	CW	Ant1	5260	5259.978	-4.18251	±20	PASS
NTNV	CW	Ant2	5260	5259.984	-3.04183	±20	PASS
NTNV	CW	Ant1	5270	5269.985	-2.84630	±20	PASS
NTNV	CW	Ant2	5270	5269.985	-2.84630	±20	PASS
NTNV	CW	Ant1	5280	5279.978	-4.16667	±20	PASS
NTNV	CW	Ant2	5280	5279.984	-3.03030	±20	PASS
NTNV	CW	Ant1	5290	5289.986	-2.64650	±20	PASS
NTNV	CW	Ant2	5290	5289.987	-2.45747	±20	PASS
NTNV	CW	Ant1	5300	5299.979	-3.96226	±20	PASS
NTNV	CW	Ant2	5300	5299.984	-3.01887	±20	PASS
NTNV	CW	Ant1	5310	5309.985	-2.82486	±20	PASS

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotech.com


Hotline 400-003-0500
www.anbotech.com




NTNV	CW	Ant2	5310	5309.985	-2.82486	±20	PASS
NTNV	CW	Ant1	5320	5319.979	-3.94737	±20	PASS
NTNV	CW	Ant2	5320	5319.985	-2.81955	±20	PASS
NTNV	CW	Ant1	5500	5499.979	-3.81818	±20	PASS
NTNV	CW	Ant2	5500	5499.987	-2.36364	±20	PASS
NTNV	CW	Ant1	5510	5509.985	-2.72232	±20	PASS
NTNV	CW	Ant2	5510	5509.986	-2.54084	±20	PASS
NTNV	CW	Ant1	5530	5529.986	-2.53165	±20	PASS
NTNV	CW	Ant2	5530	5529.987	-2.35081	±20	PASS
NTNV	CW	Ant1	5550	5549.988	-2.16216	±20	PASS
NTNV	CW	Ant2	5550	5549.988	-2.16216	±20	PASS
NTNV	CW	Ant1	5580	5579.98	-3.58423	±20	PASS
NTNV	CW	Ant2	5580	5579.985	-2.68817	±20	PASS
NTNV	CW	Ant1	5600	5599.984	-2.85714	±20	PASS
NTNV	CW	Ant2	5600	5599.986	-2.50000	±20	PASS
NTNV	CW	Ant1	5610	5609.987	-2.31729	±20	PASS
NTNV	CW	Ant2	5610	5609.987	-2.31729	±20	PASS
NTNV	CW	Ant1	5670	5669.988	-2.11640	±20	PASS
NTNV	CW	Ant2	5670	5669.988	-2.11640	±20	PASS
NTNV	CW	Ant1	5690	5689.987	-2.28471	±20	PASS
NTNV	CW	Ant2	5690	5689.987	-2.28471	±20	PASS
NTNV	CW	Ant1	5700	5699.984	-2.80702	±20	PASS
NTNV	CW	Ant2	5700	5699.985	-2.63158	±20	PASS



Test Graphs

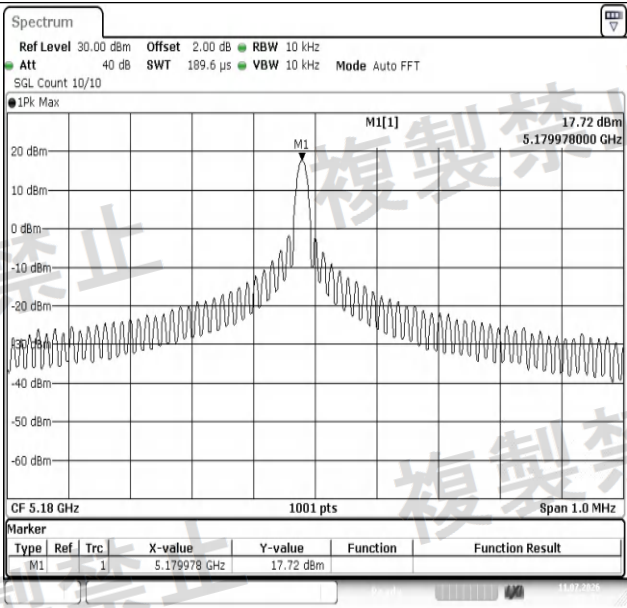



NTNV-CW-Ant1-5180-PASS

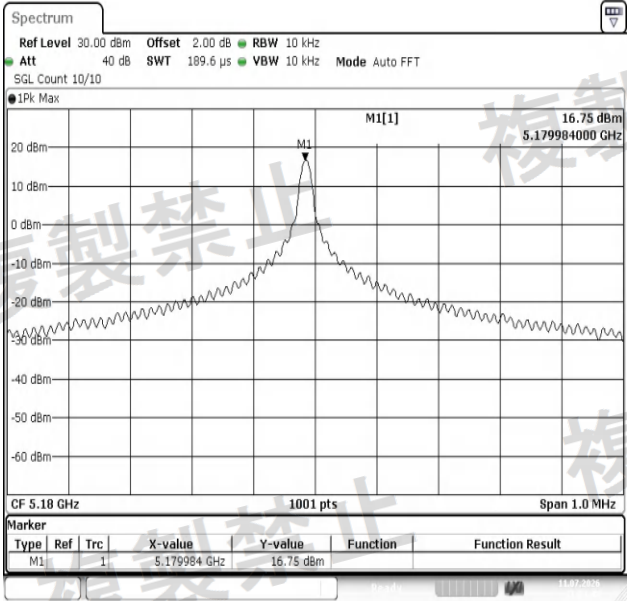



NTNV-CW-Ant2-5180-PASS




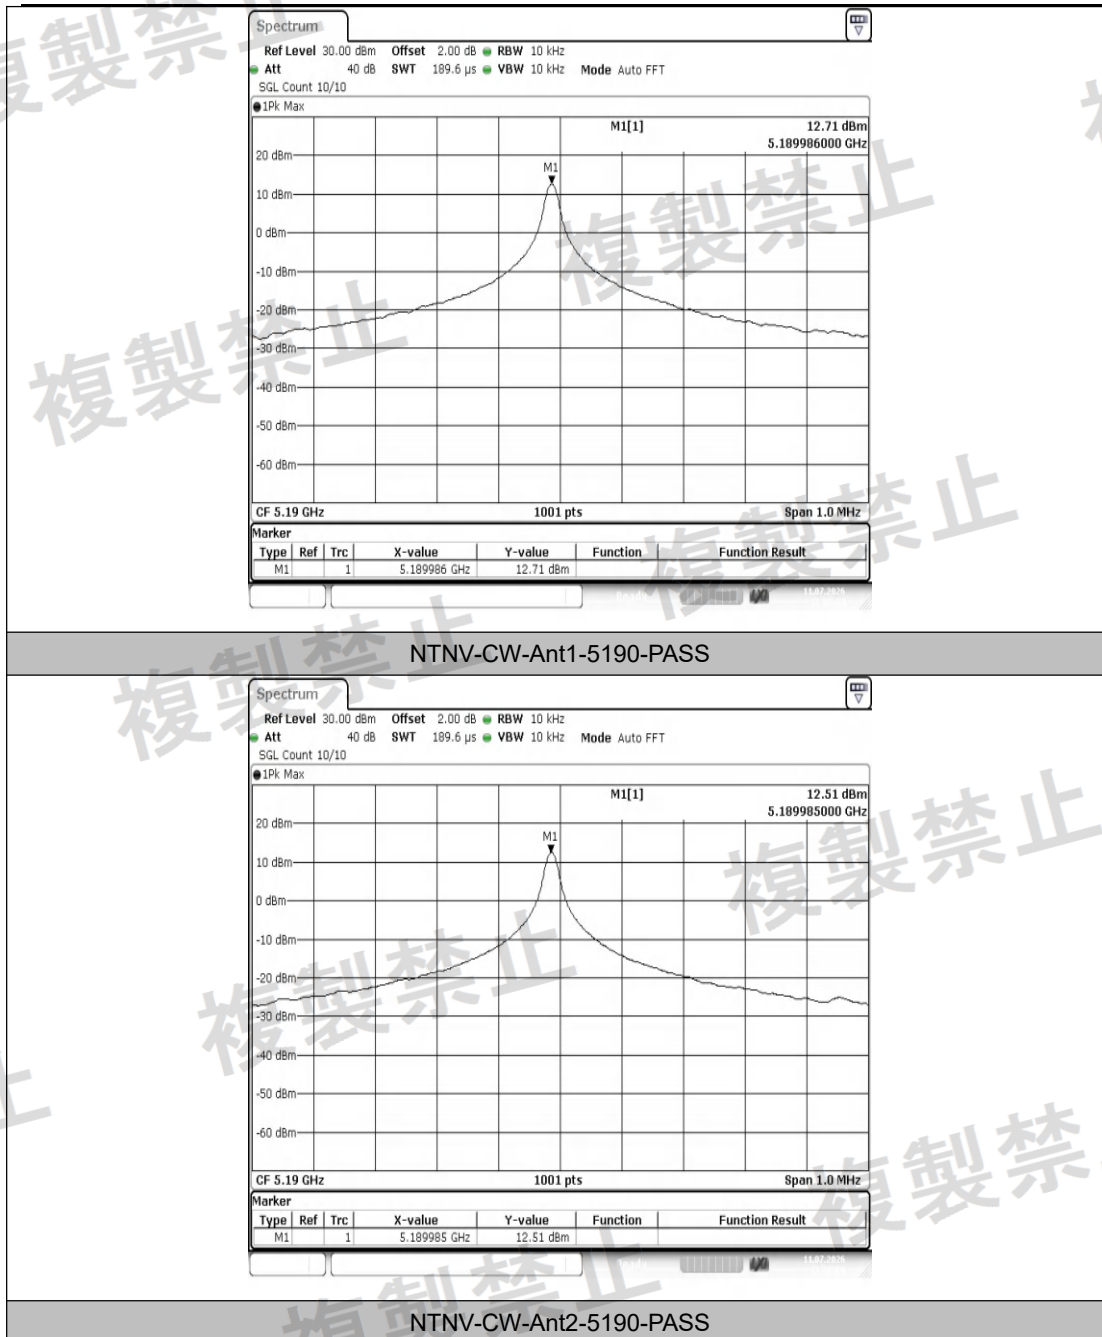


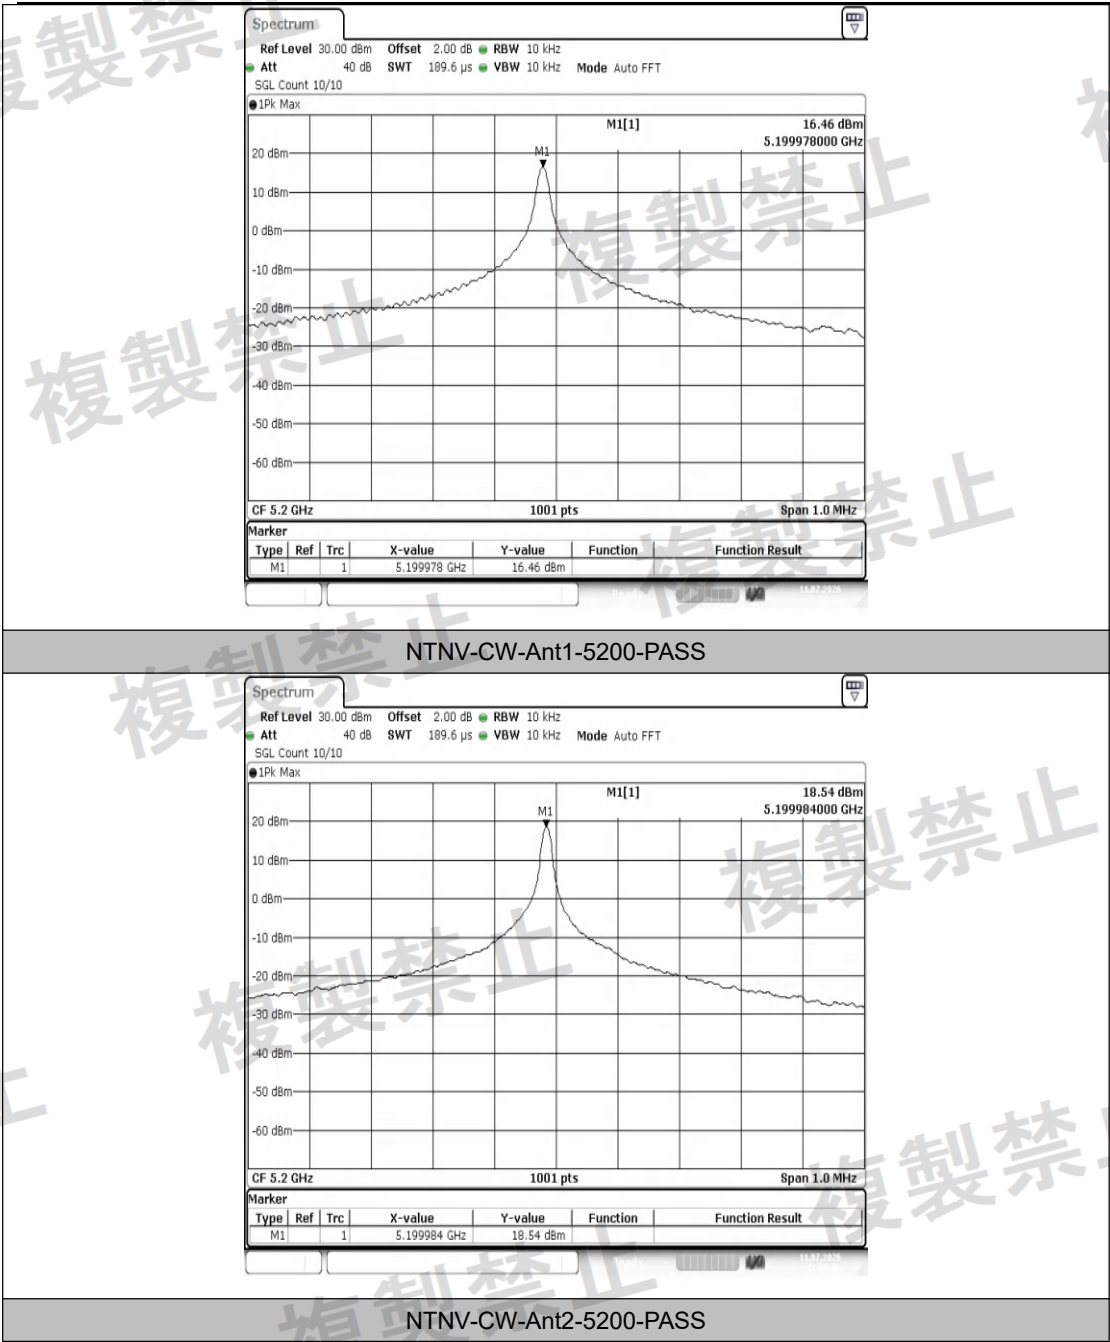

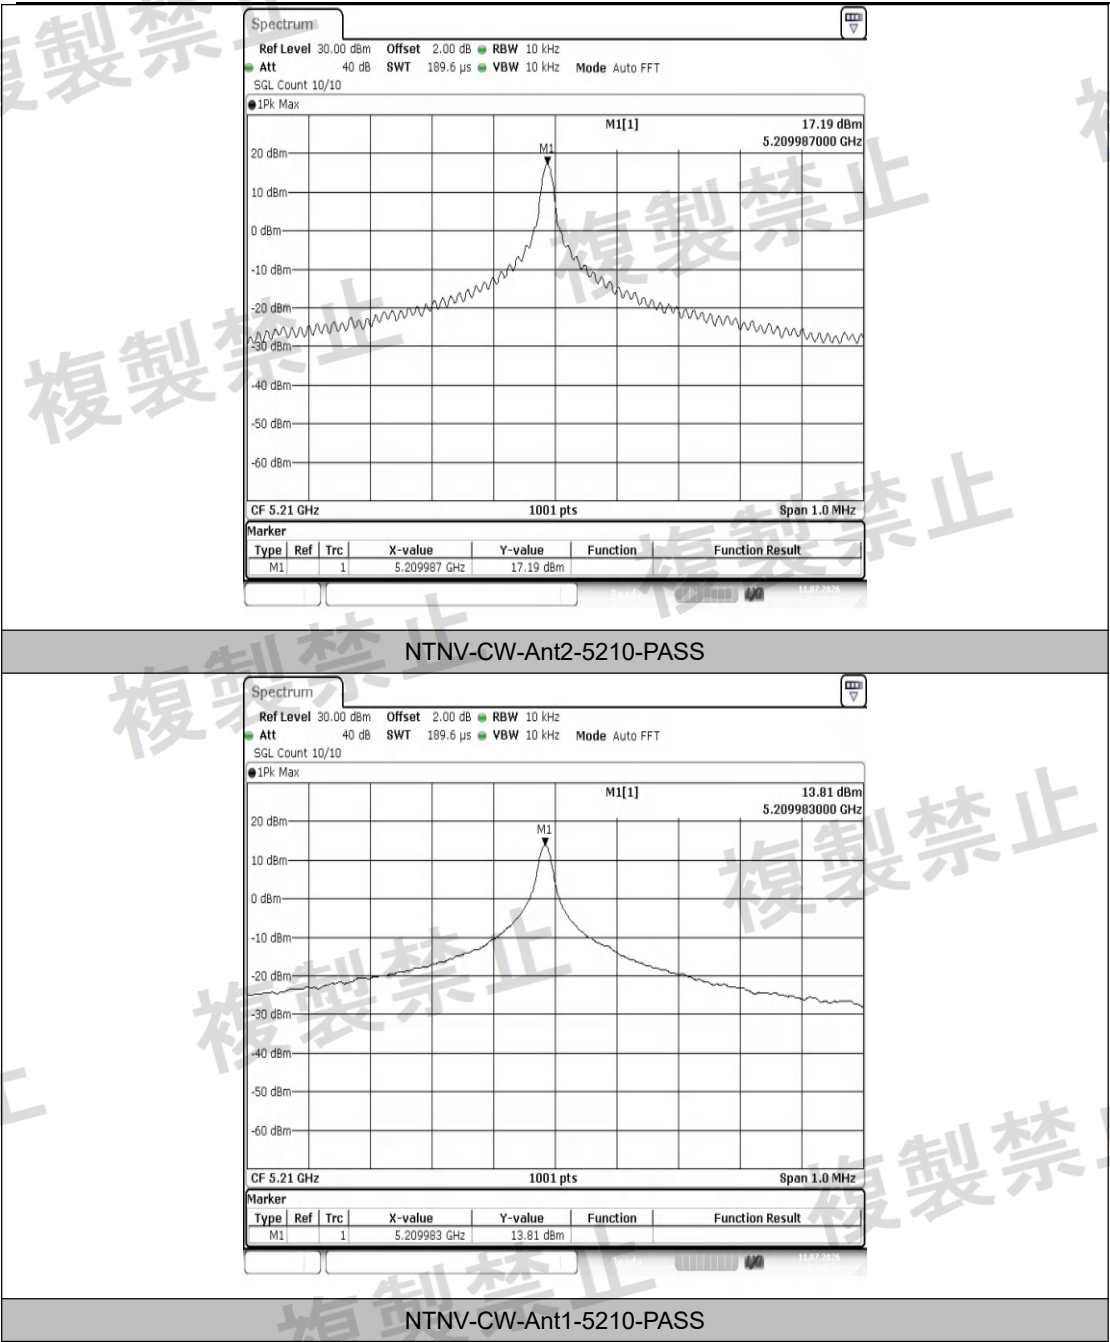


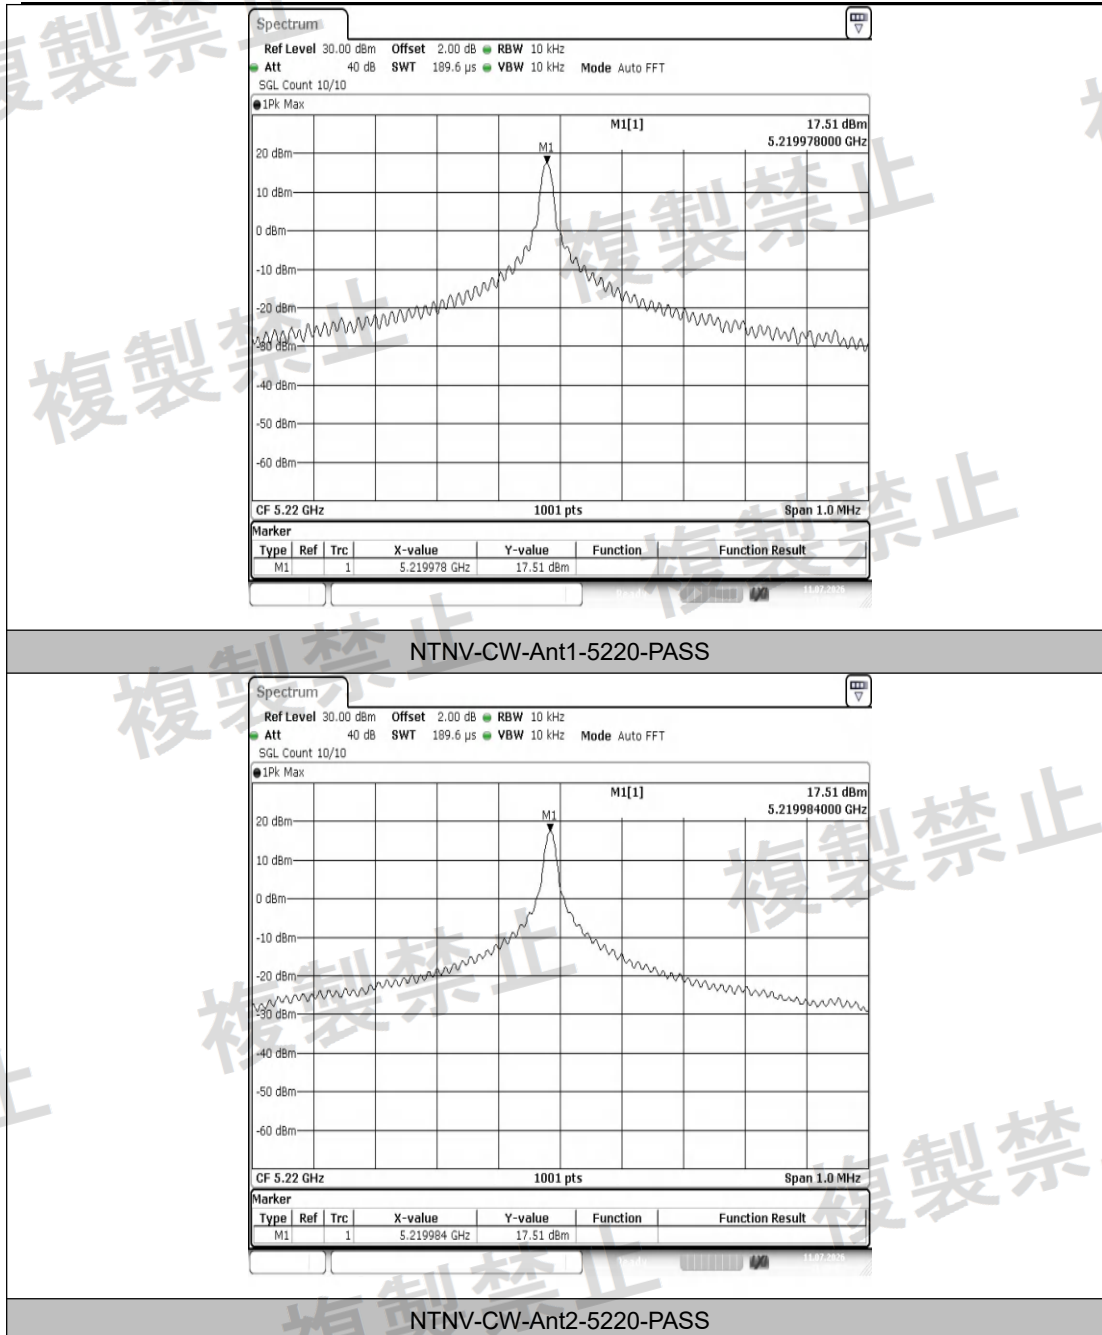

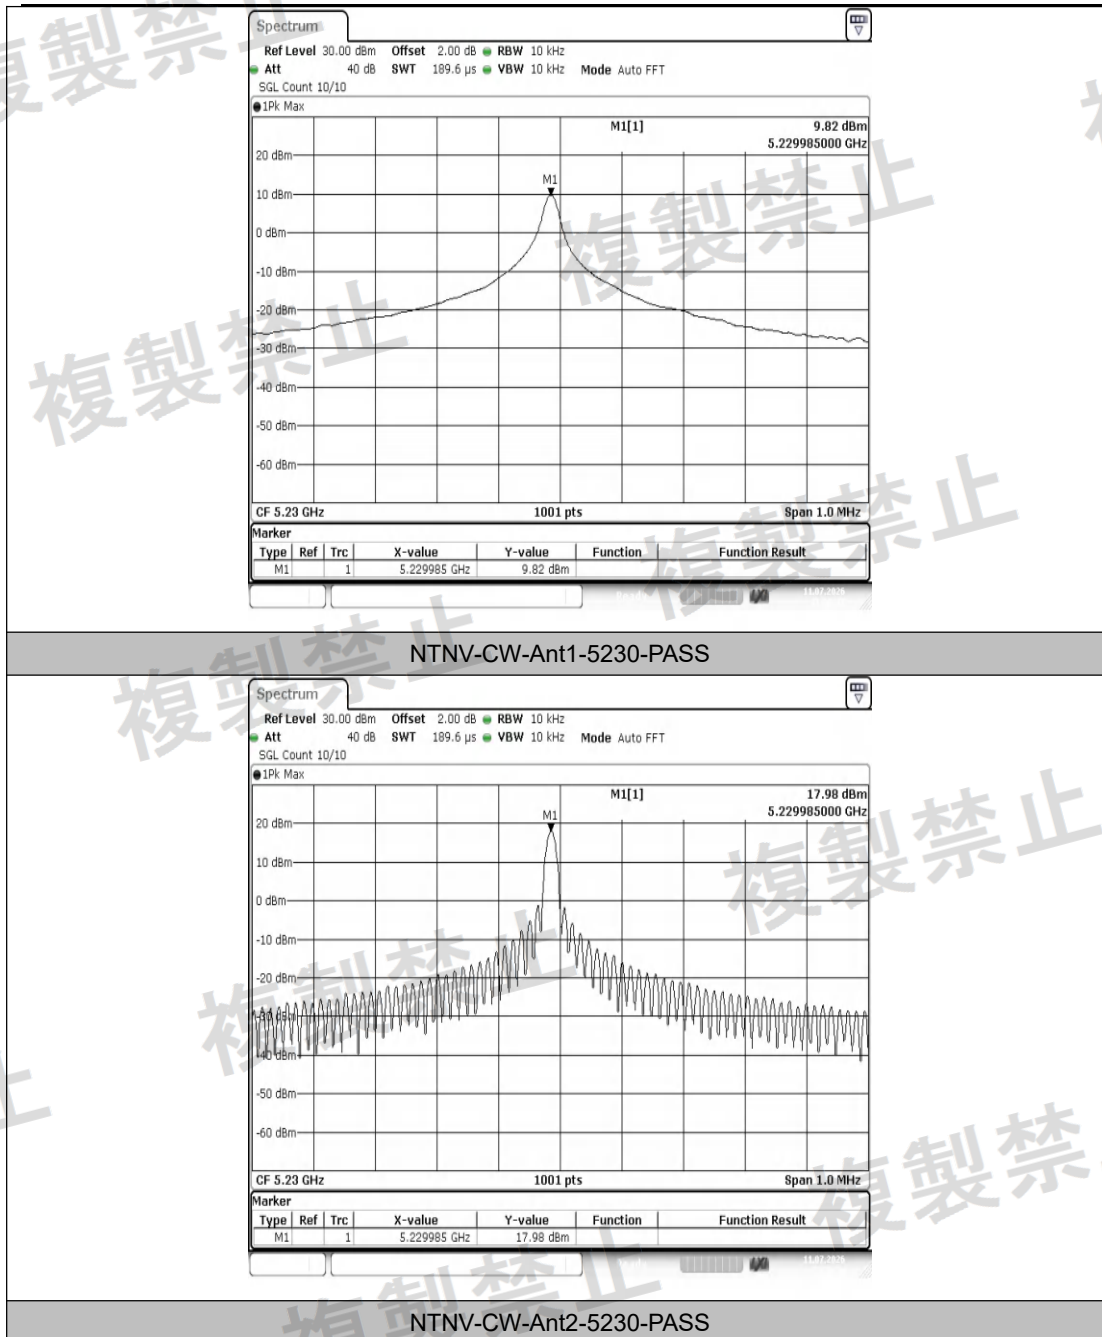

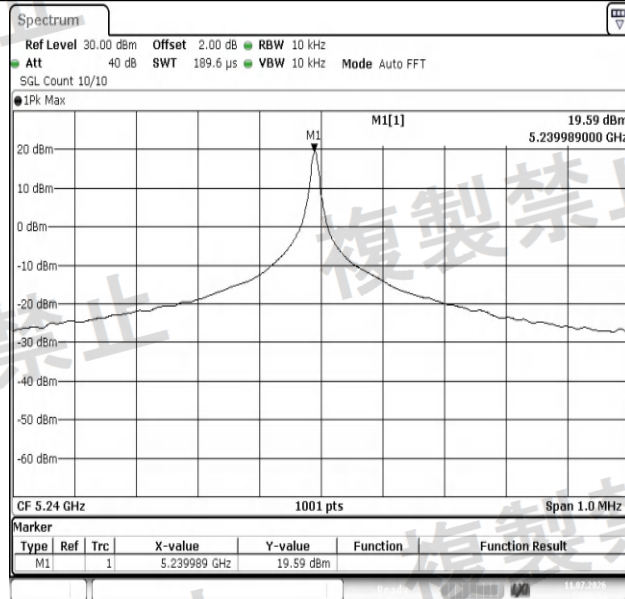



NTNV-CW-Ant1-5240-PASS

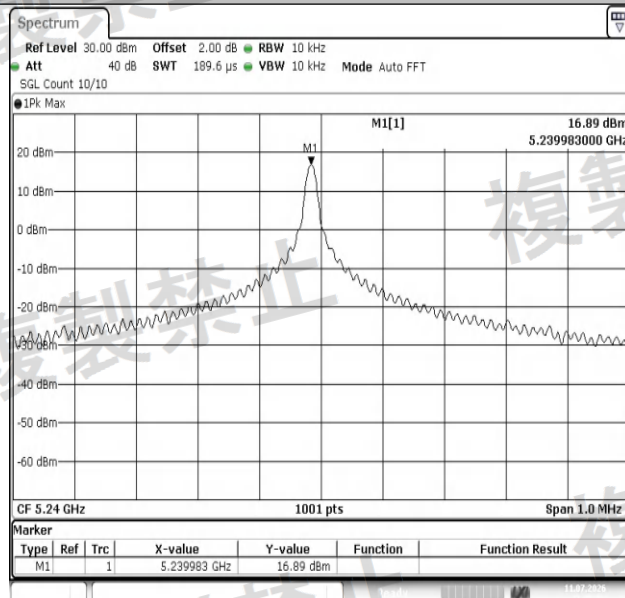



NTNV-CW-Ant2-5240-PASS



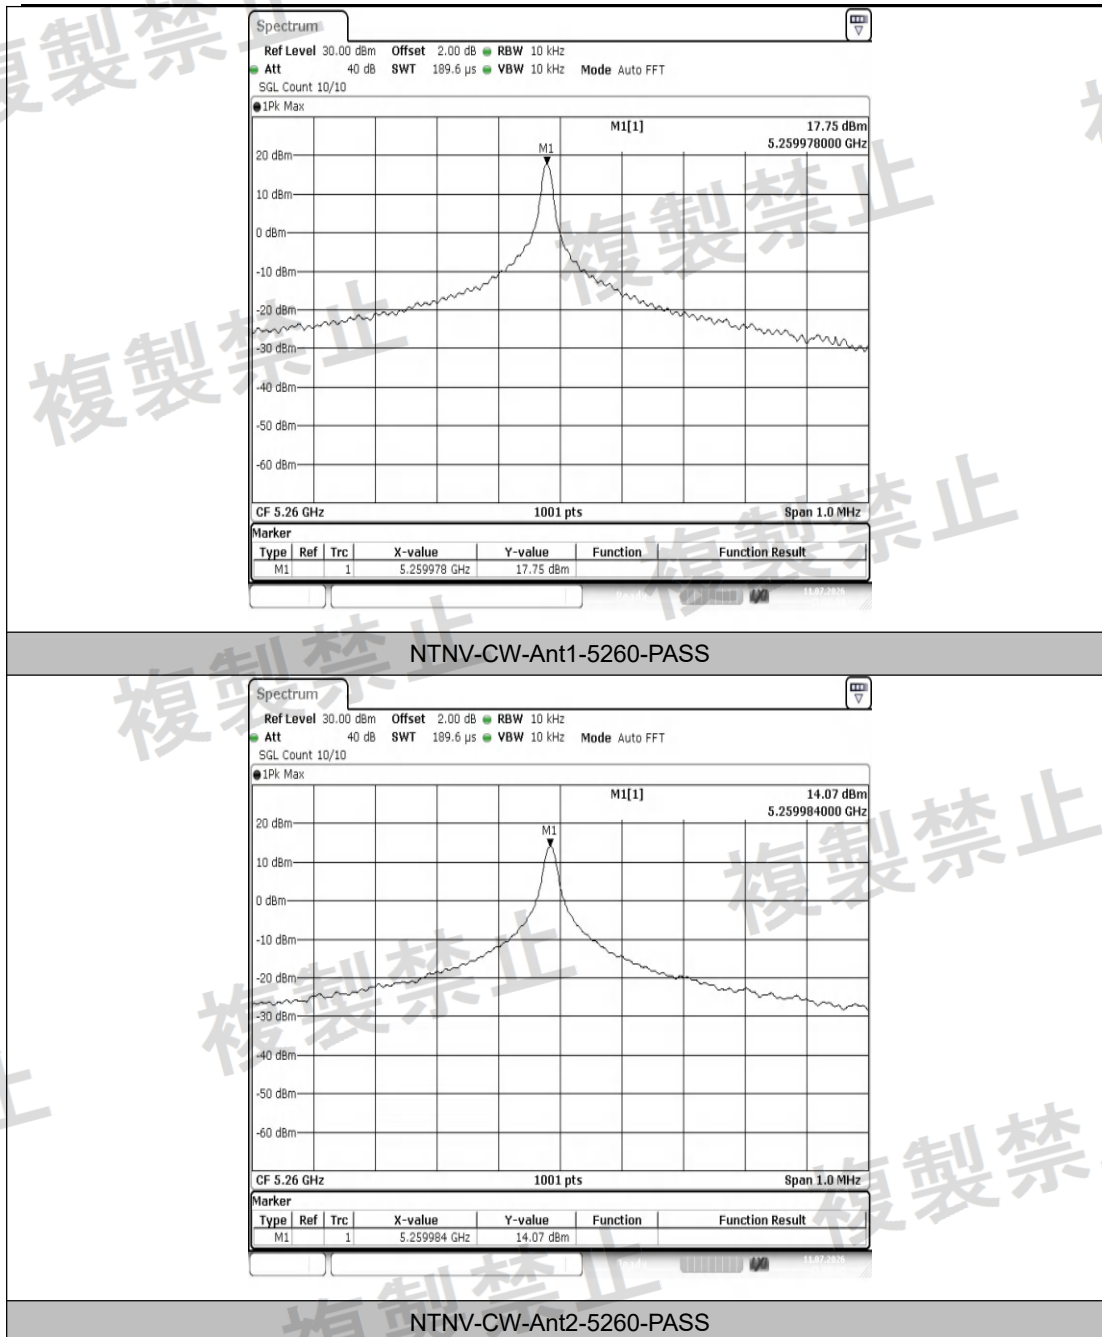


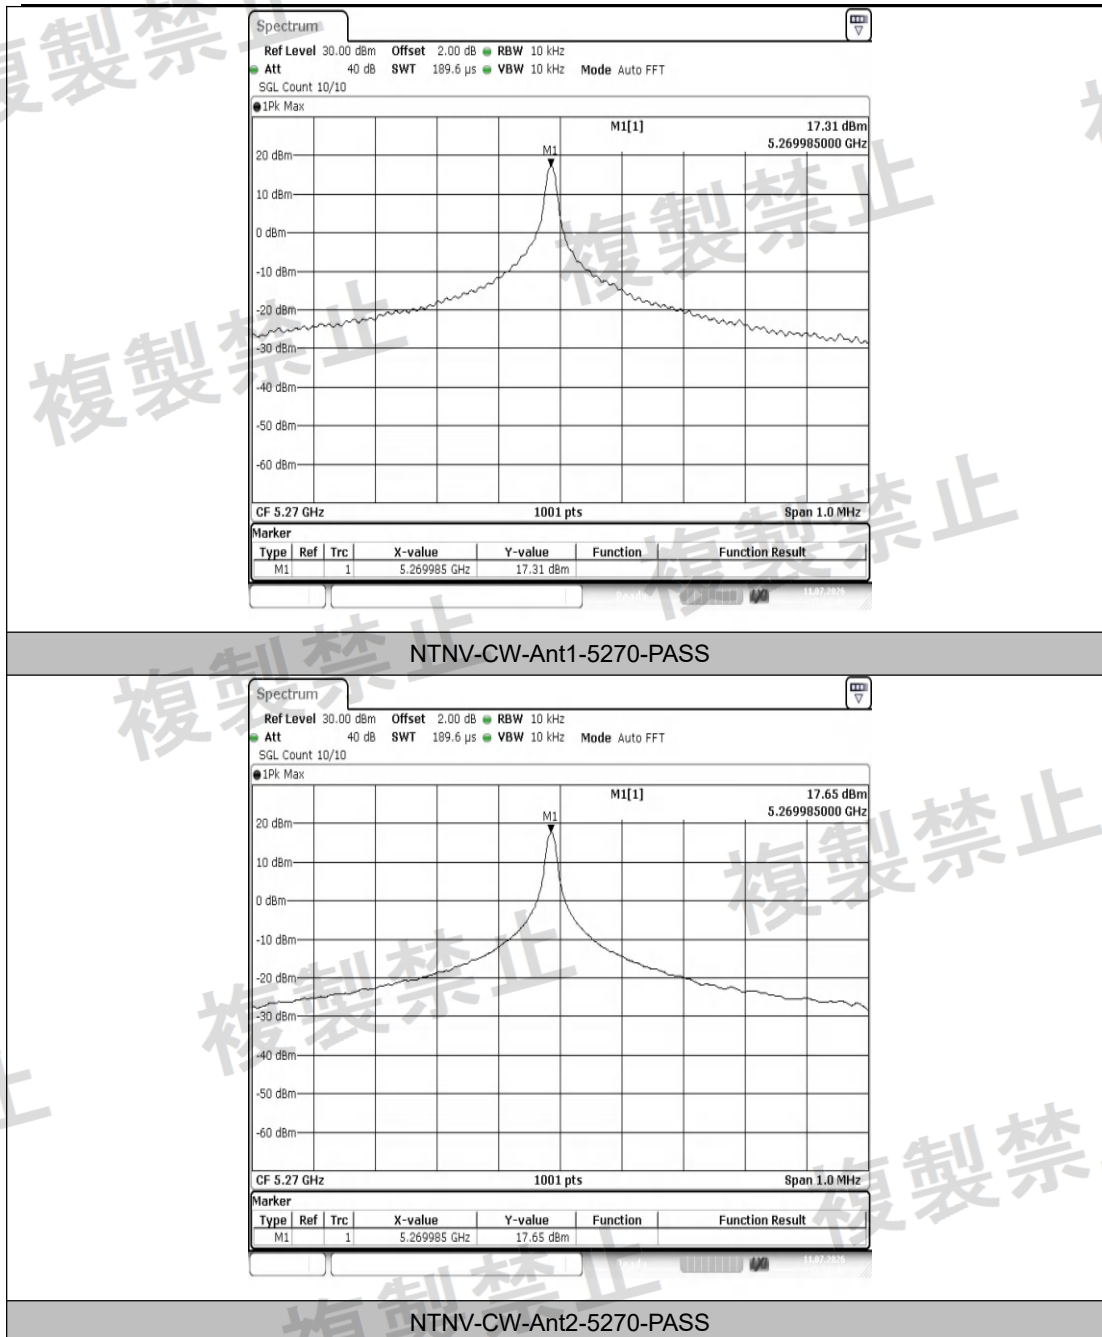

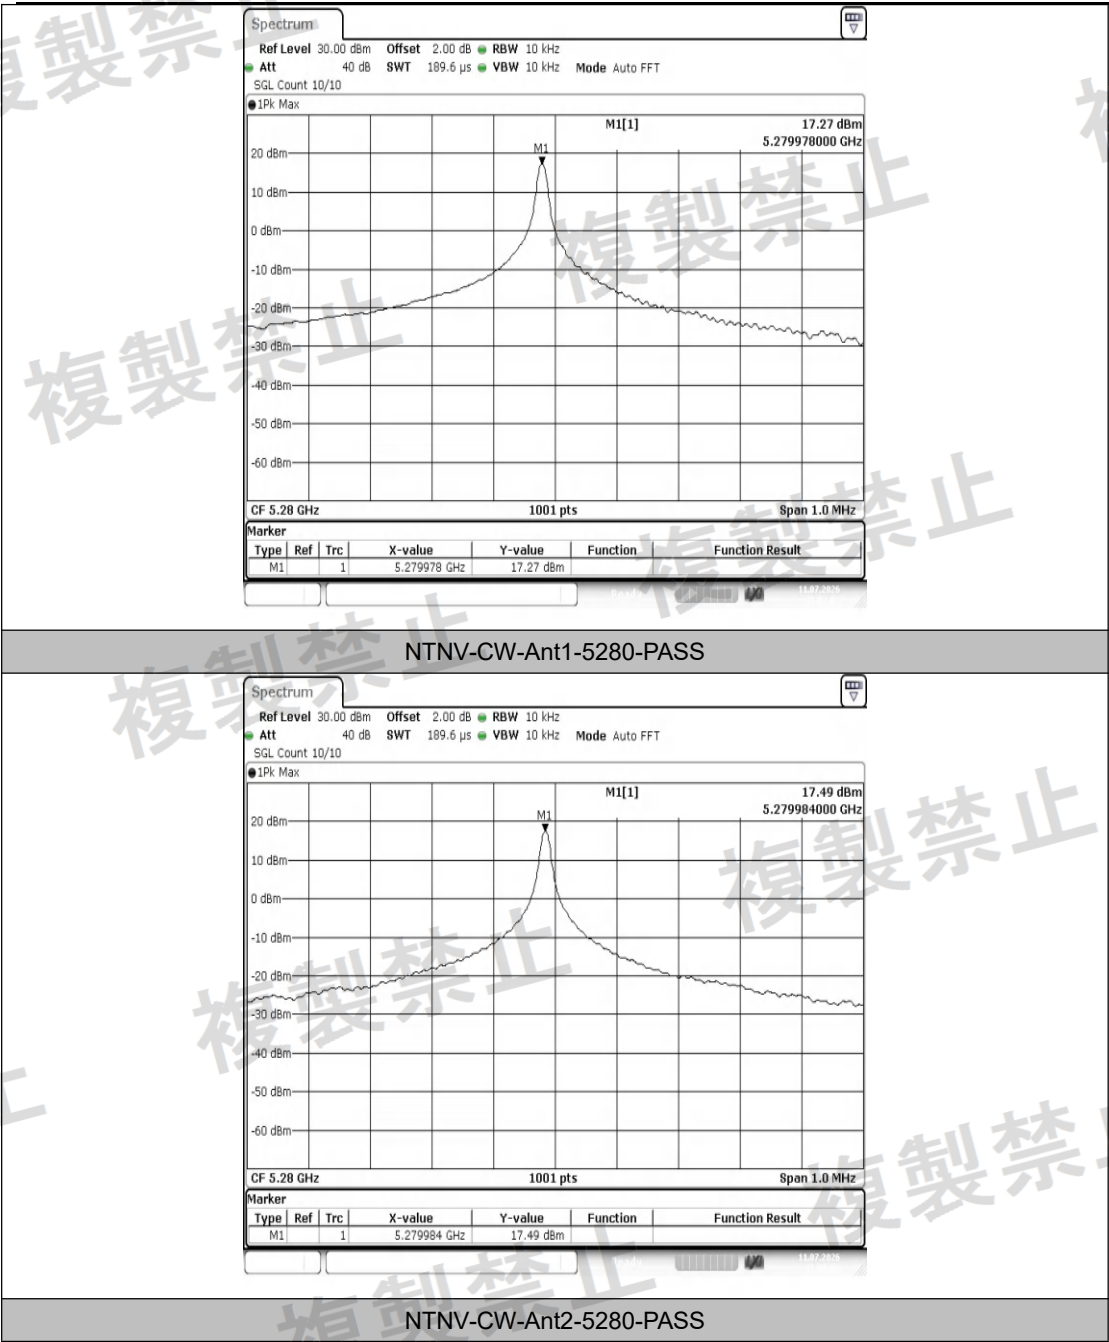

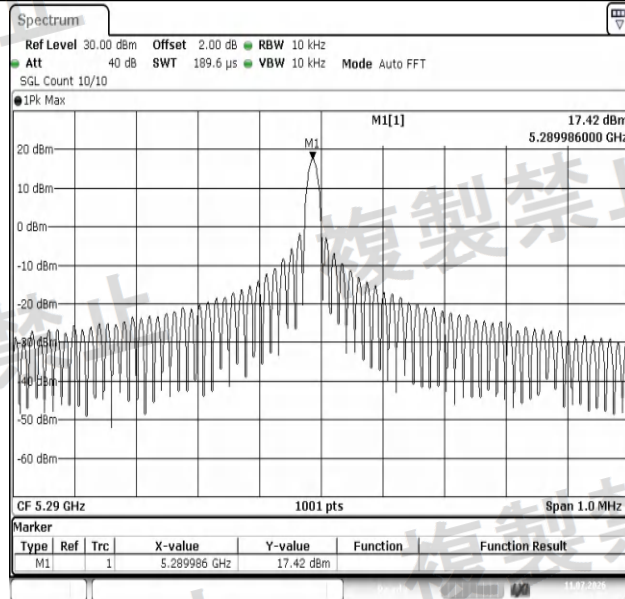


NTNV-CW-Ant1-5290-PASS

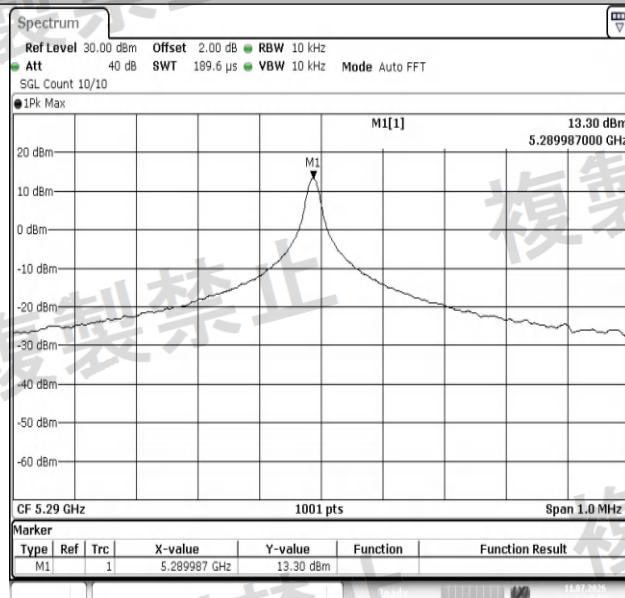


NTNV-CW-Ant2-5290-PASS



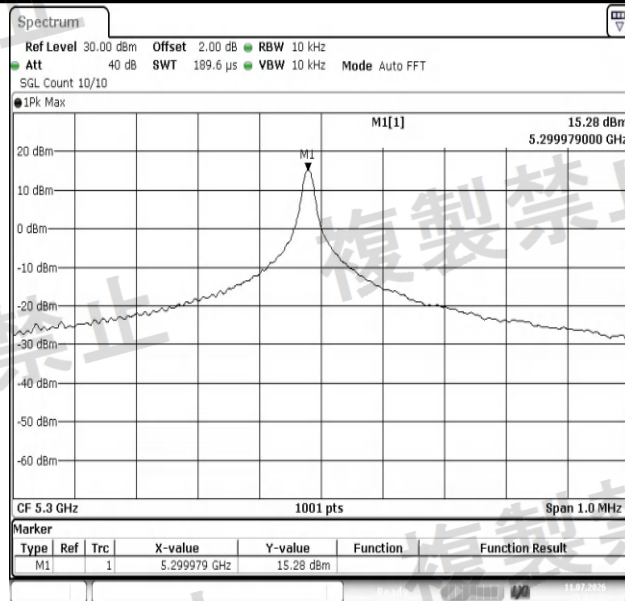



NTNV-CW-Ant1-5300-PASS

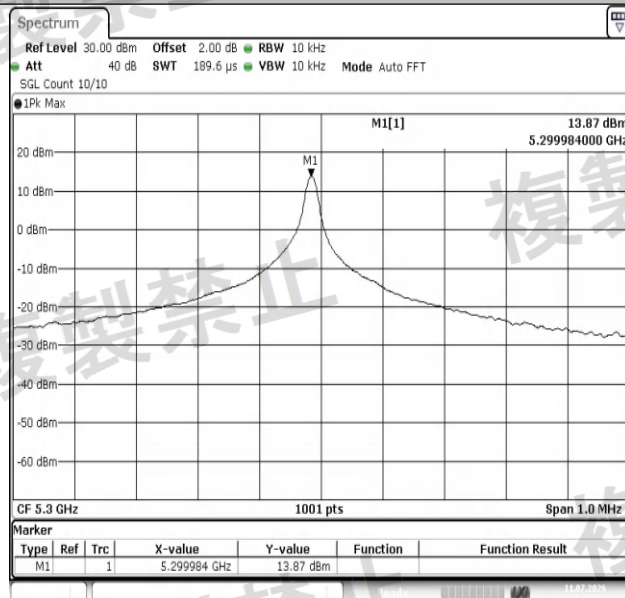



NTNV-CW-Ant2-5300-PASS




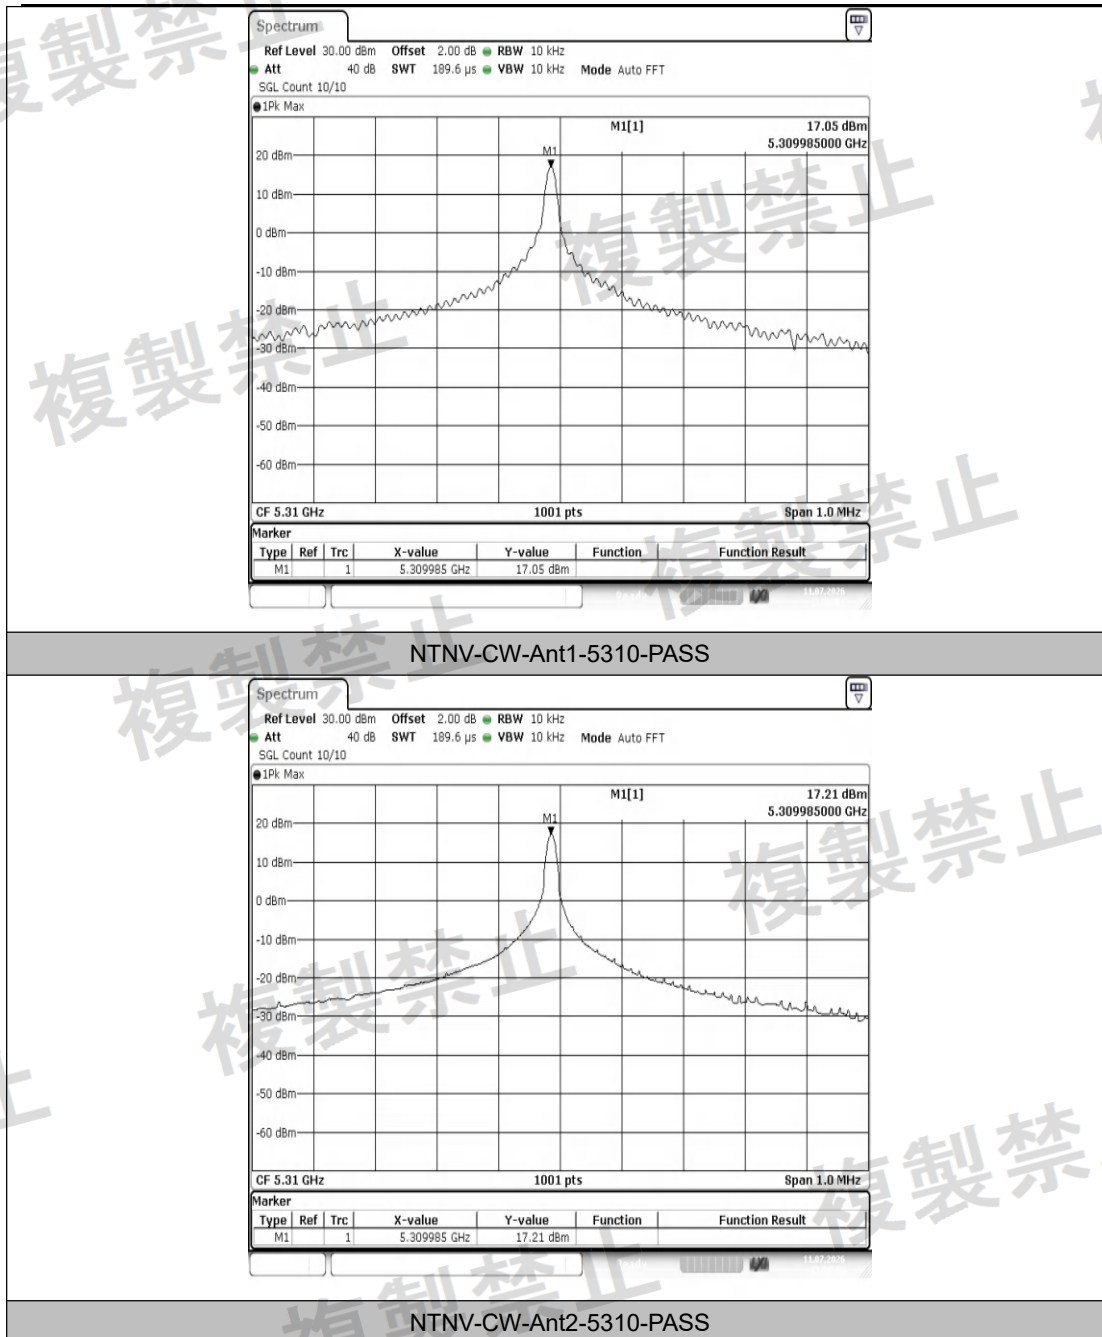


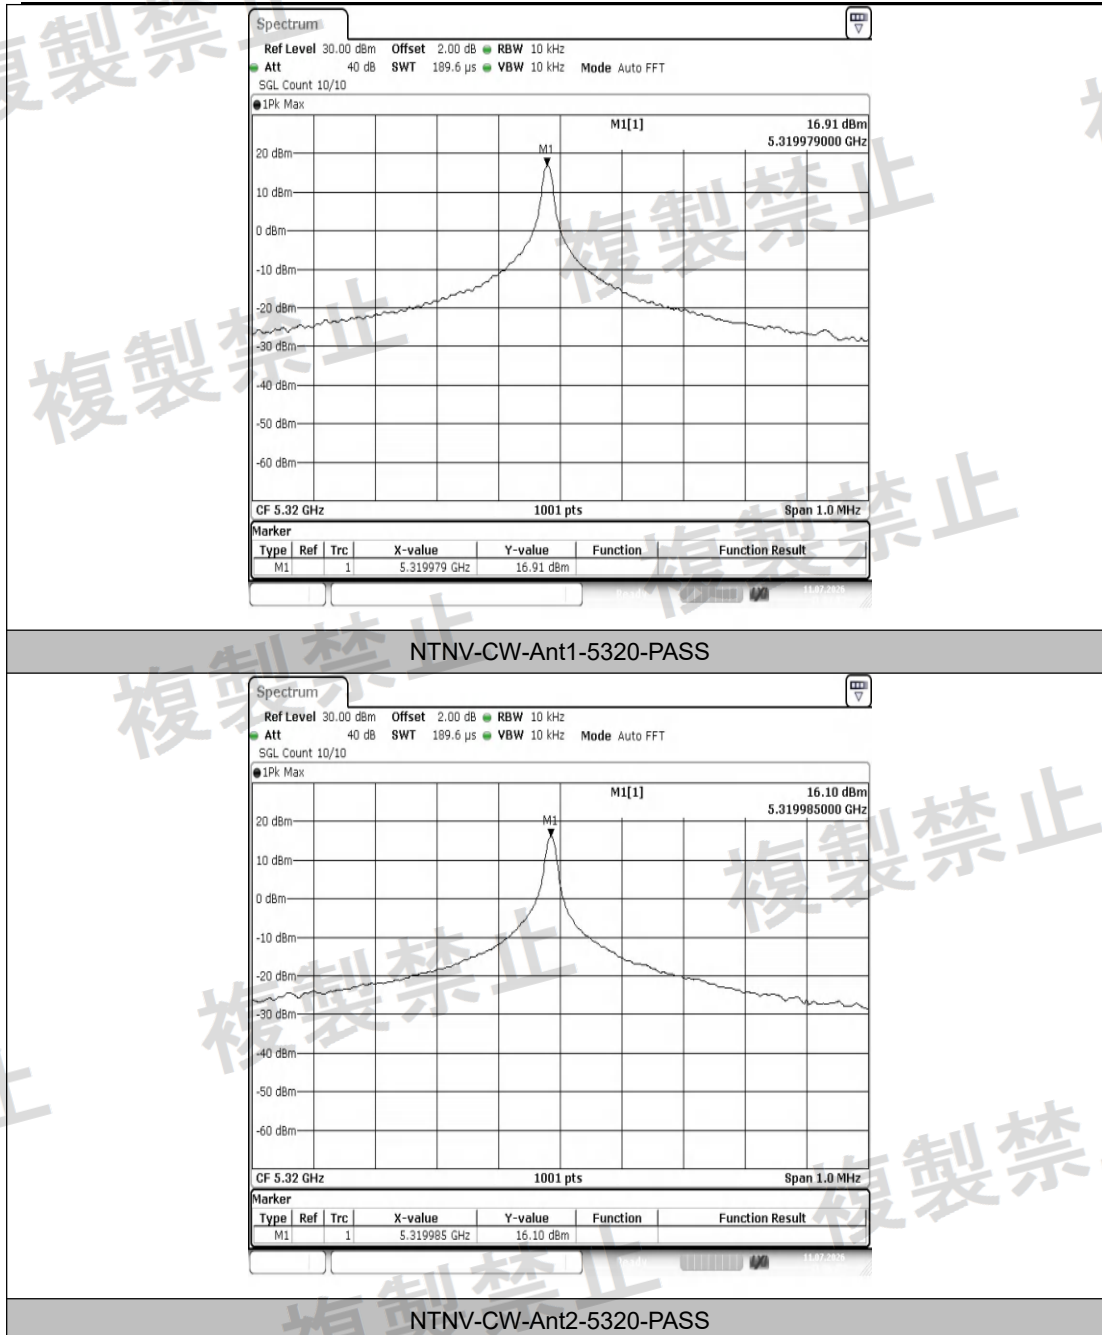

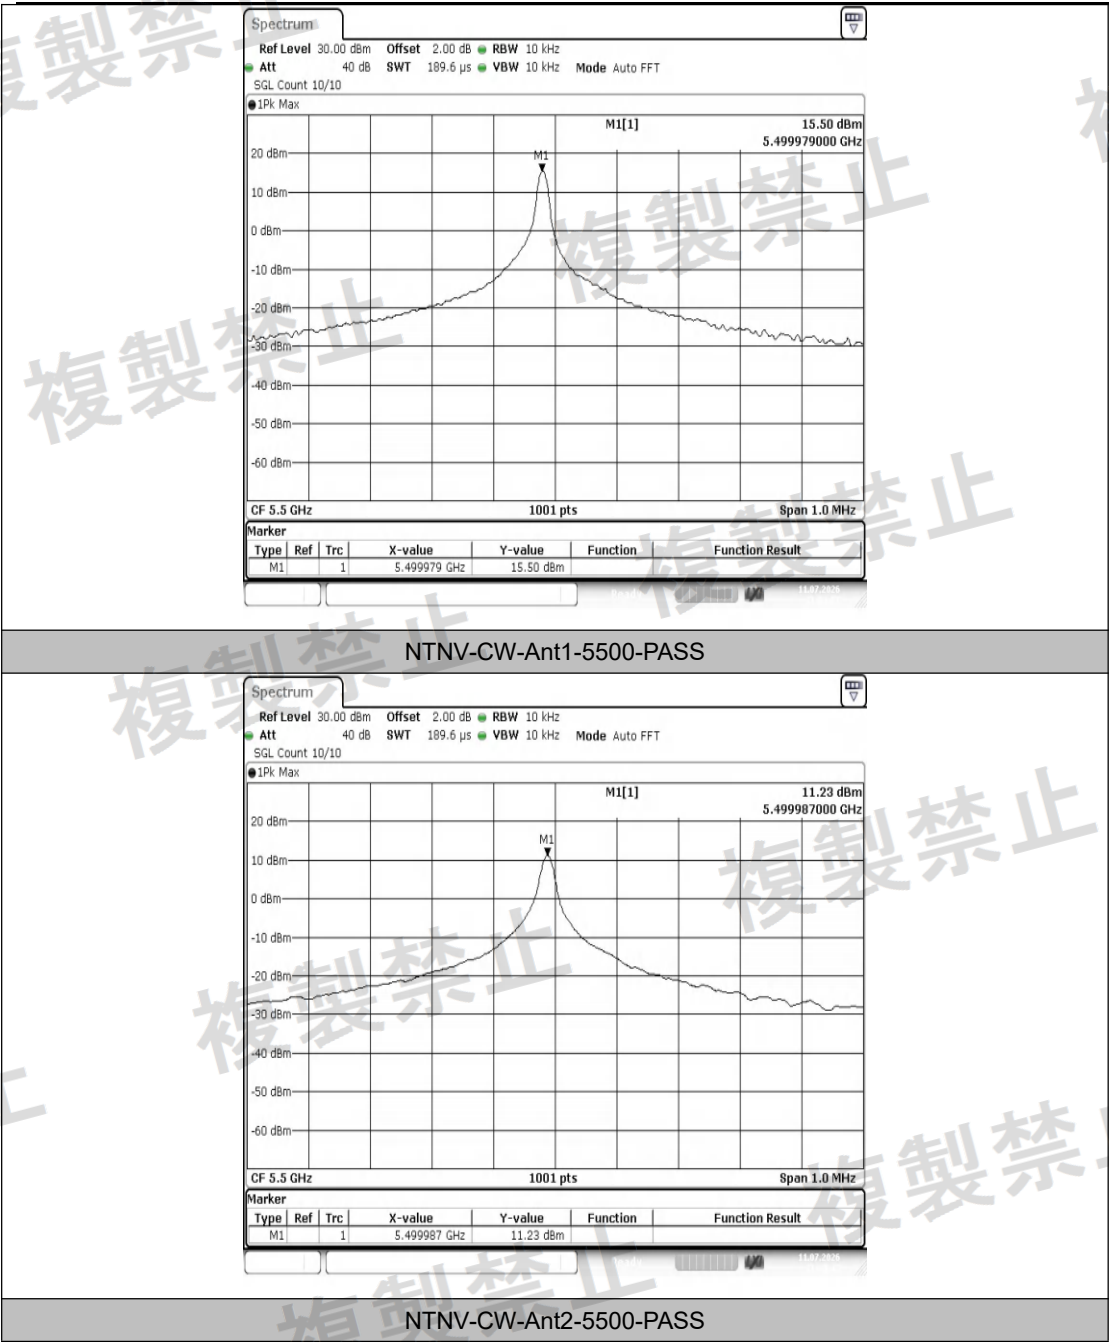


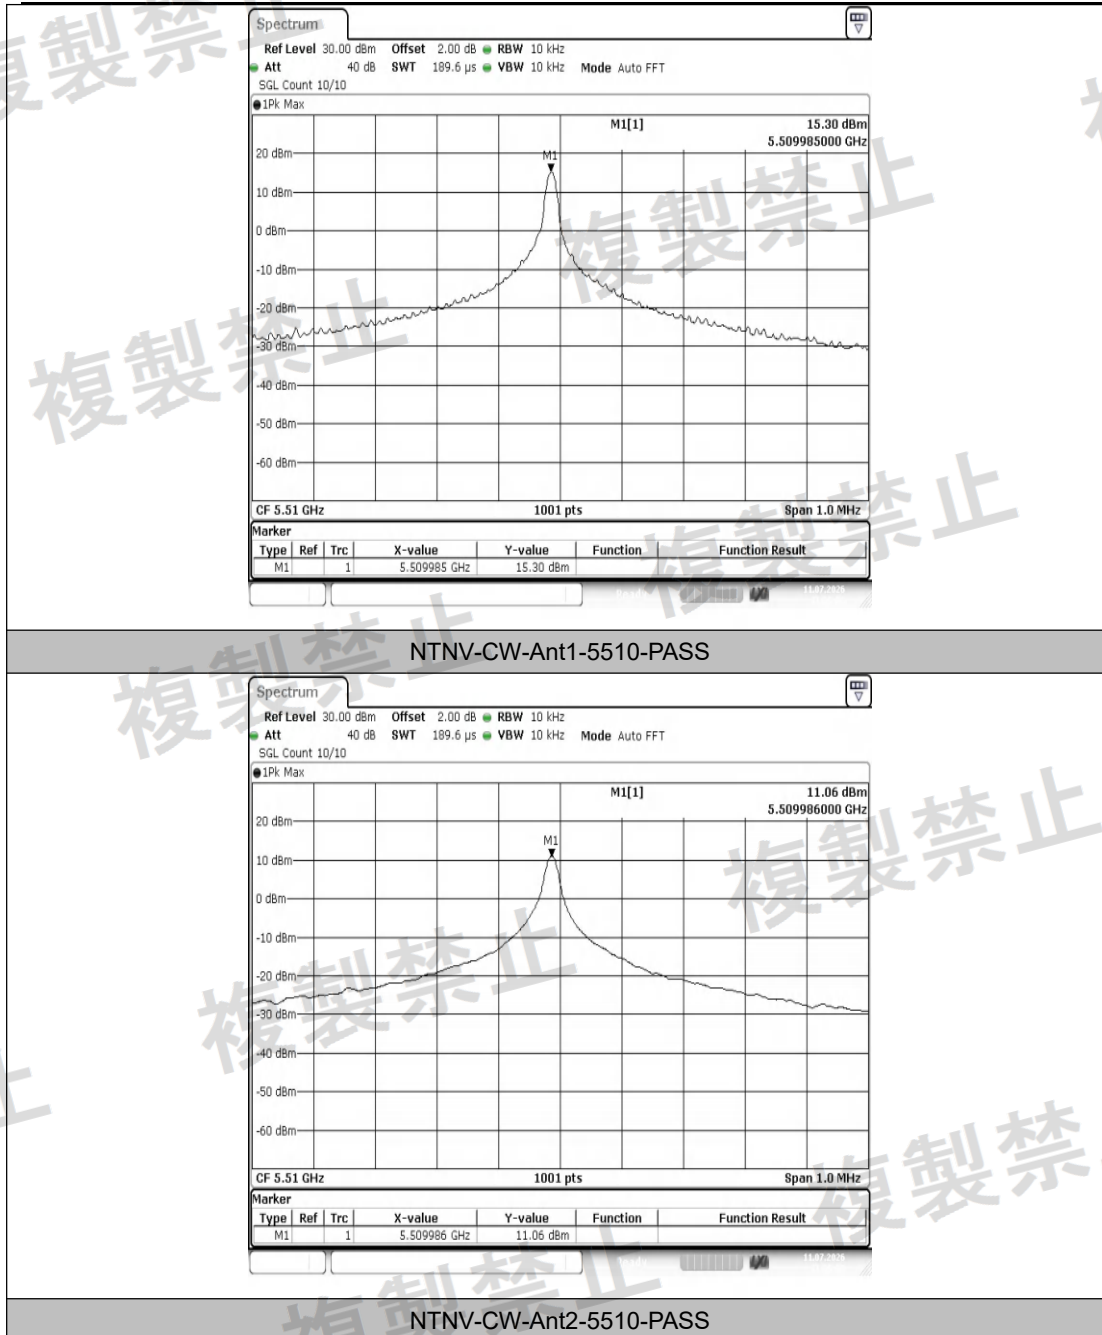

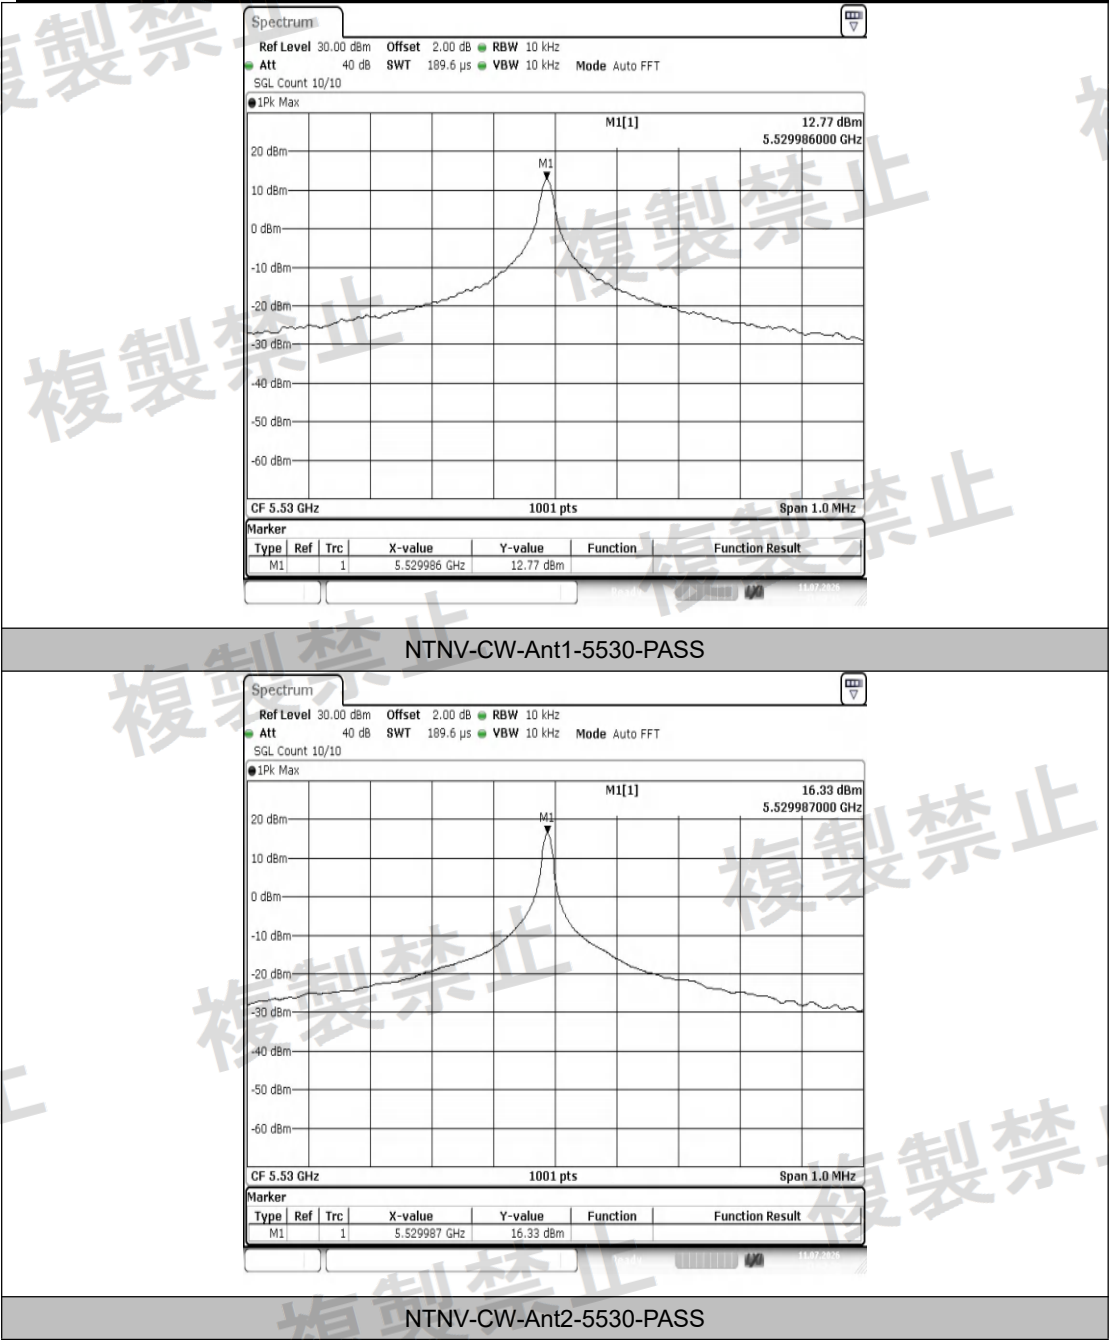

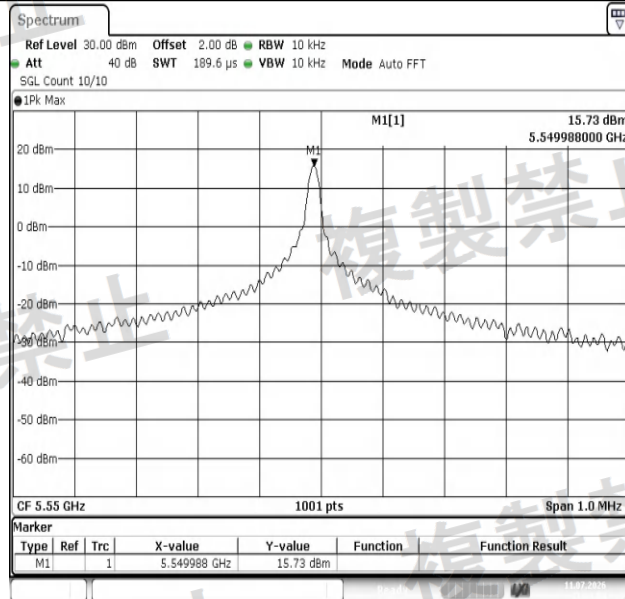



NTNV-CW-Ant1-5550-PASS

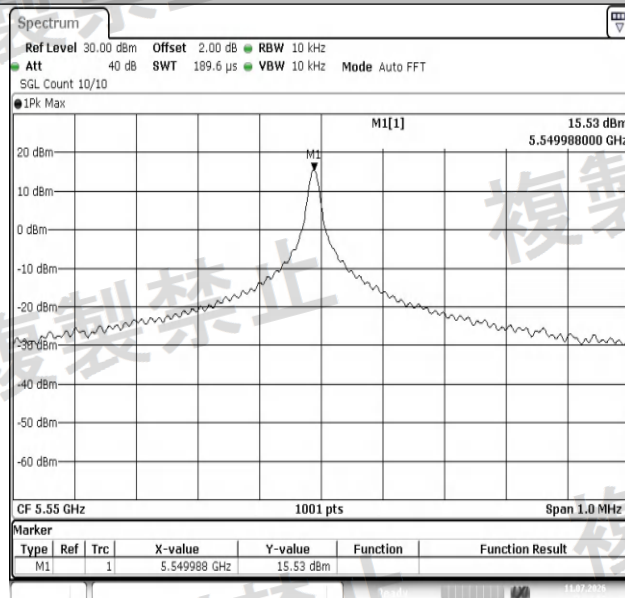


NTNV-CW-Ant2-5550-PASS




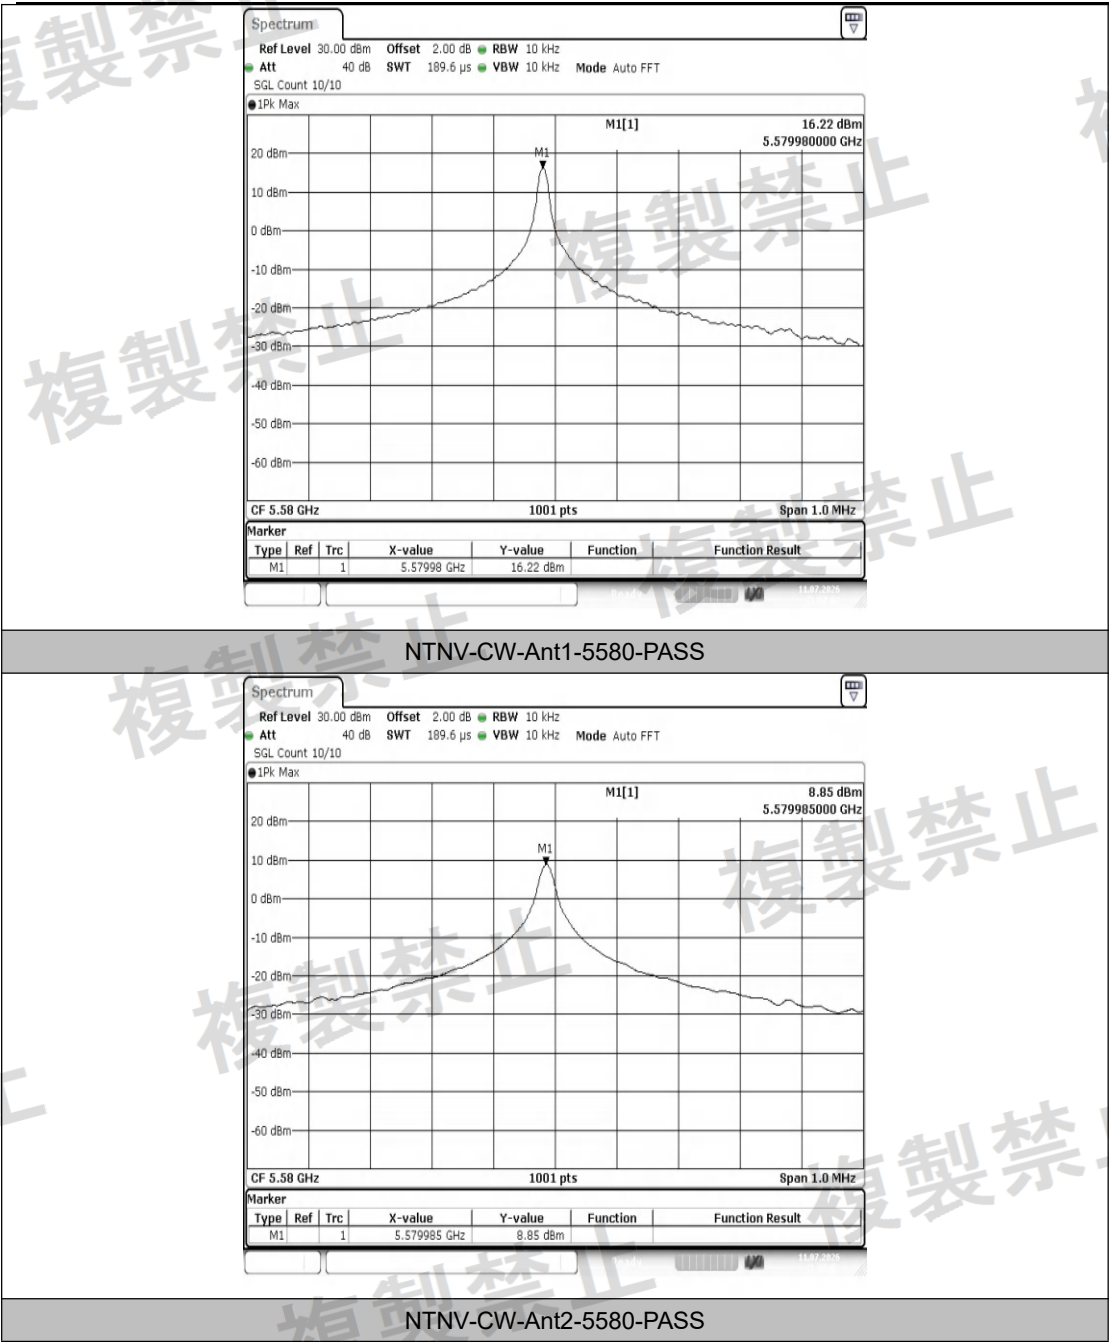

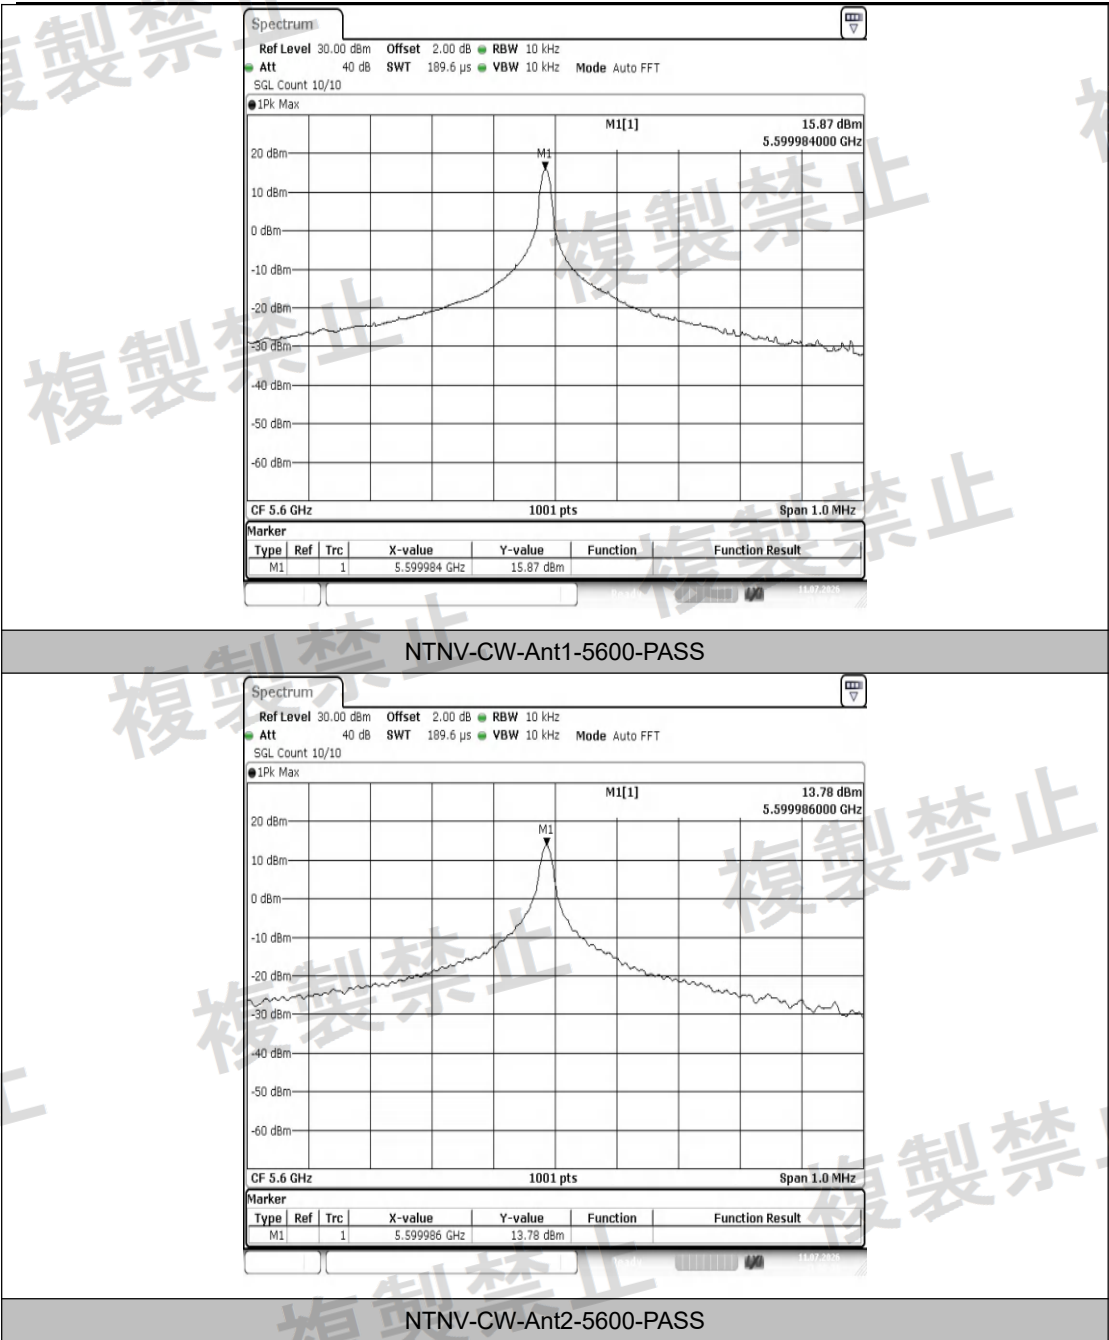

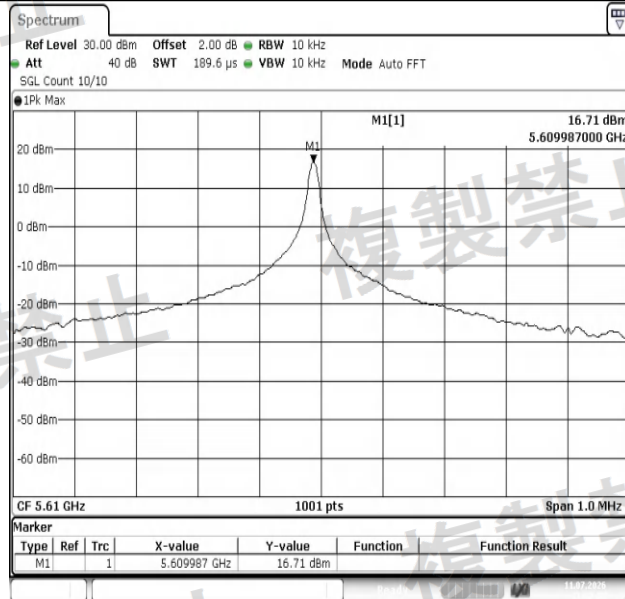



NTNV-CW-Ant1-5610-PASS

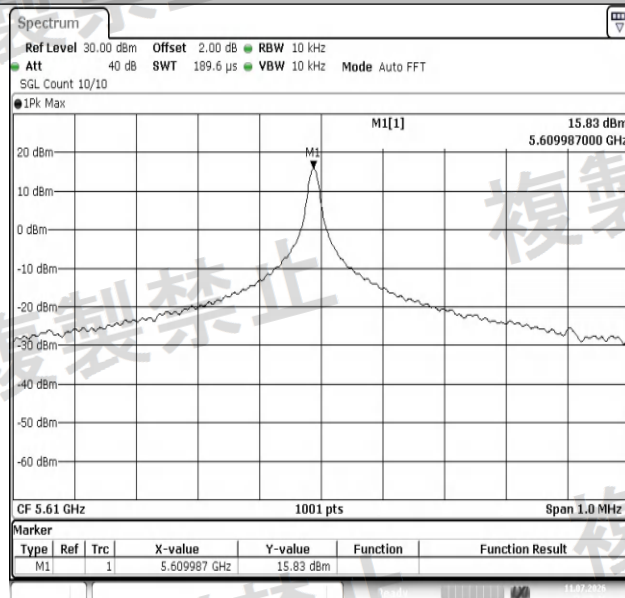


NTNV-CW-Ant2-5610-PASS



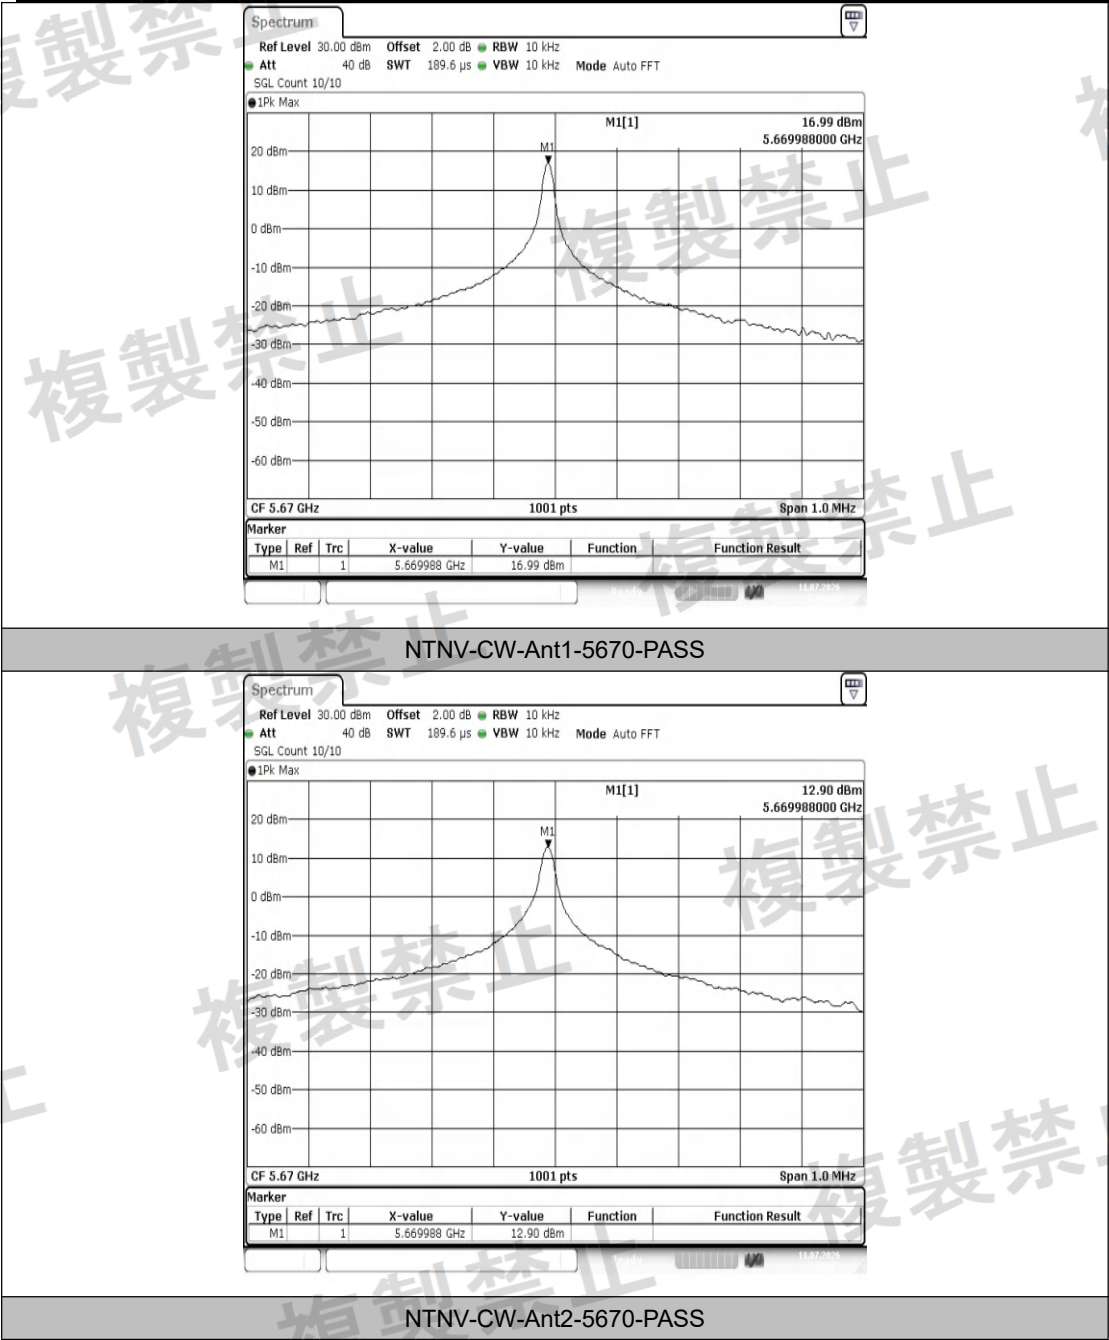

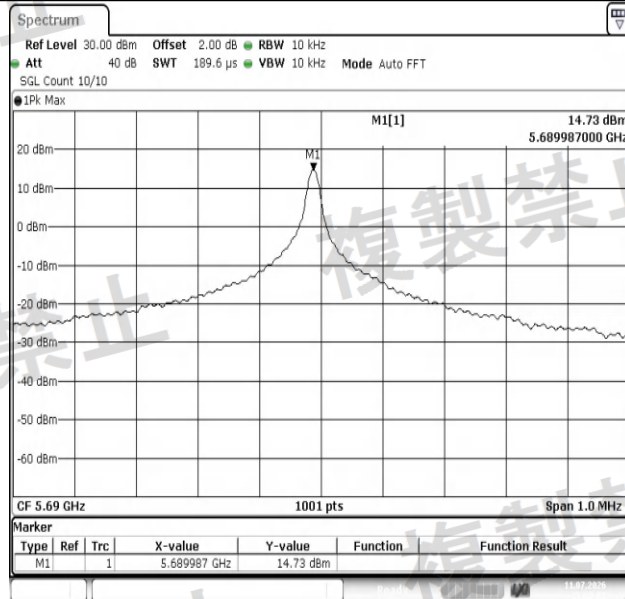


NTNV-CW-Ant1-5690-PASS

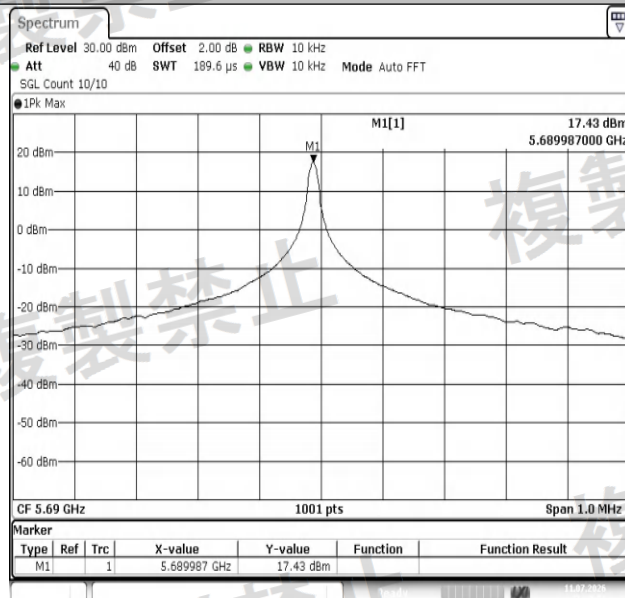

NTNV-CW-Ant2-5690-PASS



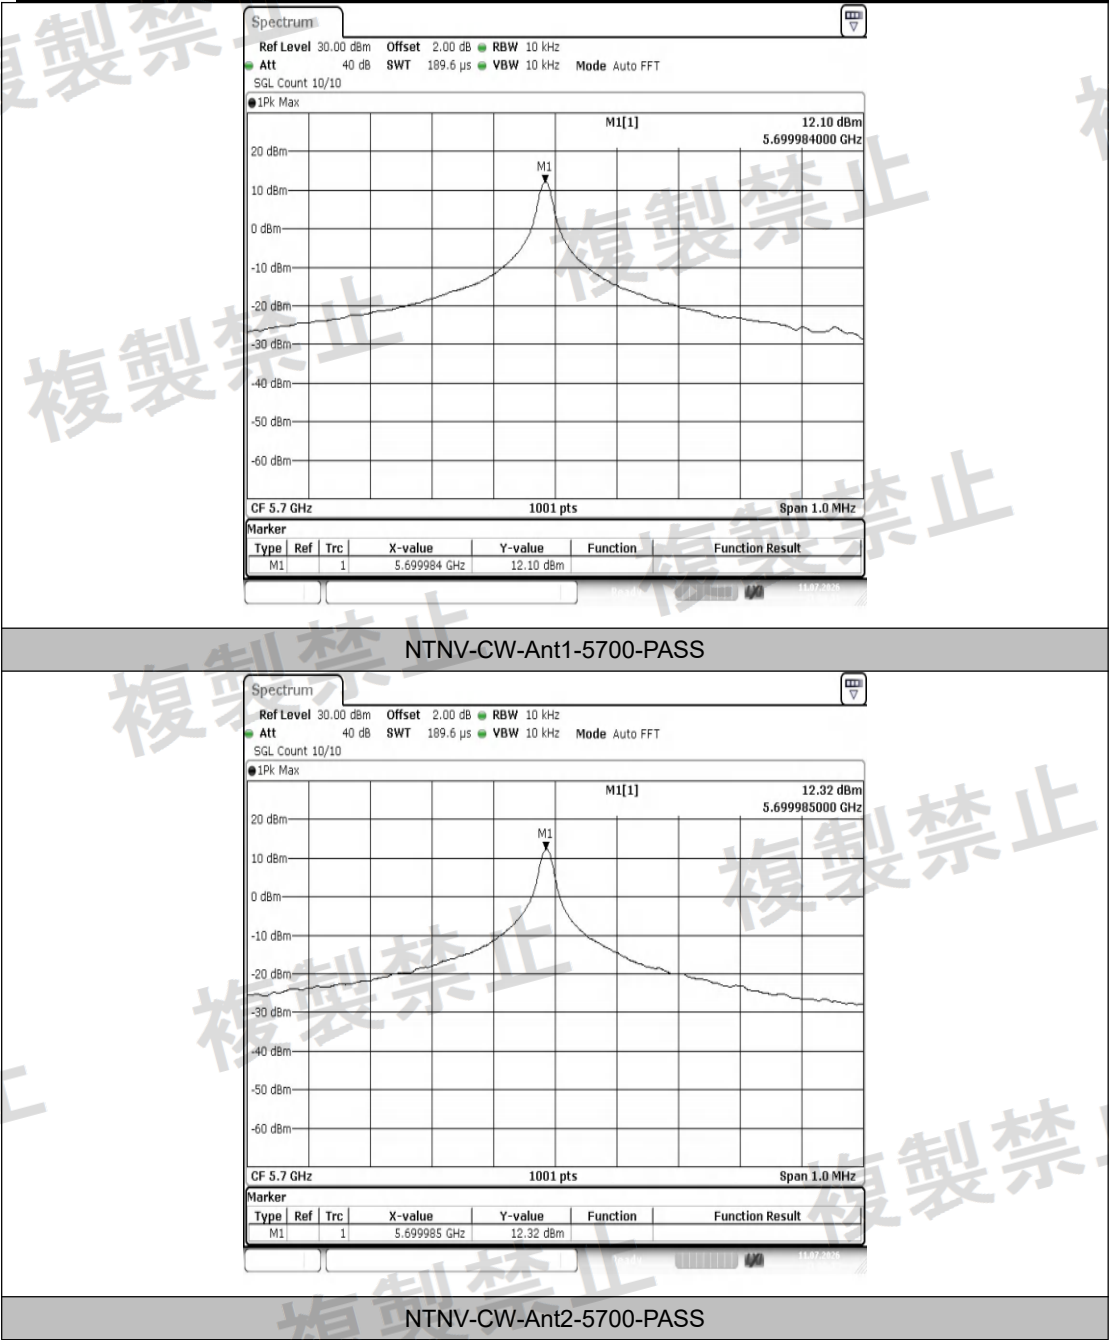

Appendix B: Antenna Power

Test Result

Test Condition	Test Mode	Antenna	Frequency [MHz]	Result [dBm/MHz]	Result [mW/MHz]	Limit [mW/MHz]	Verdict
NTNV	11A	Ant1	5180	0.25	1.0593	≤10	PASS
NTNV	11A	Ant2	5180	-0.13	0.9705	≤10	PASS
NTNV	11A	Ant1	5200	0.15	1.0351	≤10	PASS
NTNV	11A	Ant2	5200	0.16	1.0375	≤10	PASS
NTNV	11A	Ant1	5220	-0.24	0.9462	≤10	PASS
NTNV	11A	Ant2	5220	-0.26	0.9419	≤10	PASS
NTNV	11A	Ant1	5240	-0.82	0.8279	≤10	PASS
NTNV	11A	Ant2	5240	0.09	1.0209	≤10	PASS
NTNV	11A	Ant1	5260	-0.88	0.8166	≤10	PASS
NTNV	11A	Ant2	5260	-0.42	0.9078	≤10	PASS
NTNV	11A	Ant1	5280	-0.84	0.8241	≤10	PASS
NTNV	11A	Ant2	5280	-0.16	0.9638	≤10	PASS
NTNV	11A	Ant1	5300	-0.55	0.8810	≤10	PASS
NTNV	11A	Ant2	5300	-0.61	0.8690	≤10	PASS
NTNV	11A	Ant1	5320	-1.13	0.7709	≤10	PASS
NTNV	11A	Ant2	5320	-0.70	0.8511	≤10	PASS
NTNV	11A	Ant1	5500	-2.42	0.5728	≤10	PASS
NTNV	11A	Ant2	5500	-0.32	0.9290	≤10	PASS
NTNV	11A	Ant1	5580	-1.49	0.7096	≤10	PASS
NTNV	11A	Ant2	5580	-0.75	0.8414	≤10	PASS
NTNV	11A	Ant1	5600	-2.22	0.5998	≤10	PASS
NTNV	11A	Ant2	5600	-0.19	0.9572	≤10	PASS
NTNV	11A	Ant1	5700	-1.77	0.6653	≤10	PASS
NTNV	11A	Ant2	5700	0.11	1.0257	≤10	PASS
NTNV	11N20MIMO	Ant1	5180	-2.63	0.5458	≤10	PASS
NTNV	11N20MIMO	Ant2	5180	-1.84	0.6546	≤10	PASS
NTNV	11N20MIMO	total	5180	0.79	1.2004	≤10	PASS
NTNV	11N20MIMO	Ant1	5200	-1.81	0.6592	≤10	PASS
NTNV	11N20MIMO	Ant2	5200	-1.39	0.7261	≤10	PASS
NTNV	11N20MIMO	total	5200	1.42	1.3853	≤10	PASS
NTNV	11N20MIMO	Ant1	5220	-2.10	0.6166	≤10	PASS
NTNV	11N20MIMO	Ant2	5220	-1.72	0.6730	≤10	PASS
NTNV	11N20MIMO	total	5220	1.10	1.2896	≤10	PASS
NTNV	11N20MIMO	Ant1	5240	-2.22	0.5998	≤10	PASS
NTNV	11N20MIMO	Ant2	5240	-1.98	0.6339	≤10	PASS
NTNV	11N20MIMO	total	5240	0.91	1.2337	≤10	PASS
NTNV	11N20MIMO	Ant1	5260	-3.10	0.4898	≤10	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86)0755-26066440 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com



NTNV	11N20MIMO	Ant2	5260	-3.11	0.4887	≤10	PASS
NTNV	11N20MIMO	total	5260	-0.09	0.9785	≤10	PASS
NTNV	11N20MIMO	Ant1	5280	-2.84	0.5200	≤10	PASS
NTNV	11N20MIMO	Ant2	5280	-2.50	0.5623	≤10	PASS
NTNV	11N20MIMO	total	5280	0.34	1.0823	≤10	PASS
NTNV	11N20MIMO	Ant1	5300	-2.71	0.5358	≤10	PASS
NTNV	11N20MIMO	Ant2	5300	-2.68	0.5395	≤10	PASS
NTNV	11N20MIMO	total	5300	0.32	1.0753	≤10	PASS
NTNV	11N20MIMO	Ant1	5320	-3.14	0.4853	≤10	PASS
NTNV	11N20MIMO	Ant2	5320	-2.41	0.5741	≤10	PASS
NTNV	11N20MIMO	total	5320	0.25	1.0594	≤10	PASS
NTNV	11N20MIMO	Ant1	5500	-3.41	0.4560	≤10	PASS
NTNV	11N20MIMO	Ant2	5500	-3.49	0.4477	≤10	PASS
NTNV	11N20MIMO	total	5500	-0.44	0.9037	≤10	PASS
NTNV	11N20MIMO	Ant1	5580	-3.81	0.4159	≤10	PASS
NTNV	11N20MIMO	Ant2	5580	-3.73	0.4236	≤10	PASS
NTNV	11N20MIMO	total	5580	-0.76	0.8395	≤10	PASS
NTNV	11N20MIMO	Ant1	5600	-3.60	0.4365	≤10	PASS
NTNV	11N20MIMO	Ant2	5600	-3.09	0.4909	≤10	PASS
NTNV	11N20MIMO	total	5600	-0.33	0.9274	≤10	PASS
NTNV	11N20MIMO	Ant1	5700	-3.09	0.4909	≤10	PASS
NTNV	11N20MIMO	Ant2	5700	-3.25	0.4732	≤10	PASS
NTNV	11N20MIMO	total	5700	-0.16	0.9641	≤10	PASS
NTNV	11N40MIMO	Ant1	5190	-4.40	0.3631	≤5	PASS
NTNV	11N40MIMO	Ant2	5190	-4.17	0.3828	≤5	PASS
NTNV	11N40MIMO	total	5190	-1.27	0.7459	≤5	PASS
NTNV	11N40MIMO	Ant1	5230	-4.64	0.3436	≤5	PASS
NTNV	11N40MIMO	Ant2	5230	-3.56	0.4406	≤5	PASS
NTNV	11N40MIMO	total	5230	-1.06	0.7842	≤5	PASS
NTNV	11N40MIMO	Ant1	5270	-4.62	0.3451	≤5	PASS
NTNV	11N40MIMO	Ant2	5270	-5.50	0.2818	≤5	PASS
NTNV	11N40MIMO	total	5270	-2.03	0.6269	≤5	PASS
NTNV	11N40MIMO	Ant1	5310	-4.58	0.3483	≤5	PASS
NTNV	11N40MIMO	Ant2	5310	-5.47	0.2838	≤5	PASS
NTNV	11N40MIMO	total	5310	-1.99	0.6321	≤5	PASS
NTNV	11N40MIMO	Ant1	5510	-5.12	0.3076	≤5	PASS
NTNV	11N40MIMO	Ant2	5510	-4.62	0.3451	≤5	PASS
NTNV	11N40MIMO	total	5510	-1.85	0.6527	≤5	PASS
NTNV	11N40MIMO	Ant1	5550	-5.56	0.2780	≤5	PASS
NTNV	11N40MIMO	Ant2	5550	-5.58	0.2767	≤5	PASS
NTNV	11N40MIMO	total	5550	-2.56	0.5547	≤5	PASS
NTNV	11N40MIMO	Ant1	5670	-6.05	0.2483	≤5	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com



NTNV	11N40MIMO	Ant2	5670	-5.35	0.2917	≤5	PASS
NTNV	11N40MIMO	total	5670	-2.68	0.5400	≤5	PASS
NTNV	11AC20MIMO	Ant1	5180	-2.09	0.6180	≤10	PASS
NTNV	11AC20MIMO	Ant2	5180	-3.01	0.5000	≤10	PASS
NTNV	11AC20MIMO	total	5180	0.48	1.1180	≤10	PASS
NTNV	11AC20MIMO	Ant1	5200	-2.67	0.5408	≤10	PASS
NTNV	11AC20MIMO	Ant2	5200	-1.70	0.6761	≤10	PASS
NTNV	11AC20MIMO	total	5200	0.85	1.2169	≤10	PASS
NTNV	11AC20MIMO	Ant1	5220	-2.43	0.5715	≤10	PASS
NTNV	11AC20MIMO	Ant2	5220	-2.16	0.6081	≤10	PASS
NTNV	11AC20MIMO	total	5220	0.72	1.1796	≤10	PASS
NTNV	11AC20MIMO	Ant1	5240	-2.45	0.5689	≤10	PASS
NTNV	11AC20MIMO	Ant2	5240	-3.11	0.4887	≤10	PASS
NTNV	11AC20MIMO	total	5240	0.24	1.0576	≤10	PASS
NTNV	11AC20MIMO	Ant1	5260	-2.33	0.5848	≤10	PASS
NTNV	11AC20MIMO	Ant2	5260	-1.97	0.6353	≤10	PASS
NTNV	11AC20MIMO	total	5260	0.86	1.2201	≤10	PASS
NTNV	11AC20MIMO	Ant1	5280	-3.06	0.4943	≤10	PASS
NTNV	11AC20MIMO	Ant2	5280	-2.96	0.5058	≤10	PASS
NTNV	11AC20MIMO	total	5280	0.00	1.0001	≤10	PASS
NTNV	11AC20MIMO	Ant1	5300	-3.09	0.4909	≤10	PASS
NTNV	11AC20MIMO	Ant2	5300	-2.97	0.5047	≤10	PASS
NTNV	11AC20MIMO	total	5300	-0.02	0.9956	≤10	PASS
NTNV	11AC20MIMO	Ant1	5320	-2.91	0.5117	≤10	PASS
NTNV	11AC20MIMO	Ant2	5320	-2.19	0.6039	≤10	PASS
NTNV	11AC20MIMO	total	5320	0.48	1.1156	≤10	PASS
NTNV	11AC20MIMO	Ant1	5500	-2.93	0.5093	≤10	PASS
NTNV	11AC20MIMO	Ant2	5500	-3.43	0.4539	≤10	PASS
NTNV	11AC20MIMO	total	5500	-0.16	0.9632	≤10	PASS
NTNV	11AC20MIMO	Ant1	5580	-3.08	0.4920	≤10	PASS
NTNV	11AC20MIMO	Ant2	5580	-3.18	0.4808	≤10	PASS
NTNV	11AC20MIMO	total	5580	-0.12	0.9728	≤10	PASS
NTNV	11AC20MIMO	Ant1	5600	-3.47	0.4498	≤10	PASS
NTNV	11AC20MIMO	Ant2	5600	-3.32	0.4656	≤10	PASS
NTNV	11AC20MIMO	total	5600	-0.38	0.9154	≤10	PASS
NTNV	11AC20MIMO	Ant1	5700	-4.18	0.3819	≤10	PASS
NTNV	11AC20MIMO	Ant2	5700	-3.30	0.4677	≤10	PASS
NTNV	11AC20MIMO	total	5700	-0.71	0.8496	≤10	PASS
NTNV	11AC40MIMO	Ant1	5190	-4.36	0.3664	≤5	PASS
NTNV	11AC40MIMO	Ant2	5190	-3.92	0.4055	≤5	PASS
NTNV	11AC40MIMO	total	5190	-1.12	0.7719	≤5	PASS
NTNV	11AC40MIMO	Ant1	5230	-4.13	0.3864	≤5	PASS

Shenzhen Anbotech Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel:(86)0755-26066440 Email:service@anbotech.com



Hotline

400-003-0500

www.anbotech.com



NTNV	11AC40MIMO	Ant2	5230	-3.89	0.4083	≤5	PASS
NTNV	11AC40MIMO	total	5230	-1.00	0.7947	≤5	PASS
NTNV	11AC40MIMO	Ant1	5270	-5.00	0.3162	≤5	PASS
NTNV	11AC40MIMO	Ant2	5270	-4.64	0.3436	≤5	PASS
NTNV	11AC40MIMO	total	5270	-1.81	0.6598	≤5	PASS
NTNV	11AC40MIMO	Ant1	5310	-5.14	0.3062	≤5	PASS
NTNV	11AC40MIMO	Ant2	5310	-4.24	0.3767	≤5	PASS
NTNV	11AC40MIMO	total	5310	-1.66	0.6829	≤5	PASS
NTNV	11AC40MIMO	Ant1	5510	-5.38	0.2897	≤5	PASS
NTNV	11AC40MIMO	Ant2	5510	-6.16	0.2421	≤5	PASS
NTNV	11AC40MIMO	total	5510	-2.74	0.5318	≤5	PASS
NTNV	11AC40MIMO	Ant1	5550	-5.43	0.2864	≤5	PASS
NTNV	11AC40MIMO	Ant2	5550	-5.82	0.2618	≤5	PASS
NTNV	11AC40MIMO	total	5550	-2.61	0.5482	≤5	PASS
NTNV	11AC40MIMO	Ant1	5670	-4.64	0.3436	≤5	PASS
NTNV	11AC40MIMO	Ant2	5670	-4.94	0.3206	≤5	PASS
NTNV	11AC40MIMO	total	5670	-1.78	0.6642	≤5	PASS
NTNV	11AC80MIMO	Ant1	5210	-5.89	0.2576	≤2.5	PASS
NTNV	11AC80MIMO	Ant2	5210	-5.45	0.2851	≤2.5	PASS
NTNV	11AC80MIMO	total	5210	-2.65	0.5427	≤2.5	PASS
NTNV	11AC80MIMO	Ant1	5290	-6.24	0.2377	≤2.5	PASS
NTNV	11AC80MIMO	Ant2	5290	-7.20	0.1905	≤2.5	PASS
NTNV	11AC80MIMO	total	5290	-3.68	0.4282	≤2.5	PASS
NTNV	11AC80MIMO	Ant1	5530	-7.79	0.1663	≤2.5	PASS
NTNV	11AC80MIMO	Ant2	5530	-8.06	0.1563	≤2.5	PASS
NTNV	11AC80MIMO	total	5530	-4.91	0.3226	≤2.5	PASS
NTNV	11AC80MIMO	Ant1	5610	-7.69	0.1702	≤2.5	PASS
NTNV	11AC80MIMO	Ant2	5610	-7.36	0.1837	≤2.5	PASS
NTNV	11AC80MIMO	total	5610	-4.51	0.3539	≤2.5	PASS
NTNV	11AC80MIMO	Ant1	5690	-6.22	0.2388	≤2.5	PASS
NTNV	11AC80MIMO	Ant2	5690	-6.02	0.2500	≤2.5	PASS
NTNV	11AC80MIMO	total	5690	-3.11	0.4888	≤2.5	PASS

Test Condition	Test Mode	Antenna	Frequency[MHz]	Power [mW/MHz]	Rated Power [mW/MHz]	Result [%]	Limit[%]	Verdict
NTNV	11A	Ant1	5180	1.0593	1	5.93	-80 to +20	PASS
NTNV	11A	Ant2	5180	0.9705	1	-2.95	-80 to +20	PASS
NTNV	11A	Ant1	5200	1.0351	1	3.51	-80 to +20	PASS
NTNV	11A	Ant2	5200	1.0375	1	3.75	-80 to +20	PASS
NTNV	11A	Ant1	5220	0.9462	1	-5.38	-80 to +20	PASS
NTNV	11A	Ant2	5220	0.9419	1	-5.81	-80 to +20	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86)0755-26066440 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com



NTNV	11A	Ant1	5240	0.8279	1	-17.21	-80 to +20	PASS
NTNV	11A	Ant2	5240	1.0209	1	2.09	-80 to +20	PASS
NTNV	11A	Ant1	5260	0.8166	1	-18.34	-80 to +20	PASS
NTNV	11A	Ant2	5260	0.9078	1	-9.22	-80 to +20	PASS
NTNV	11A	Ant1	5280	0.8241	1	-17.59	-80 to +20	PASS
NTNV	11A	Ant2	5280	0.9638	1	-3.62	-80 to +20	PASS
NTNV	11A	Ant1	5300	0.8810	1	-11.90	-80 to +20	PASS
NTNV	11A	Ant2	5300	0.8690	1	-13.10	-80 to +20	PASS
NTNV	11A	Ant1	5320	0.7709	1	-22.91	-80 to +20	PASS
NTNV	11A	Ant2	5320	0.8511	1	-14.89	-80 to +20	PASS
NTNV	11A	Ant1	5500	0.5728	1	-42.72	-50 to +50	PASS
NTNV	11A	Ant2	5500	0.9290	1	-7.10	-50 to +50	PASS
NTNV	11A	Ant1	5580	0.7096	1	-29.04	-50 to +50	PASS
NTNV	11A	Ant2	5580	0.8414	1	-15.86	-50 to +50	PASS
NTNV	11A	Ant1	5600	0.5998	1	-40.02	-50 to +50	PASS
NTNV	11A	Ant2	5600	0.9572	1	-4.28	-50 to +50	PASS
NTNV	11A	Ant1	5700	0.6653	1	-33.47	-50 to +50	PASS
NTNV	11A	Ant2	5700	1.0257	1	2.57	-50 to +50	PASS
NTNV	11N20MIMO	total	5180	1.2004	1.5	-19.97	-80 to +20	PASS
NTNV	11N20MIMO	total	5200	1.3853	1.5	-7.65	-80 to +20	PASS
NTNV	11N20MIMO	total	5220	1.2896	1.5	-14.03	-80 to +20	PASS
NTNV	11N20MIMO	total	5240	1.2337	1.5	-17.75	-80 to +20	PASS
NTNV	11N20MIMO	total	5260	0.9785	1.5	-34.77	-80 to +20	PASS
NTNV	11N20MIMO	total	5280	1.0823	1.5	-27.85	-80 to +20	PASS
NTNV	11N20MIMO	total	5300	1.0753	1.5	-28.31	-80 to +20	PASS
NTNV	11N20MIMO	total	5320	1.0594	1.5	-29.37	-80 to +20	PASS
NTNV	11N20MIMO	total	5500	0.9037	1.5	-39.75	-50 to +50	PASS
NTNV	11N20MIMO	total	5580	0.8395	1.5	-44.03	-50 to +50	PASS
NTNV	11N20MIMO	total	5600	0.9274	1.5	-38.17	-50 to +50	PASS
NTNV	11N20MIMO	total	5700	0.9641	1.5	-35.73	-50 to +50	PASS
NTNV	11N40MIMO	total	5190	0.7459	1	-25.41	-80 to +20	PASS
NTNV	11N40MIMO	total	5230	0.7842	1	-21.58	-80 to +20	PASS
NTNV	11N40MIMO	total	5270	0.6269	1	-37.31	-80 to +20	PASS
NTNV	11N40MIMO	total	5310	0.6321	1	-36.79	-80 to +20	PASS
NTNV	11N40MIMO	total	5510	0.6527	1	-34.73	-50 to +50	PASS
NTNV	11N40MIMO	total	5550	0.5547	1	-44.53	-50 to +50	PASS
NTNV	11N40MIMO	total	5670	0.5400	1	-46.00	-50 to +50	PASS
NTNV	11AC20MIMO	total	5180	1.1180	1.5	-25.47	-80 to +20	PASS
NTNV	11AC20MIMO	total	5200	1.2169	1.5	-18.87	-80 to +20	PASS
NTNV	11AC20MIMO	total	5220	1.1796	1.5	-21.36	-80 to +20	PASS
NTNV	11AC20MIMO	total	5240	1.0576	1.5	-29.49	-80 to +20	PASS
NTNV	11AC20MIMO	total	5260	1.2201	1.5	-18.66	-80 to +20	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86)0755-26066440 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com



NTNV	11AC20MIMO	total	5280	1.0001	1.5	-33.33	-80 to +20	PASS
NTNV	11AC20MIMO	total	5300	0.9956	1.5	-33.63	-80 to +20	PASS
NTNV	11AC20MIMO	total	5320	1.1156	1.5	-25.63	-80 to +20	PASS
NTNV	11AC20MIMO	total	5500	0.9632	1.5	-35.79	-50 to +50	PASS
NTNV	11AC20MIMO	total	5580	0.9728	1.5	-35.15	-50 to +50	PASS
NTNV	11AC20MIMO	total	5600	0.9154	1.5	-38.97	-50 to +50	PASS
NTNV	11AC20MIMO	total	5700	0.8496	1.5	-43.36	-50 to +50	PASS
NTNV	11AC40MIMO	total	5190	0.7719	1	-22.81	-80 to +20	PASS
NTNV	11AC40MIMO	total	5230	0.7947	1	-20.53	-80 to +20	PASS
NTNV	11AC40MIMO	total	5270	0.6598	1	-34.02	-80 to +20	PASS
NTNV	11AC40MIMO	total	5310	0.6829	1	-31.71	-80 to +20	PASS
NTNV	11AC40MIMO	total	5510	0.5318	1	-46.82	-50 to +50	PASS
NTNV	11AC40MIMO	total	5550	0.5482	1	-45.18	-50 to +50	PASS
NTNV	11AC40MIMO	total	5670	0.6642	1	-33.58	-50 to +50	PASS
NTNV	11AC80MIMO	total	5210	0.5427	0.5	8.54	-80 to +20	PASS
NTNV	11AC80MIMO	total	5290	0.4282	0.5	-14.36	-80 to +20	PASS
NTNV	11AC80MIMO	total	5530	0.3226	0.5	-35.48	-50 to +50	PASS
NTNV	11AC80MIMO	total	5610	0.3539	0.5	-29.22	-50 to +50	PASS
NTNV	11AC80MIMO	total	5690	0.4888	0.5	-2.24	-50 to +50	PASS

Test Condition	Test Mode	Antenna	Frequency [MHz]	Result [mW/MHz]	Gain [dBi]	EIRP [mW/MHz]	Limit [mW/MHz]	Verdict
NTNV	11A	Ant1	5180	1.0593	3.98	2.6485	≤10	PASS
NTNV	11A	Ant2	5180	0.9705	3.77	2.3121	≤10	PASS
NTNV	11A	Ant1	5200	1.0351	3.98	2.5882	≤10	PASS
NTNV	11A	Ant2	5200	1.0375	3.77	2.4717	≤10	PASS
NTNV	11A	Ant1	5220	0.9462	3.98	2.3659	≤10	PASS
NTNV	11A	Ant2	5220	0.9419	3.77	2.2439	≤10	PASS
NTNV	11A	Ant1	5240	0.8279	3.98	2.0701	≤10	PASS
NTNV	11A	Ant2	5240	1.0209	3.77	2.4322	≤10	PASS
NTNV	11A	Ant1	5260	0.8166	4.56	2.3335	≤5	PASS
NTNV	11A	Ant2	5260	0.9078	4.07	2.3174	≤5	PASS
NTNV	11A	Ant1	5280	0.8241	4.56	2.3550	≤5	PASS
NTNV	11A	Ant2	5280	0.9638	4.07	2.4604	≤5	PASS
NTNV	11A	Ant1	5300	0.8810	4.56	2.5177	≤5	PASS
NTNV	11A	Ant2	5300	0.8690	4.07	2.2182	≤5	PASS
NTNV	11A	Ant1	5320	0.7709	4.56	2.2029	≤5	PASS
NTNV	11A	Ant2	5320	0.8511	4.07	2.1727	≤5	PASS
NTNV	11A	Ant1	5500	0.5728	5.5	2.0324	≤25	PASS
NTNV	11A	Ant2	5500	0.9290	4.38	2.5468	≤25	PASS
NTNV	11A	Ant1	5580	0.7096	5.5	2.5177	≤25	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com



NTNV	11A	Ant2	5580	0.8414	4.38	2.3067	≤25	PASS
NTNV	11A	Ant1	5600	0.5998	5.5	2.1281	≤25	PASS
NTNV	11A	Ant2	5600	0.9572	4.38	2.6242	≤25	PASS
NTNV	11A	Ant1	5700	0.6653	5.5	2.3605	≤25	PASS
NTNV	11A	Ant2	5700	1.0257	4.38	2.8119	≤25	PASS
NTNV	11N20MIMO	Ant1	5180	0.5458	3.98	1.3646	≤10	PASS
NTNV	11N20MIMO	Ant2	5180	0.6546	3.77	1.5596	≤10	PASS
NTNV	11N20MIMO	total	5180	1.2004	-	2.9242	≤10	PASS
NTNV	11N20MIMO	Ant1	5200	0.6592	3.98	1.6482	≤10	PASS
NTNV	11N20MIMO	Ant2	5200	0.7261	3.77	1.7298	≤10	PASS
NTNV	11N20MIMO	total	5200	1.3853	-	3.3780	≤10	PASS
NTNV	11N20MIMO	Ant1	5220	0.6166	3.98	1.5417	≤10	PASS
NTNV	11N20MIMO	Ant2	5220	0.6730	3.77	1.6032	≤10	PASS
NTNV	11N20MIMO	total	5220	1.2896	-	3.1449	≤10	PASS
NTNV	11N20MIMO	Ant1	5240	0.5998	3.98	1.4997	≤10	PASS
NTNV	11N20MIMO	Ant2	5240	0.6339	3.77	1.5101	≤10	PASS
NTNV	11N20MIMO	total	5240	1.2337	-	3.0098	≤10	PASS
NTNV	11N20MIMO	Ant1	5260	0.4898	4.56	1.3996	≤5	PASS
NTNV	11N20MIMO	Ant2	5260	0.4887	4.07	1.2474	≤5	PASS
NTNV	11N20MIMO	total	5260	0.9785	-	2.6470	≤5	PASS
NTNV	11N20MIMO	Ant1	5280	0.5200	4.56	1.4859	≤5	PASS
NTNV	11N20MIMO	Ant2	5280	0.5623	4.07	1.4355	≤5	PASS
NTNV	11N20MIMO	total	5280	1.0823	-	2.9214	≤5	PASS
NTNV	11N20MIMO	Ant1	5300	0.5358	4.56	1.5311	≤5	PASS
NTNV	11N20MIMO	Ant2	5300	0.5395	4.07	1.3772	≤5	PASS
NTNV	11N20MIMO	total	5300	1.0753	-	2.9083	≤5	PASS
NTNV	11N20MIMO	Ant1	5320	0.4853	4.56	1.3868	≤5	PASS
NTNV	11N20MIMO	Ant2	5320	0.5741	4.07	1.4655	≤5	PASS
NTNV	11N20MIMO	total	5320	1.0594	-	2.8523	≤5	PASS
NTNV	11N20MIMO	Ant1	5500	0.4560	5.5	1.6181	≤25	PASS
NTNV	11N20MIMO	Ant2	5500	0.4477	4.38	1.2274	≤25	PASS
NTNV	11N20MIMO	total	5500	0.9037	-	2.8455	≤25	PASS
NTNV	11N20MIMO	Ant1	5580	0.4159	5.5	1.4757	≤25	PASS
NTNV	11N20MIMO	Ant2	5580	0.4236	4.38	1.1614	≤25	PASS
NTNV	11N20MIMO	total	5580	0.8395	-	2.6371	≤25	PASS
NTNV	11N20MIMO	Ant1	5600	0.4365	5.5	1.5488	≤25	PASS
NTNV	11N20MIMO	Ant2	5600	0.4909	4.38	1.3459	≤25	PASS
NTNV	11N20MIMO	total	5600	0.9274	-	2.8947	≤25	PASS
NTNV	11N20MIMO	Ant1	5700	0.4909	5.5	1.7418	≤25	PASS
NTNV	11N20MIMO	Ant2	5700	0.4732	4.38	1.2972	≤25	PASS
NTNV	11N20MIMO	total	5700	0.9641	-	3.0390	≤25	PASS
NTNV	11N40MIMO	Ant1	5190	0.3631	3.98	0.9078	≤5	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86)0755-26066440 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com



NTNV	11N40MIMO	Ant2	5190	0.3828	3.77	0.9120	≤5	PASS
NTNV	11N40MIMO	total	5190	0.7459	-	1.8198	≤5	PASS
NTNV	11N40MIMO	Ant1	5230	0.3436	3.98	0.8590	≤5	PASS
NTNV	11N40MIMO	Ant2	5230	0.4406	3.77	1.0495	≤5	PASS
NTNV	11N40MIMO	total	5230	0.7842	-	1.9085	≤5	PASS
NTNV	11N40MIMO	Ant1	5270	0.3451	4.56	0.9863	≤2.5	PASS
NTNV	11N40MIMO	Ant2	5270	0.2818	4.07	0.7194	≤2.5	PASS
NTNV	11N40MIMO	total	5270	0.6269	-	1.7057	≤2.5	PASS
NTNV	11N40MIMO	Ant1	5310	0.3483	4.56	0.9954	≤2.5	PASS
NTNV	11N40MIMO	Ant2	5310	0.2838	4.07	0.7244	≤2.5	PASS
NTNV	11N40MIMO	total	5310	0.6321	-	1.7198	≤2.5	PASS
NTNV	11N40MIMO	Ant1	5510	0.3076	5.5	1.0914	≤12.5	PASS
NTNV	11N40MIMO	Ant2	5510	0.3451	4.38	0.9462	≤12.5	PASS
NTNV	11N40MIMO	total	5510	0.6527	-	2.0376	≤12.5	PASS
NTNV	11N40MIMO	Ant1	5550	0.2780	5.5	0.9863	≤12.5	PASS
NTNV	11N40MIMO	Ant2	5550	0.2767	4.38	0.7586	≤12.5	PASS
NTNV	11N40MIMO	total	5550	0.5547	-	1.7449	≤12.5	PASS
NTNV	11N40MIMO	Ant1	5670	0.2483	5.5	0.8810	≤12.5	PASS
NTNV	11N40MIMO	Ant2	5670	0.2917	4.38	0.7998	≤12.5	PASS
NTNV	11N40MIMO	total	5670	0.5400	-	1.6808	≤12.5	PASS
NTNV	11AC20MIMO	Ant1	5180	0.6180	3.98	1.5453	≤10	PASS
NTNV	11AC20MIMO	Ant2	5180	0.5000	3.77	1.1912	≤10	PASS
NTNV	11AC20MIMO	total	5180	1.1180	-	2.7365	≤10	PASS
NTNV	11AC20MIMO	Ant1	5200	0.5408	3.98	1.3521	≤10	PASS
NTNV	11AC20MIMO	Ant2	5200	0.6761	3.77	1.6106	≤10	PASS
NTNV	11AC20MIMO	total	5200	1.2169	-	2.9627	≤10	PASS
NTNV	11AC20MIMO	Ant1	5220	0.5715	3.98	1.4289	≤10	PASS
NTNV	11AC20MIMO	Ant2	5220	0.6081	3.77	1.4488	≤10	PASS
NTNV	11AC20MIMO	total	5220	1.1796	-	2.8777	≤10	PASS
NTNV	11AC20MIMO	Ant1	5240	0.5689	3.98	1.4223	≤10	PASS
NTNV	11AC20MIMO	Ant2	5240	0.4887	3.77	1.1641	≤10	PASS
NTNV	11AC20MIMO	total	5240	1.0576	-	2.5864	≤10	PASS
NTNV	11AC20MIMO	Ant1	5260	0.5848	4.56	1.6711	≤5	PASS
NTNV	11AC20MIMO	Ant2	5260	0.6353	4.07	1.6218	≤5	PASS
NTNV	11AC20MIMO	total	5260	1.2201	-	3.2929	≤5	PASS
NTNV	11AC20MIMO	Ant1	5280	0.4943	4.56	1.4125	≤5	PASS
NTNV	11AC20MIMO	Ant2	5280	0.5058	4.07	1.2912	≤5	PASS
NTNV	11AC20MIMO	total	5280	1.0001	-	2.7037	≤5	PASS
NTNV	11AC20MIMO	Ant1	5300	0.4909	4.56	1.4028	≤5	PASS
NTNV	11AC20MIMO	Ant2	5300	0.5047	4.07	1.2882	≤5	PASS
NTNV	11AC20MIMO	total	5300	0.9956	-	2.6910	≤5	PASS
NTNV	11AC20MIMO	Ant1	5320	0.5117	4.56	1.4622	≤5	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com



NTNV	11AC20MIMO	Ant2	5320	0.6039	4.07	1.5417	≤5	PASS
NTNV	11AC20MIMO	total	5320	1.1156	-	3.0039	≤5	PASS
NTNV	11AC20MIMO	Ant1	5500	0.5093	5.5	1.8072	≤25	PASS
NTNV	11AC20MIMO	Ant2	5500	0.4539	4.38	1.2445	≤25	PASS
NTNV	11AC20MIMO	total	5500	0.9632	-	3.0517	≤25	PASS
NTNV	11AC20MIMO	Ant1	5580	0.4920	5.5	1.7458	≤25	PASS
NTNV	11AC20MIMO	Ant2	5580	0.4808	4.38	1.3183	≤25	PASS
NTNV	11AC20MIMO	total	5580	0.9728	-	3.0641	≤25	PASS
NTNV	11AC20MIMO	Ant1	5600	0.4498	5.5	1.5959	≤25	PASS
NTNV	11AC20MIMO	Ant2	5600	0.4656	4.38	1.2764	≤25	PASS
NTNV	11AC20MIMO	total	5600	0.9154	-	2.8723	≤25	PASS
NTNV	11AC20MIMO	Ant1	5700	0.3819	5.5	1.3552	≤25	PASS
NTNV	11AC20MIMO	Ant2	5700	0.4677	4.38	1.2823	≤25	PASS
NTNV	11AC20MIMO	total	5700	0.8496	-	2.6375	≤25	PASS
NTNV	11AC40MIMO	Ant1	5190	0.3664	3.98	0.9162	≤5	PASS
NTNV	11AC40MIMO	Ant2	5190	0.4055	3.77	0.9661	≤5	PASS
NTNV	11AC40MIMO	total	5190	0.7719	-	1.8823	≤5	PASS
NTNV	11AC40MIMO	Ant1	5230	0.3864	3.98	0.9661	≤5	PASS
NTNV	11AC40MIMO	Ant2	5230	0.4083	3.77	0.9727	≤5	PASS
NTNV	11AC40MIMO	total	5230	0.7947	-	1.9388	≤5	PASS
NTNV	11AC40MIMO	Ant1	5270	0.3162	4.56	0.9036	≤2.5	PASS
NTNV	11AC40MIMO	Ant2	5270	0.3436	4.07	0.8770	≤2.5	PASS
NTNV	11AC40MIMO	total	5270	0.6598	-	1.7806	≤2.5	PASS
NTNV	11AC40MIMO	Ant1	5310	0.3062	4.56	0.8750	≤2.5	PASS
NTNV	11AC40MIMO	Ant2	5310	0.3767	4.07	0.9616	≤2.5	PASS
NTNV	11AC40MIMO	total	5310	0.6829	-	1.8366	≤2.5	PASS
NTNV	11AC40MIMO	Ant1	5510	0.2897	5.5	1.0280	≤12.5	PASS
NTNV	11AC40MIMO	Ant2	5510	0.2421	4.38	0.6637	≤12.5	PASS
NTNV	11AC40MIMO	total	5510	0.5318	-	1.6917	≤12.5	PASS
NTNV	11AC40MIMO	Ant1	5550	0.2864	5.5	1.0162	≤12.5	PASS
NTNV	11AC40MIMO	Ant2	5550	0.2618	4.38	0.7178	≤12.5	PASS
NTNV	11AC40MIMO	total	5550	0.5482	-	1.7340	≤12.5	PASS
NTNV	11AC40MIMO	Ant1	5670	0.3436	5.5	1.2190	≤12.5	PASS
NTNV	11AC40MIMO	Ant2	5670	0.3206	4.38	0.8790	≤12.5	PASS
NTNV	11AC40MIMO	total	5670	0.6642	-	2.0980	≤12.5	PASS
NTNV	11AC80MIMO	Ant1	5210	0.2576	3.98	0.6442	≤2.5	PASS
NTNV	11AC80MIMO	Ant2	5210	0.2851	3.77	0.6792	≤2.5	PASS
NTNV	11AC80MIMO	total	5210	0.5427	-	1.3234	≤2.5	PASS
NTNV	11AC80MIMO	Ant1	5290	0.2377	4.56	0.6792	≤1.25	PASS
NTNV	11AC80MIMO	Ant2	5290	0.1905	4.07	0.4864	≤1.25	PASS
NTNV	11AC80MIMO	total	5290	0.4282	-	1.1656	≤1.25	PASS
NTNV	11AC80MIMO	Ant1	5530	0.1663	5.5	0.5902	≤6.25	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com



NTNV	11AC80MIMO	Ant2	5530	0.1563	4.38	0.4285	≤6.25	PASS
NTNV	11AC80MIMO	total	5530	0.3226	-	1.0187	≤6.25	PASS
NTNV	11AC80MIMO	Ant1	5610	0.1702	5.5	0.6039	≤6.25	PASS
NTNV	11AC80MIMO	Ant2	5610	0.1837	4.38	0.5035	≤6.25	PASS
NTNV	11AC80MIMO	total	5610	0.3539	-	1.1074	≤6.25	PASS
NTNV	11AC80MIMO	Ant1	5690	0.2388	5.5	0.8472	≤6.25	PASS
NTNV	11AC80MIMO	Ant2	5690	0.2500	4.38	0.6855	≤6.25	PASS
NTNV	11AC80MIMO	total	5690	0.4888	-	1.5327	≤6.25	PASS


Note: EIRP[dBm/MHz]=Result[dBm/MHz]+Gain(dBi)

Result [mW/MHz]=10^(Result [dBm/MHz]/10)


Total=ANT1 EIRP [mW/MHz]+ANT2 EIRP [mW/MHz]




Test Graphs

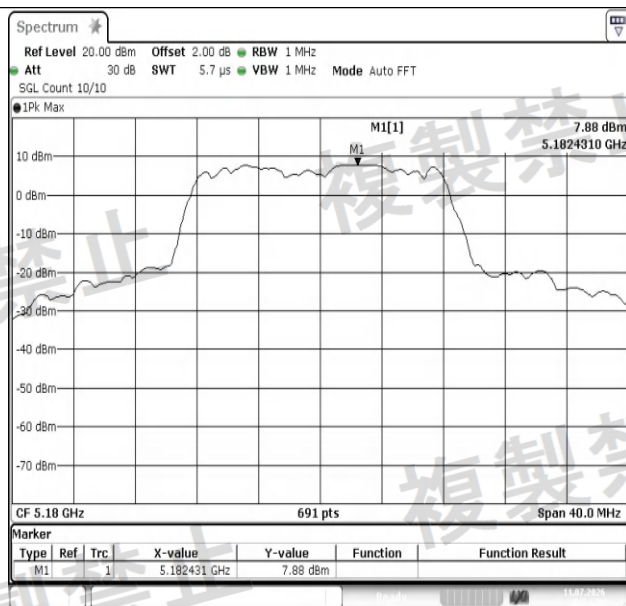



NTNV-11A-Ant1-5180-PASS

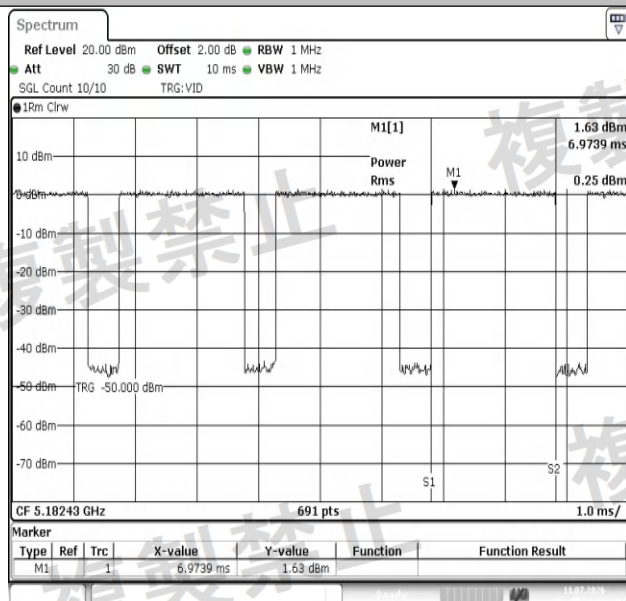

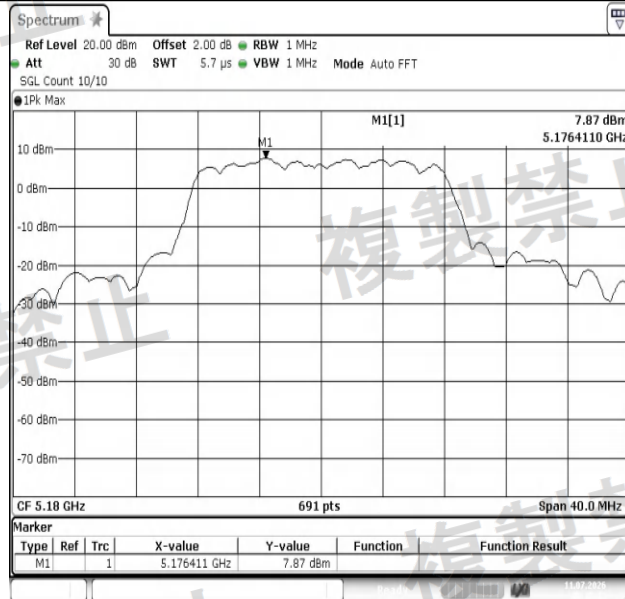



NTNV-11A-Ant2-5180-PASS

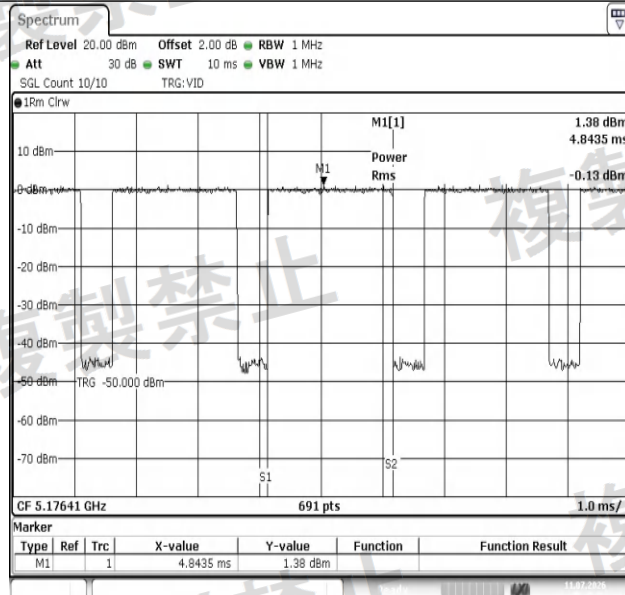

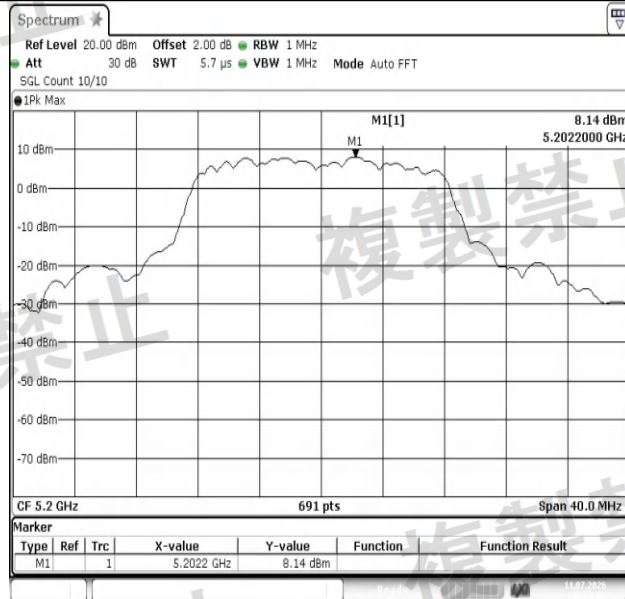



NTNV-11A-Ant1-5200-PASS

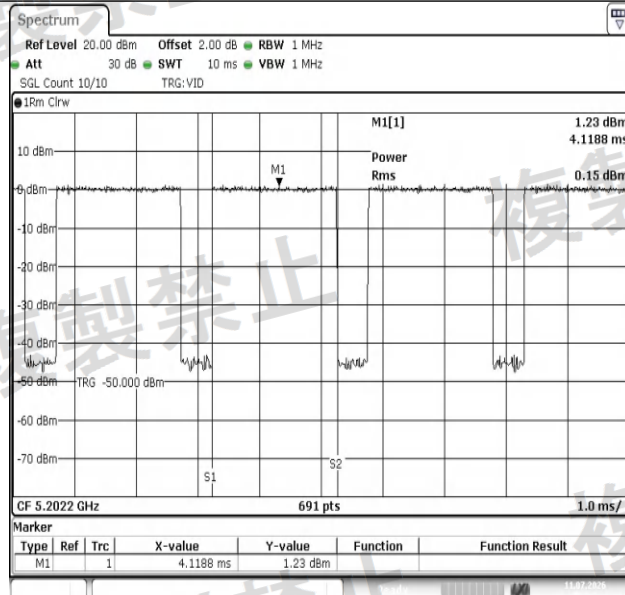

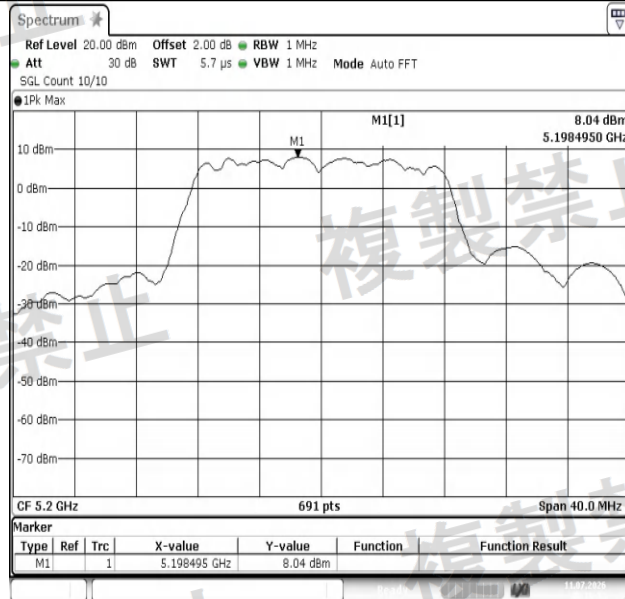



NTNV-11A-Ant2-5200-PASS

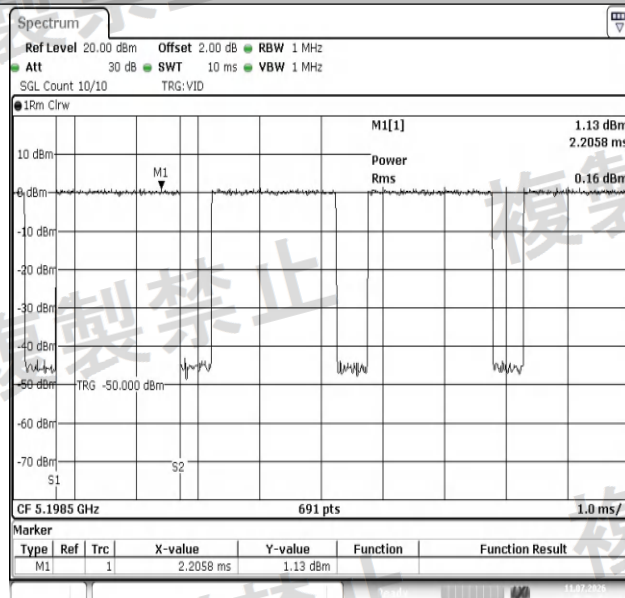

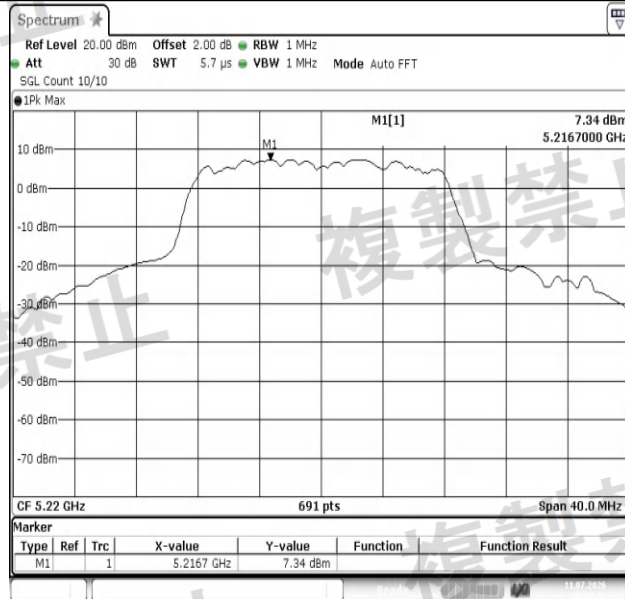


NTNV-11A-Ant1-5220-PASS

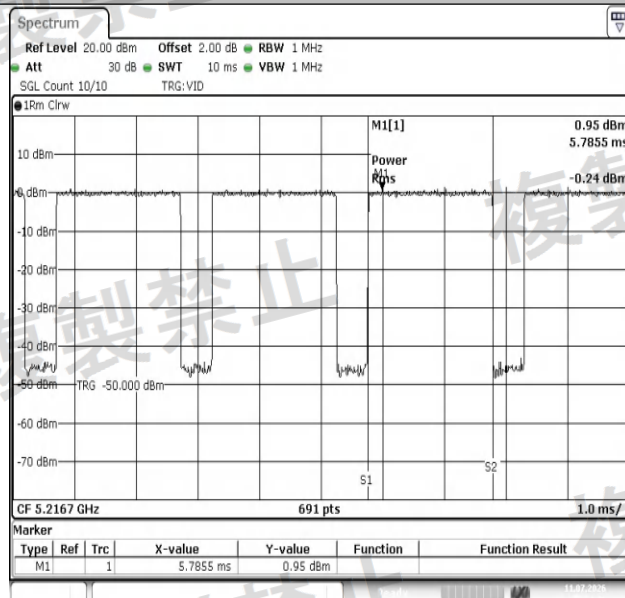

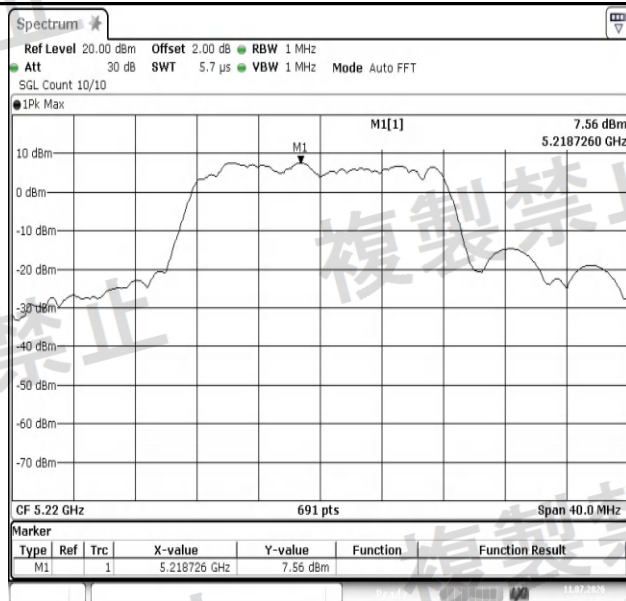

NTNV-11A-Ant2-5220-PASS

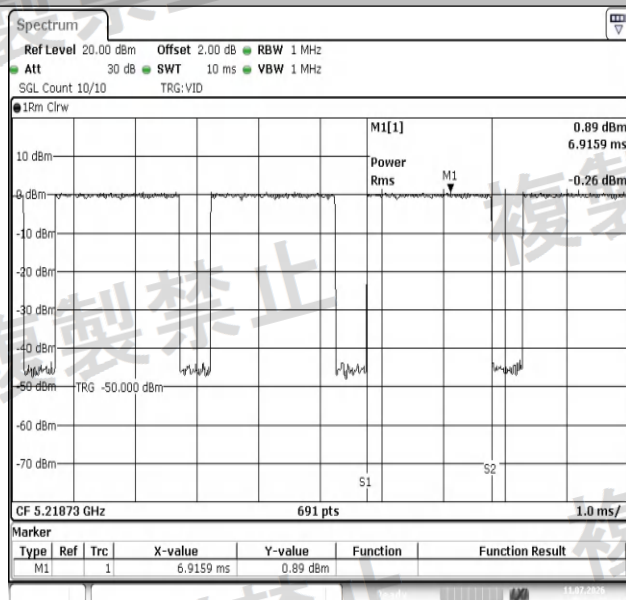


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com





Hotline
400-003-0500
www.anbotek.com



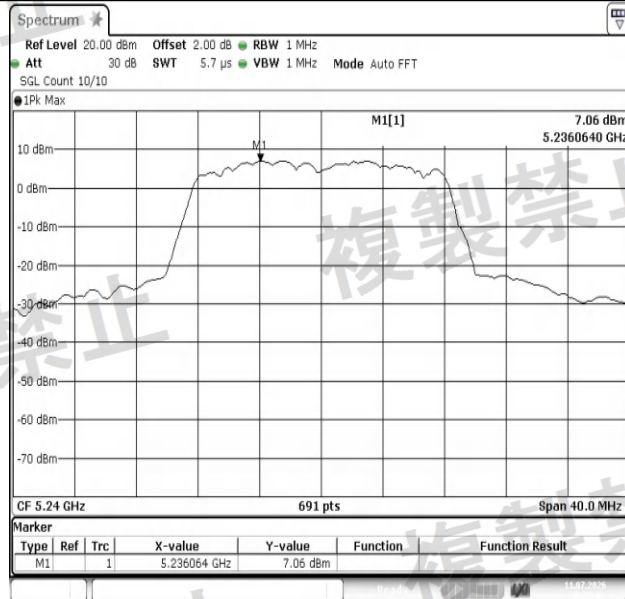



NTNV-11A-Ant1-5240-PASS

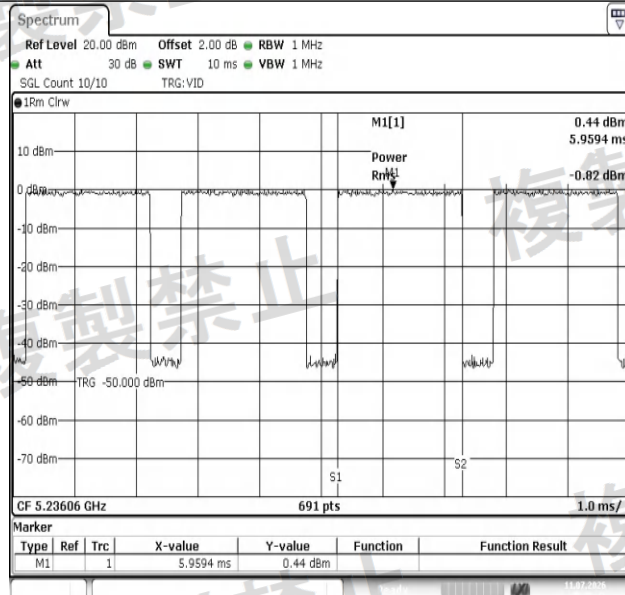

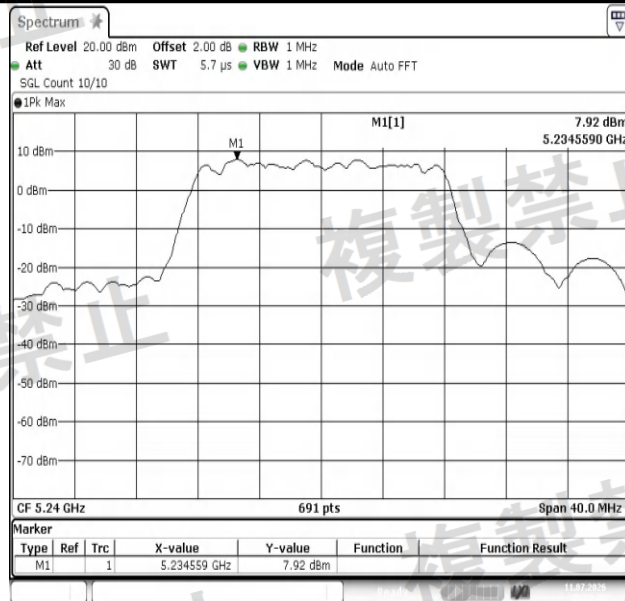


NTNV-11A-Ant2-5240-PASS

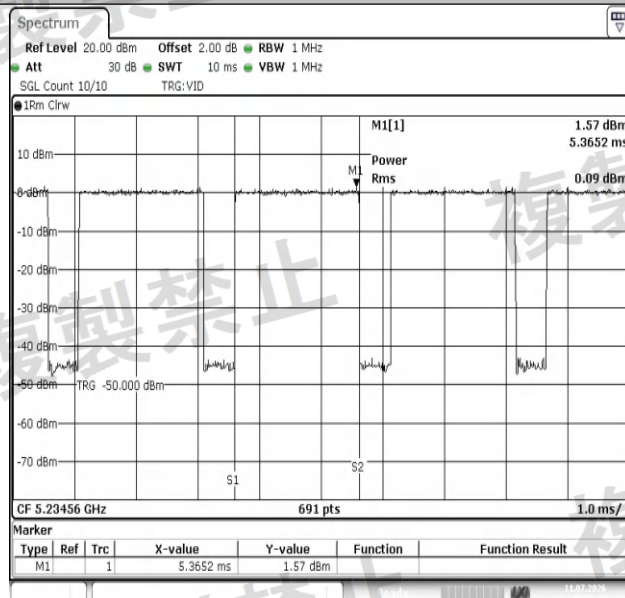

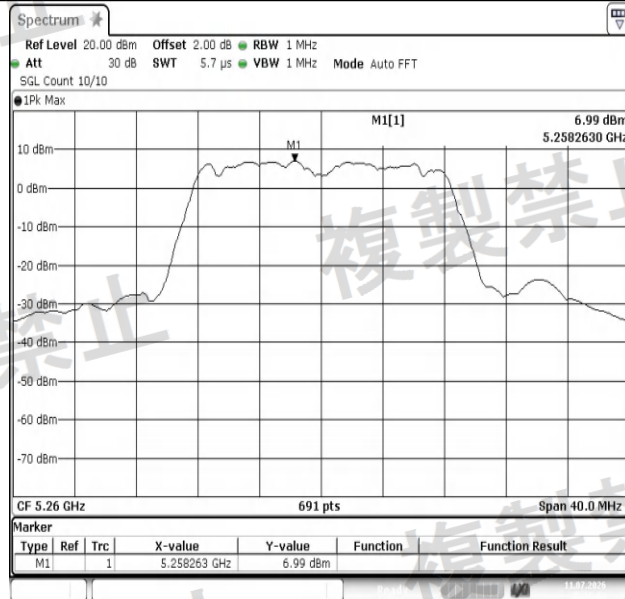

NTNV-11A-Ant1-5260-PASS

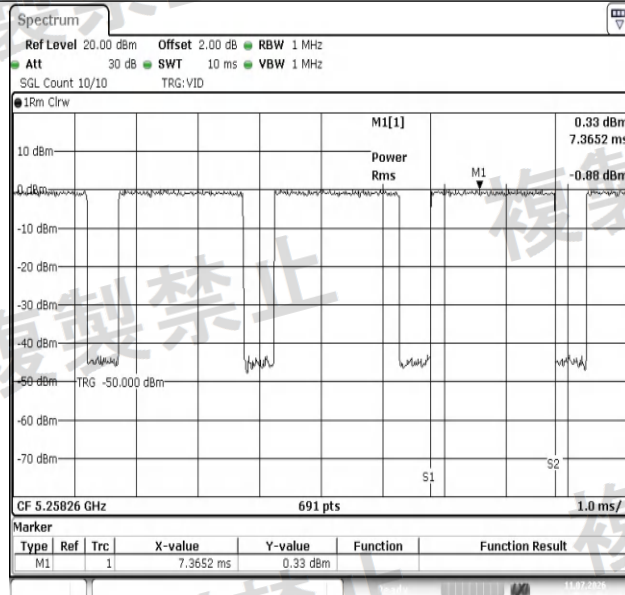

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China

Tel: (86) 0755-26066440 Email: service@anbotek.com





Hotline

400-003-0500


www.anbotek.com




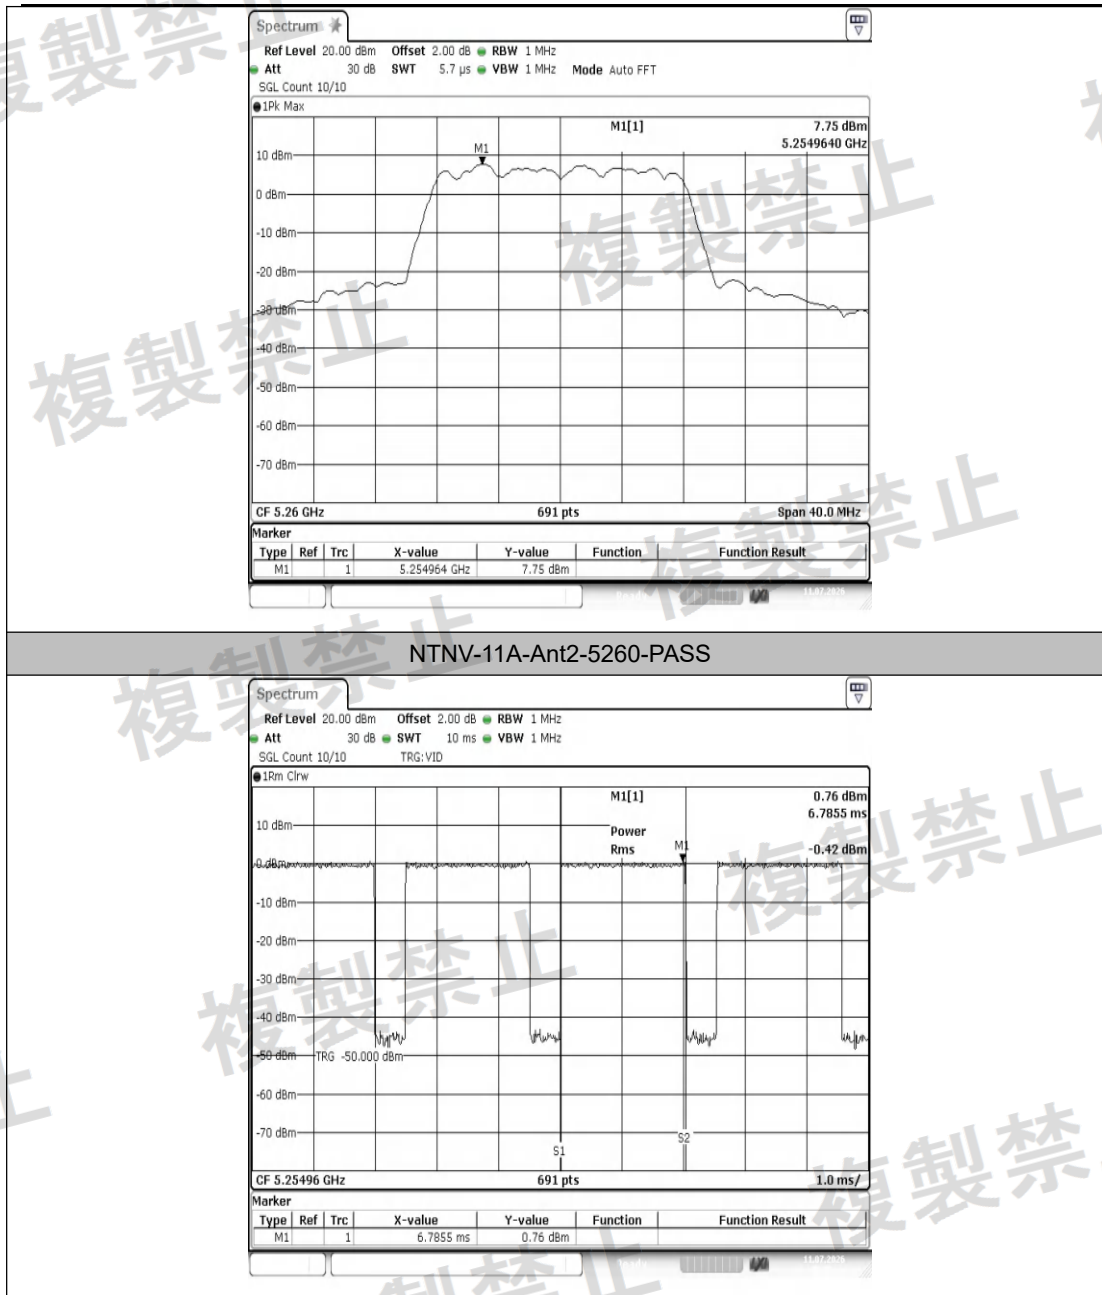

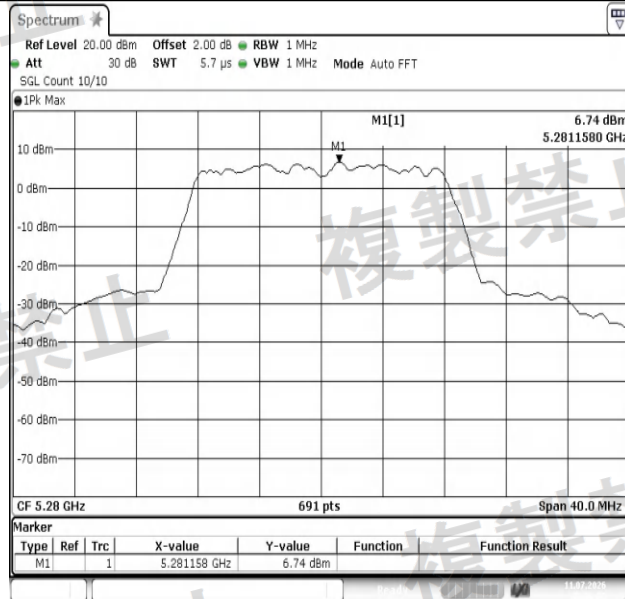



NTNV-11A-Ant1-5280-PASS

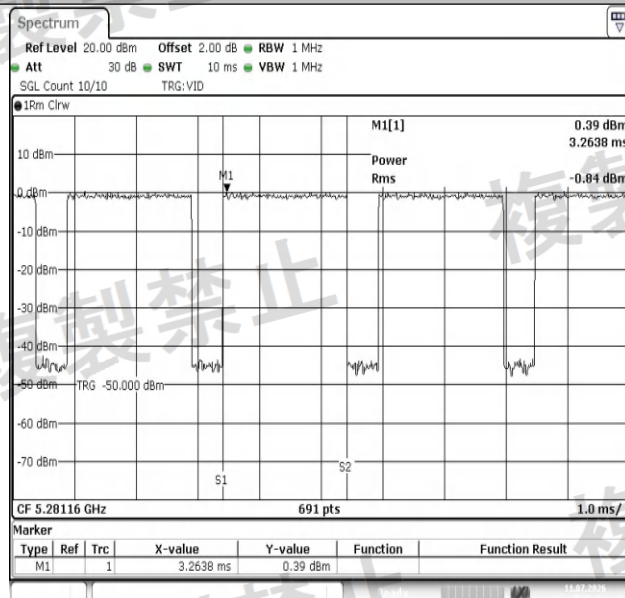

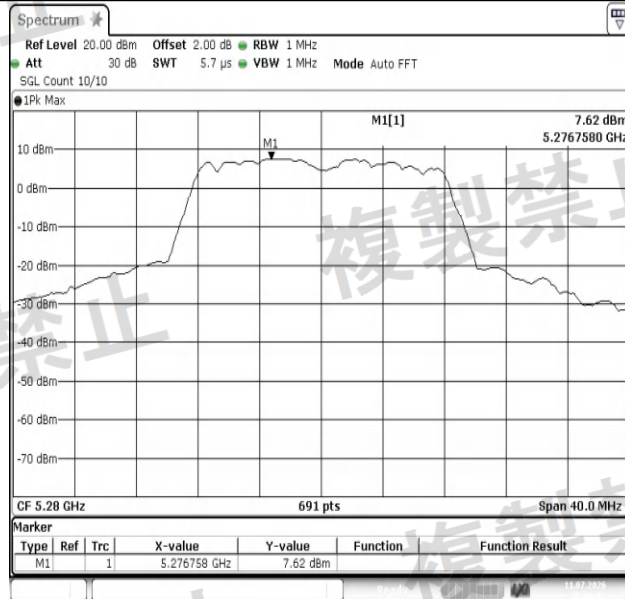



NTNV-11A-Ant2-5280-PASS

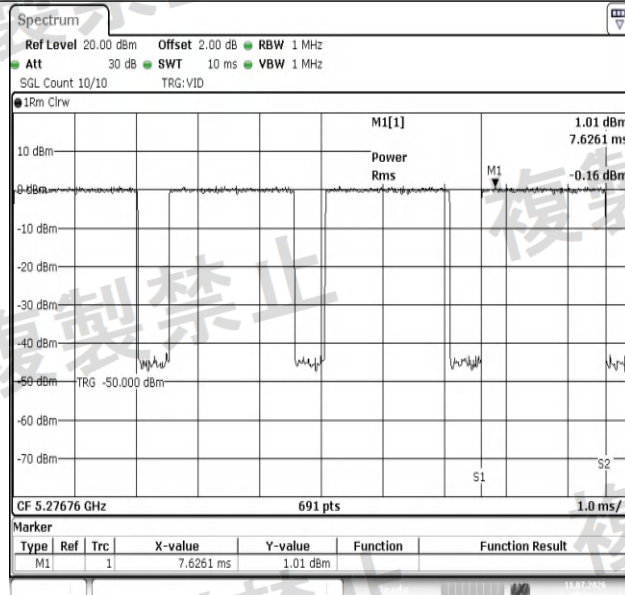

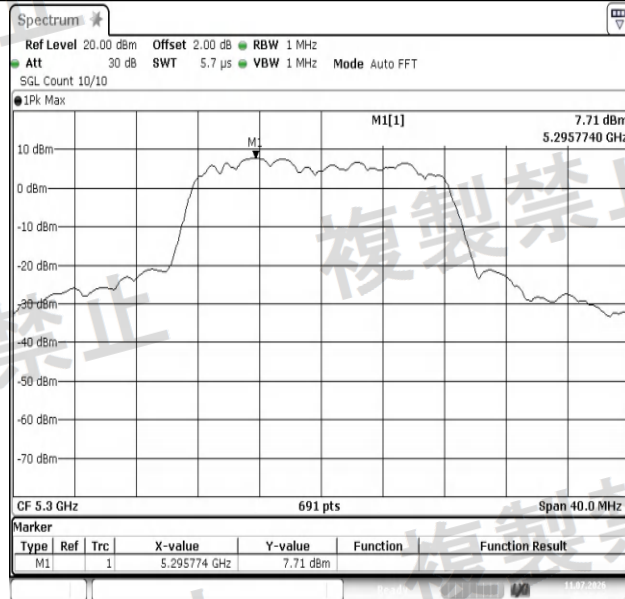



NTNV-11A-Ant1-5300-PASS

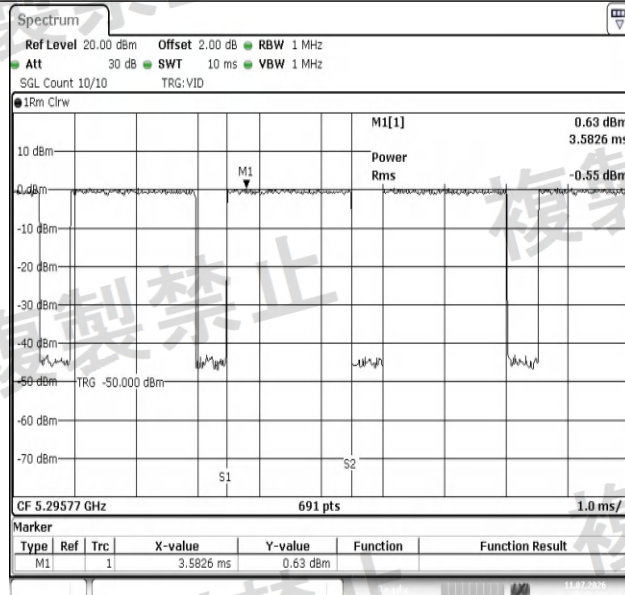


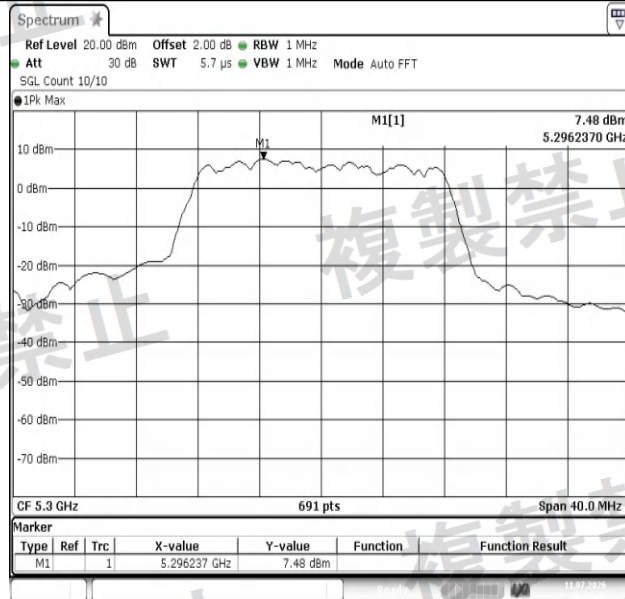


NTNV-11A-Ant2-5300-PASS

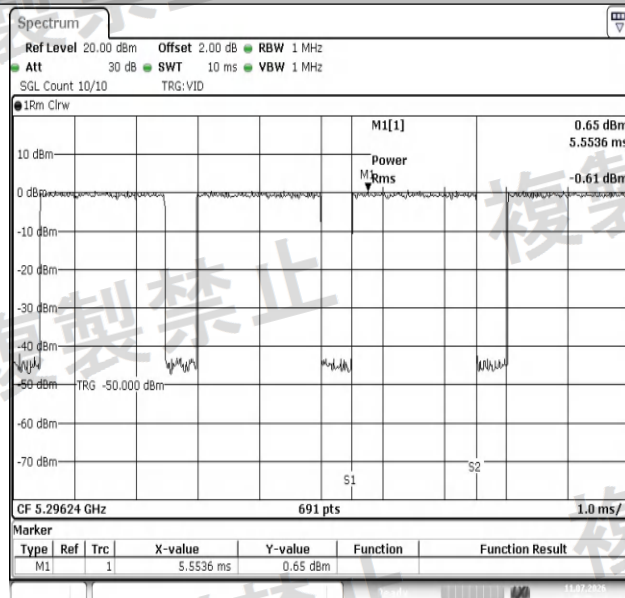


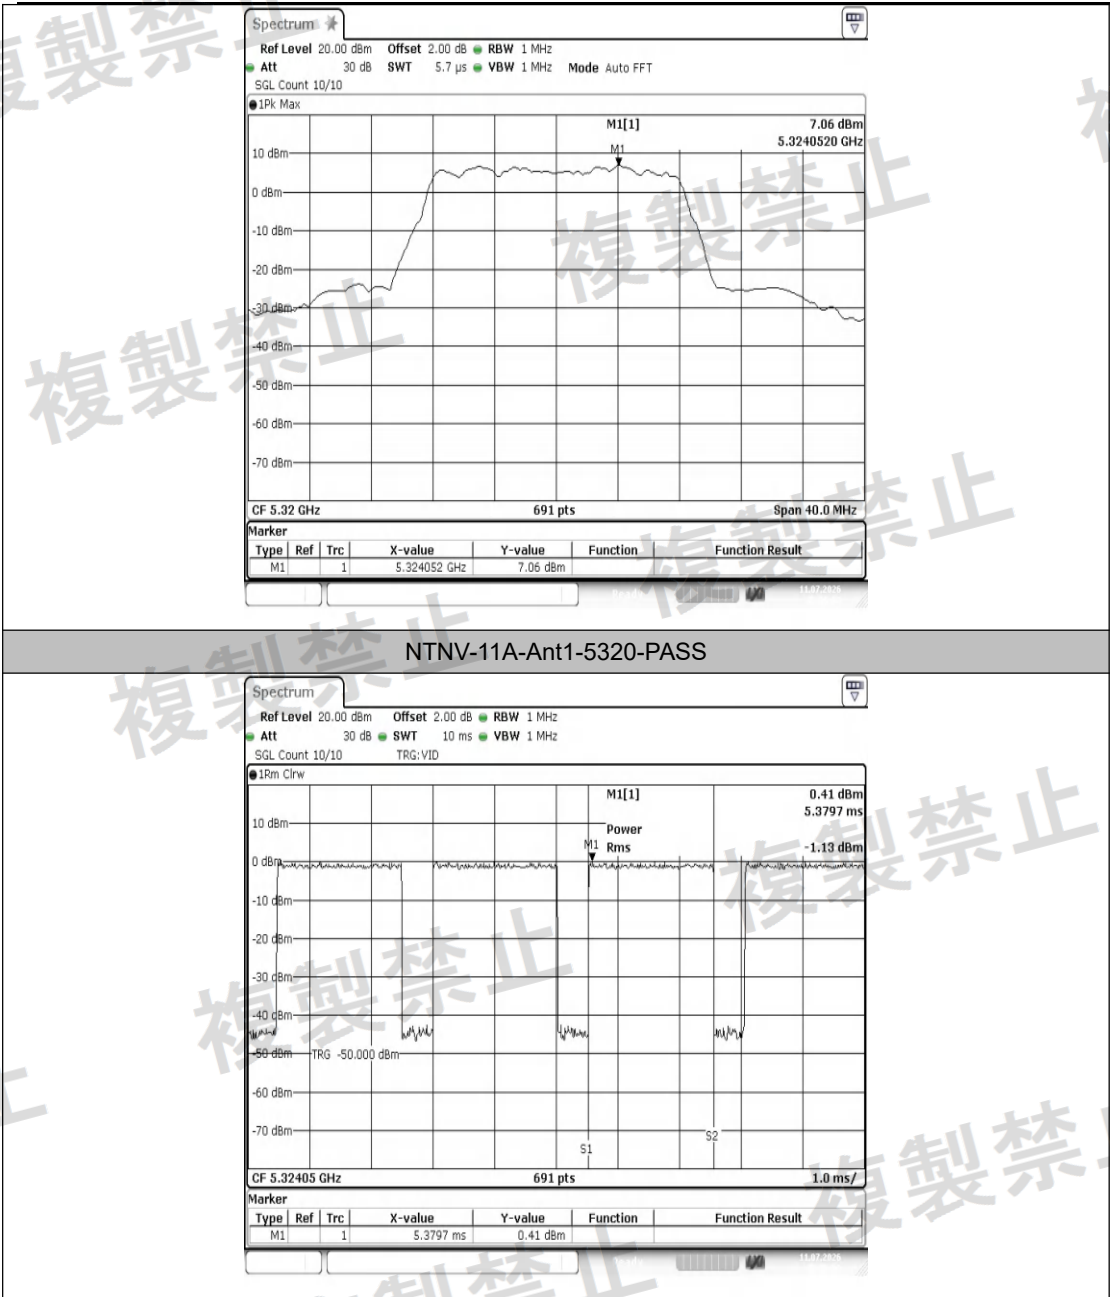

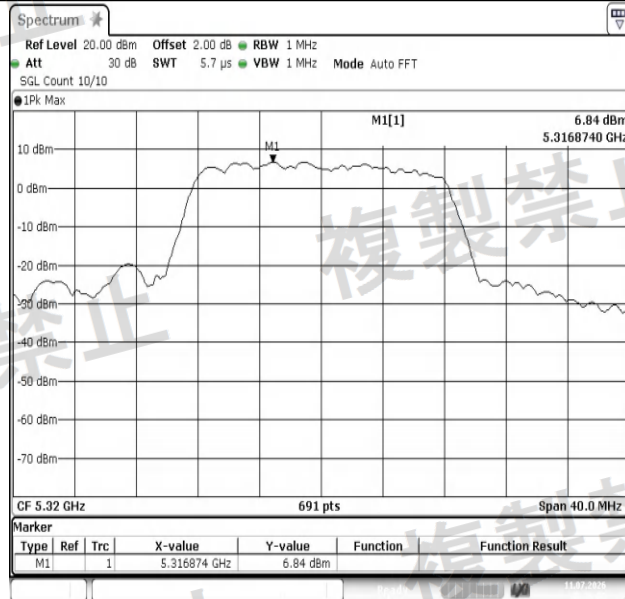



NTNV-11A-Ant2-5320-PASS

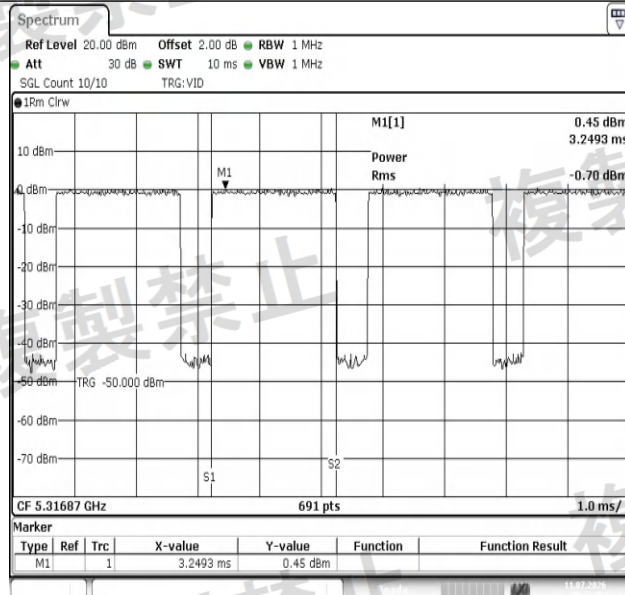

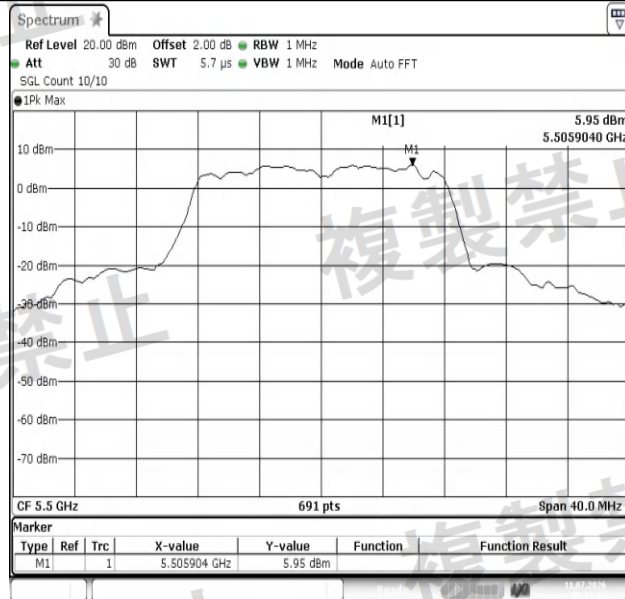



NTNV-11A-Ant1-5500-PASS

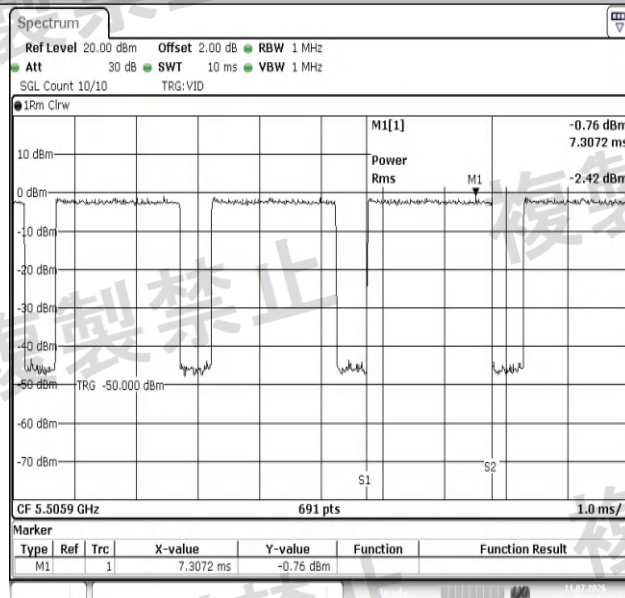

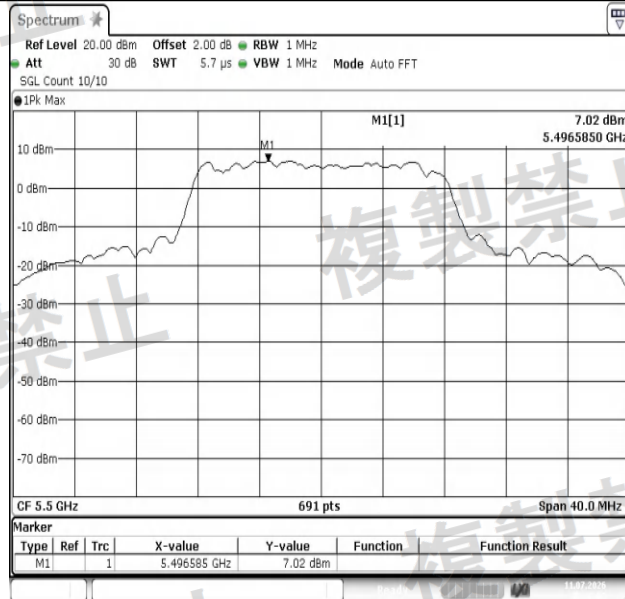



NTNV-11A-Ant2-5500-PASS

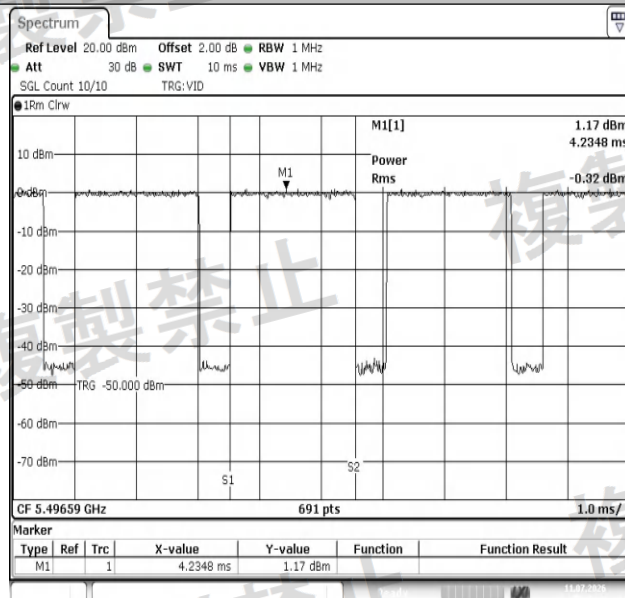

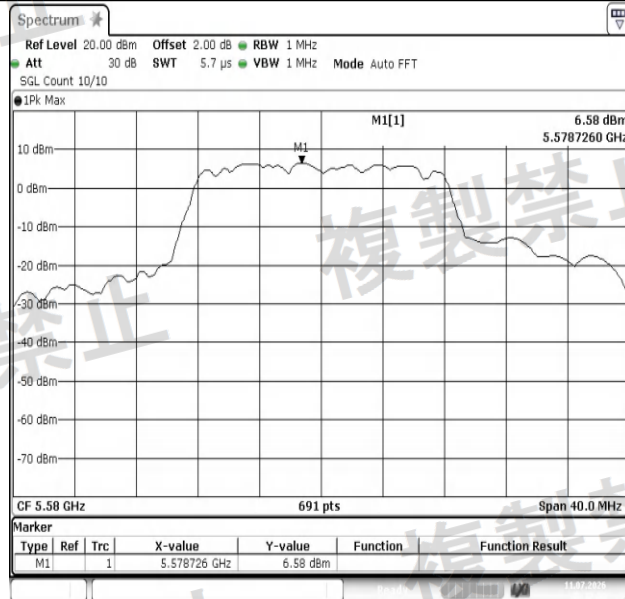



NTNV-11A-Ant1-5580-PASS

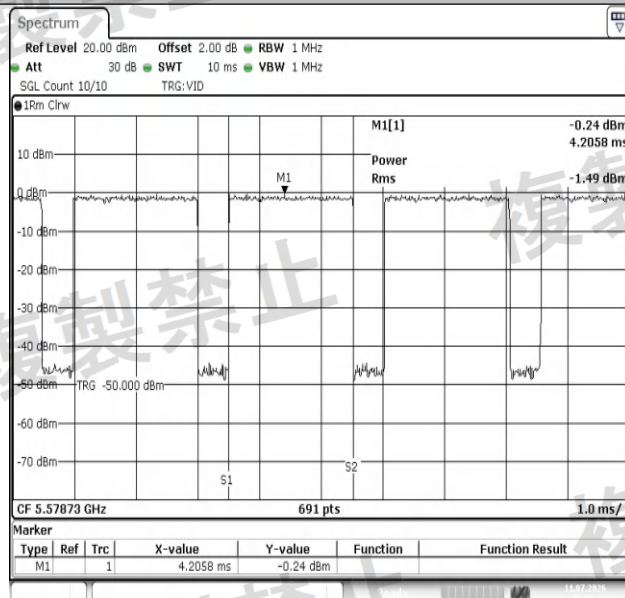

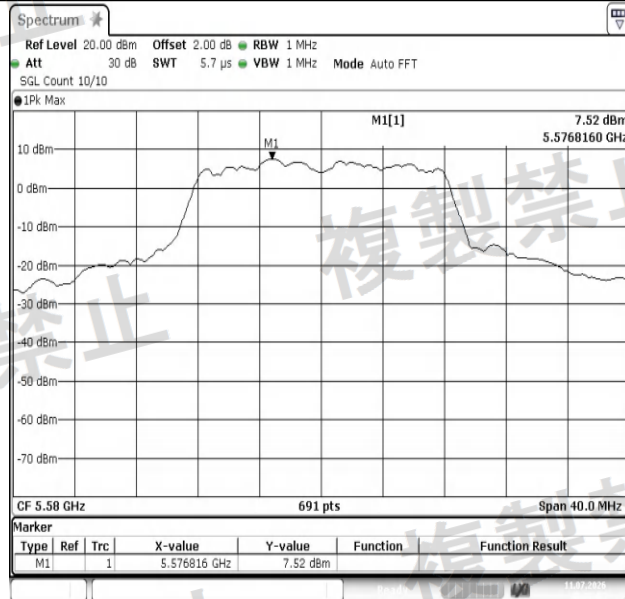



NTNV-11A-Ant2-5580-PASS

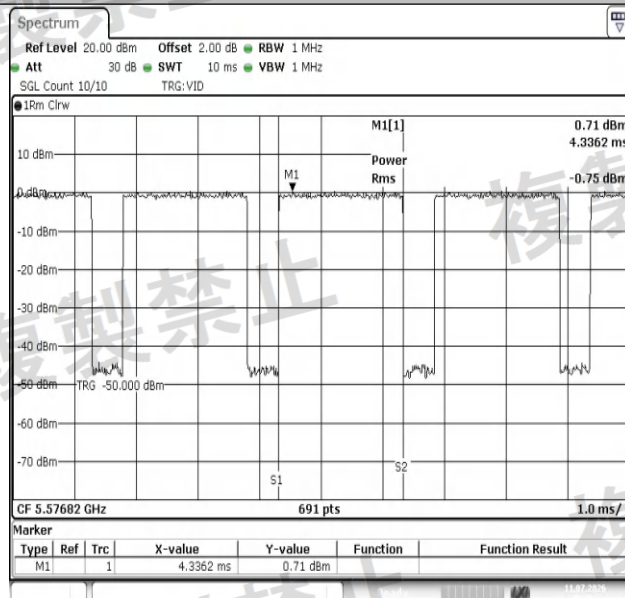

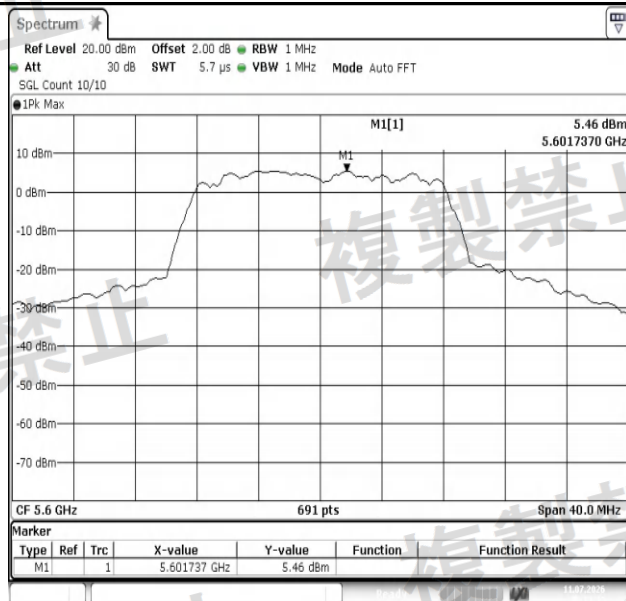



NTNV-11A-Ant1-5600-PASS

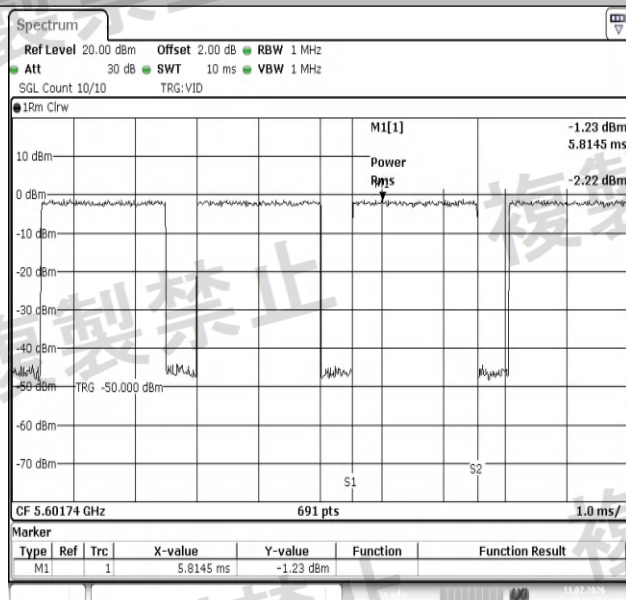

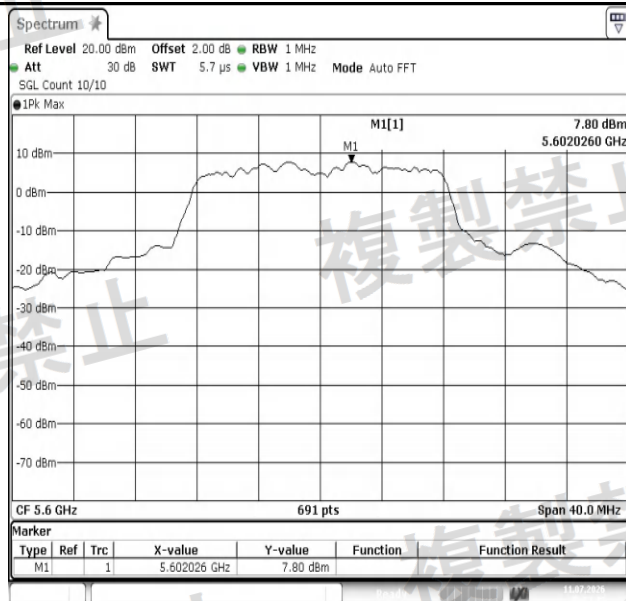



NTNV-11A-Ant2-5600-PASS

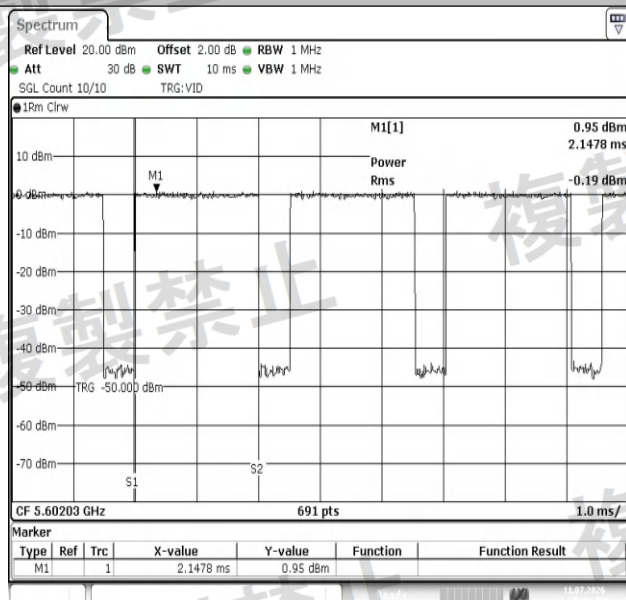

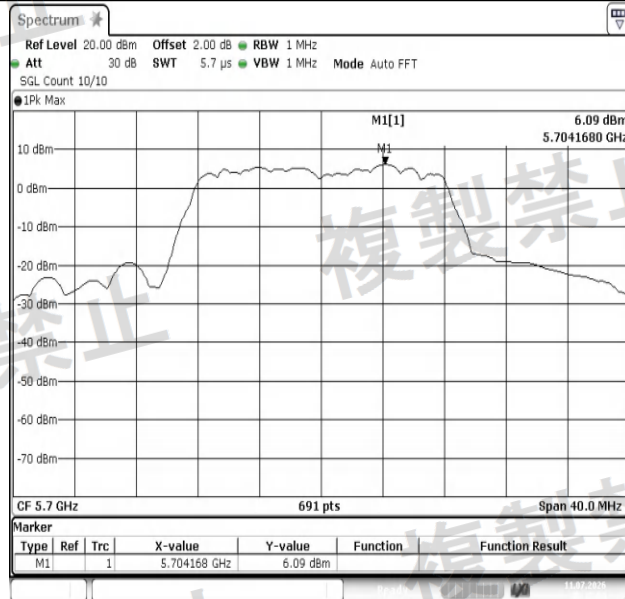



NTNV-11A-Ant1-5700-PASS

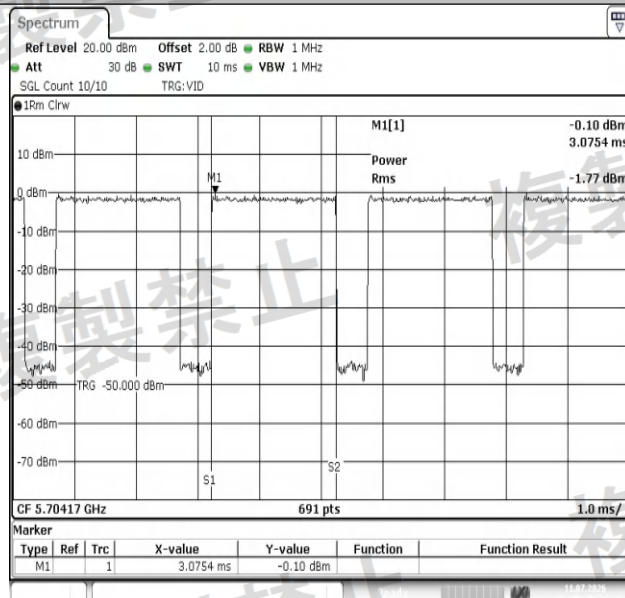

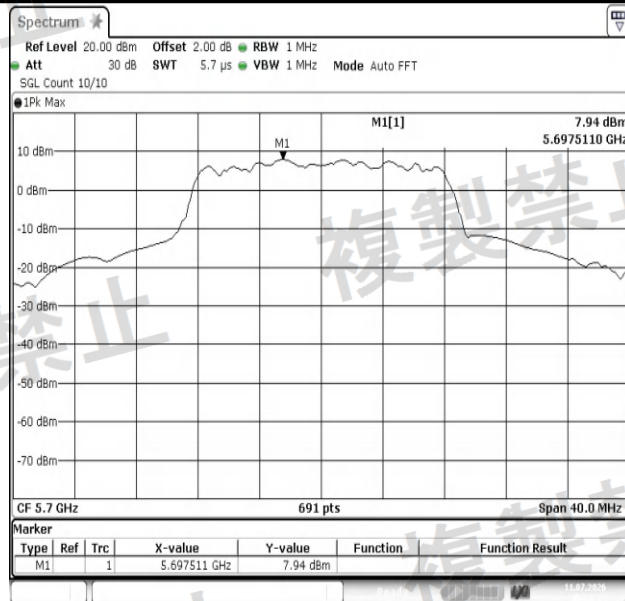



NTNV-11A-Ant2-5700-PASS

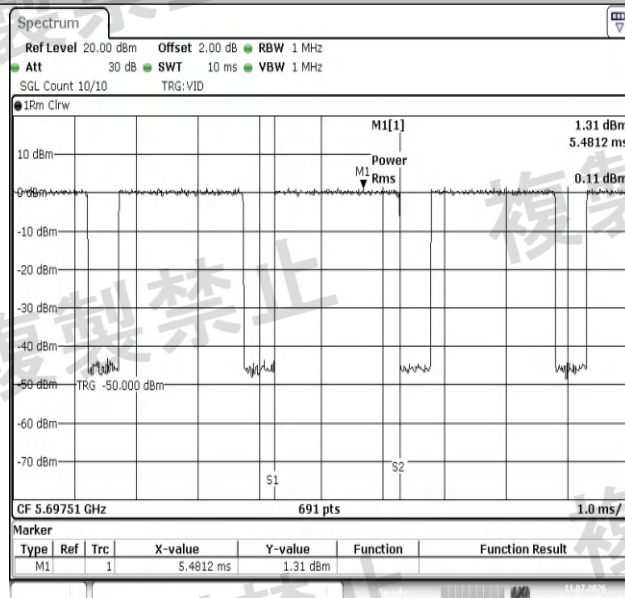

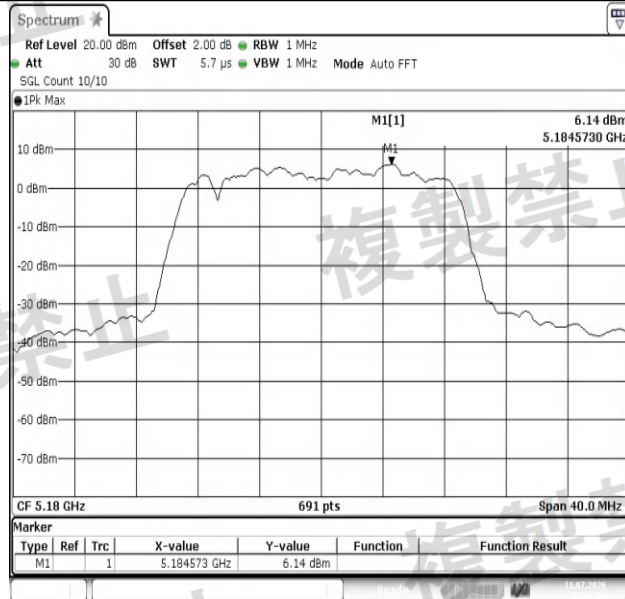



NTNV-11N20MIMO-Ant1-5180-PASS

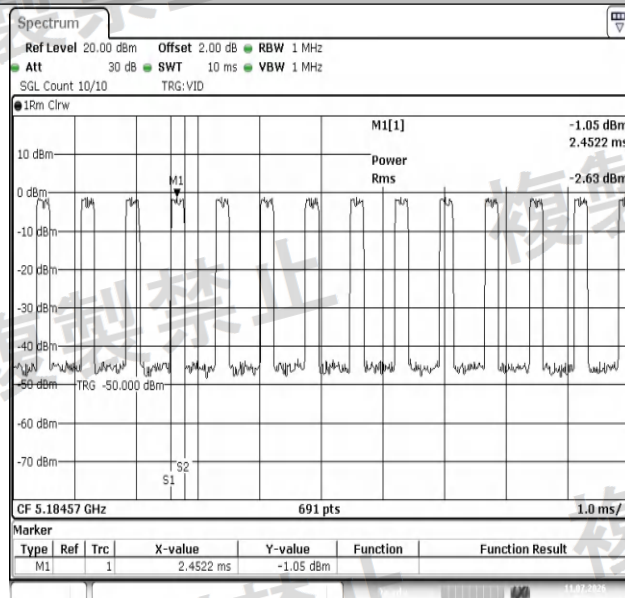

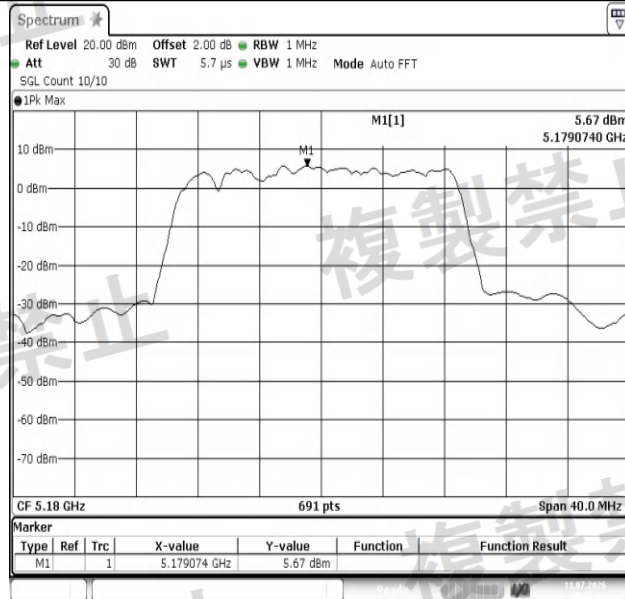



NTNV-11N20MIMO-Ant2-5180-PASS

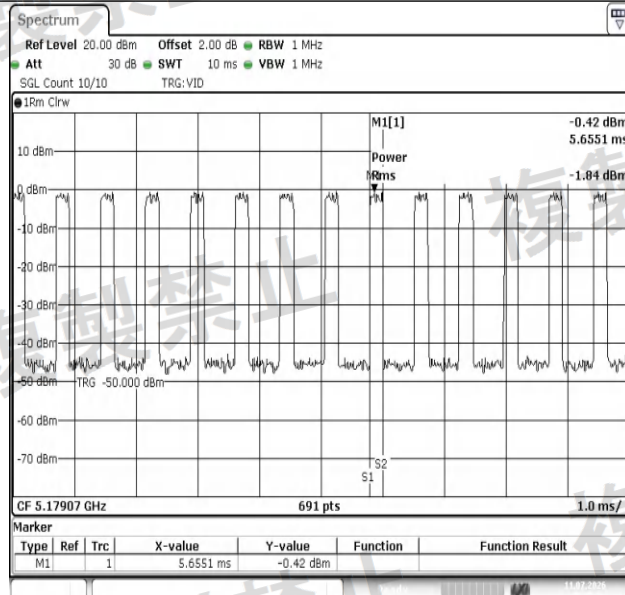

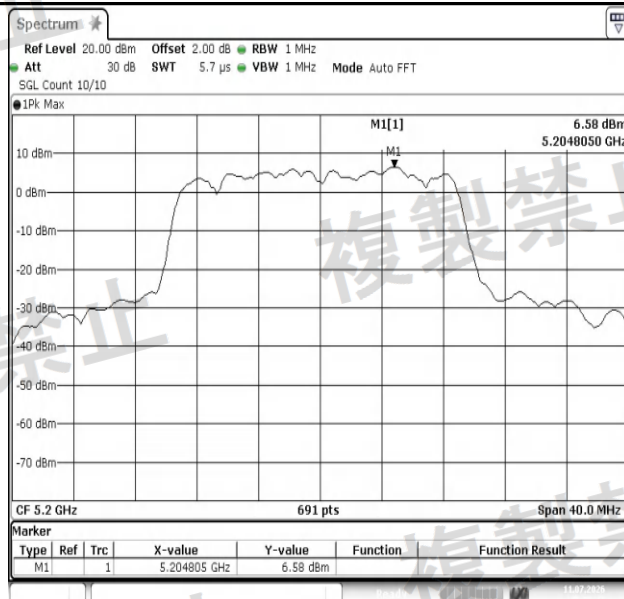



NTNV-11N20MIMO-Ant1-5200-PASS

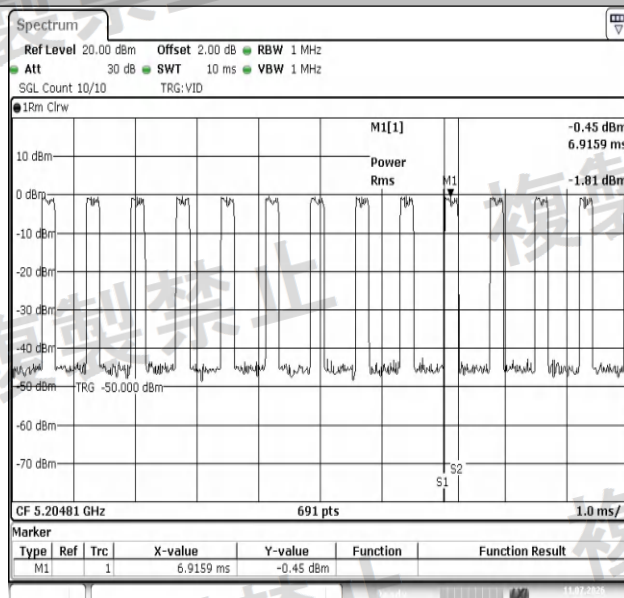

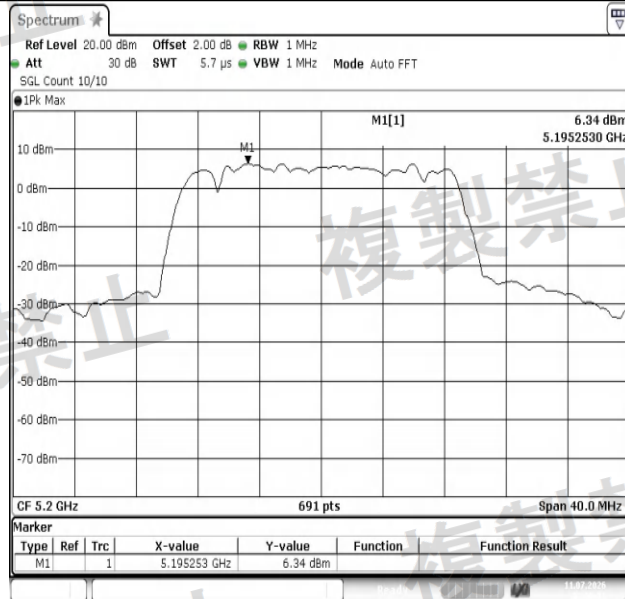



NTNV-11N20MIMO-Ant2-5200-PASS

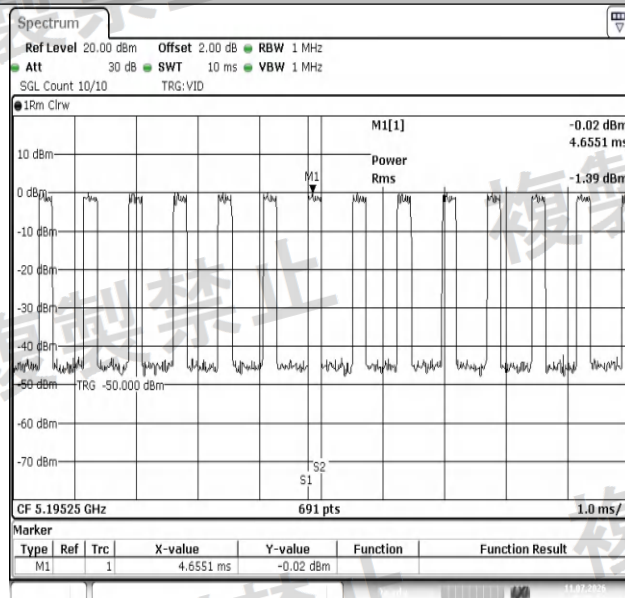

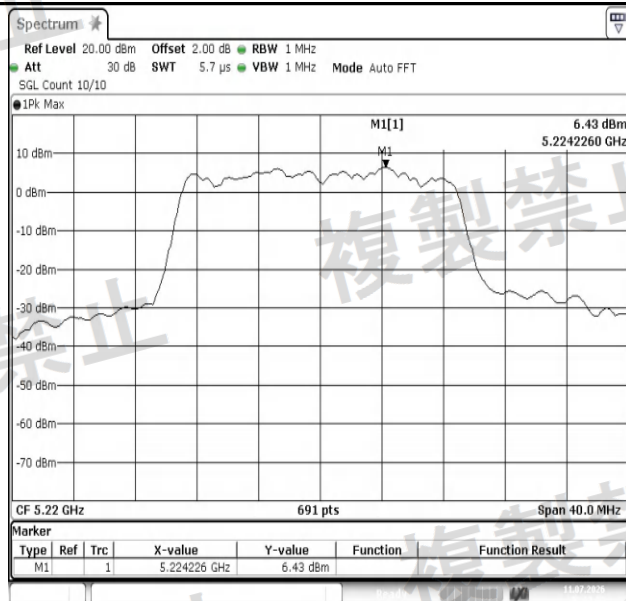



NTNV-11N20MIMO-Ant1-5220-PASS

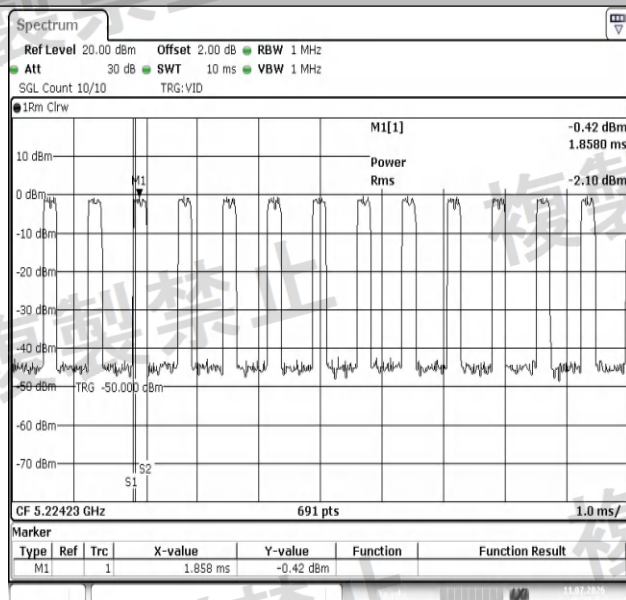

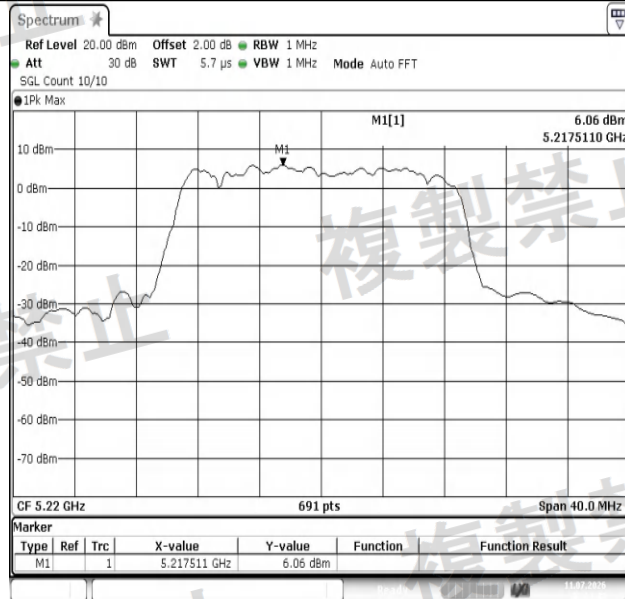



NTNV-11N20MIMO-Ant2-5220-PASS

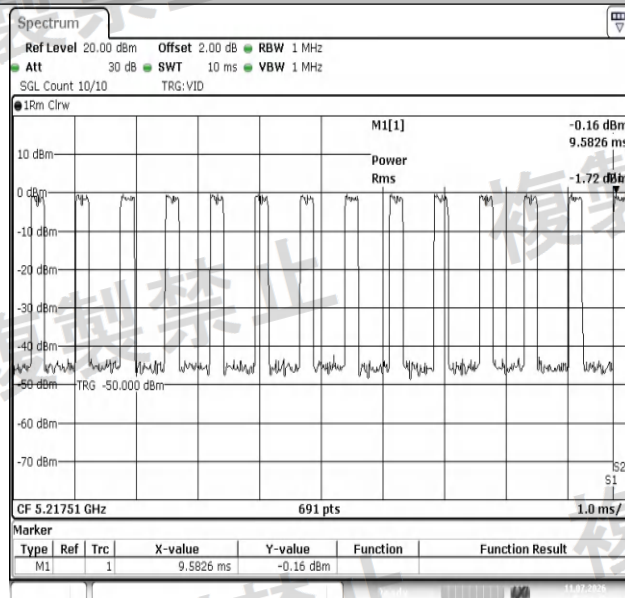

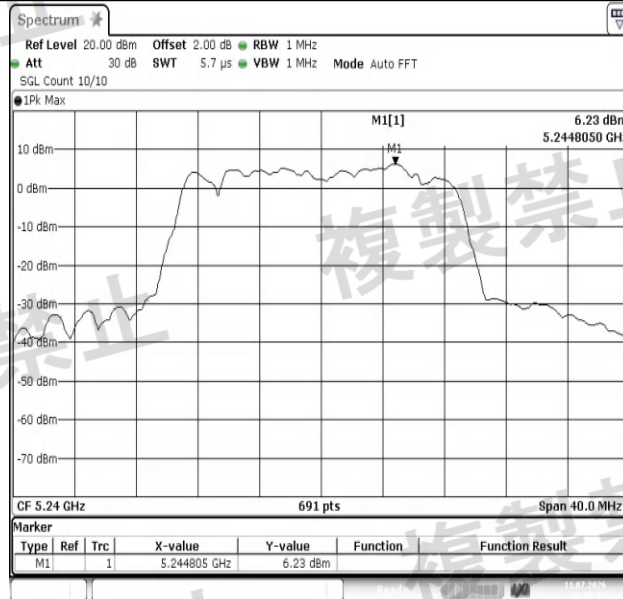



NTNV-11N20MIMO-Ant1-5240-PASS

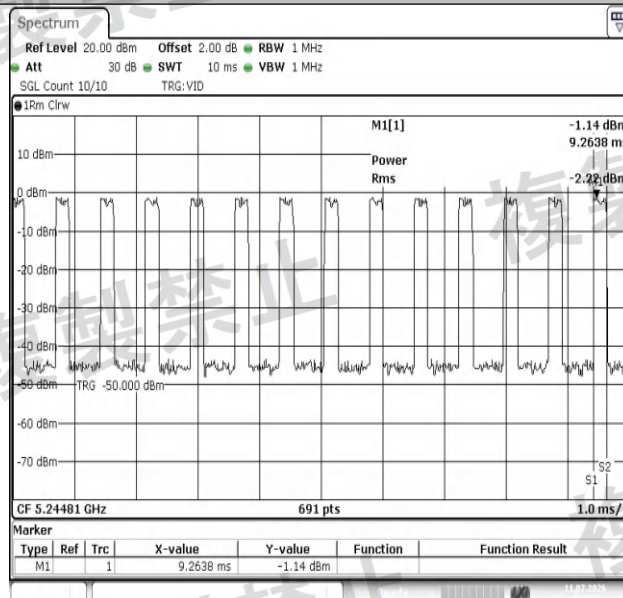

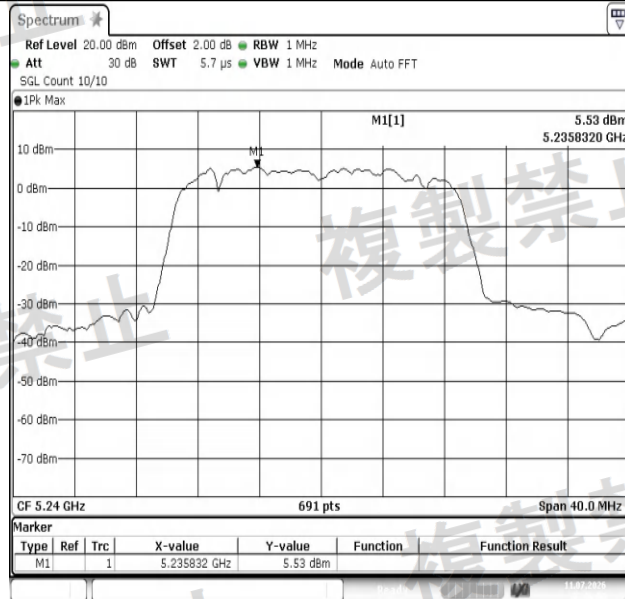



NTNV-11N20MIMO-Ant2-5240-PASS

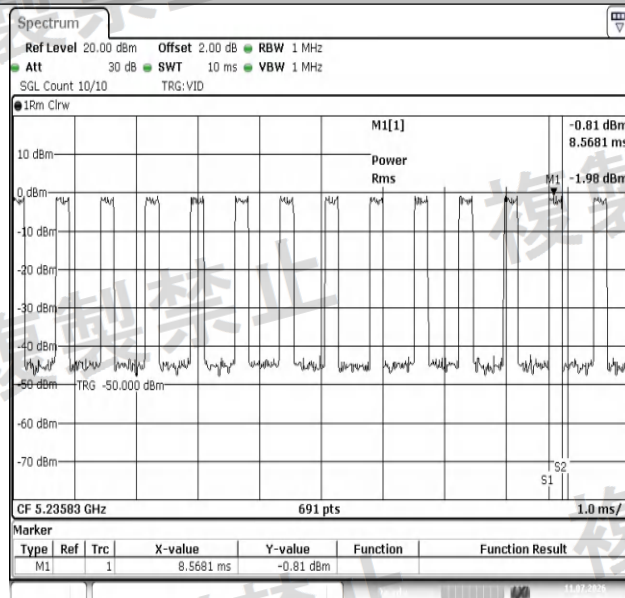

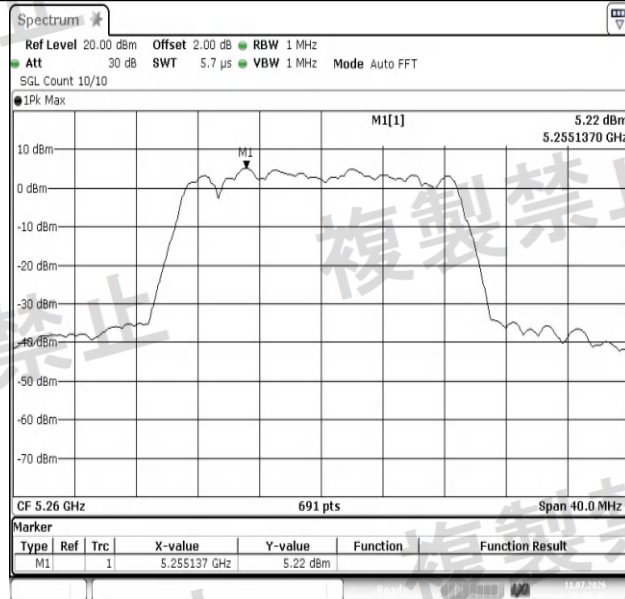



NTNV-11N20MIMO-Ant1-5260-PASS

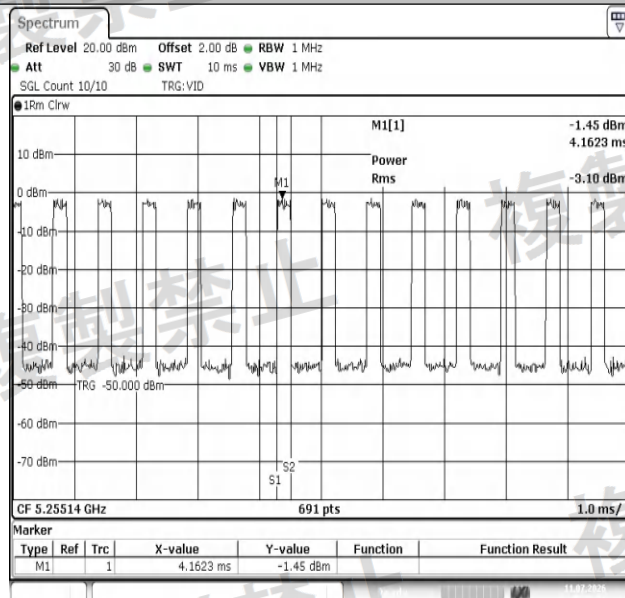

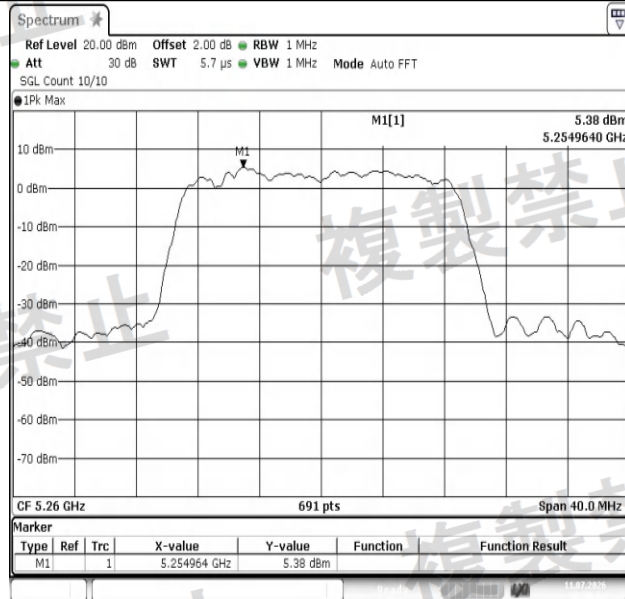



NTNV-11N20MIMO-Ant2-5260-PASS

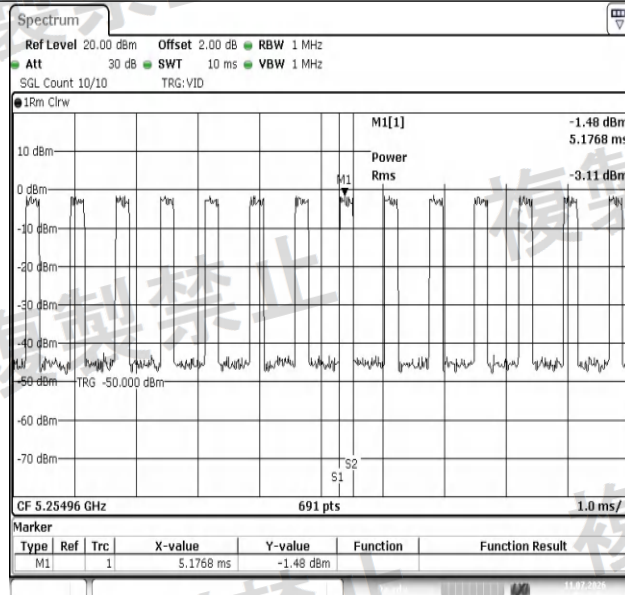

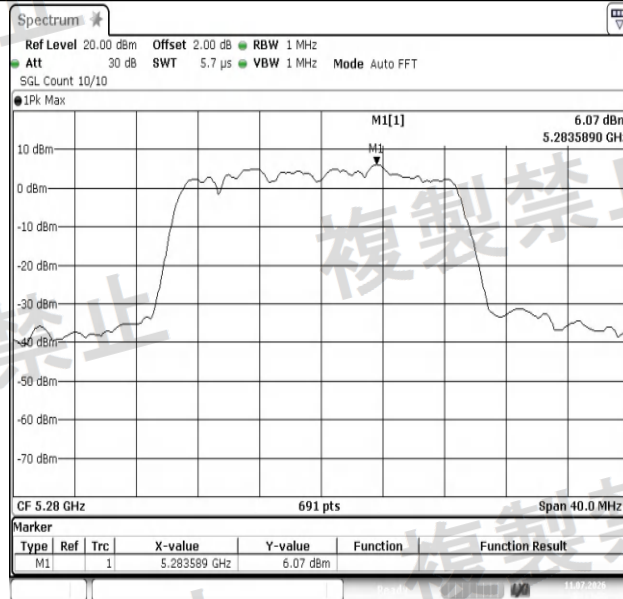



NTNV-11N20MIMO-Ant1-5280-PASS

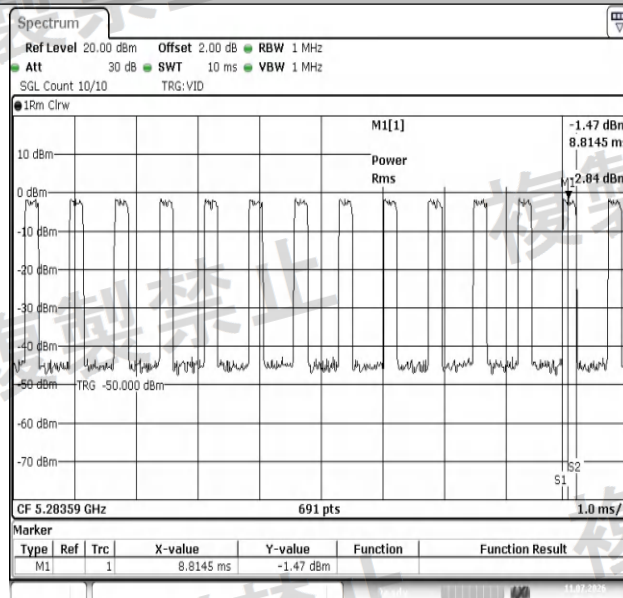

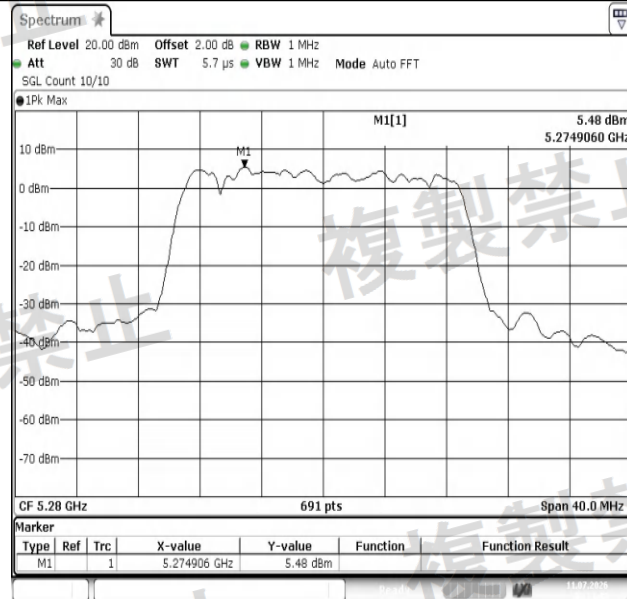



NTNV-11N20MIMO-Ant2-5280-PASS

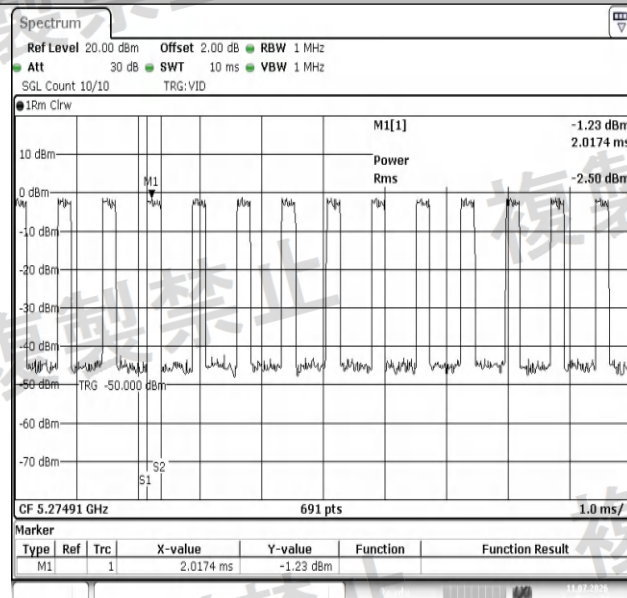

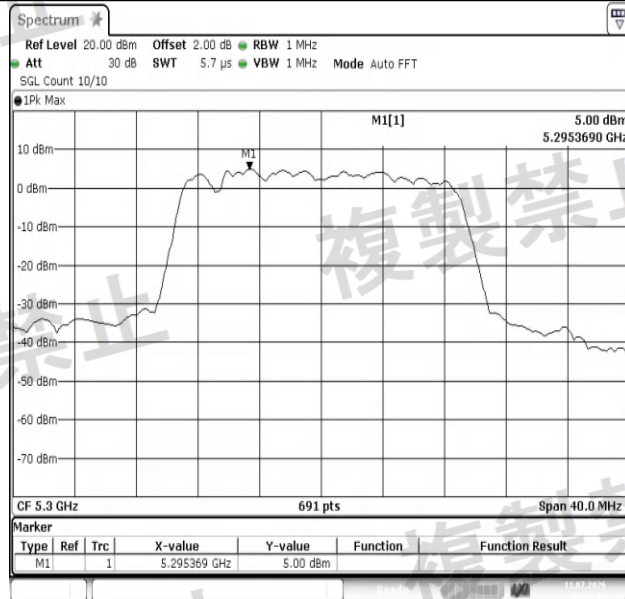



NTNV-11N20MIMO-Ant1-5300-PASS

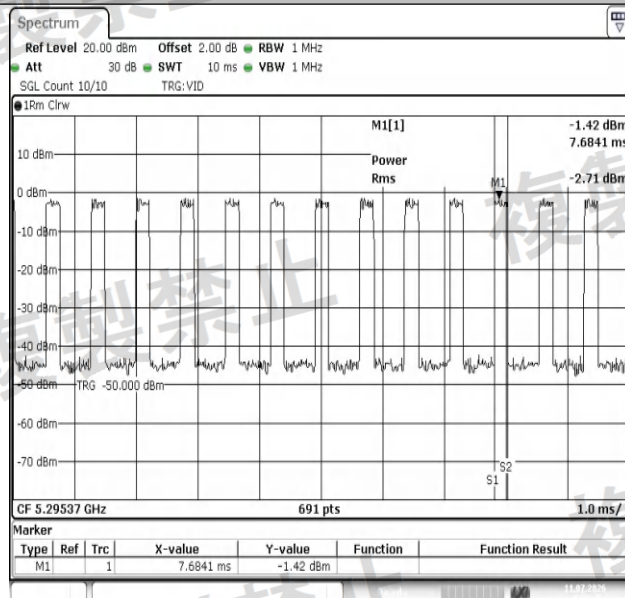

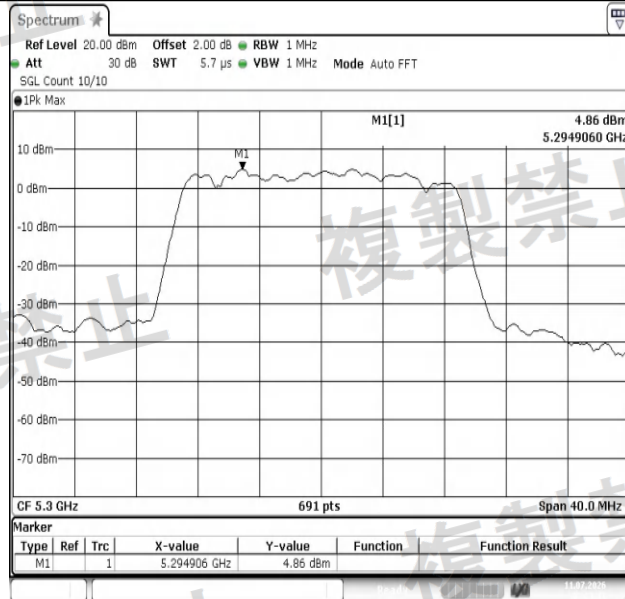



NTNV-11N20MIMO-Ant2-5300-PASS

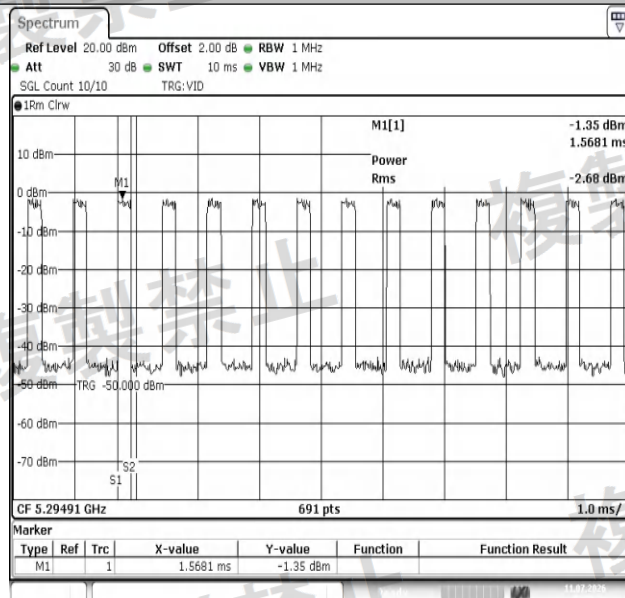

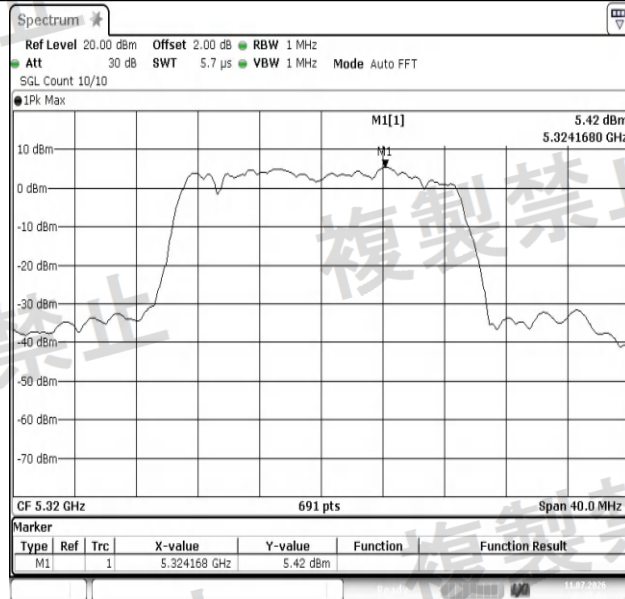



NTNV-11N20MIMO-Ant1-5320-PASS

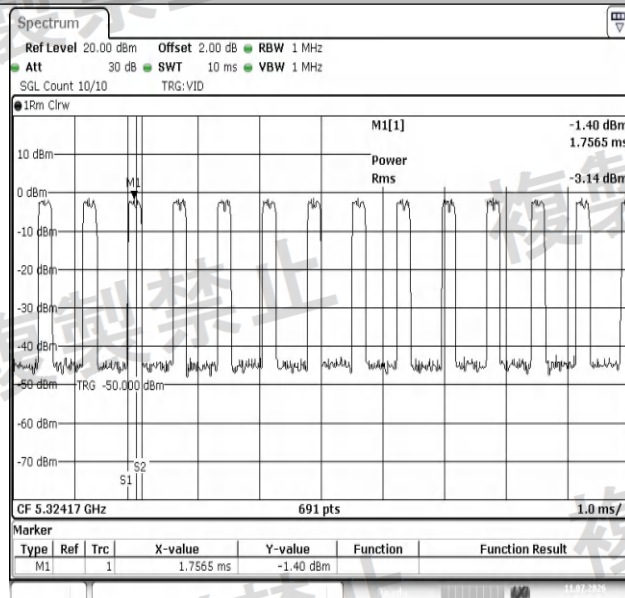

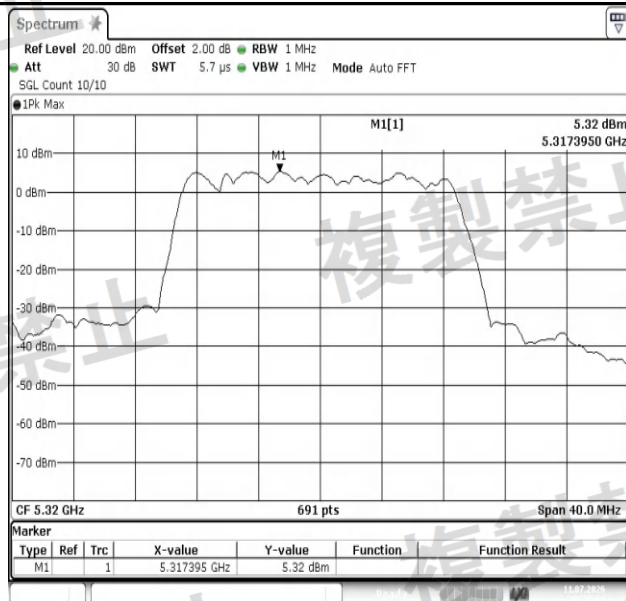



NTNV-11N20MIMO-Ant2-5320-PASS

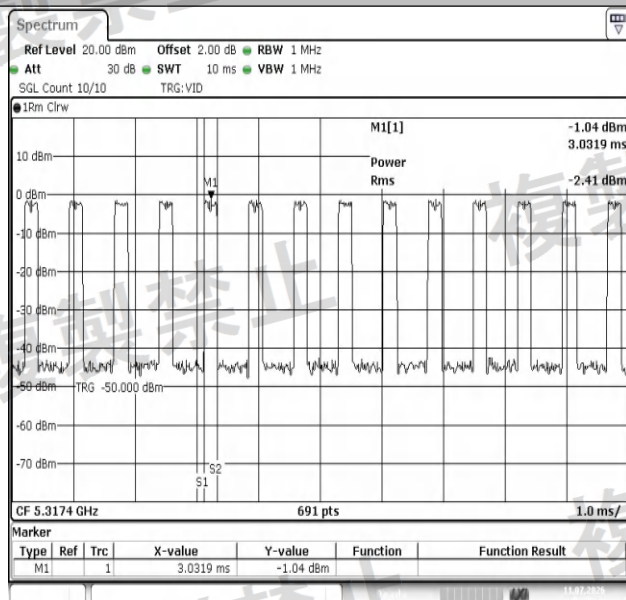

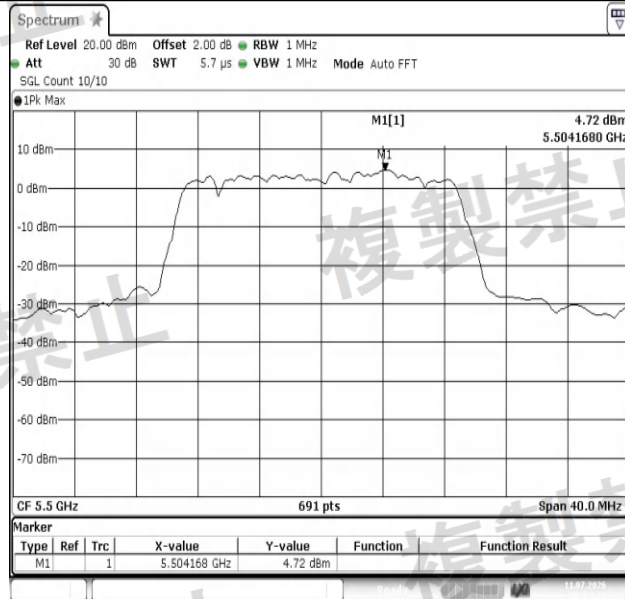



NTNV-11N20MIMO-Ant1-5500-PASS

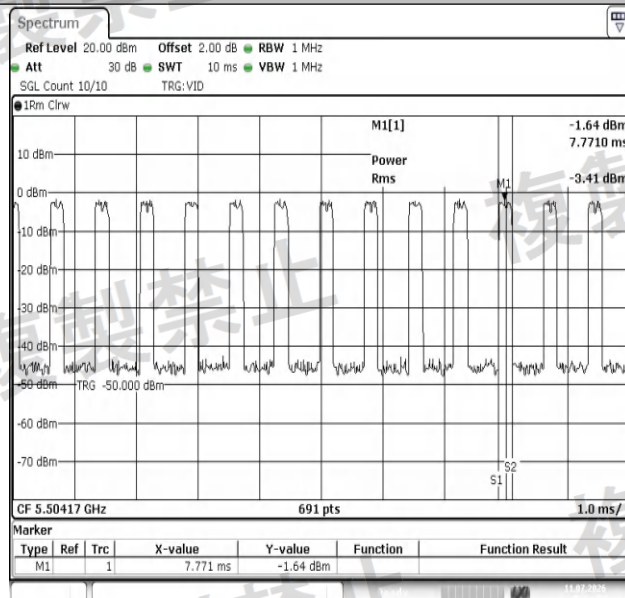

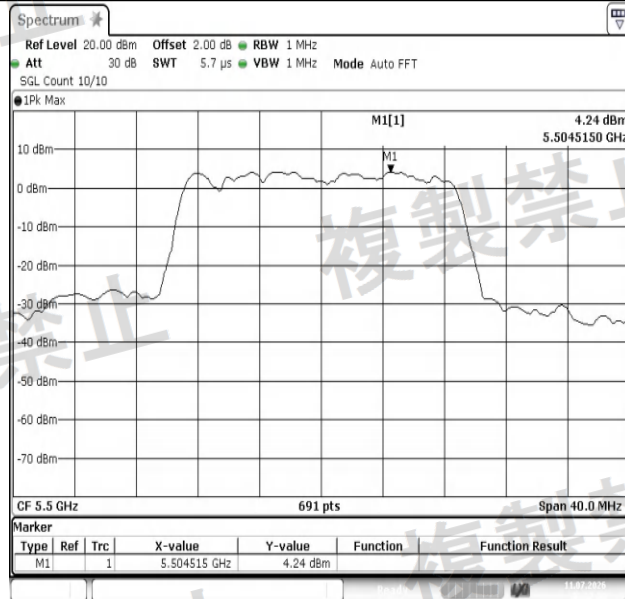



NTNV-11N20MIMO-Ant2-5500-PASS

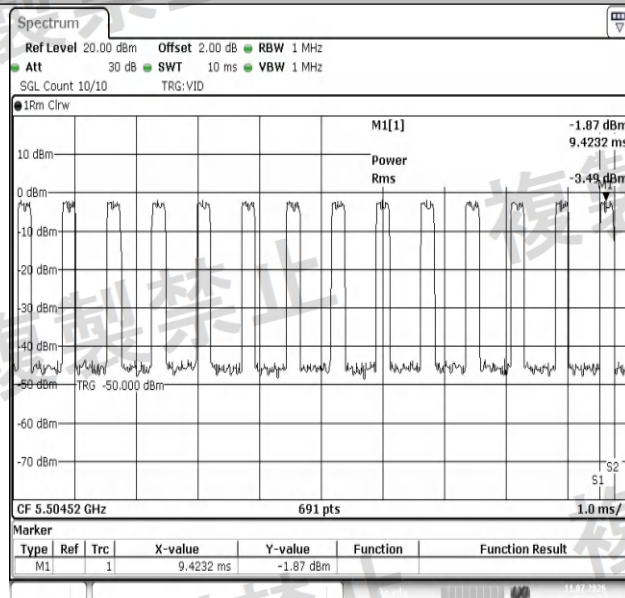

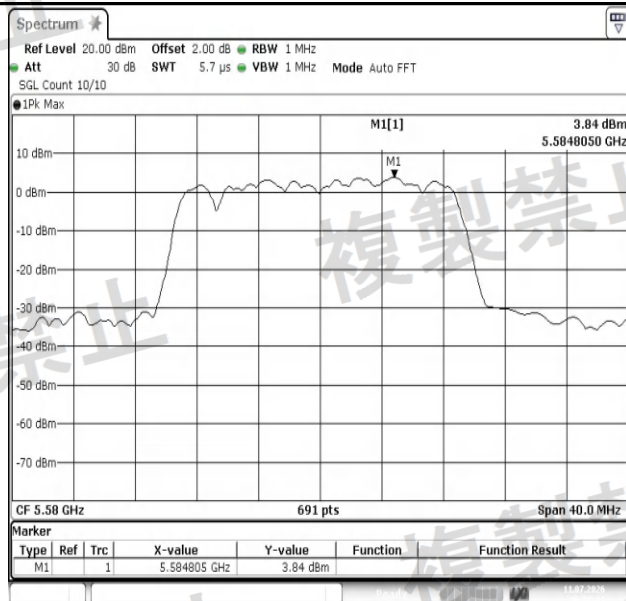



NTNV-11N20MIMO-Ant1-5580-PASS

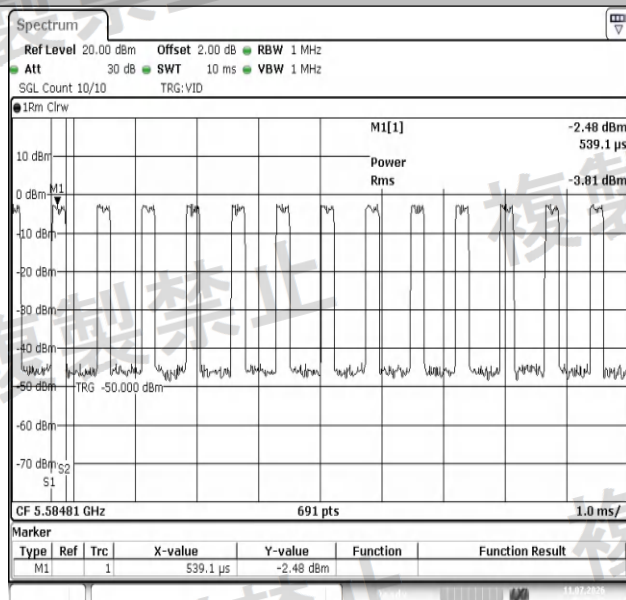

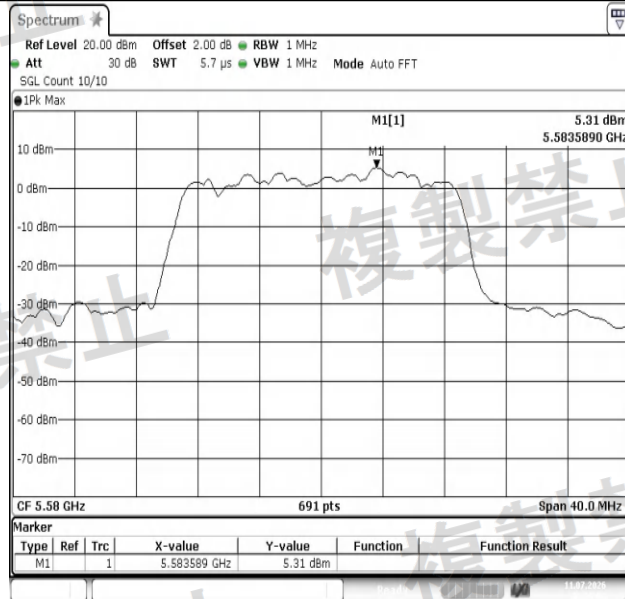



NTNV-11N20MIMO-Ant2-5580-PASS

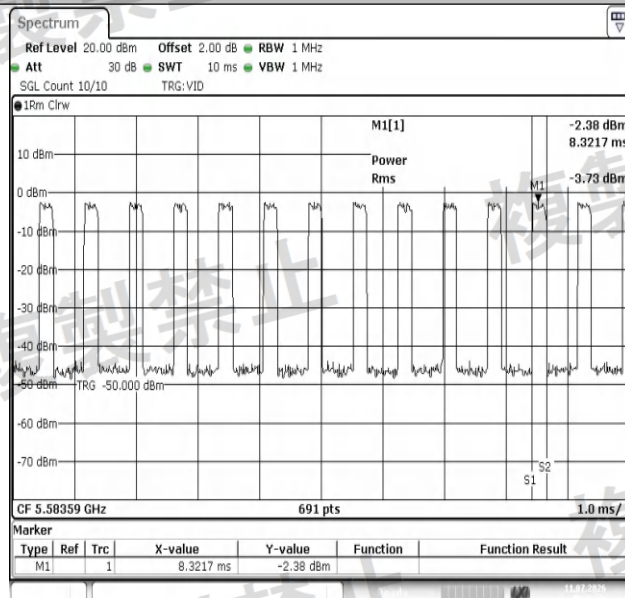

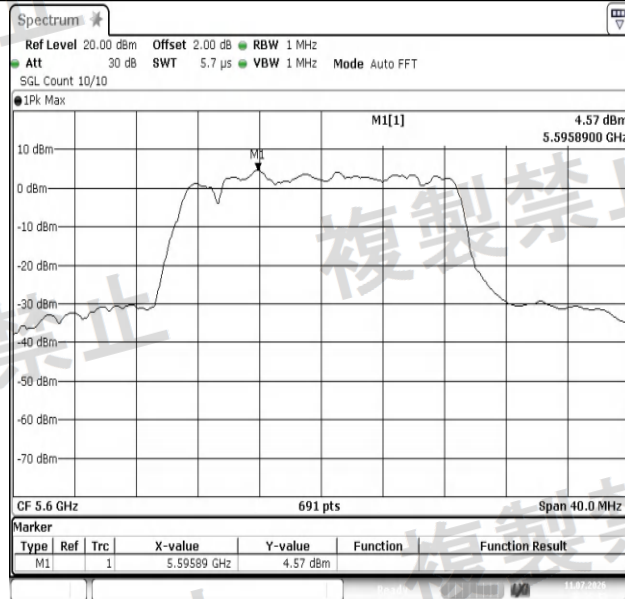



NTNV-11N20MIMO-Ant1-5600-PASS

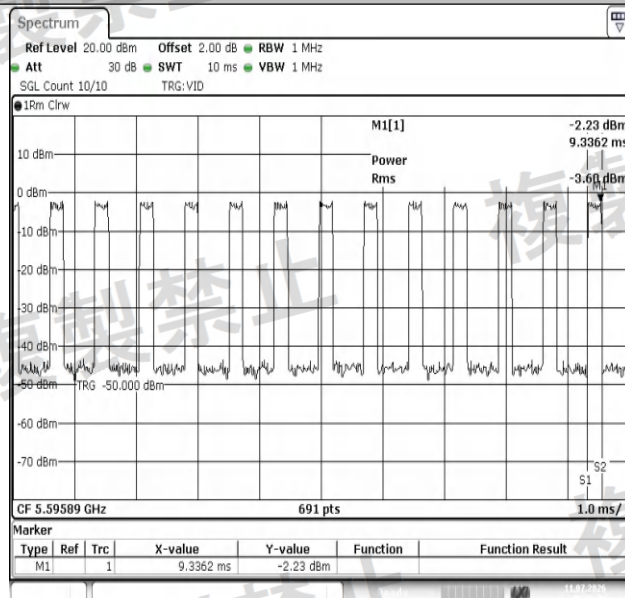

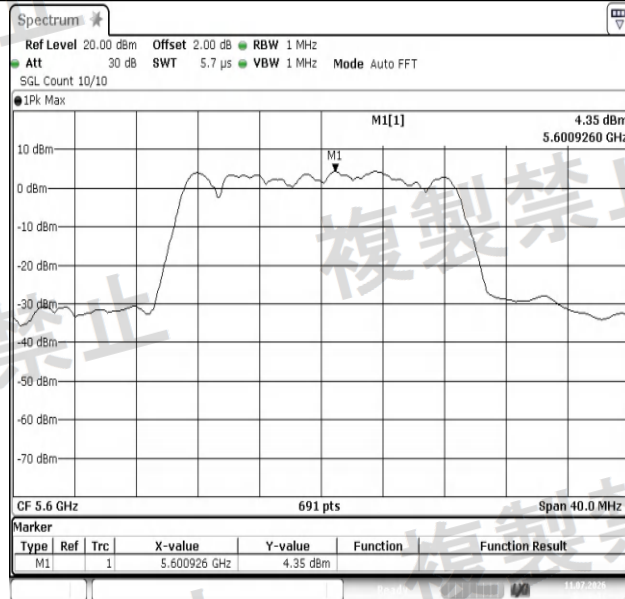



NTNV-11N20MIMO-Ant2-5600-PASS

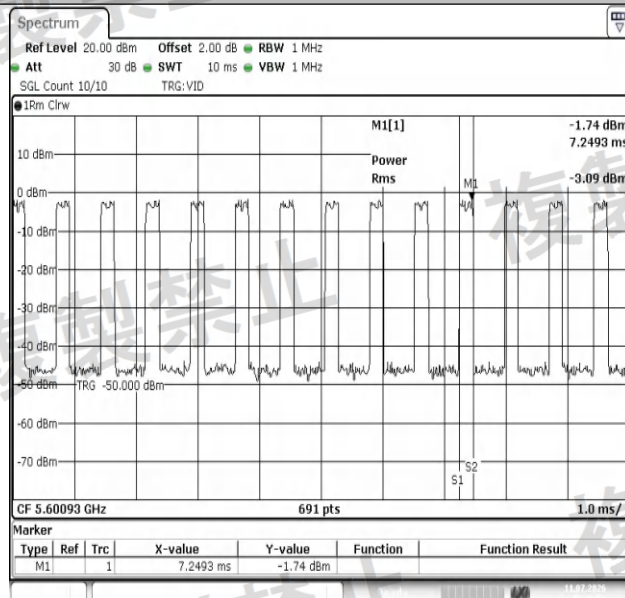

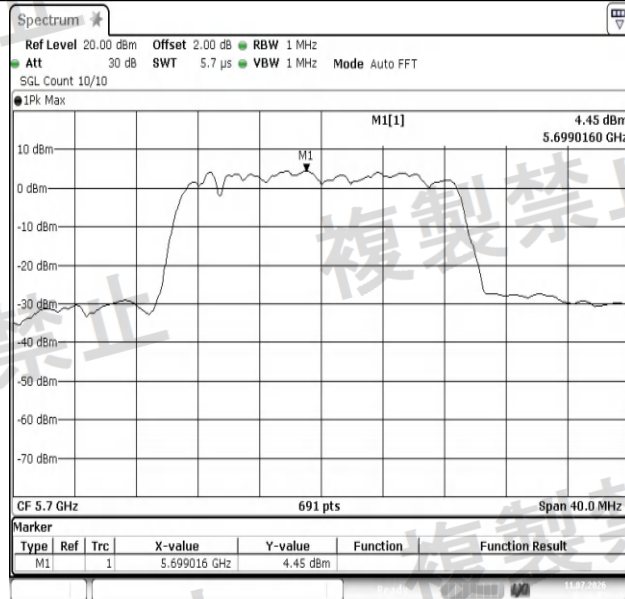



NTNV-11N20MIMO-Ant1-5700-PASS

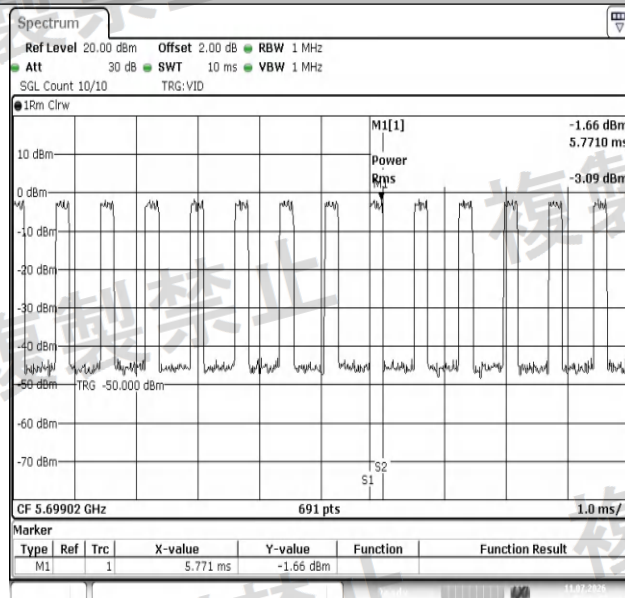

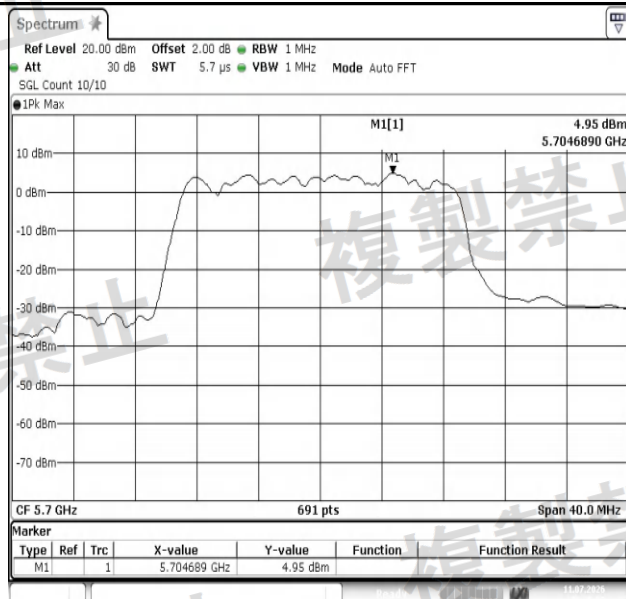



NTNV-11N20MIMO-Ant2-5700-PASS

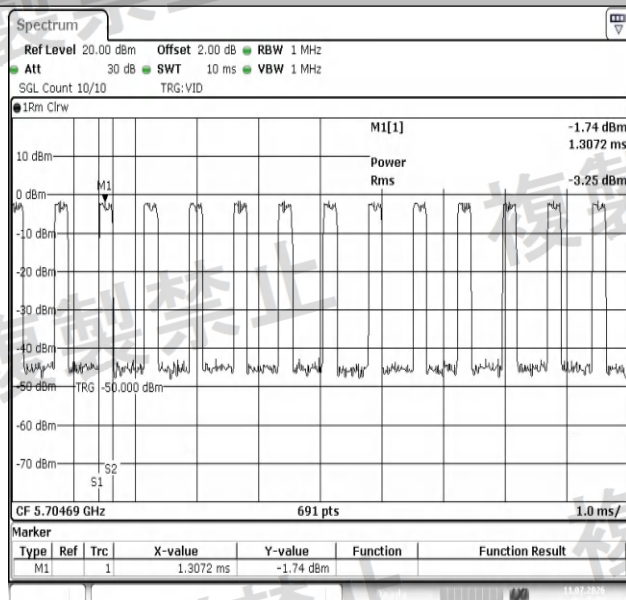

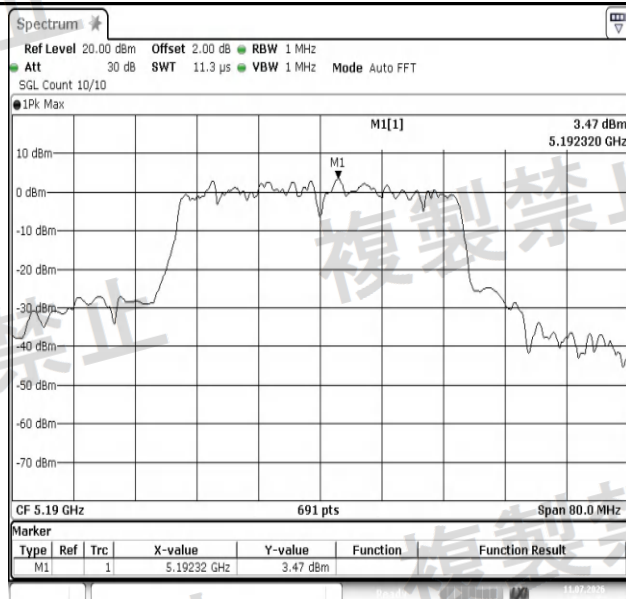



NTNV-11N40MIMO-Ant1-5190-PASS

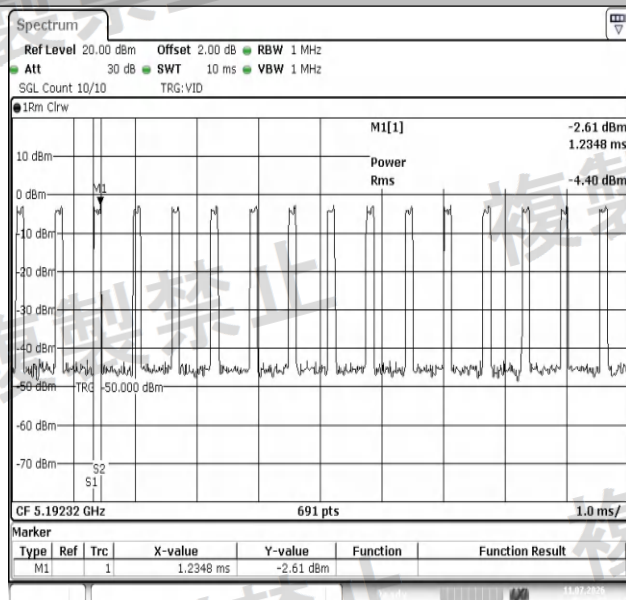

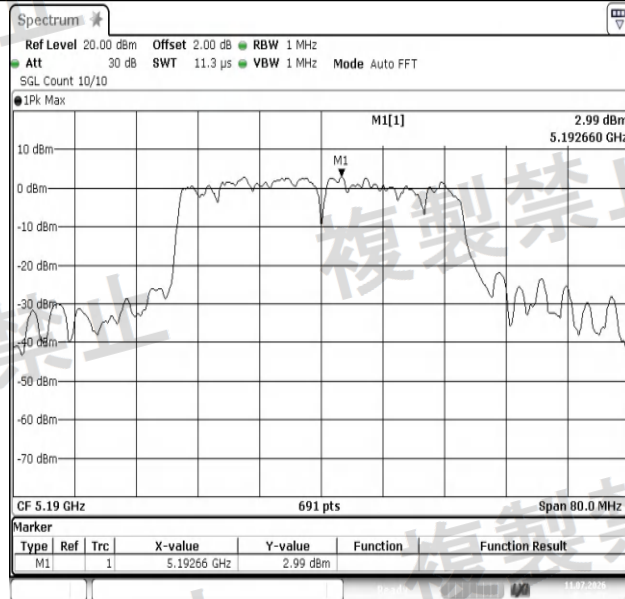



NTNV-11N40MIMO-Ant2-5190-PASS

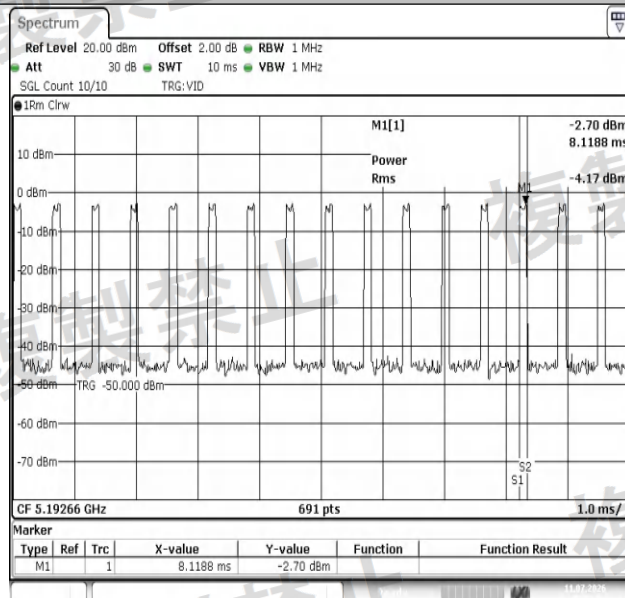

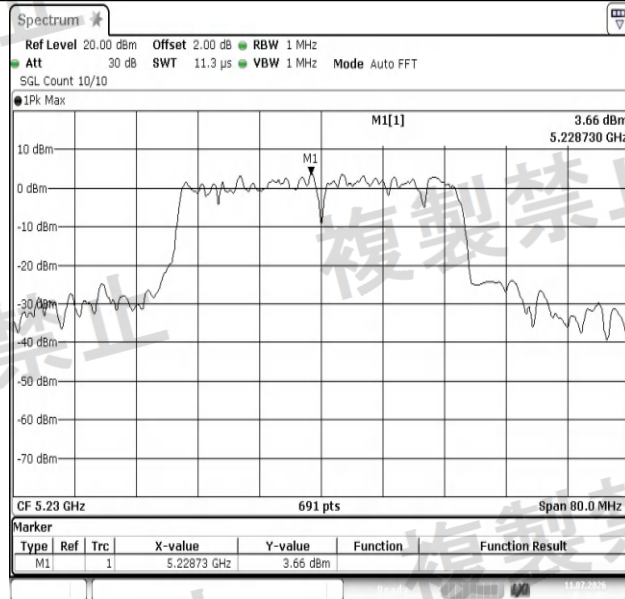



NTNV-11N40MIMO-Ant1-5230-PASS

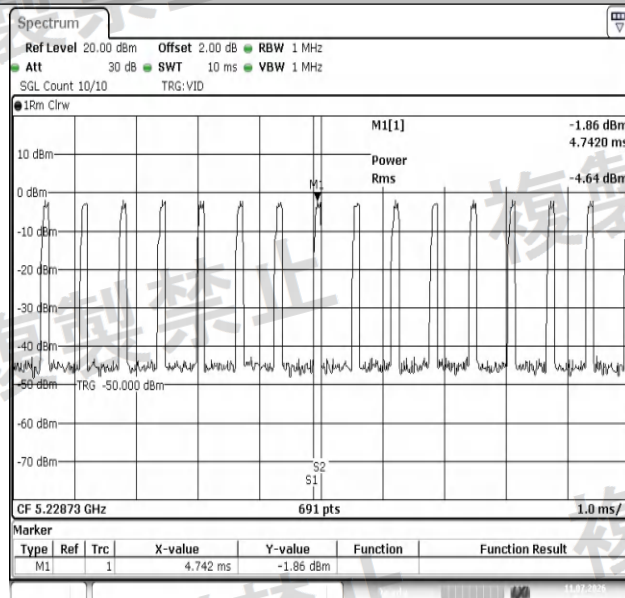

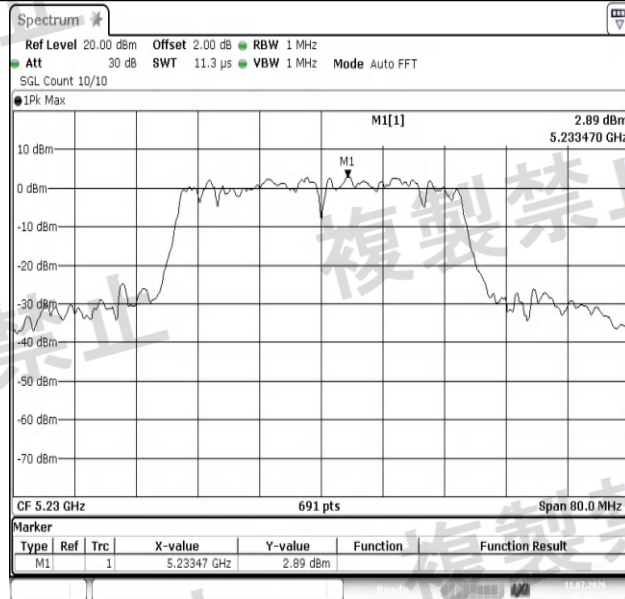



NTNV-11N40MIMO-Ant2-5230-PASS

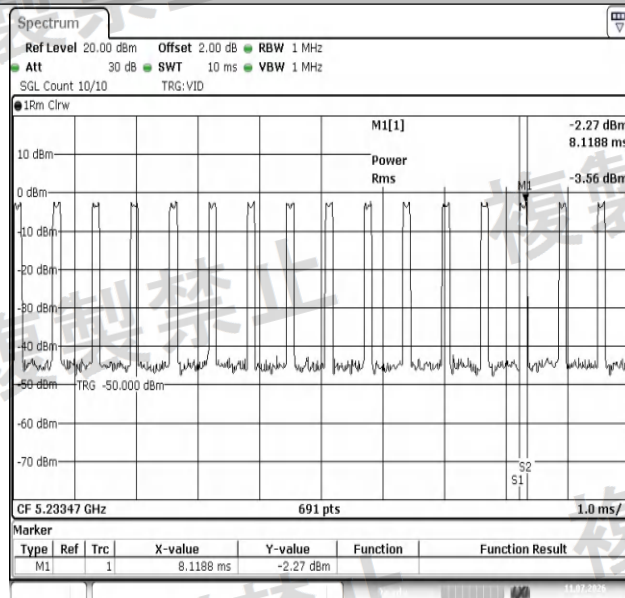

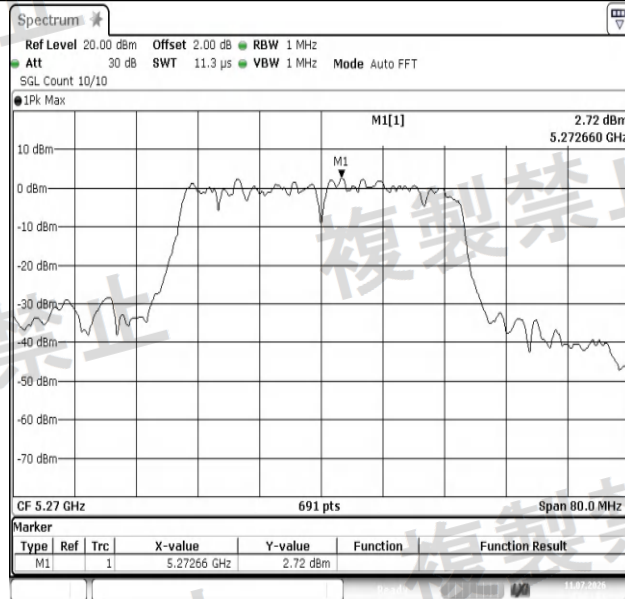



NTNV-11N40MIMO-Ant1-5270-PASS

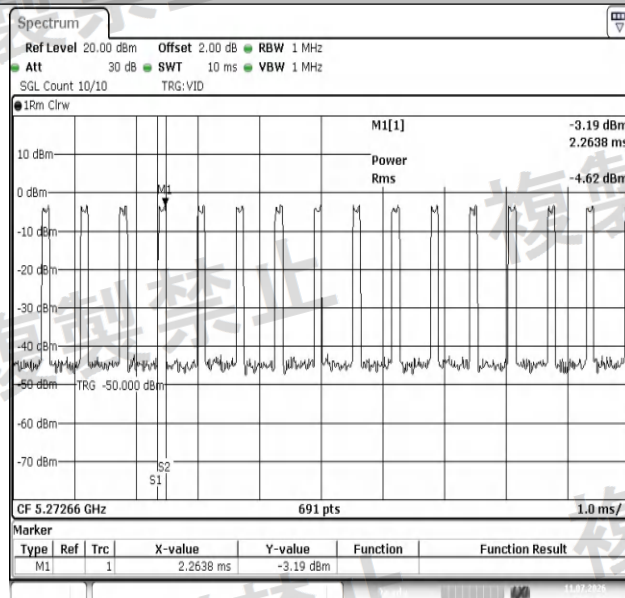

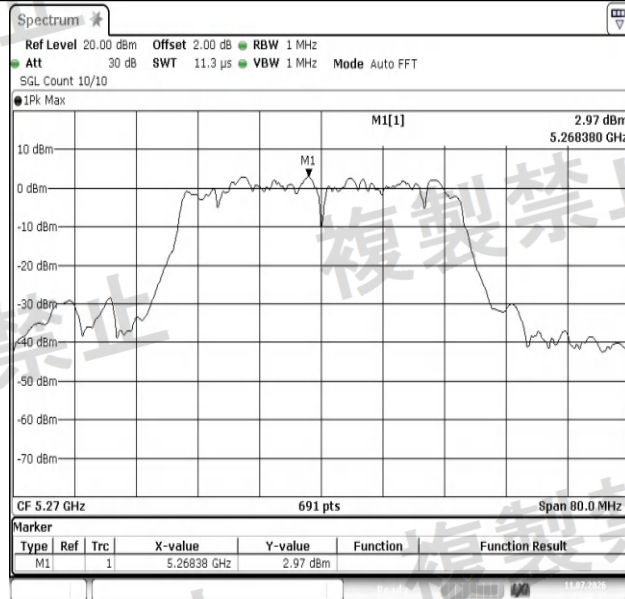



NTNV-11N40MIMO-Ant2-5270-PASS

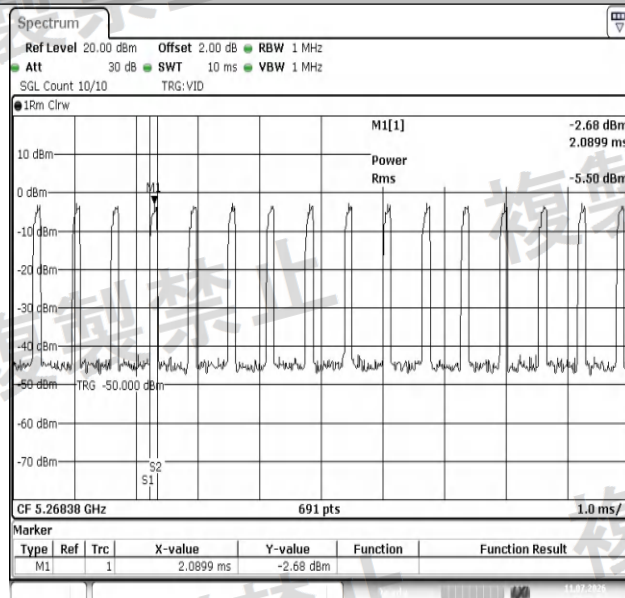

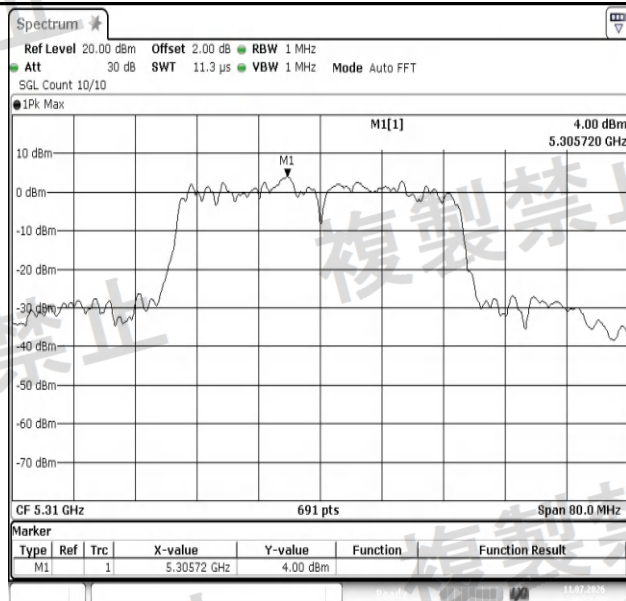



NTNV-11N40MIMO-Ant1-5310-PASS

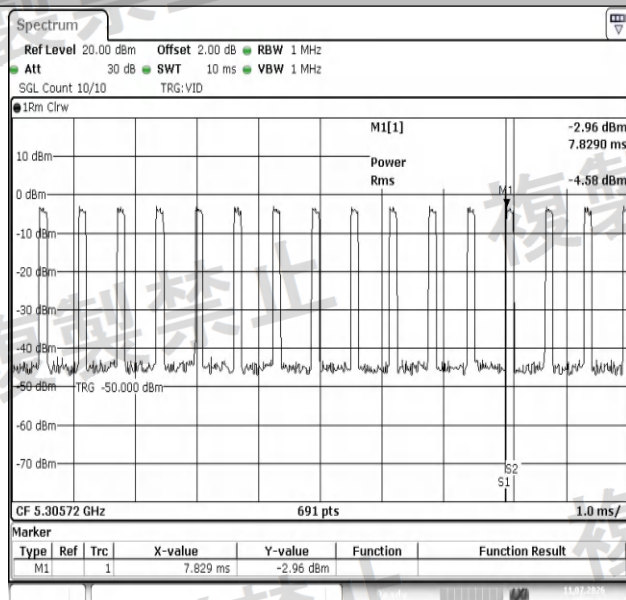

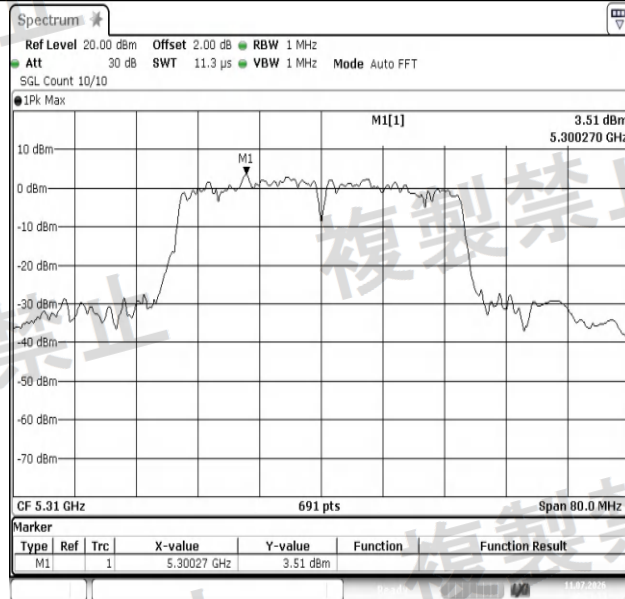



NTNV-11N40MIMO-Ant2-5310-PASS

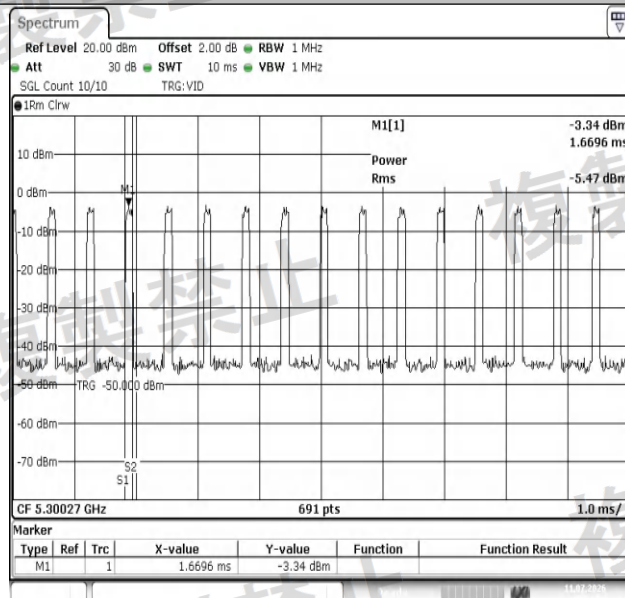

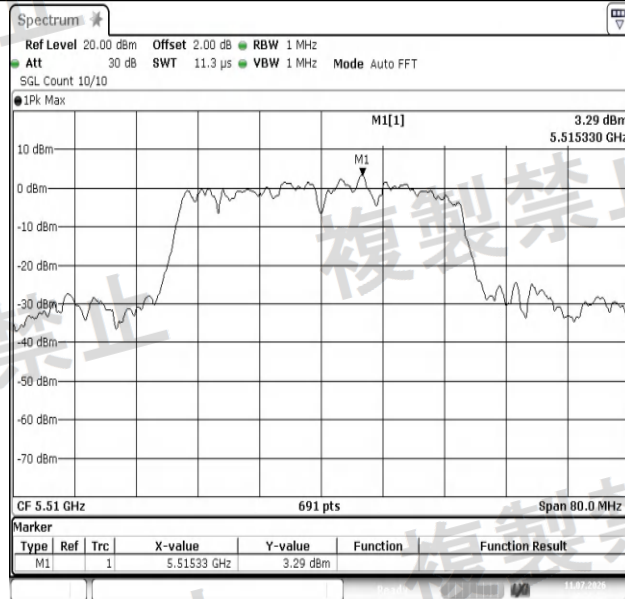



NTNV-11N40MIMO-Ant1-5510-PASS

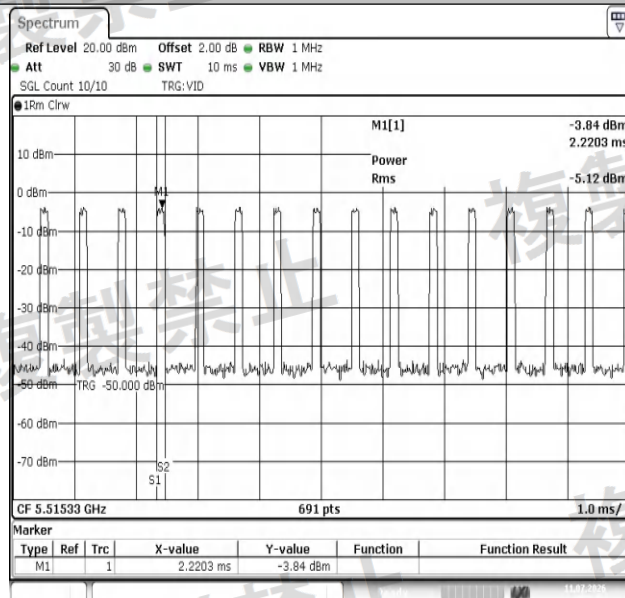

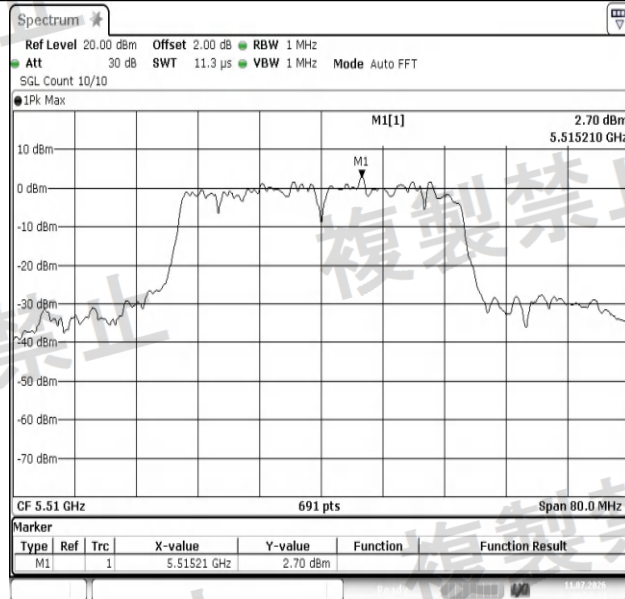



NTNV-11N40MIMO-Ant2-5510-PASS

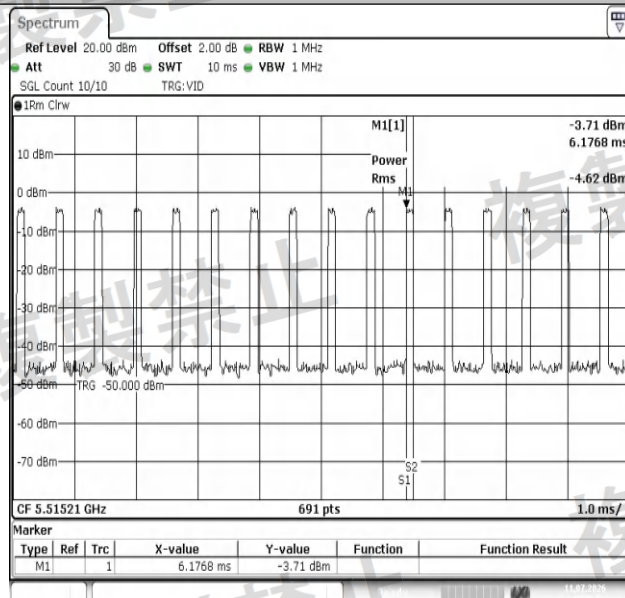

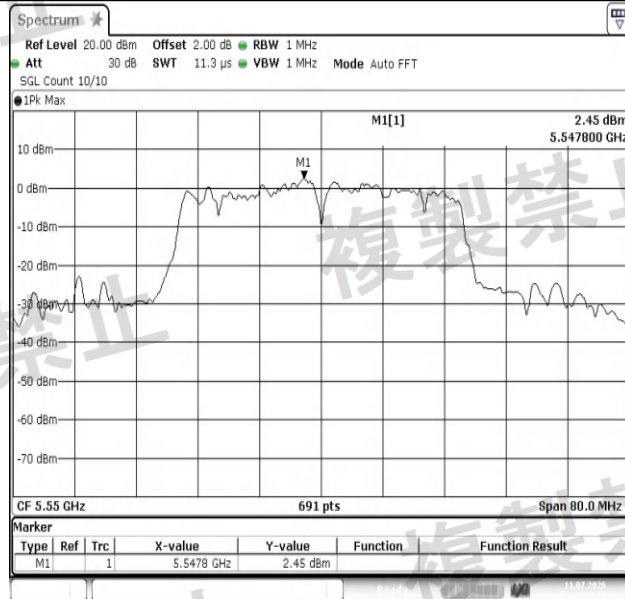



NTNV-11N40MIMO-Ant1-5550-PASS

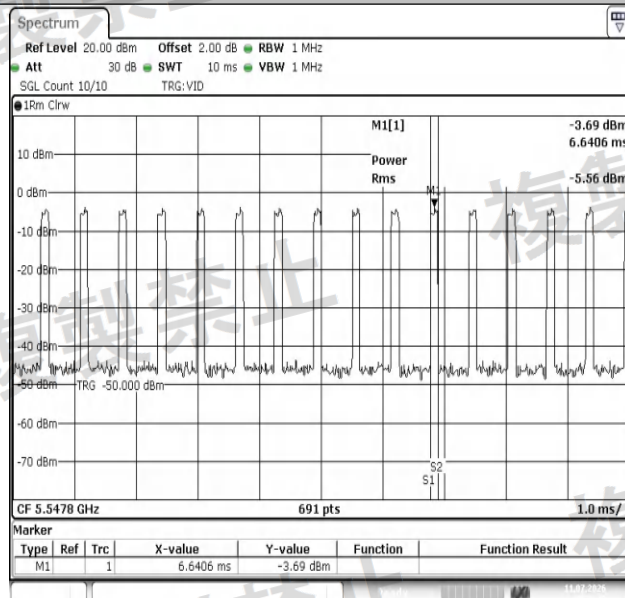

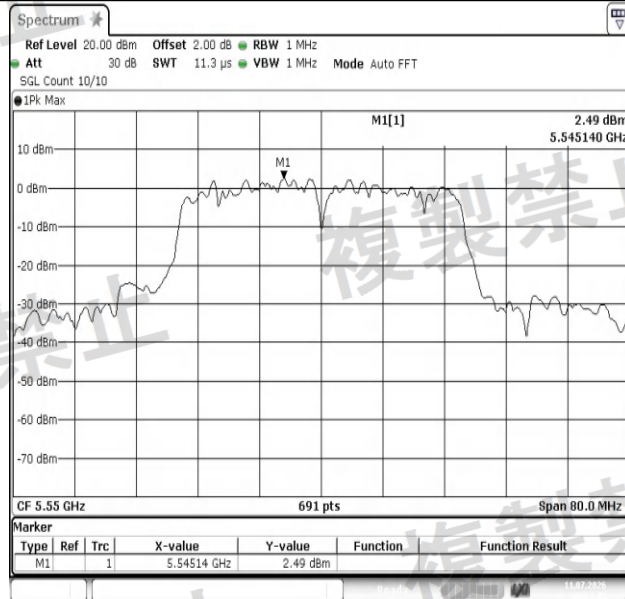



NTNV-11N40MIMO-Ant2-5550-PASS

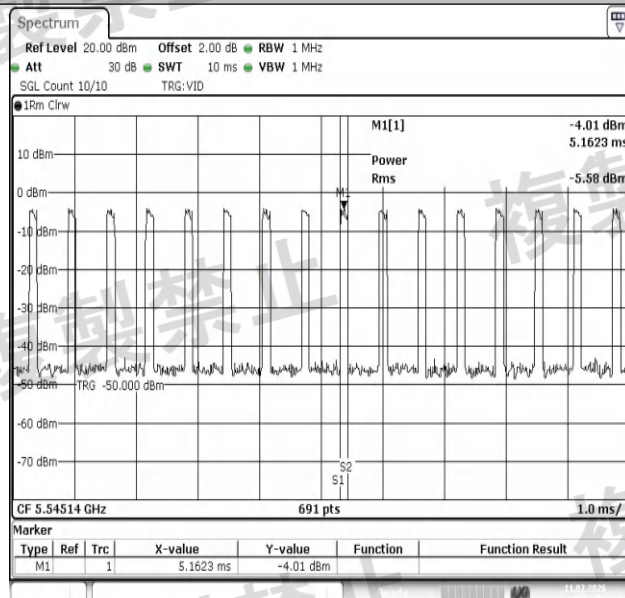

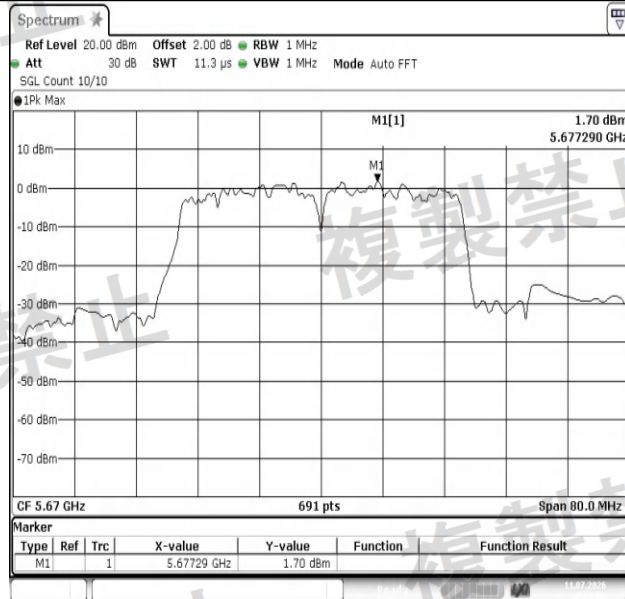



NTNV-11N40MIMO-Ant1-5670-PASS

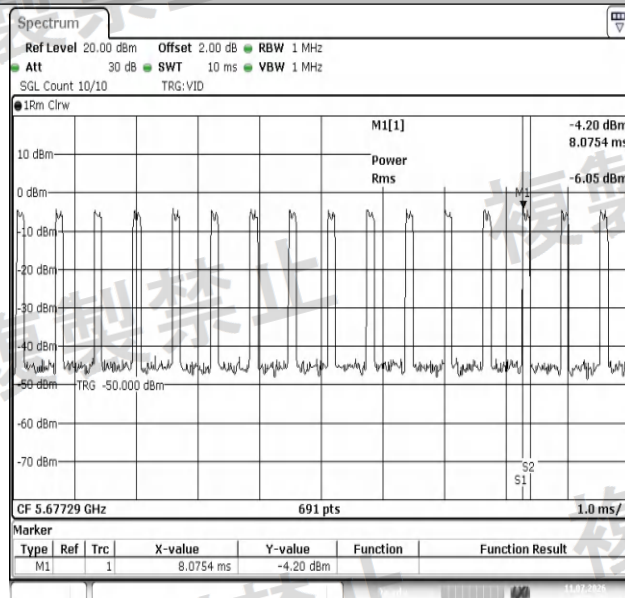

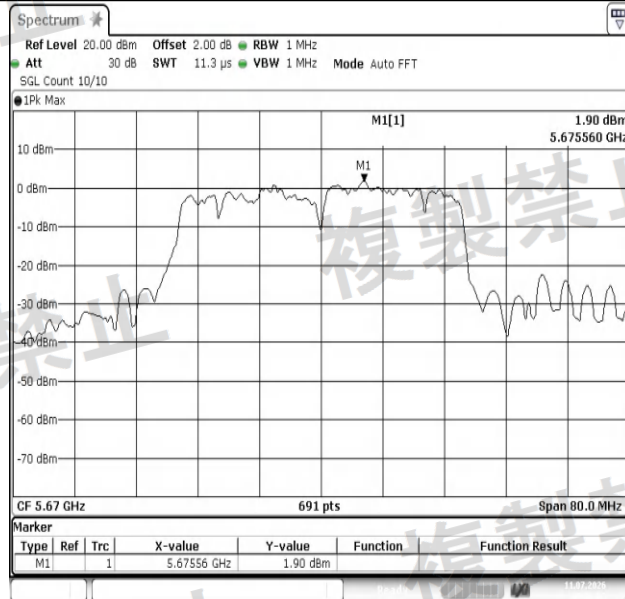



NTNV-11N40MIMO-Ant2-5670-PASS

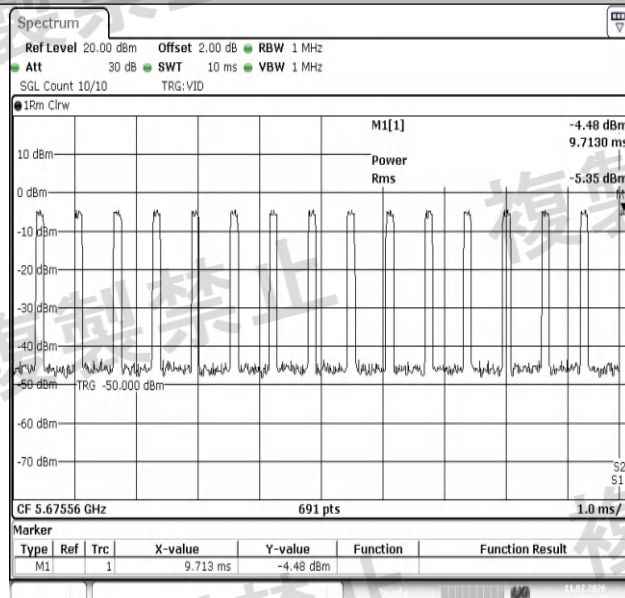

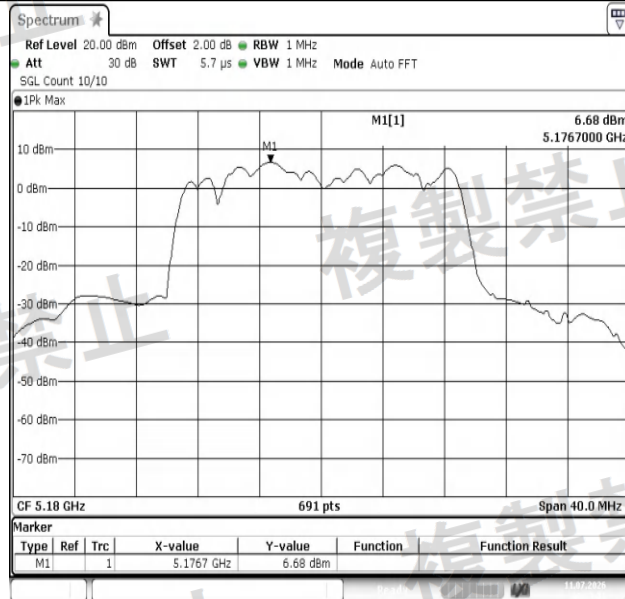

NTNV-11AC20MIMO-Ant1-5180-PASS

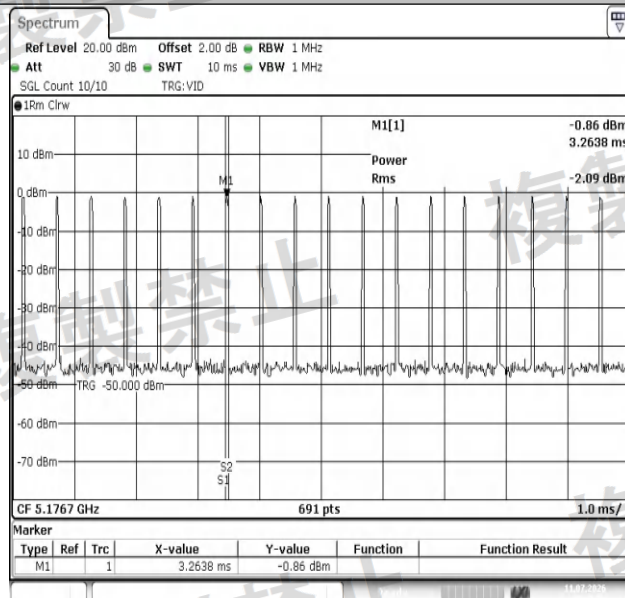

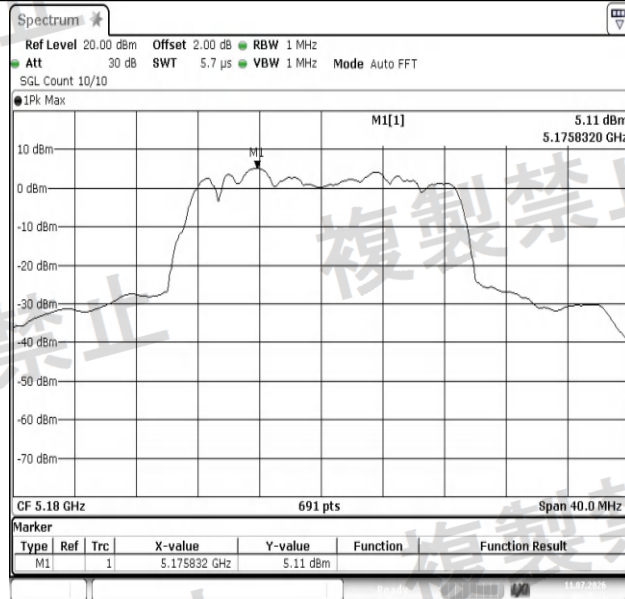

NTNV-11AC20MIMO-Ant2-5180-PASS

