

User Manual

Product Name: iFlash Camera Flash

Model Name: iT30Pro S

GODOX Photo Equipment Co.,Ltd.
4th Floor of Building 1, 1st to 4th Floor of Building 2, 4th Floor
of Building 3, 1st to 4th Floor of Building 4, Yaochuan
Industrial Zone, Tangwei Community, Fuhai Street, Bao'an
District, Shenzhen 518103, China

About This Instruction Manual

· This manual is based on the assumption that both the camera and camera flash's power switches are turned on.

· The following alert symbols are used in this manual:



The caution symbol indicates a warning to prevent shooting problem.



The note symbol gives supplemental information.

Important Safety Instructions

This product is a professional photographic equipment, to be operated by professional personnel only.

All transport protective materials and packaging on the product must be removed before use.

The following basic safety precautions must be followed when using this product:

1. Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in serious injury, damage to the product, or other property damage.

2. This product is a professional lighting fixture, children are prohibited from using it. Children must be closely supervised by adults when approaching the fixture, to prevent collisions with the fixture or unauthorized use that could cause personal injury.

3. This is not an ordinary lighting fixture and must not be used for general illumination. Anyone with a history of eye damage or sensitivity should avoid using this fixture or looking directly at it.

4. Extreme caution must be exercised when using it, do not touch high-temperature parts such as flash tubes to avoid burns.

5. Do not point the flash directly at the eyes (especially baby's eyes) under any circumstances, as this could impair vision in a

short time. Turn off immediately if discomfort occurs, stop using, and seek medical attention promptly.

6. If the flash tube is damaged, stop using it immediately and contact the manufacturer, service agent, or qualified repair personnel for a replacement to prevent accidents.

7. Do not use damaged equipment or accessories. Allow professional repair technicians to inspect and confirm normal operation before continuing use after repairs.

8. Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.

9. This device is not waterproof. Keep it dry and avoid immersing it in water or other liquids. It should be installed in a ventilated and dry location and avoid using in rainy, humid, dusty, or overheated environments. Do not place items above the device or allow liquids to flow into it to prevent danger.

10. Do not disassemble without authorization. If the product

malfunctions, it must be inspected and repaired by our company or authorized repair personnel.

11. Before storing the device, make sure it is completely cooled, then put it in the protective case or a ventilated dry location.

12. Do not place the device near alcohol, gasoline, or other flammable volatile solvents or gases such as methane and ethane.

13. Do not use or store this device in potentially explosive environments.

14. Do not use accessories not been approved by our company, as this may cause fire, electric shock or personal injury.

15. Clean gently with a dry cloth. Do not use a wet cloth as it may damage the device.

16. This product is powered by lithium batteries, who have limited lifespans and will gradually lose their charging capacities, which is irreversible. As the battery ages, the

product's battery life will decrease. The lifespan of lithium battery is estimated to be 2 to 3 years.

17.This instruction manual is based on rigorous testing. Changes in design and specifications are subject to change without notice. Check official website for latest instruction manual and product updates.

18.Confirm and comply with all relevant local laws and regulations when handling any batteries.

19.The warranty period for this device as a whole is one year. Consumables (such as batteries), adapters, power cords, and other accessories are not covered by the warranty.

20.Unauthorized repairs will void the warranty and will incur charges.

21.Failures from improper operation is not covered under warranty.

Foreword

Thank you for purchasing!

Godox's new camera flash iT30Pro redefines the portable flash experience with its compact size and excellent flash performance. With the advanced TTL auto flash technology, you can enjoy unprecedented shooting convenience even with frequent changes in lighting conditions. Its main features include:

Quick Operations: Colorful touch screen together with traditional buttons to achieve clear and easy operations.

TTL Compatibility: Perfectly supports TTL auto flash to simplify the shooting procedure.

Wireless Control Ability: 2.4G wireless flash triggering extends more shooting possibilities.

Professional Functions: Supports manual flash, Multi flash, high-speed sync, second-curtain sync, FEC, etc.


Effective Power Supply: 7.2V/900mAh lithium battery provides 560 flashes and 1.5s recycle time at full power.


Firmware Upgrade: Firmware is updated regularly to be compatible with the latest camera models and ensure optimal performance.

Camera Compatibility: iT30Pro S is compatible with Sony cameras.

Name of Parts

Flash Body

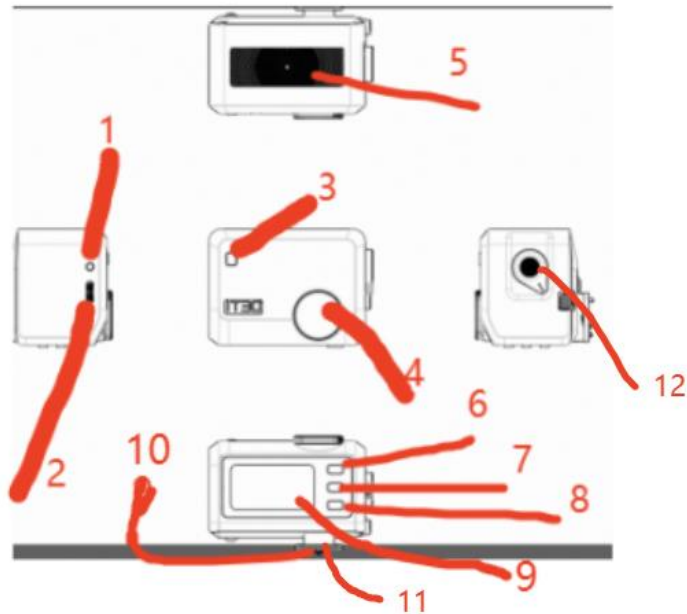


1. Sync Cord Jack
2. USB-C Port (for charging or firmware upgrade)
3. Photocell Sensor
4. Select Dial
5. Flash Tube
6. SET Button
7. MENU Button
8.  Button
9. Touch Screen
10. Hot Shoe
11. Attach/Detach Button

12. WT Switch

Touch Screen Panel

Menu Interface

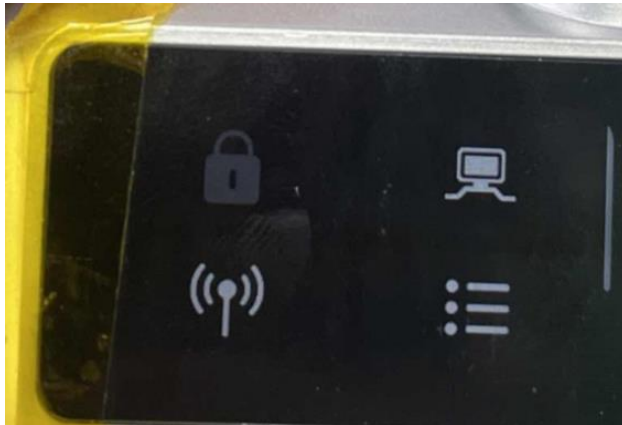

Wi-Off Mode Interface




Sender Mode Interface



Receiver Mode Interface



Settings Interface

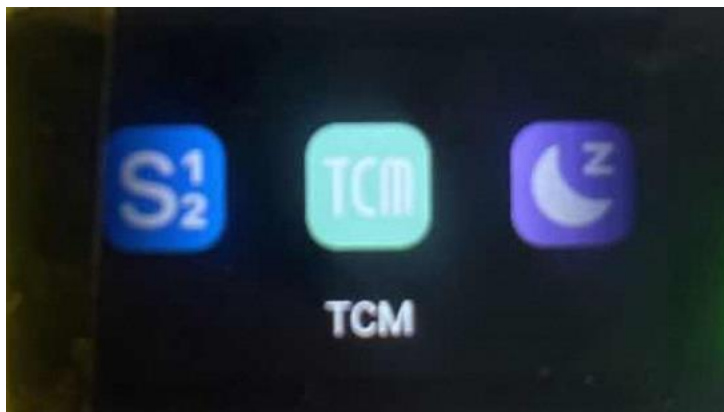

What's Inside

Flash Body × 1 USB-C Charging Cable × 1 Storage Bag × 1

Instruction Manual ×1

Installing/Disassembling the Camera Flash

Press and hold the attach/detach button, insert into the camera hot shoe base parallelly.

Press and hold the attach/detach button, take off the flash from the camera hot shoe base parallelly.

Battery Level Indication

Check the battery level indication on the LCD panel to see the remaining battery level.

Battery Level Indication	Meaning
3 grids	Full
2 grids	Middle
1 grid	Low
Blank grid	Lower battery, please recharge it.
Blinking	The battery level is going to be used out, and the flash is not functional in this status. Note: Please recharge the battery as soon as possible (within 10 days). Then, the battery can be used or be placed for long period.

WT Switch

W Mode: The wide-angle diffuser is turned on in W mode, the flash range is extended, and a more uniform flash at a closer distance.


T Mode: When switching to T mode, a relatively high light intensity can be maintained over a long distance compared to W mode to a certain extent.



Power Switch

Power on: Press and hold the  button until the icon appears, then slide right on the screen or rotate right the select dial to unlock.

Power Off: Press and hold the  button until the screen blacks out.

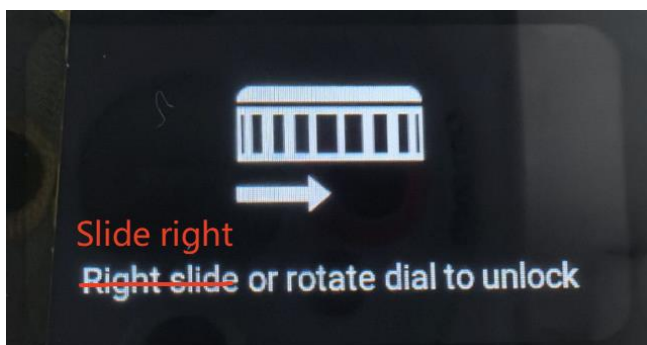

Wi-Off Mode

Touch Screen: Slide the screen top-down to enter menu interface, click the

wi-off/sender/receiver icon to choose < > and enter wi-off mode.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the wi-off/sender/receiver icon, then press the SET button to choose < > and enter wi-off mode.



TTL: TTL Auto Flash


In TTL mode, the camera's metering system detects the flash reflected from the subject and automatically adjusts the flash output so that the subject and background are evenly exposed.

Touch Screen: Slide the screen top-down to enter menu interface, click the M/Multi/TTL icon to choose <TTL> and enter TTL auto flash mode. Press the – or + icon to adjust the FEC amount among ± 3 with $\pm 1/3$ increment each step, or directly pull the progress bar to achieve quick adjustment.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the M/Multi/TTL icon, then press the SET button to choose <TTL> and enter TTL auto flash mode. Rotate the select dial to adjust the FEC amount among ± 3 with $\pm 1/3$ increment each step, quick adjustment is also available by fast rotation.



- When the shutter is fully pressed, the flash will fire a pre-flash that the camera will use to calculate exposure and flash output the instant before the photo is taken.

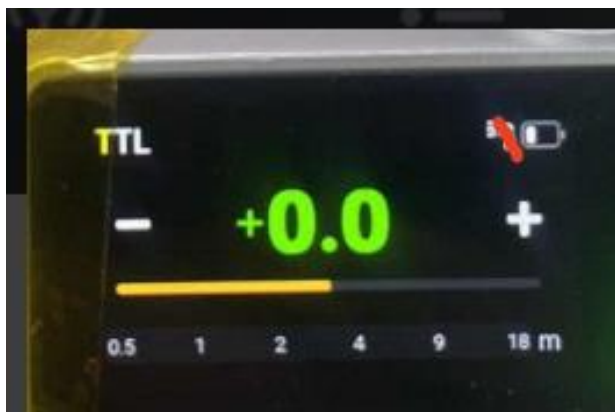

M: Manual Flash

The flash output is adjustable from 1/256 to 1/1 or from 2.0 to 10 with 1/3

increment each step. To obtain a correct flash exposure, use a handheld flash meter to determine the required flash output.



Touch Screen: Slide the screen top-down to enter menu interface, click the M/Multi/TTL icon to choose <M> and enter M manual flash mode. Press the – or + icon to adjust the power with $\pm 1/3$ increment each step, or directly pull the progress bar to achieve quick adjustment.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the M/Multi/TTL icon, then press the SET button to choose <M> and enter M manual flash mode. Rotate the select dial to adjust the power with $\pm 1/3$ increment each step, quick adjustment is also available by fast rotation.

S1 Photocell Unit Setting

In M manual flash mode, this flash can function as an optic S1 secondary flash with optic sensor. With this function, the flash will fire synchronously

when the main flash fires, the same effect as that by the use of wireless triggers. This helps create multiple lighting effects.

S2 Photocell Unit Setting

In M manual flash mode, this flash can also function as an optic S2 secondary flash with optic sensor. This is useful when cameras have pre-flash function. With this function, the flash will ignore a single “pre-flash” from the main flash and will only fire in response to the second, actual flash from the main flash.

1. S1 and S2 photocell triggering is only available in M manual flash mode.
2. Enter setting interface to switch between S1/S2 photocell or turn off this function.

Multi: Stroboscopic Flash

With slow shutter speed in multi flash mode, a rapid series of flashes is fired. It can be used to capture multiple images of a moving subject in a single photograph. You can set the flash frequency (number of flashes per sec. expressed as Hz), the number of flashes, and the flash output.


Flash output range: 1/128-1/4

Number of flashes: 1-100

Flash frequency: 1-100

Touch Screen: Slide the screen top-down to enter menu interface, click the M/Multi/TTL icon to choose <Multi> and enter multi flash mode. Press the – or + icon can adjust the flash power, press the upper number icon to enter the number of flashes and flash frequency adjustment interface. Slide the number in front of “Times” can adjust the number of flashes, slide number in front of “Frequency” can adjust the flash frequency.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the M/Multi/TTL icon, then press the SET button to choose <Multi> and enter multi flash mode. Directly rotate the select dial can adjust the flash power. Press the SET button to choose the upper icons of number of flashes or flash frequency, then rotate the select dial can adjust the respective parameters. Quick adjustment is also available by fast rotation.

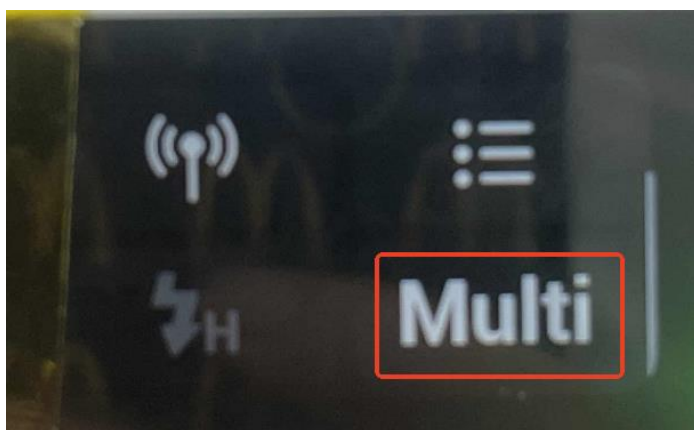



Calculating the Shutter Speed

During multi flash, the shutter remains open until the firing stops. Use the formula below to calculate the shutter speed and set it with the camera.

$$\text{Number of Flashes} \div \text{Flash Frequency} = \text{Shutter Speed}$$

For example, if the number of flashes is 10 and the flash frequency is 5Hz, the shutter speed should be at least 2 seconds.

To avoid overheating and deteriorating the flash head, do not use multi flash more than 10 times in succession. After 10 times, allow the camera flash to rest for at least 15 minutes. If you try to use the multi flash more than 10 times in succession, the firing might stop automatically to protect the flash head. If this happens, allow at least 15 minutes' rest for the camera flash.

1. Multi flash is most effective with a highly reflective subject against a dark background.
2. Using a tripod and TTL flash trigger XPROII is recommended.
3. A flash output of 1/1, 1/2 and 1/256 cannot be set for multi flash.
4. Multi flash can also be used with "buLb" mode.
5. Multi flash mode cannot be set in high-speed sync mode.

Maximum Time of Consecutive Flashes

Flash Frequency (Hz) Number of Flashes Flash Output	1	2	3	4	5	6-7	8-9
1/4	8	6	4	3	3	2	2
1/8	14	14	12	10	8	6	5
1/16	30	30	30	20	20	20	10
1/32	60	60	60	50	50	40	30
1/64	90	90	90	80	80	70	60
1/128	100	100	100	100	100	90	80

Flash Frequency (Hz) Number of Flashes	10	11	12-14	15-19	20-50	60-100
--	----	----	-------	-------	-------	--------

Flash Output						
1/4	2	2	2	2	2	2
1/8	4	4	4	4	4	4
1/16	10	8	8	8	8	8
1/32	20	20	20	18	16	12
1/64	50	40	40	35	30	20
1/128	70	70	60	50	40	40



Sender Mode

Touch Screen: Slide the screen top-down to enter menu interface, click the

wi-off/sender/receiver icon to choose  and enter sender mode.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the wi-off/sender/receiver icon, then press

the SET button to choose  and enter sender mode.



Gr Interface


Groups: M, A, B, C, D

Flash Modes: TTL auto flash mode/M manual flash mode

Touch Screen: Slide the screen top-down to enter menu interface, click the Gr/Multi icon to choose <Gr>. Slide the screen up to enter Gr interface, then slide up to check more groups. Press and hold the group box to switch among M (manual) flash, TTL auto flash and OFF. If the value inside is in white color, this group is in M (manual) flash mode and the value is flash power. If the value inside is in green color, this group is in TTL auto flash mode and the value is flash compensation amount. The flash power and flash compensation amount are adjustable by clicking the – or + icon, or quickly adjustable by pulling the progress bar. OFF inside the group box means this group is turned off.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the Gr/Multi icon, then press the SET button

to choose <Gr>. Press the MENU to enter Gr interface, rotate the select dial to check more groups. Rotate the select dial to choose a group, press and hold the SET button to switch among M (manual) flash, TTL auto flash and OFF. Then press the SET button to enter the group settings, and rotate the select dial to adjust the flash power and flash compensation amount.

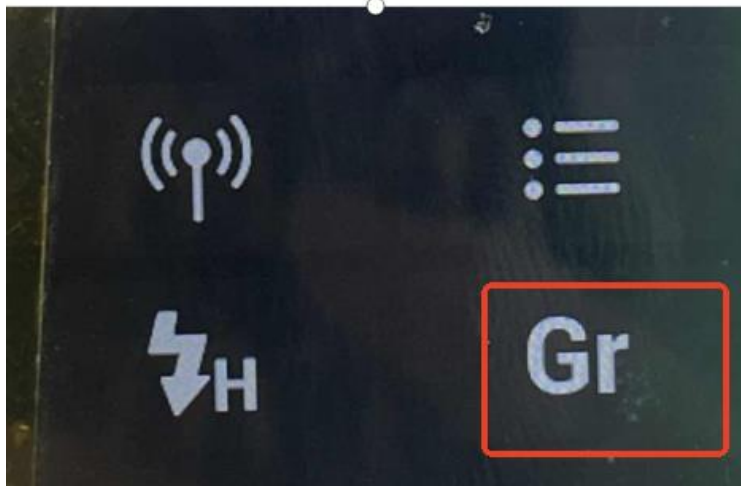

Multi: Stroboscopic Flash

Touch Screen: Slide the screen top-down to enter menu interface, click the Gr/Multi icon to choose <Multi>, then slide the screen up to enter Multi interface. Press the left group icon can choose among M, A, B and C groups, or turn off the group. Press the upper number icon to enter the number of

flashes and flash frequency adjustment interface, slide the number in front of “Times” can adjust the number of flashes, slide number in front of “Frequency” can adjust the flash frequency. Press the – or + icon can adjust the flash power.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the Gr/Multi icon, then press the SET button to choose <Multi>. Press the MENU button to enter Multi interface, press the SET button to enter parameters adjustment, rotate the select dial to choose among number of flashes, flash frequency, group and flash power.

1. Select “Times” or “Frequency”, press the SET button then rotate the select dial to adjust number of flashes or flash frequency, finally press the SET button to exit.

2. Select flash power, press the SET button then rotate the select dial to adjust the flash power.

3. Select group, press the SET button then rotate the select dial to choose among M, A, B and C groups, or turn off the group, finally press the SET button to exit.




The details of which please refer to the section Wi-Off mode → multi: stroboscopic flash above.



Receiver Mode

Touch Screen: Slide the screen top-down to enter menu interface, click the wi-off/sender/receiver icon to choose < > and enter receiver mode.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the wi-off/sender/receiver icon, then press the SET button to choose < > and enter receiver mode.

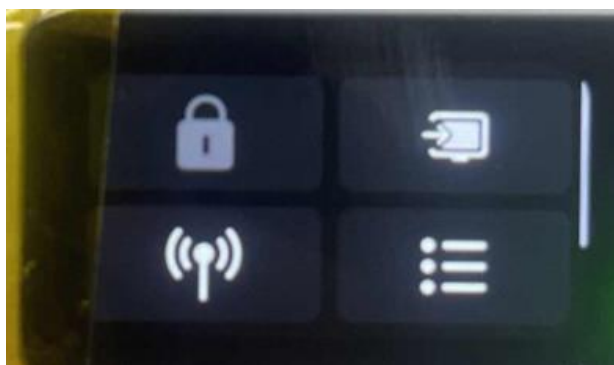

TTL: TTL Auto Flash

Touch Screen: Slide the screen top-down to enter menu interface, click the M/Multi/TTL icon to choose <TTL> and enter TTL auto flash mode. Press

the group icon to choose among A, B, C and D groups.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the M/Multi/TTL icon, then press the SET button to choose <TTL> and enter TTL auto flash mode. Press the SET button to choose group icon, then rotate the select dial to choose among A, B, C and D groups.



M: Manual Flash

Touch Screen: Slide the screen top-down to enter menu interface, click the M/Multi/TTL icon to choose <M> and enter M manual flash mode. Press the group icon to choose among A, B, C and D groups. Press the – or + icon to adjust the power, or directly pull the progress bar to achieve quick adjustment.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the M/Multi/TTL icon, then press the SET

button to choose <M> and enter M manual flash mode. Press the SET button to choose group icon, then rotate the select dial to choose among A, B, C and D groups. Directly rotate the select dial to adjust the power, quick adjustment is also available by fast rotation.



Multi: Stroboscopic Flash

Touch Screen: Slide the screen top-down to enter menu interface, click the M/Multi/TTL icon to choose <Multi> and enter Multi interface. Press the left group icon can choose among A, B, C and D groups. Press the upper number icon to enter the number of flashes and flash frequency adjustment interface, slide the number in front of “Times” can adjust the number of flashes, slide number in front of “Frequency” can adjust the flash frequency. Press the – or + icon can adjust the flash power.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the M/Multi/TTL icon, then press the SET button to choose <Multi>. Press the MENU button to enter Multi interface, press the SET button to enter parameters adjustment, rotate the select dial

to choose among number of flashes, flash frequency, group and flash power.

1. Select “Times” or “Frequency”, press the SET button then rotate the select dial to adjust number of flashes or flash frequency, finally press the SET button to exit.

2. Select flash power, press the SET button then rotate the select dial to adjust the flash power.

3. Select group, press the SET button then rotate the select dial to choose among A, B C and D groups, finally press the SET button to exit.

The details of which please refer to the section Wi-Off mode → multi: stroboscopic flash above.

High-speed Sync

High speed sync (FP flash) enables the flash to synchronize with all camera shutter speeds. This is convenient when you want to use aperture priority for fill-flash portraits.

Touch Screen: Slide the screen top-down to enter menu interface, click the

<  > icon to turn on or off high-speed sync.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the <  > icon, then press the SET button to turn on or off high-speed sync.



Second-curtain Sync

With a slow shutter speed and second-curtain sync, you can create a light train following the subject. The flash fires right before the shutter closes.


Choose REAR flash mode in the settings of Sony camera for iT30Pro S.

Screen Lock

Touch Screen: Slide the screen top-down to enter menu interface, click the <  > icon to turn on the screen lock function. Press and hold the screen for 2s to unlock.

Buttons and Select Dial: Press the MENU button to enter menu interface,


rotate the select dial to choose the <  > icon, then press the SET button to turn on the screen lock function. Press and hold the SET button for 2s to unlock.

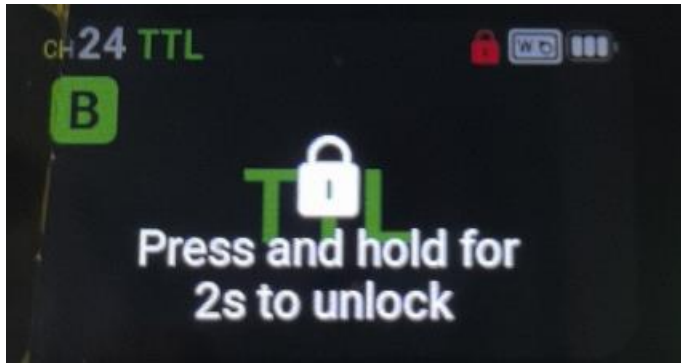

Wireless Settings

Touch Screen: Slide the screen top-down to enter menu interface, click the <  > icon to enter wireless settings.

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the <  > icon, then press the SET button to enter wireless settings.

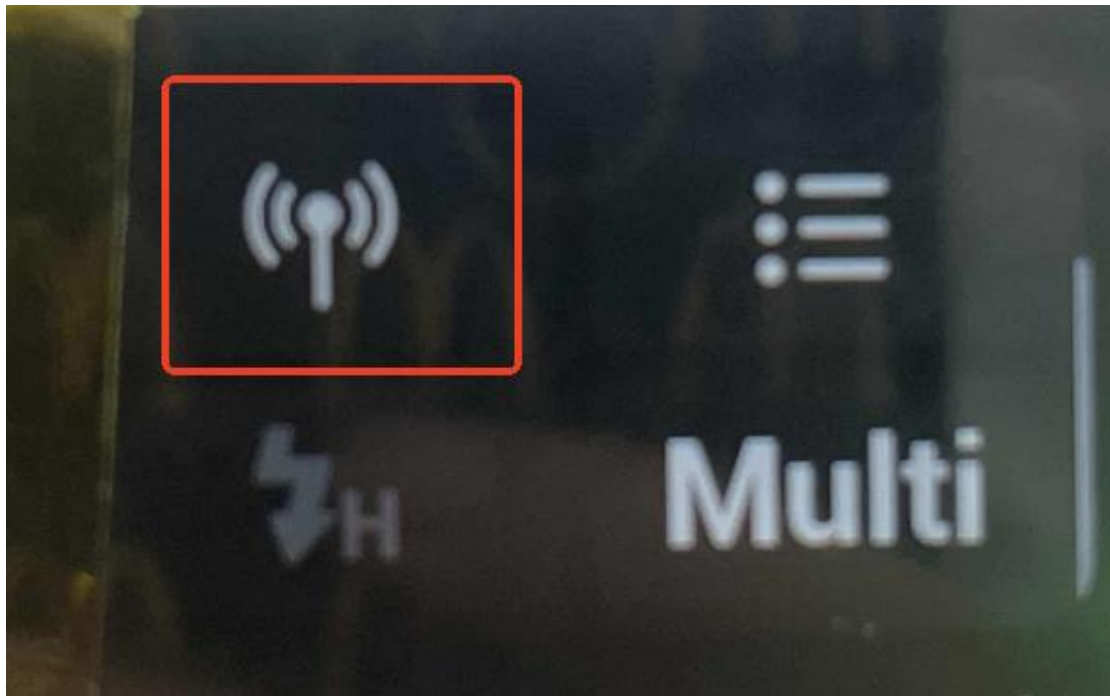


Channel Settings

If there are other wireless flash systems nearby, you can change the wireless channels to prevent signal interference. The wireless channels (01-32) of the sender unit and the receiver unit(s) must be set to the same.

Touch Screen: Slide the “Channel” box to choose your desired channel.

Buttons and Select Dial: Rotate the select dial to choose “Channel” box, then press the SET button to enter channel settings, rotate the select dial and press the SET button to choose your desired channel, finally press the SET button to exit.

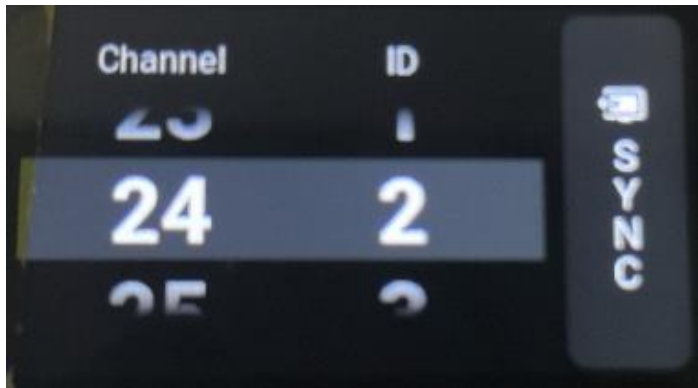


ID Settings

Change the wireless ID to avoid interference for it can only be triggered after the wireless IDs (OFF/01-99) of the sender unit and the receiver unit are set to the same.

Touch Screen: Slide the “ID” box to turn off the ID, or choose your desired ID.

Buttons and Select Dial: Rotate the select dial to choose “ID” box, then press the SET button to enter ID settings, rotate the select dial and press the SET button to choose your desired ID, finally press the set button to exit.

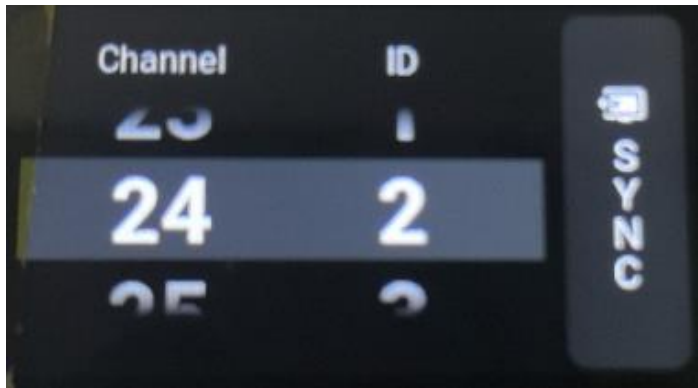

Wireless Sync

The wireless sync function helps the sender and receiver to quickly set the same channel and ID.

Receiver Wireless Sync

Preconditions:

1. Set iT30 Pro to sender mode, details of which please refer to the sender mode above.
2. Assume retro camera flash Lux Master as the receiver.

Touch Screen: Click the “SYNC” icon on both iT30 Pro and Lux Master.

Buttons and Select Dial: Rotate the select dial on iT30 Pro to choose “SYNC” icon, then press the SET button. Rotate the select dial on Lux Master to choose “SYNC” icon, then press the SET button.

Sender Wireless Sync


Preconditions:

1. Set iT30 Pro to receiver mode, details of which please refer to the receiver mode above.
2. Assume flash trigger X3 as the sender.

Touch Screen: Click the “SYNC” icon on both iT30 Pro and X3.

Buttons and Select Dial: Rotate the select dial on iT30 Pro to choose “SYNC” icon, then press the SET button. Rotate the select dial on X3 to choose “SYNC” icon, then press the select dial.

When the sender unit and receiver unit are both iT30 Pro, wireless sync is also available.

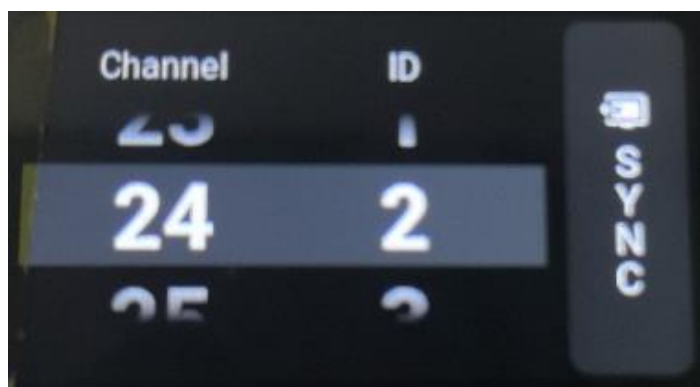

C.Fn Settings

Touch Screen: Slide the screen top-down to enter menu interface, click the

<

Buttons and Select Dial: Press the MENU button to enter menu interface, rotate the select dial to choose the <

Due to the difference in the menu order of different models, the specific menu ordering is subject to the actual product models, the following only explains the menu functions.

Icon	Function	Options	Description
	Photocell	S1	The flash will fire synchronously when the main flash fires, only available in M manual flash mode.
		S2	The flash will ignore a single “pre-flash” from the main flash and will only fire in response to the second, actual flash from the main flash, only available in M manual flash mode.
	TCM	On	Flash value of TTL mode can be converted to the power value of M mode

		Off	Turn off this function
	Standby	On	Automatically standby after the set time (90 seconds) of idle use.
		Off	Do not automatically standby after the set time (90 seconds) of idle use.
	Auto Off	Off	Turn off auto power off function
		30 min	The flash will automatically shut down after 30 minutes of idle use.
		60 min	The flash will automatically shut down after 60 minutes of idle use.
		90 min	The flash will automatically shut down after 60 minutes of idle use.
	Screen Standby	30 sec	Screen standby after 30 seconds of idle use.
		1 min	Screen standby after 1 minute of idle use.
		2 min	Screen standby after 2 minutes of idle use.
		3 min	Screen standby after 3 minutes of idle use.

	Screen Brightness	/	Pull the progress bar to adjust the screen brightness
	New Agreement	On	The agreement is on by default.
		Off	Turn off when the camera is not compatible with the flash trigger.
	Language	Simplifi ed Chinese	Simplified Chinese system
		English	English system
	Factory Reset	Apply	Factory reset
		Cancel	Cancel factory reset
	Device Info	/	Display the device model and firmware version, download the latest firmware from the official website for update.

2.4G Wireless Transmission

This chapter mainly explains how to perform wireless multiple shooting with 2.4G wireless transmission by using iT30 Pro as the sender unit (refer to as “sender unit” below) and Godox flashes with 2.4G wireless receiving


function such as iT30 Pro, AD100PRO or V860III as the receiver unit (refer to as “receiver unit” below).

The channel, group, and ID of the sender and receiver units should be set to the same, details of which please refer to the wireless settings section above.

TTL: Wireless Multiple Flash Shooting in TTL Auto Flash Mode

Set the flash groups (A, B and C) of iT30 Pro (sender unit) as <TTL>, no need to set the receiver units and they will perform wireless multiple flash shooting in auto flash. Set the FEB value on sender unit, no need to set the receiver units and they will follow the sender.

Auto Flash Shooting with Multiple Receiver Units

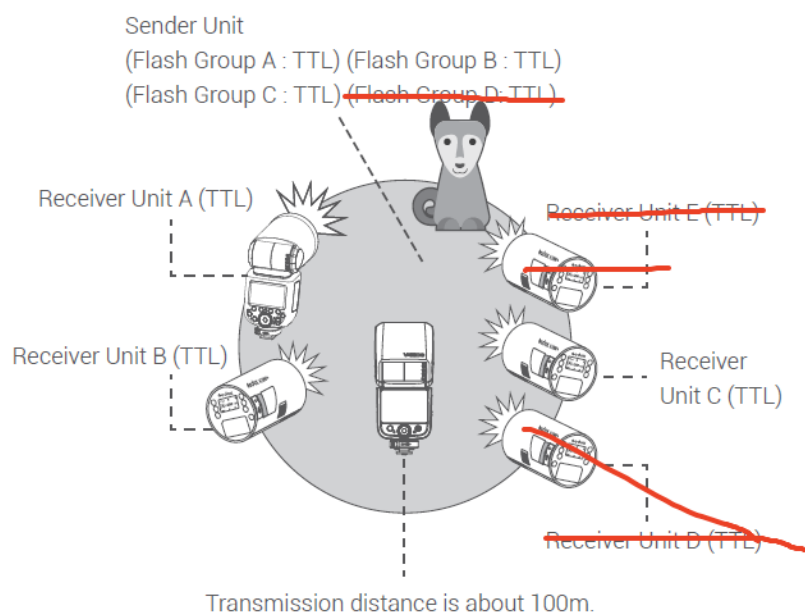

M: Wireless Multiple Flash Shooting in M Manual Flash Mode

Set the flash groups (A, B and C) of iT30 Pro (sender unit) as either the same or different flash output power, no need to set the receiver units and they will perform wireless multiple flash shooting by following the sender.


Manual Flash Shooting with Multiple Receiver Units

Sender Unit

(Flash Group A: M Manual Flash 1/8) (Flash Group B: M Manual Flash 1/8)


(Flash Group C: M Manual Flash 1/8) ~~(Flash Group D: M Manual Flash 1/8)~~

~~(Flash Group E: M Manual Flash 1/1)~~

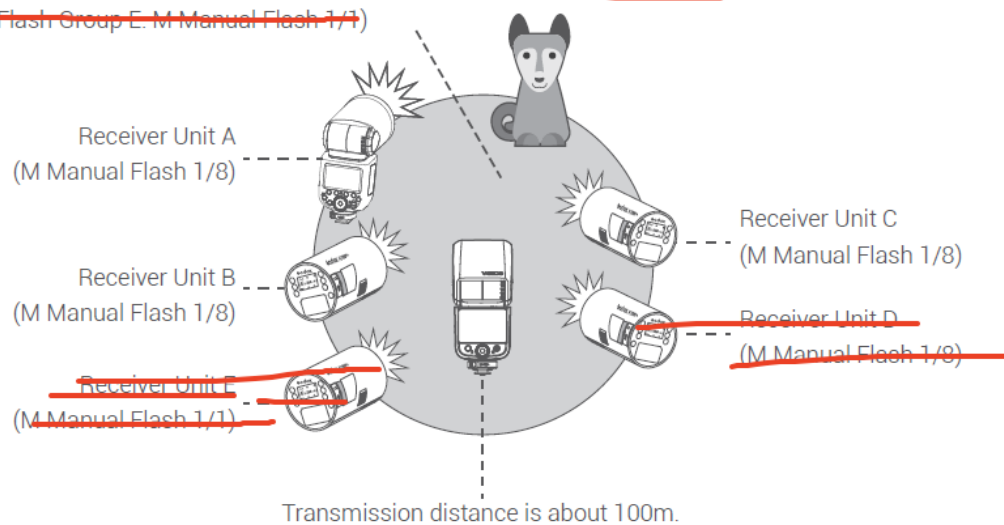


Wireless Multiple Flash Shooting in Different Flash Modes

Set the flash groups (A, B and C) of iT30 Pro (sender unit) as the different flash modes, no need to set the receiver units and they will perform wireless multiple flash shooting in different flash modes.

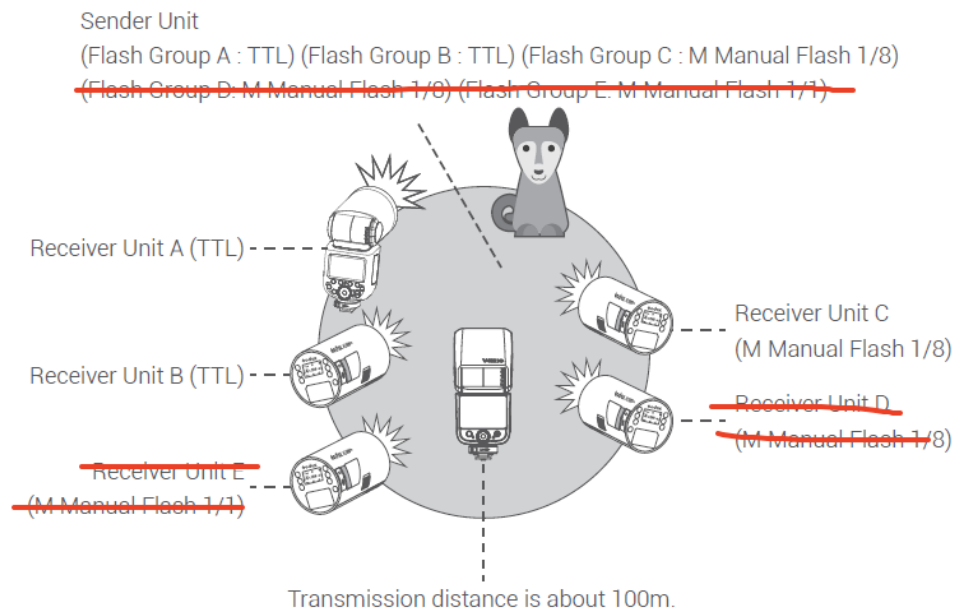

Wireless Multiple Flash Shooting in Multi Flash Mode

Set the iT30 Pro (sender unit) to multi flash mode, no need to set the receiver units (A, B and C) and they will perform wireless multiple flash shooting with the sender unit. Set the flash output value, number of flashes and flash frequency on sender unit, no need to set the receiver units and they will follow the sender. Each sender unit can set up to three groups of multi flashes.

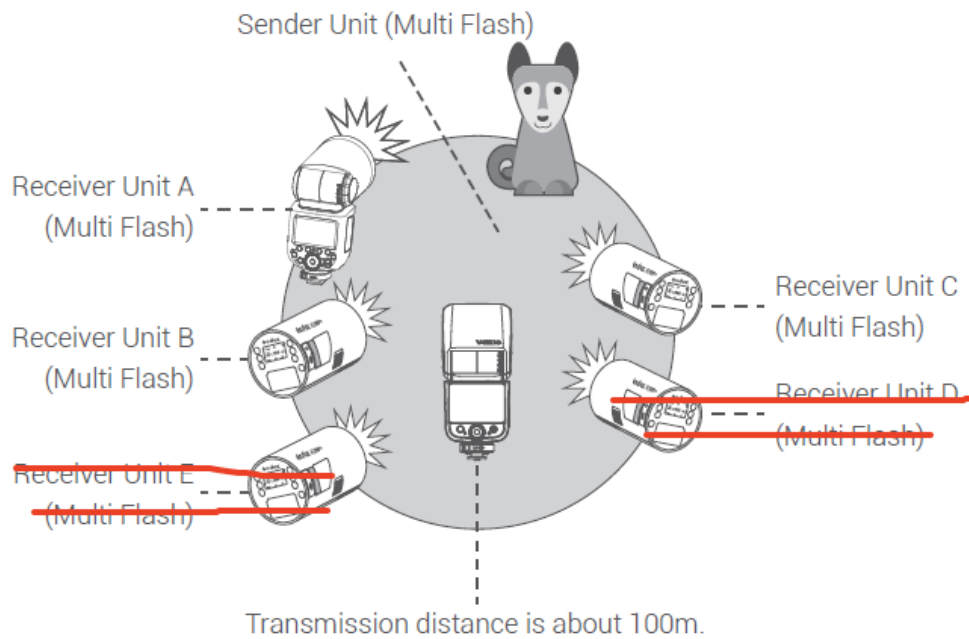

Sync Triggering

The sync cord jack is a $\Phi 2.5\text{mm}$ plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.

Over-Temperature Protection

- To avoid overheating and deteriorating the flash head, do not fire more than the mentioned below continuous flashes in fast succession at 1/1 full power, or fire more than 45 continuous flashes in fast succession at 1/1 full power in HSS mode.
- If you fire more than 45 continuous flashes and then fire more flashes in short intervals, the inner over-temperature protection function may be activated and make the recycle time over 10 seconds. If this occurs, allow

a rest time of about 10 minutes, and the flash unit will then return to normal.

Number of flashes that will activate over-temperature protection:

Power Output Level	Number of Flashes
1/1	
1/2	
1/4	
1/8	
1/16	
1/32	
1/64	
1/128	
1/256	

Number of flashes that will activate over-temperature protection in HSS mode:

Power Output Level	Number of Flashes
1/1	
1/2	
1/4	
1/8	

1/16	
1/32	
1/64	
1/128	
1/256	

The Reason & Solution of Not Triggering in Godox 2.4G Wireless

1. Disturbed by the 2.4G signal in outer environment (e.g. wireless base station, 2.4G wifi router, Bluetooth, etc.)

→ To adjust the channel CH setting on the flash trigger (add 10+ channels) and use the channel which is not disturbed. Or turn off the other 2.4G equipment in working.

2. Please make sure that whether the flash has finished its recycle or caught up with the continuous shooting speed or not (the flash ready indicator is lightened) and the flash is not under the state of over-heat protection or other abnormal situations.

→ Please downgrade the flash power output. If the flash is in

TTL mode, please try to change it to M mode (a pre-flash is needed in TTL mode).

3. Whether the distance between the flash trigger and the flash is too close or not (< 0.5m).

→ Please turn on the “close distance wireless mode” :

X1 Series: Press and hold the triggering button then turn on the device until the indicator blinks twice.

Xpro and X2T Series: Set the C.Fn-DIST to 0-30m.

X3 Series: Set the triggering distance to 0-30m.

4. Whether the flash trigger and the receiver end equipment are in the low battery states or not

→ Please replace the battery or charge it in time.

5. The flash trigger's firmware is an older version

→ Please upgrade the firmware of the flash trigger referring to the instruction manual for specific firmware upgrades.

6. The camera's firmware is an older version

→ Please upgrade the firmware of the camera referring to its instruction manual.

Technical Data

Model	iT30Pro S
Input	
Guide NO.	
Flash Duration (t0.1)	1/300s - 1/20000s
Exposure Control	
Exposure Control System	TTL auto flash and manual flash
Flash Exposure Compensation (FEC)	±3 steps with 1/3 increment each step
Sync Mode	High-speed sync (up to 1/8000 seconds), first-curtain sync, and second-curtain sync
Multi Flash	Provided (up to 100 times, 100Hz)
Wireless Flash (Radio 2.4G Transmission)	
Wireless Function	Sender, Receiver

Sender Groups	M, A, B, C
Receiver Groups	A, B, C, D
Transmission Range (approx.)	100m
Channels	32: 01~32
ID	OFF/01~99
Power Supply	
Lithium Battery	7.4V900mAh
Recycle Time	Approx. 1.5s
Number of Flashes (1/1 step)	Approx. 560
Power Saving	Provide standby and auto off functions
Sync Triggering Mode	Hot shoe, 2.5mm sync cord
Dimension	
W x H x D	
Net Weight Without Battery	
Net Weight With Battery	

Specifications and data may subject to changes without notice.

Troubleshooting

If there is a problem, refer to this troubleshooting guide.

The camera flash does not fire.

- Attach the camera's mounting foot securely to the camera.
- If the electrical contacts of the camera flash and camera are dirty, clean the contacts with dry cloth.
- If the <  > or <  H > is not displayed in the view finder of camera. Wait until the flash is fully recycled and the flash ready indicator lights up.
- If the flash ready indicator does not light up after a long wait, check whether the battery power is enough. If the battery power is low, please replace or charge the battery immediately.

The power turns off by itself.

- Setting as wi-off/sender mode when the standby function is on, the flash will enter sleep mode automatically after 90 seconds of idle use. Press the camera shutter halfway or press any button will wake up the flash unit.
- Setting as wi-off/sender mode when the standby function is off while the auto off function is on, the flash will automatically shut down after 60 minutes (or 30 minutes, 90 minutes) of idle use. Restart the flash unit.
- Setting as receiver mode when the auto off function is on, the flash will automatically shut down after 60 minutes (or 30 minutes, 90 minutes) of

idle use. Restart the flash unit.

The flash exposure is underexposed or overexposed.

- You used high-speed sync. With high-speed sync, the effective flash range will be shorter. Make sure the subject is within the effective flash range displayed.
- The subject appears too dark or too bright. Set the proper FEC value.

Firmware Upgrade

- This product supports firmware upgrade through the USB-C port, please use USB-C cable (sold separately).
- As the firmware upgrade needs the support of Godox G3 V1.1 software, please download and install the "Godox G3 V1.1 firmware upgrade software" before upgrading. Then, choose the related firmware file.
- Please refer to the latest electronic version of the instruction manual.
- The download website of firmware upgrade is:
<https://www.godox.com/firmware-G3/>

Compatible Camera Models

iT30Pro S can be used on the following Sony camera models:

a77II a99 a77 a6000 a7R a350 a7RII (4.0)

a7RIII a7M3 a9 a7RIV a7R5 a7MIV

ZV-E10 a6400

Note:

1. This table only lists the tested camera models, not all cameras. For the compatibility of other camera models, a self-test is recommended.
2. Rights to modify this table are retained.

IC Warning

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1)l'appareil ne doit pas produire de brouillage, et
- (2)l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, m ê me si le brouillage est susceptible d'en compromettre le fonctionnement

Tout changement ou modification non expressément approuvé par la partie responsable de la réglementation de l'OCDE peut faire perdre à l'utilisateur le droit d'utiliser l'appareil.

Remarque: cet appareil a été testé pour répondre aux limites des appareils numériques de classe B conformément à la partie 15 des règles de la Federal Communications Commission des États - Unis. Ces

limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans les installations résidentielles. L'appareil génère de l'énergie RF utilisée et rayonne, ce qui peut causer des interférences nocives pour les communications radio s'il n'est pas installé et utilisé conformément aux instructions. Cependant, aucun

Garantie contre les interférences dans une installation spécifique. Si l'appareil cause des interférences nuisibles à la réception de la radio ou de la télévision, qui peuvent être déterminées en éteignant et en allumant l'appareil, l'utilisateur est encouragé à tenter de corriger les interférences par une ou plusieurs des mesures suivantes:

- redirection ou repositionnement de l'antenne de réception.
- augmenter l'espacement entre l'appareil et le récepteur.
- Connecter l'appareil à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- consultez votre revendeur ou un technicien radio / tv expérimenté pour obtenir de l'aide.

Avertissement RF pour les appareils portables:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Équipement Peut être utilisé sans restriction dans des conditions d'exposition portables.

Warning

Operating frequency: 2412.99MHz – 2464.49MHz

Maximum EIRP Power:5.0dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article

10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.