

**N5**

**802.11an Long-Range AP/CPE**

**User Guide**

## TABLE OF CONTENTS


INTRODUCTION .....	3
HARDWARE DESCRIPTION .....	3
HARDWARE INSTALLATION.....	4
INITIAL CONFIGURATION.....	6
CONNECTING TO THE LOGIN PAGE .....	6
STATUS PAGE .....	7
EASY SETUP.....	7
OPERATION MODE - ROUTER .....	8
SETTINGS – PPPoE(ADSL).....	8
SETTINGS – STATIC (FIXED IP) .....	9
SETTINGS – CABLE/DYNAMIC IP (DHCP) .....	10
OPERATION MODE - BRIDGE .....	11
OPERATION MODE - WISP .....	12
SETTINGS – STATIC (FIXED IP) .....	12
SETTINGS – DHCP (AUTO CONFIG) .....	14
SETTINGS – PPPoE(ADSL).....	15
SETTINGS – PPTP.....	17
SETTINGS –L2TP .....	18
ADVANCED SETUP .....	20
MANAGEMENT .....	21
ADVANCED SETTINGS .....	22
OPERATION MODE .....	23
FIREWALL CONFIGURATION .....	23
MAC/IP/PORT FILTERING .....	23
VIRTUAL SERVER SETTINGS.....	25
DMZ.....	26
FIREWALL .....	27
CONTENT FILTERING.....	28
NETWORK SETTINGS .....	29
WAN .....	29
LAN.....	31
ADVANCED ROUTING .....	32
WIRELESS SETTINGS .....	33
BASIC .....	33
SECURITY .....	34

## INTRODUCTION

The N5 is a 2x2 MIMO IEEE 802.11an Long-Range AP/CPE which support high through-put up to 300Mbps. It is rain and splash proof when install in upright position. N5 also integrated 14dBi patch antenna and passive PoE for simplify installation.


## HARDWARE DESCRIPTION

Below are N5 hardware descriptions

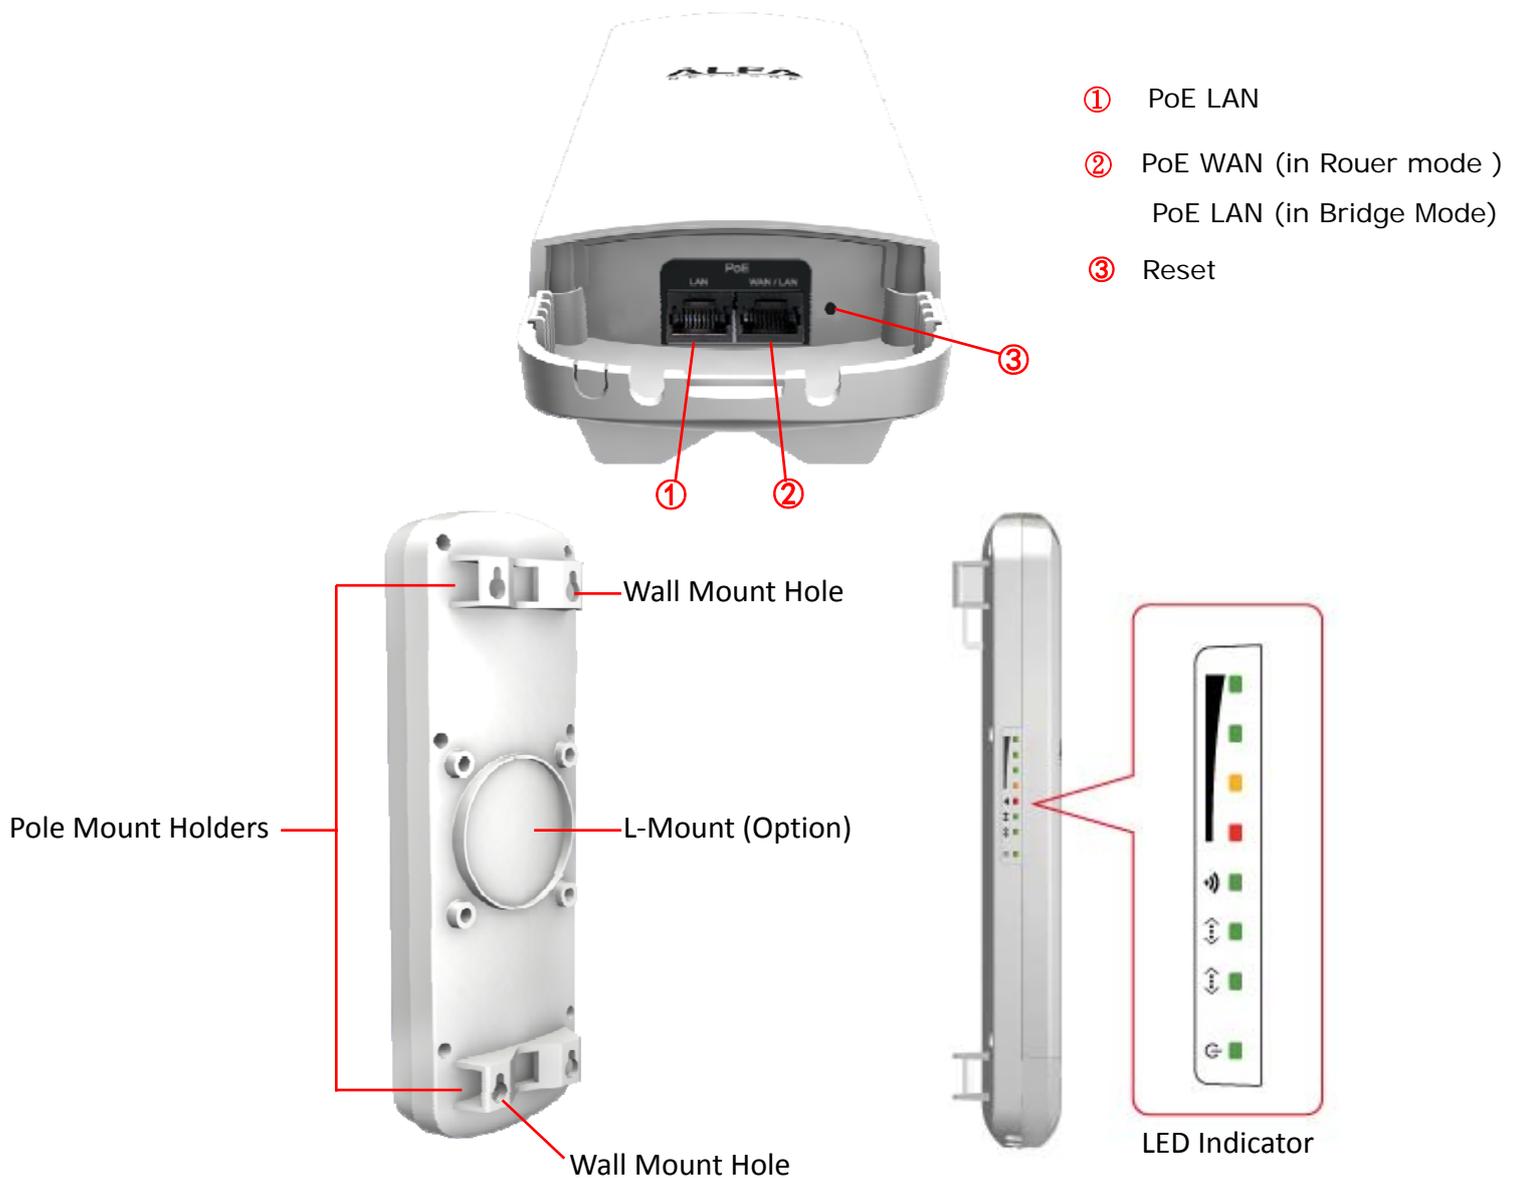

## HARDWARE INSTALLATION

- ◆ How to open the sliding door

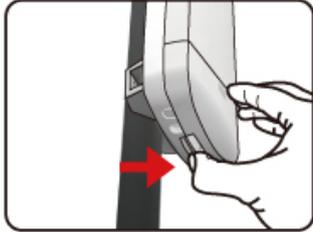


Unlatch the weatherproof sliding door from the rear of the base to open.




Slide the weatherproof sliding door downwards by gripping onto the indented surface of the weatherproof sliding door and the rear.

- ◆ How to close the sliding door

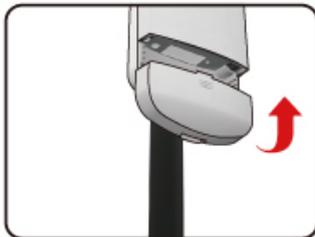

Align the base with the weatherproof sliding door.

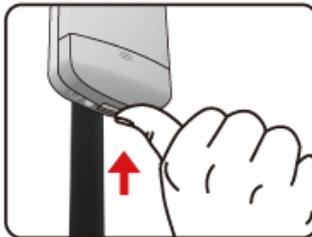

Slide the weatherproof sliding door upwards until it clicks into place.

- ◆ How to tie the strap on the pole




◆ Mounting and Radio forward Diagram



Standard Pole Mount



\*Option Adjust Antenna L- Mount

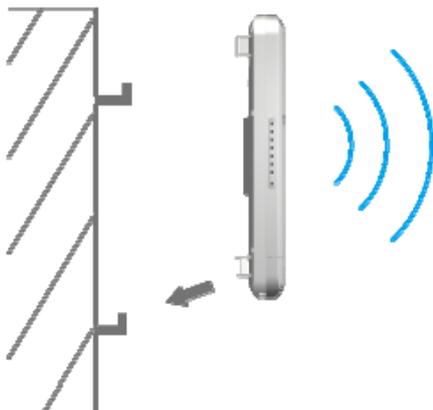

\*Option Wall Mount

## INITIAL CONFIGURATION

The N5, 5GHz AP/CPE offers a user-friendly web-based management interface for the configuration of all the unit's features. Any PC directly attached to the unit can access the management interface using a web browser, such as Internet Explorer (version 6.0 or above).

### CONNECTING TO THE LOGIN PAGE

It is recommended to make initial configuration changes by connecting a PC directly to the N5's LAN port. The N5 has a default IP address of 192.168.2.1 and a subnet mask of 255.255.255.0. You must set your PC IP address to be on the same subnet as the N5 (that is, the PC and N5 addresses must both start 192.168.2.x). To access the N5's management GUI interface, follow these steps:

1. Use your web browser to connect to the management interface using the default IP address of 192.168.2.1.
2. Log into the interface by entering the default username "admin" and password "admin," then click OK.



## STATUS PAGE

After logging in to the web interface, the Status page displays. The Home page top-menu-bar shows the Status, Easy Setup, Advanced and Language.

Status	Easy Setup	Advanced	Language English
<b>Internet Configuration</b>			
Connected Type	DHCP	Connected Status	
WAN IP Address		Subnet Mask	
Default Gateway		Primary Domain Name Server	
Secondary Domain Name Server		MAC Address	00:C0:CA:60:47:61
<b>LAN Configuration</b>			
LAN IP Address	192.168.2.1	LAN Netmask	255.255.255.0
MAC Address	00:C0:CA:60:47:60		
<b>System Info</b>			
Firmware Version	V1.6 2012-01-06-14:38	System Time	Thu, 01 Jan 1970 00:22:45
Operation Mode	Router mode		

## EASY SETUP


The Easy Setup is designed to help you configure the basic settings required to get the N5 up and running. There are only a few basic steps you need to set up the N5 to get the connection.

Click on Easy Setup to bring up the wizard

Status	Easy Setup	Advanced	Language English
<b>Operation Mode Setup</b>			
Please select a Operation Mode			
Next <input type="text" value="Router"/>			
<ul style="list-style-type: none"><li>Router</li><li>Please select a Operation Mode</li><li>Router</li><li>Bridge</li><li>WISP</li><li>Ethernet Converter</li></ul>			

## OPERATION MODE - ROUTER


In Router mode, the POE port of the N5 will turn into the WAN port. The wireless interface will become the LAN side. It will turn N5 into a wireless router. Since the Ethernet interface becomes WAN; if your PC is connected to the POE port, the management IP will change to the WAN IP (192.168.2.1). The remote management will be automatically turned on to allow you managing the device from the PoE WAN port..

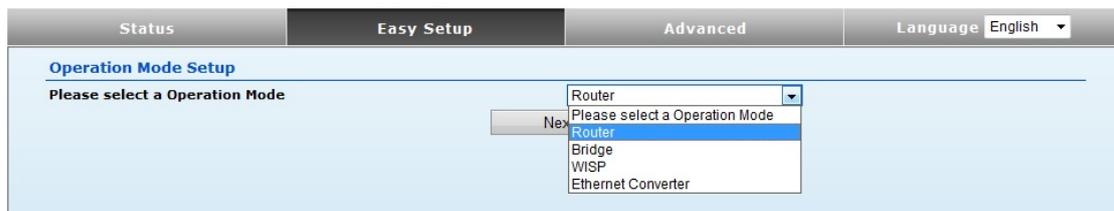

The screenshot shows the 'Easy Setup' menu with 'Operation Mode Setup' selected. A dropdown menu is open, showing the following options: Router (selected), Bridge, WISP, and Ethernet Converter. The text 'Please select a Operation Mode' is visible above the dropdown.

## SETTINGS – PPPoE(ADSL)

- 1) Select PPPoE to be assigned automatically from an Internet service provider (ISP) through a DSL modem using Point-to-Point Protocol over Ethernet (PPPoE).

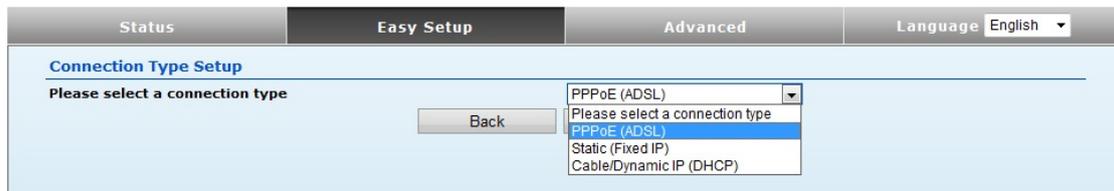

The screenshot shows the 'Easy Setup' menu with 'Connection Type Setup' selected. A dropdown menu is open, showing the following options: PPPoE (ADSL) (selected), Static (Fixed IP), and Cable/Dynamic IP (DHCP). The text 'Please select a connection type' is visible above the dropdown.

- 2)



The screenshot shows the 'Easy Setup' menu with 'Step 3/4 PPPoE Mode' selected. The form contains the following fields: User Name (pppoe\_user), Password (masked with dots), Verify Password (masked with dots), Operation Mode (KeepAlive), and MTU (1492 bytes). There are 'Back' and 'Next' buttons at the bottom.

- ◆ **User Name** — Sets the PPPoE user name for the WAN port.  
(Default: pppoe\_user; Range: 1~32 characters)
- ◆ **Password** — Sets a PPPoE password for the WAN port.  
(Default: pppoe\_password; Range: 1~32 characters)

- ◆ **Verify Password** — Prompts you to re-enter your chosen password.
- ◆ **Operation Mode** — Enables and configures the keep alive time and configures the on-demand idle time.

3)

### Security Setup

**SSID Choice**—The same name of SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

**Security Mode** — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

## SETTINGS – STATIC (FIXED IP)

- 1) Select Static(Fixed IP), if your Internet service provider (ISP) to be permanent address on the Internet. A Static IP address is a number (in the form of a dotted quad)

2)

- ◆ **IP Address** — Sets the static IP address.
- ◆ **Subnet Mask** — Sets the static IP subnet mask. (Default: 255.255.255.0)

- ◆ **Default Gateway** — The IP address of a router that is used when the requested destination IP address is not on the local subnet.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

3)

### Security Setup

**SSID Choice**—The same name of SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

**Security Mode** — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

### SETTINGS – CABLE/DYNAMIC IP (DHCP)

- 1) Select Cable/Dynamic IP (DHCP), if your Internet service provider (ISP) use a DHCP service to assign your Router an IP address when connecting to the Internet.

2)

The host name that you selected from the DDNS service provider.

3)



### Security Setup

**SSID Choice**—The same name of SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

**Security Mode** — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

## OPERATION MODE - BRIDGE

1) In this mode bridge your N5 to another Access Point.



2)




### Security Setup

**SSID Choice**—The same name of SSID (Service Set Identification) must be assigned to all wireless devices in your network. Considering your wireless network security.

**Security Mode** — Select the security method and then configure the required parameters. (Options: Disabled, WEP-AUTO, WPA-PSK, WPA2-PSK, WPA-Auto-PSK, WPA, WPA2, WPA-Auto, 802.1X; Default: Disabled)

## OPERATION MODE - WISP


In the WISP mode is also known as Client Router. The N5 wireless side is connected to the remote AP (Base-Station) as in Client Infrastructure mode. Between the wireless and LAN is the IP sharing router function. This is used to share WISP connection. The WAN is on the wireless side.

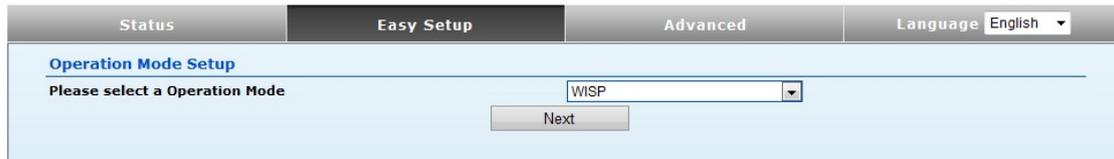

The screenshot shows the 'Operation Mode Setup' screen. At the top, there are tabs for 'Status', 'Easy Setup', 'Advanced', and 'Language' (set to 'English'). Below the tabs, the text 'Operation Mode Setup' is displayed. Underneath, it says 'Please select a Operation Mode'. A dropdown menu is open, showing 'WISP' as the selected option. A 'Next' button is located below the dropdown menu.

## SETTINGS – STATIC (FIXED IP)

- 1) Select this setting if the WAN connection uses a permanent, fixed (static) IP address that your ISP assigned.

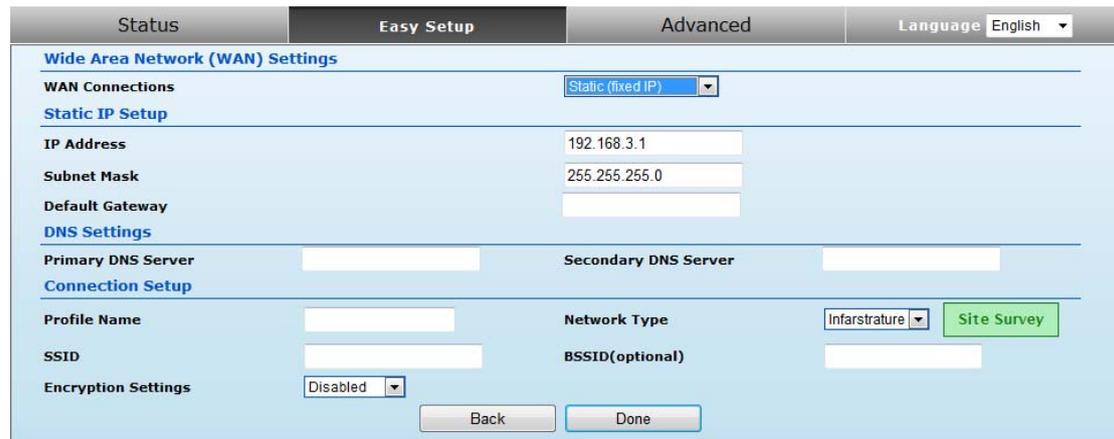


The screenshot shows the 'Wide Area Network (WAN) Settings' screen. At the top, there are tabs for 'Status', 'Easy Setup', 'Advanced', and 'Language' (set to 'English'). Below the tabs, the text 'Wide Area Network (WAN) Settings' is displayed. Underneath, there are several sections: 'WAN Connections' with a dropdown set to 'Static (fixed IP)'; 'Static IP Setup' with fields for 'IP Address' (192.168.3.1), 'Subnet Mask' (255.255.255.0), and 'Default Gateway'; 'DNS Settings' with fields for 'Primary DNS Server' and 'Secondary DNS Server'; and 'Connection Setup' with fields for 'Profile Name', 'SSID', 'Encryption Settings' (set to 'Disabled'), 'Network Type' (set to 'Infrastructure'), and 'BSSID (optional)'. A green 'Site Survey' button is located next to the 'Network Type' dropdown. At the bottom, there are 'Back' and 'Done' buttons.


- ◆ **IP Address** — Sets the static IP address.
- ◆ **Subnet Mask** — Sets the static IP subnet mask. (Default: 255.255.255.0)
- ◆ **Default Gateway** — The IP address of a router that is used when the requested destination IP address is not on the local subnet.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

- 2) Press **Site Survey** button and look for available wireless network then click on the

SSID that you attempt to connect to it; MikroTik is the SSID that we are going to connect in this example. Press **Select** button when finished.

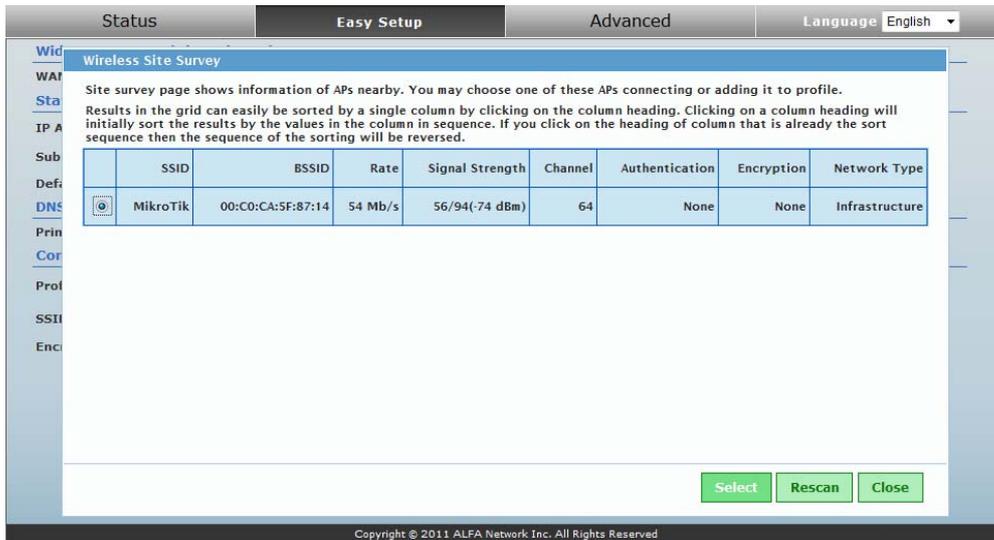

3) Now, it shows the Profile Name, SSID, BSSID, and encryption type received from your target network and press **Done** button when is finished.

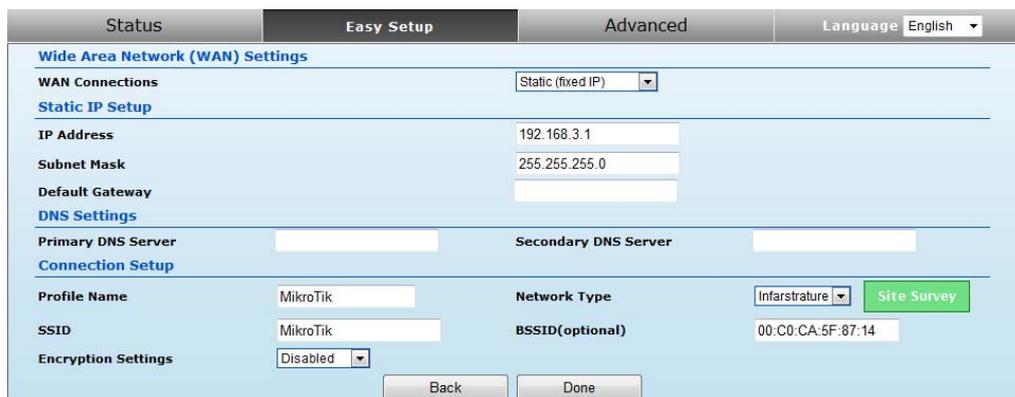

## SETTINGS – DHCP (AUTO CONFIG)

- 1) Select this setting if the WAN connection uses a DHCP service to assign your Router and IP address when connecting to Internet.

- ♦ **IP Address** — Sets the static IP address.
- ♦ **Subnet Mask** — Sets the static IP subnet mask. (Default: 255.255.255.0)
- ♦ **Default Gateway** — The IP address of a router that is used when the requested destination IP address is not on the local subnet.
- ♦ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ♦ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

- 2) Press **Site Survey** button and look for available wireless network then click on the SSID that you attempt to connect to it; MikroTik is the SSID that we are going to connect in this example. Press **Select** button when finished.

	SSID	BSSID	Rate	Signal Strength	Channel	Authentication	Encryption	Network Type
<input checked="" type="checkbox"/>	MikroTik	00:C0:CA:5F:87:14	54 Mb/s	56/94(-74 dBm)	64	None	None	Infrastructure


- 3) Now, it shows the Profile Name, SSID, BSSID, and encryption type received from your target network and press **Done** button when is finished.

## SETTINGS – PPPoE(ADSL)


- 1) Select PPPoE to be assigned automatically from an Internet service provider (ISP) through a DSL modem using Point-to-Point Protocol over Ethernet (PPPoE).

- ◆ **User Name** — Sets the PPPoE user name for the WAN port.  
(Default: pppoe\_user; Range: 1~32 characters)
- ◆ **Password** — Sets a PPPoE password for the WAN port.  
(Default: pppoe\_password; Range: 1~32 characters)
- ◆ **Verify Password** — Prompts you to re-enter your chosen password.
- ◆ **Operation Mode** — Enables and configures the keep alive time and configures the on-demand idle time

- 2) Press **Site Survey** button and look for available wireless network then click on the SSID that you attempt to connect to it; MikroTik is the SSID that we are going to connect in this example. Press **Select** button when finished.

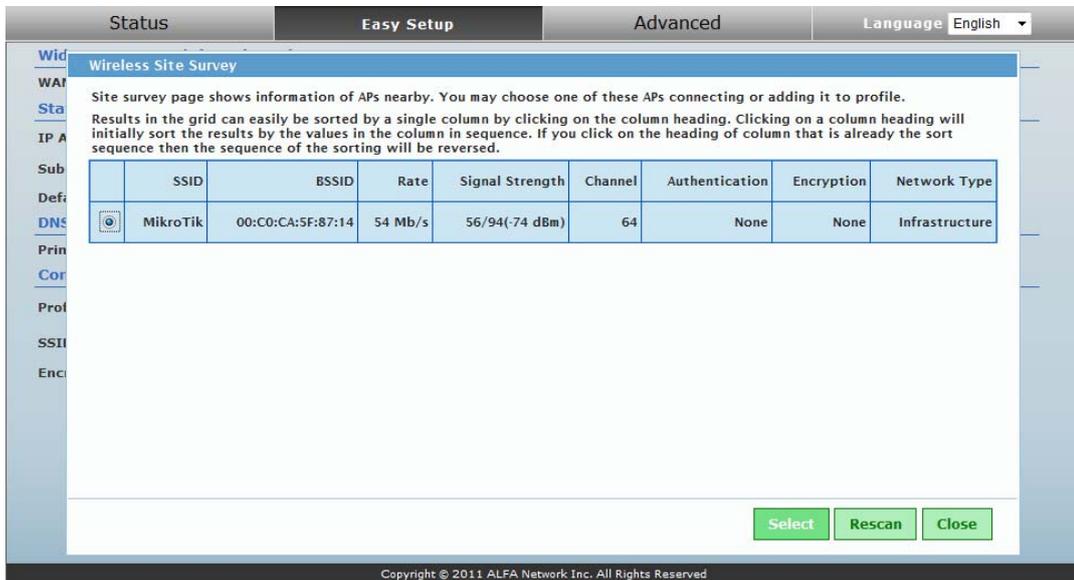

- 3) Now, it shows the Profile Name, SSID, BSSID, and encryption type received from your target network and press **Done** button when is finished.

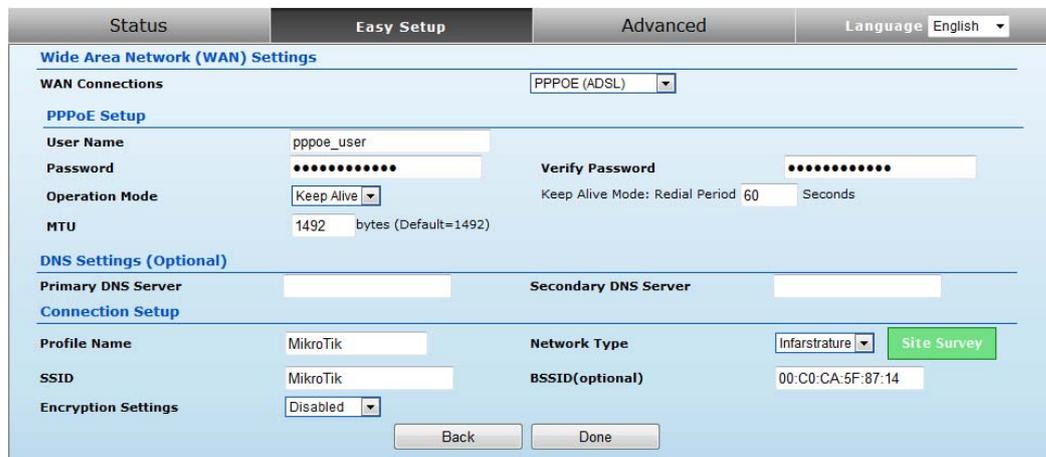

## SETTINGS – PPTP

1) Select PPTP if your ISP provides PPTP connection, please select **PPTP** option.

The screenshot shows the 'Wide Area Network (WAN) Settings' page. The 'WAN Connections' dropdown is set to 'PPTP'. Under 'PPTP Mode', the 'Server IP' is 'pptp\_server', 'User Name' is 'pptp\_user', and 'Password' is masked with dots. 'Address Mode' is 'Dynamic IP' and 'Operation Mode' is 'Keep Alive'. There is a 'Keep Alive Mode: Redial Period' of 60 seconds. Below this, there are fields for 'Primary DNS Server' and 'Secondary DNS Server'. The 'Connection Setup' section includes 'Profile Name', 'Network Type' (set to 'Infrastructure'), 'SSID', 'BSSID(optional)', and 'Encryption Settings' (set to 'Disabled'). A green 'Site Survey' button is located to the right of the 'Network Type' dropdown. 'Back' and 'Done' buttons are at the bottom.

- ◆ **Server IP** — Sets the PPTP server IP Address. (Default: pptp\_server)
- ◆ **User Name** — Sets the PPTP user name for the WAN port.  
(Default: pptp\_user; Range: 1~32 characters)
- ◆ **Password** — Sets a PPTP password for the WAN port. (Default: pptp\_password; Range: 1~32 characters)
- ◆ **Address Mode** — Sets a PPTP network mode. (Default: Dynamic)
- ◆ **Operation Mode** — Enables and configures the keep alive time.

2) Press **Site Survey** button and look for available wireless network then click on the SSID that you attempt to connect to it; MikroTik is the SSID that we are going to connect in this example. Press **Select** button when finished.

The screenshot shows the 'Wireless Site Survey' page. It contains a table of nearby wireless networks. The 'MikroTik' network is selected, indicated by a mouse cursor icon in the first column. The table has columns for SSID, BSSID, Rate, Signal Strength, Channel, Authentication, Encryption, and Network Type. Below the table are 'Select', 'Rescan', and 'Close' buttons.

	SSID	BSSID	Rate	Signal Strength	Channel	Authentication	Encryption	Network Type
<input checked="" type="checkbox"/>	MikroTik	00:C0:CA:5F:87:14	54 Mb/s	56/94(-74 dBm)	64	None	None	Infrastructure

- 3) Now, it shows the Profile Name, SSID, BSSID, and encryption type received from your target network and press **Done** button when is finished.

The screenshot shows the 'Easy Setup' tab of the router's configuration interface. The 'Wide Area Network (WAN) Settings' section is active, with 'PPTP' selected as the WAN connection type. Under 'PPTP Mode', the 'Server IP' is 'pptp\_server', 'User Name' is 'pptp\_user', 'Address Mode' is 'Dynamic IP', and 'Operation Mode' is 'Keep Alive'. The 'Keep Alive Mode: Redial Period' is set to 60 seconds. The 'DNS Settings (Optional)' section has empty fields for 'Primary DNS Server' and 'Secondary DNS Server'. The 'Connection Setup' section is filled with: 'Profile Name' (MikroTik), 'Network Type' (Infrastructure), 'SSID' (MikroTik), 'BSSID (optional)' (00:C0:CA:5F:87:14), and 'Encryption Settings' (Disabled). A green 'Site Survey' button is located next to the 'Network Type' dropdown. 'Back' and 'Done' buttons are at the bottom.


## SETTINGS –L2TP

- 1) Select L2TP if your ISP provides PPTP connection, please select **L2TP** option.

The screenshot shows the 'Easy Setup' tab of the router's configuration interface. The 'Wide Area Network (WAN) Settings' section is active, with 'L2TP' selected as the WAN connection type. Under 'L2TP Mode', the 'Server IP' is 'l2tp\_server', 'User Name' is 'l2tp\_user', 'Address Mode' is 'Dynamic IP', and 'Operation Mode' is 'Keep Alive'. The 'Keep Alive Mode: Redial Period' is set to 60 seconds. The 'DNS Settings (Optional)' section has empty fields for 'Primary DNS Server' and 'Secondary DNS Server'. The 'Connection Setup' section is mostly empty, with 'Profile Name' and 'Network Type' (Infrastructure) filled. A green 'Site Survey' button is located next to the 'Network Type' dropdown. 'Back' and 'Done' buttons are at the bottom.

- ◆ **Server IP** — Sets the L2TP server IP Address. (Default: l2tp\_server)
- ◆ **User Name** — Sets the L2TP user name for the WAN port. (Default: pptp\_user; Range: 1~32 characters)
- ◆ **Password** — Sets a L2TP password for the WAN port. (Default: pptp\_password; Range: 1~32 characters)
- ◆ **Address Mode** — Sets a L2TP network mode. (Default: Dynamic)
- ◆ **Operation Mode** — Enables and configures the keep alive time.

- 2) Press **Site Survey** button and look for available wireless network then click on the SSID that you attempt to connect to it; MikroTik is the SSID that we are going to connect in this example. Press **Select** button when finished.

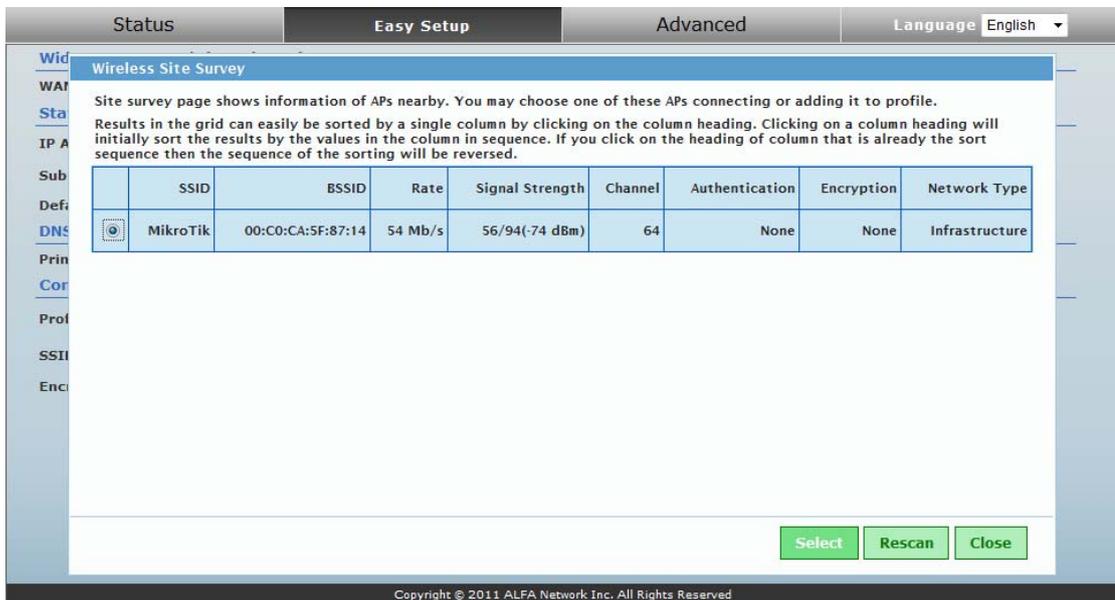

- 3) Now, it shows the Profile Name, SSID, and encryption type received from your target network and press **Done** button when is finished.



## ADVANCED SETUP

In the Advanced Manual Bar, it includes all the settings such as firmware upgrade, LAN, WAN and wireless settings that change the RF behaviors. It is important to read through this section before attempting to make changes.

<b>Advanced</b>
Management
Advanced Settings
Operation Mode
System Log
<b>Firewall Settings</b>
MAC/IP/Port Filtering
Virtual Server
DMZ
Firewall
Content Filtering
<b>Network Settings</b>
WAN
LAN
Advanced Routing
<b>Wireless settings</b>
Basic
Security

## MANAGEMENT

The Management section is provided for configuration of administrative needs such as language type, user name / Password, firmware upgrade, export and import settings, load factory defaults and reboots system.

The screenshot displays the 'Advanced' management page with a navigation bar at the top containing 'Status', 'Easy Setup', 'Advanced', and 'Language English'. The main content area is divided into several sections:

- Language Settings:** A dropdown menu is set to 'English' with an 'Apply' button below it.
- Web Interface Settings:** Includes 'User Name' (admin), 'Password' (two input fields), and 'Re-enter to confirm' (two input fields) with an 'Apply' button.
- Firmware Upgrade:** Shows 'Software Version' as 'V1.6 2012-01-06-14:38' with an 'Upload' button.
- Export Settings:** Features an 'Export Button'.
- Import Settings:** Features an 'Import Button'.
- Load Factory Defaults:** Includes a 'Load Default' button.
- Reboot System:** Includes a 'Reboot Now!' button.

- ◆ **Language Setting** — Select the Language.
- ◆ **Password** — The new password must not exceed 32 characters in length and must not include any spaces. Enter the new password a second time to confirm it.
- ◆ **Export Settings** — Click the Export Button to download current router configuration to your PC.
- ◆ **Import Settings** — Click the Import Button to browse for the configuration file that is currently saved on your PC. Click Import to overwrite all current configurations with the one in the configuration file.
- ◆ **Load Factory Defaults** — If you have problems with N5, which might be a result from changing some settings, but you are unsure what settings exactly, you can restore the factory defaults by click the Load Default Button.
- ◆ **Reboot System** — If you want to reboot the N5, click the Reboot Now Button.

## ADVANCED SETTINGS

The Advanced Settings section is provided for configuration of Time Zone and DDNS.

The screenshot shows the 'Advanced' settings tab with two sections: 'Time Zone Settings' and 'DDNS Settings'.  
**Time Zone Settings:** Includes 'Current Time' (Thu, 01 Jan 1970 00:41:41), a 'Sync with host' button, a 'Time Zone' dropdown menu with the text 'Please select your Time Zone settings.', 'SNTP Server' and 'SNTP synchronization (seconds)' input fields, and 'Apply' and 'Cancel' buttons.  
**DDNS Settings:** Includes 'Dynamic DNS Provider' (dropdown menu set to 'None'), 'HostName' input field, 'User Name' and 'Password' input fields, and 'Apply' and 'Cancel' buttons.

- ◆ **Time Zone Settings** — The Time Zone Settings allows you to configure, update and maintain the correct time on the N5's internal system clock.
- ◆ **DDNS Settings** — DDNS lets you assign a fixed host and domain name to dynamic Internet IP address. It is useful when you are hosting your own website, FTP server, or other server behind the N5. Before using this feature, you need to sign up for DDNS service at [www.dyndns.org](http://www.dyndns.org) , a DDNS service provider.
- ◆ **SNTP Server** — Enter the address of an SNTP server to receive time updates.
- ◆ **SNTP synchronization (seconds)** — Specify the interval between SNTP server updates.

This close-up shows the 'DDNS Settings' section. The 'Dynamic DNS Provider' dropdown menu is open, displaying a list of options: 'None', 'DynDNS.org', 'freedns.afraid.org', 'www.zoneedit.com', and 'www.no-ip.com'. The 'None' option is currently selected. The 'User Name' and 'Password' input fields are visible to the right, along with 'Apply' and 'Cancel' buttons.

- ◆ **User Name** — Sets the DDNS user name for the connection.
- ◆ **Password** — Sets a DDNS password for the connection.
- ◆ **HostName** — The host name that you selected from the DDNS service provider.

## OPERATION MODE

The Operation Mode content four modes: Bridge, router, WISP and Ethernet converter.



- ◆ **Bridge** — The wired Ethernet and wireless are bridged together. Once the mode is selected, all WAN related functions will be disabled.
- ◆ **Router** — The WAN port is used to connect with ADSL/Cable modem and the wireless is used for your private WLAN. The NAT is existed between the 2 RJ45 ports and all wireless clients share the same public IP address through the WAN port to ISP. The default IP configuration for WAN port is DHCP client
- ◆ **WISP** — The N5 will behave just the same as the client mode for wireless function. However, router functions are added between the wireless WAN side and the Ethernet LAN side. Therefore, the WSIP subscriber can share the WISP connection without the extra router.
- ◆ **Ethernet Converter** — The wireless client interface is treated as WAN port, and the wireless interface and the Ethernet port are LAN ports.

## FIREWALL CONFIGURATION

### MAC/IP/PORT FILTERING

MAC/IP/Port filtering restricts connection parameters to limit the risk of intrusion and defends against a wide array of common hacker attacks. MAC/IP/Port filtering allows the unit to permit, deny or proxy traffic through its MAC addresses, IP addresses and ports. The N5 allows you define a sequential list of permit or deny filtering rules (up to 32). This device tests ingress packets against the filter rules one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match, the packet is either accepted or dropped depending on the default policy setting.

- ◆ **MAC/IP/Port Filtering** — Enables or disables MAC/IP/Port Filtering.  
(Default: Disable)
- ◆ **Default Policy** — When MAC/IP/Port Filtering is enabled, the default policy will be enabled. If you set the default policy to "Dropped", all incoming packets that don't match the rules will be dropped. If the policy is set to "Accepted," all incoming packets that don't match the rules are accepted. (Default: Dropped)
- ◆ **MAC Address** — Specifies the MAC address to block or allow traffic from.
- ◆ **Destination IP Address** — Specifies the destination IP address to block or allow traffic from.
- ◆ **Source IP Address** — Specifies the source IP address to block or allow traffic from.
- ◆ **Protocol** — Specifies the destination port type, TCP, UDP or ICMP. (Default: None).
- ◆ **Destination Port Range** — Specifies the range of destination port to block traffic from the specified LAN IP address from reaching.
- ◆ **Source Port Range** — Specifies the range of source port to block traffic from the specified LAN IP address from reaching.
- ◆ **Action** — Specifies if traffic should be accepted or dropped. (Default: Accept)
- ◆ **Comment** — Enter a useful comment to help identify the filtering rules.
- ◆ **Current Filtering rules** — The Current Filter Table displays the configured IP addresses and ports that are permitted or denied access to and from.
  - **No.** — The table entry number.
  - **MAC Address** — Displays a MAC address to filter.
  - **Destination IP Address (DIP)** — Displays the destination IP address.
  - **Source IP Address (SIP)** — Displays the source IP address.
  - **Protocol** — Displays the protocol type.
  - **Destination Port Range (DPR)** — Displays the destination port range.

- **Source Port Range (SPR)** — Displays the source port range.
- **Action** — Displays if the specified traffic is accepted or dropped.
- **Comment** — Displays a useful comment to identify the filter rules.

## VIRTUAL SERVER SETTINGS

Virtual Server (sometimes referred to as Port Forwarding) is the act of forwarding traffic from one network node to another based on received protocol port number. This technique can allow an external user to reach a port on a private IP address (inside a LAN) from the outside through a NAT enabled router. (Maximum 32 entries are allowed.)

The screenshot shows the 'Virtual Server' configuration page. At the top, there are tabs for 'Status', 'Easy Setup', and 'Advanced' (selected), along with a 'Language' dropdown set to 'English'. The main heading is 'Virtual Server' with an 'Enable' dropdown menu and an 'Apply' button. Below this is the 'Virtual Server Settings' section with input fields for 'IP Address', 'Private Port', 'Public Port', a 'Protocol' dropdown menu (set to 'TCP&UDP'), and a 'Comment' text area. A note below the comment field states '(The maximum rule count is 32.)'. There are 'Apply' and 'Reset' buttons at the bottom of the settings section. At the bottom of the page is a table titled 'Current Virtual Servers in system' with columns: 'No.', 'IP Address', 'Port Mapping', 'Protocol', and 'Comment'. Below the table are 'Delete Selected' and 'Reset' buttons.

- ◆ **Virtual Server** — Selects between enabling or disabling port forwarding the virtual server. (Default: Disable)
- ◆ **IP Address** — Specifies the IP address of a server on the local network to allow external access.
- ◆ **Private Port** — The protocol port number on the local server.
- ◆ **Public Port** — The protocol port number on the router's WAN interface.
- ◆ **Protocol** — Specifies the protocol to forward, either TCP, UDP, or TCP&UDP.
- ◆ **Comment** — Enter a useful comment to help identify the port forwarding service on the network.
- ◆ **Current Virtual Servers in System** — The Current Port Forwarding Table displays the entries that are allowed to forward packets through the N5's firewall.
  - **No.** — The table entry number.
  - **IP Address** — The IP address of a server on the local network to allow

external access.

- **Port Mapping** — displays the port mapping for the server.
- **Protocol** — Displays the protocol used for forwarding this port.
- **Comment** — Displays a useful comment to identify the nature of the port to be forwarded.

## DMZ

DMZ is to specified host PC on the local network to access the Internet without any firewall protection. Some Internet applications, such as interactive games or video conferencing, may not function properly behind the firewall. By specifying a Demilitarized Zone (DMZ) host, the PC's TCP ports are completely exposed to the Internet, allowing open two-way communication. The host PC should be assigned a static IP address (which is mapped to its MAC address) and this must be configured as the DMZ IP address.



The screenshot shows a web interface for configuring DMZ settings. At the top, there are tabs for 'Status', 'Easy Setup', and 'Advanced', with 'Advanced' selected. A 'Language' dropdown menu is set to 'English'. Below the tabs, the 'DMZ Settings' section is visible. It includes a 'DMZ Settings' dropdown menu currently set to 'Enable', and a 'DMZ IP Address' text input field. At the bottom of the section are 'Apply' and 'Reset' buttons. A 'Help' button with a question mark icon is located in the top right corner of the settings area.

- ◆ **DMZ Settings** — Sets the DMZ status. (Default: Disable)
- ◆ **DMZ IP Address** — Specifies an IP address on the local network allowed unblocked access to the WAN.

## FIREWALL

Firewall functions which will help to protect your network and computer. You can utilize firmware functions to protect your network from hackers and malicious intruders.

The screenshot shows the 'Advanced' configuration page for the Firewall. It includes the following settings:

- Remote Management Access:** Remote Management (via WAN) is set to 'Deny', and Remote Management Port is set to '2020'.
- Ping from WAN Filter:** Set to 'Allow'.
- Stateful Packet Inspection (SPI):** SPI Firewall is set to 'Enable'.
- Network Address Translation Settings:** Network Address Translation is set to 'Enable'.

Buttons for 'Apply' and 'Reset' are located at the bottom of the configuration area.

- ◆ **Remote Management (via WAN)** — allow or deny to manage the router from anywhere on the Internet.
- ◆ **Remote Management Port** — The port that you will use to address the management from the Internet. For example, if you specify port 1080, then to access the N5 from Internet, you would use a URL of the form: `http://xxx.xxx.xxx.xxx:1080/`
- ◆ **Ping from WAN Filter** — When Allow, the N5 does not respond to ping packets received on the WAN port.
- ◆ **SPI Firewall** — SIP firewall help to keep track of the state of network connections (such as TCP streams, UDP communication) traveling across it. It is programmed to distinguish legitimate packets for different types of connections. Only packets matching a known active connection will be allowed by the firewall; others will be rejected.
- ◆ **Network Address Translation** — NAT is the process of modifying IP address information in IP packet headers while in transit across a traffic routing device.

## CONTENT FILTERING

The N5 provides a variety of options for blocking Internet access based on content, URL and host name.

The screenshot shows the 'Content Filter Settings' interface. At the top, there are tabs for 'Status', 'Easy Setup', and 'Advanced', with 'Advanced' selected. A 'Language English' dropdown is on the right. Below the tabs, the 'Content Filter Settings' section is divided into two main areas: 'Current Web URL Filters' and 'Current Website Host Filters'. Each area has a table with columns for 'No' and the filter name. Below each table are 'Delete' and 'Reset' buttons. At the bottom of each area is an 'Add' button and a 'Reset' button, along with a text input field for adding a new filter. The 'Add a URL filter' field is pre-filled with 'Http(s)://'. A 'Help' button is located in the top right corner of the settings area.

- ◆ **Web URL Filter Settings** — By filtering inbound Uniform Resource Locators (URLs) the risk of compromising the network can be reduced. URLs are commonly used to point to websites. By specifying a URL or a keyword contained in a URL traffic from that site may be blocked.

- ◆ **Add a URL Filter** — Adds a URL filter to the settings.

- ◆ **Delete a URL Filter** — Deletes a URL filter entry from the list.

**Web Host Filter Settings** — Allows Internet content access to be restricted based on web address keywords and web domains. A domain name is the name of a particular web site. For example, for the address www.HOST.com, the domain name is HOST.com. Enter the Keyword then click "Add."

- ◆ **Current Host Filters** — Displays current Host filter.

- ◆ **Add a Host Filter** — Enters the keyword for a host filtering.

- ◆ **Delete a Host Filter** — Deletes a Host filter entry from the list.

## NETWORK SETTINGS

### WAN

In this section, there are several connection types to choose from; Static IP, DHCP, PPPoE, PPTP and L2TP. If you are unsure of your connection method, please contact your Internet Service Provider.

#### STATIC IP (FIXED IP)

The screenshot shows the 'Advanced' tab of the WAN Settings page. The 'WAN Connections' dropdown is set to 'Static (Fixed IP)'. Under 'Static Mode', the 'IP Address' field contains '192.168.3.1', the 'Subnet Mask' field contains '255.255.255.0', and the 'Default Gateway' field is empty. Under 'DNS Settings', the 'Primary DNS Server' and 'Secondary DNS Server' fields are empty. There are 'Apply' and 'Cancel' buttons at the bottom.

- ◆ **IP Address** — Sets the static IP address.
- ◆ **Subnet Mask** — Sets the static IP subnet mask. (Default: 255.255.255.0)
- ◆ **Default Gateway** — The IP address of a router that is used when the requested destination IP address is not on the local subnet.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

#### CABLE/DYNAMIC IP (DHCP)

The screenshot shows the 'Advanced' tab of the WAN Settings page. The 'WAN Connections' dropdown is set to 'Cable/Dynamic IP (DHCP)'. Under 'DHCP Mode', the 'Hostname' field contains 'ALFA'. Under 'DNS Settings (Optional)', the 'Primary DNS Server' and 'Secondary DNS Server' fields are empty. There are 'Apply' and 'Cancel' buttons at the bottom.

- ◆ **Hostname** — Specifies the host name of the DHCP client.

- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

## PPPoE (ADSL)

The screenshot shows the 'Advanced' tab of the 'Wide Area Network (WAN) Settings' page. The 'WAN Connections' dropdown is set to 'PPPoE (ADSL)'. Under 'PPPoE Mode', the 'User Name' is 'pppoe\_user', 'Password' and 'Verify Password' are masked with dots, 'Operation Mode' is 'Keep Alive', and 'MTU' is '1492 bytes (Default=1492)'. The 'Keep Alive Mode: Redial Period' is set to '60 Seconds'. Under 'DNS Settings (Optional)', there are empty text boxes for 'Primary DNS Server' and 'Secondary DNS Server'. 'Apply' and 'Cancel' buttons are at the bottom.

- ◆ **User Name** — Sets the PPPoE user name for the WAN port. (Default: pppoe\_user; Range: 1~32 characters)
- ◆ **Password** — Sets a PPPoE password for the WAN port. (Default: pppoe\_password; Range: 1~32 characters)
- ◆ **Verify Password** — Prompts you to re-enter your chosen password.
- ◆ **Operation Mode** — Enables and configures the keep alive time and configures the on-demand idle time.

## PPTP

The screenshot shows the 'Advanced' tab of the 'Wide Area Network (WAN) Settings' page. The 'WAN Connections' dropdown is set to 'PPTP'. Under 'PPTP Mode', the 'Server IP' is 'pptp\_server', 'User Name' is 'pptp\_user', 'Password' is masked with dots, 'Address Mode' is 'Dynamic IP', and 'Operation Mode' is 'Keep Alive'. The 'Keep Alive Mode: Redial Period' is set to '60 Seconds'. Under 'DNS Settings (Optional)', there are empty text boxes for 'Primary DNS Server' and 'Secondary DNS Server'. 'Apply' and 'Cancel' buttons are at the bottom.

- ◆ **Server IP** — Sets the PPTP server IP Address. (Default: pptp\_server)
- ◆ **User Name** — Sets the PPTP user name for the WAN port. (Default: pptp\_user; Range: 1~32 characters)
- ◆ **Password** — Sets a PPTP password for the WAN port. (Default: pptp\_password; Range: 1~32 characters)

- ◆ **Address Mode** — Sets a PPTP network mode. (Default: Dynamic IP)
- ◆ **Operation Mode** — Enables and configures the keep alive time.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

## L2TP

The screenshot shows the 'Advanced' configuration page for L2TP. The 'WAN Connections' dropdown is set to 'L2TP'. Under 'L2TP Mode', the 'Server IP' is 'l2tp\_server', 'User Name' is 'l2tp\_user', 'Password' is masked with dots, 'Address Mode' is 'Dynamic IP', and 'Operation Mode' is 'Keep Alive'. The 'Keep Alive Mode: Redial Period' is set to '60' seconds. Under 'DNS Settings (Optional)', there are empty text boxes for 'Primary DNS Server' and 'Secondary DNS Server'. 'Apply' and 'Cancel' buttons are at the bottom.

- ◆ **Server IP** — Sets the L2TP server IP Address. (Default: l2tp\_server)
- ◆ **User Name** — Sets the L2TP user name for the WAN port. (Default: l2tp\_user; Range: 1~32 characters)
- ◆ **Password** — Sets a L2TP password for the WAN port. (Default: l2tp\_password; Range: 1~32 characters)
- ◆ **Address Mode** — Sets a L2TP network mode. (Default: Dynamic IP)
- ◆ **Operation Mode** — Enables and configures the keep alive time.
- ◆ **Primary DNS Server** — The IP address of the Primary Domain Name Server. A DNS maps numerical IP addresses to domain names and can be used to identify network hosts by familiar names instead of the IP addresses. To specify a DNS server, type the IP addresses in the text field provided. Otherwise, leave the text field blank.
- ◆ **Secondary DNS Server** — The IP address of the Secondary Domain Name Server.

## LAN

In this section, the LAN settings are configured based on the IP Address and Subnet Mask. The IP address is also used to access this Web-based management interface. It is recommended to use the default settings if you do not have an existing network.

- ◆ **IP Address** — The IP address of N5 on the local area network.  
( Default: 192.168.2.1 )
- ◆ **Subnet Mask** — The subnet mask of N5 on the local area network
- ◆ **DHCP Server** — The DHCP Server is to assign private IP address to the N5 in your local area network(LAN). The default LAN IP address is 192.168.2.1, changing IP address will also change the DHCP server’s IP subnet.

## ADVANCED ROUTING

In this section, allow to configure routing feature in the N5.

No.	Destination	Netmask	Gateway	Flags	Metric	Ref	Use	Interface	Comment
1	192.168.2.0	255.255.255.0	0.0.0.0	1	0	0	0	LAN(br0)	

- ◆ **Destination** — The IP address of packets that can be routed.
- ◆ **Type** — Defines the type of destination. ( Host: Signal IP address / Net: Portion of Network )
- ◆ **Netmask** — Displays the subnetwork associated with the destination.

- ◆ **Gateway** — Defines the packets destination next hop
- ◆ **Interface** — Select interface to which a static routing subnet is to be applied
- ◆ **Comment** — Help identify the routing
- ◆ **RIP** — Enable or disable the RIP(Routing Information Protocol) for the WAN or LAN interface.

## WIRELESS SETTINGS

### BASIC

The screenshot shows the 'Basic Wireless Settings' configuration page. At the top, there are tabs for 'Status', 'Easy Setup', and 'Advanced' (which is selected). A 'Language' dropdown is set to 'English'. Below the tabs, there's a 'Basic Wireless Settings' section with a 'Help' icon. The settings are as follows:

- Wireless On/Off:** A 'Turn Off' button.
- AP MAC Address:** 00:C0:CA:60:47:62
- Wireless Mode:** Access Point (dropdown)
- Network Name (SSID):** ALFA (text input), with a 'Hide' checkbox.
- Multiple SSID:** (text input), with a 'Hide' checkbox.
- Country Code:** Germany (dropdown), with a 'Set Country Code' button.
- Frequency (Channel):** 5660 MHz (Channel 132) (dropdown)
- Network Mode:** WiFi 11na HT20 (dropdown)
- Packet Aggregate:** Enable (radio button selected), Disable (radio button).
- Distance:** A slider set to 0, with 'miles (0.0 km)' label.
- ACK Timeout:** 27 (text input)


At the bottom, there are 'Apply' and 'Cancel' buttons.

- ◆ **Wireless On/Off** — Enables or Disable the radio. (Default: Turn On)
- ◆ **Wireless Mode** — There are 4 wireless mode, those are Access Point, WDS Access Point, WDS Repeater and WDS Client
- ◆ **Network Name (SSID)** — The name of the wireless network service provided by the N5. Clients that want to connect to the network must set their SSID to the same as that of N5. (Range: 1-32 characters)
- ◆ **Multiple SSID** — One additional VAP interface supported on the device. (Default: no name configured; Range: 1-32 characters)
- ◆ **Country Code** — Select the country on your location, after selected the country will automatically to change the channel frequency
- ◆ **Frequency (Channel)** — The radio channel that the N5 uses to communicate with wireless clients.
- ◆ **Network Mode** — Defines the radio operating mode.(Default: 11an HT20)
- ◆ **Packet Aggregate** — The process of joining multiple packets together into a single

transmission unit, in order to reduce the overhead associated with each transmission.


- ◆ **Distance** — Change the distance to fit into your network, when change the distance will automatically to change the ACK timeout.
- ◆ **ACK timeout** — The ACK timeout is shorter than the time it takes for the end of the last data packet to propagate to the receiver + the start of the ACK for that packet to propagate back to the sender, then the sending MAC will assume that the packet has been lost and will unnecessarily retransmit the data packet

## SECURITY

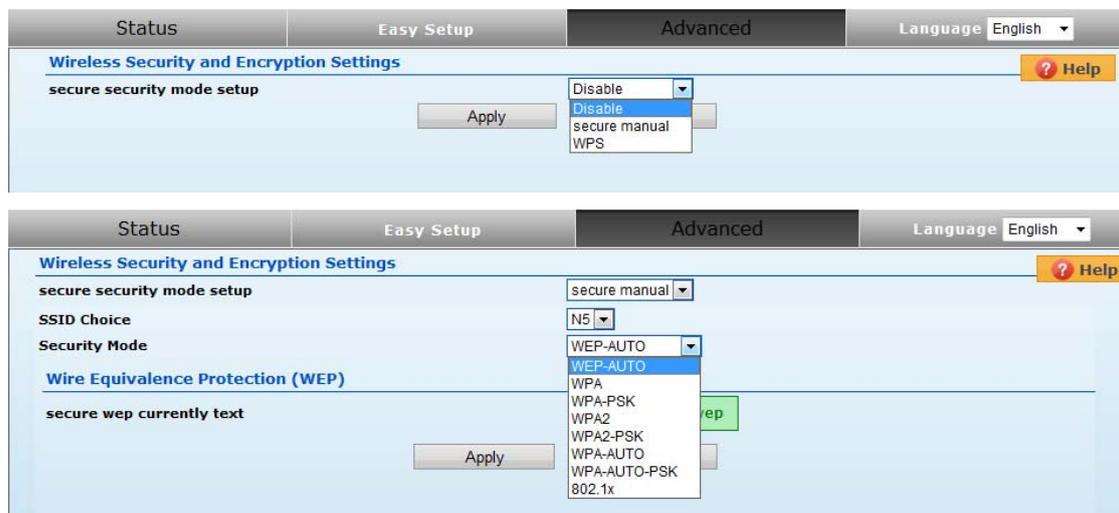

## WIRED EQUIVALENT PRIVACY (WEP)


WEP provides a basic level of security, preventing unauthorized access to the network, and encrypting data transmitted between wireless clients and an access point. WEP uses static shared keys (fixed-length hexadecimal or alphanumeric strings) that are manually distributed to all clients that want to use the network. When you select to use WEP, be sure to define at least one static WEP key for user authentication or data encryption. Also, be sure that the WEP shared keys are the same for each client in the wireless network.

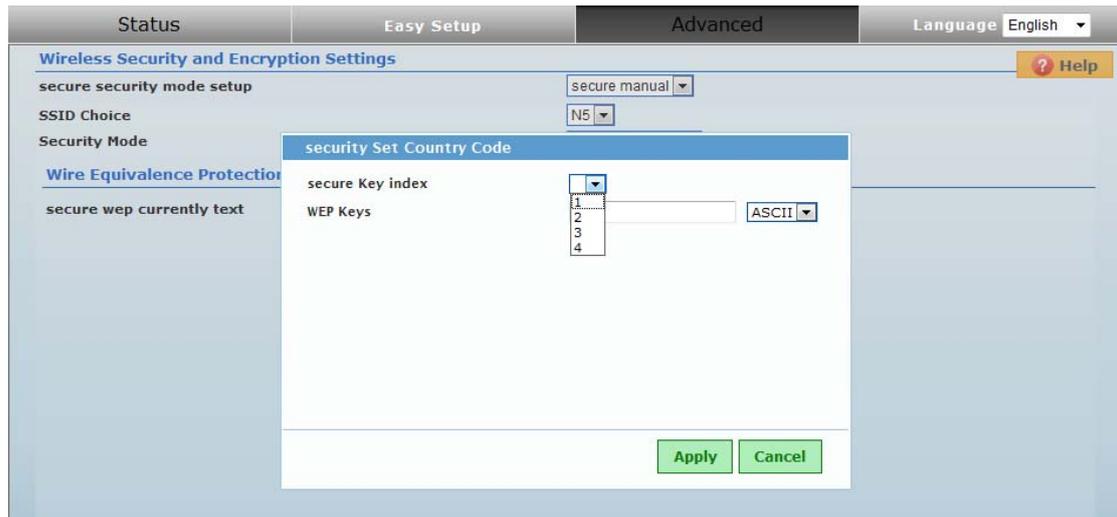

- ◆ **Encrypt Type** — Selects WEP for data encryption (OPEN mode only).
- ◆ **Security Key Index**— Selects the WEP key number to use for authentication or data encryption. If wireless clients have all four WEP keys configured to the same values, you can change the encryption key to any of the settings without having to update the client keys. (Default: 1; Range: 1~4)
- ◆ **WEP Keys** — Sets WEP key values. The user must first select ASCII or hexadecimal keys. Each WEP key has an index number. Enter key values that match the key type and length settings. Enter 5 alphanumeric characters or 10 hexadecimal digits for 64-bit keys, or enter 13 alphanumeric characters or 26 hexadecimal digits for 128-bit keys. (Default: Hex, no preset value)

## WPA & WPA2

**Wi-Fi Protected Access (WPA)** was introduced as an interim solution for the vulnerability of WEP pending the adoption of a more robust wireless security standard. WPA2 includes the complete wireless security standard, but also offers backward compatibility with WPA.

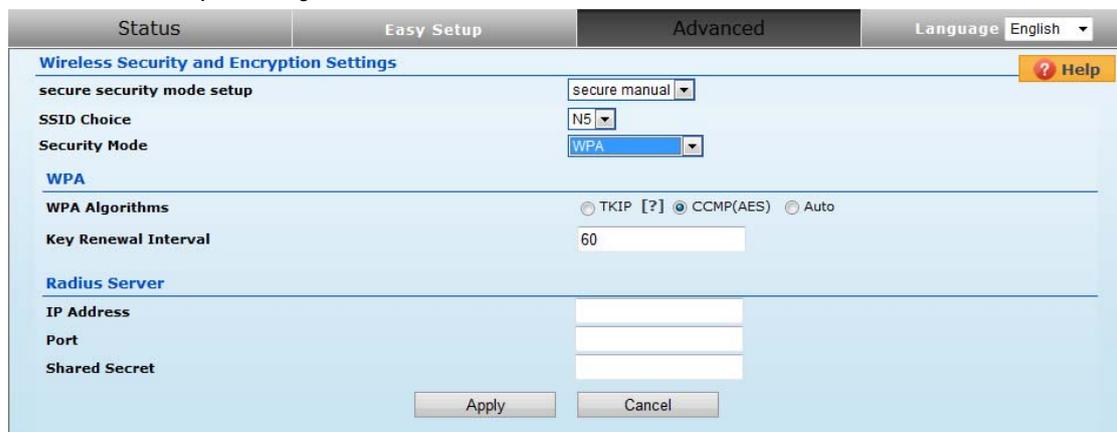

- ◆ **WPA** — Clients using WPA for authentication.
- ◆ **WPA2** — Clients using WPA2 for authentication.

- ◆ **WPA-Auto** — Clients using WPA or WPA2 for authentication.
- ◆ **WPA Algorithms** — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)
  - **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.
  - **AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AESCAMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.
  - **Auto** — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.
- ◆ **Key Renewal Interval** — Sets the time period for automatically changing data encryption keys and redistributing them to all connected clients. (Default: 3600 seconds)

**RADIUS Server** — Configures RADIUS server settings.

- ◆ **IP Address** — Specifies the IP address of the RADIUS server.
- ◆ **Port** — The User Datagram Protocol (UDP) port number used by the RADIUS server for authentication messages. (Range: 1024-65535; Default: 1812)
- ◆ **Shared Secret** — A shared text string used to encrypt messages between the access point and the RADIUS server. Be sure that the same text string is specified on the RADIUS server. Do not use blank spaces in the string. (Maximum length: 20 characters)

## **WPA-PSK & WPA2-PSK**

**Wi-Fi Protected Access (WPA)** was introduced as an interim solution for the vulnerability of WEP pending the adoption of a more robust wireless security standard. WPA2 includes the complete wireless security standard, but also offers backward compatibility with WPA. Both WPA and WPA2 provide an “enterprise” and “personal” mode of operation. For small home or office networks, WPA and WPA2 provide a simple “personal” operating mode that uses just a pre-shared key for network access. The **WPA Pre-Shared Key (WPA-PSK)** mode uses a common

password phrase for user authentication that is manually entered on the access point and all wireless clients. Data encryption keys are automatically generated by the access point and distributed to all clients connected to the network.

- ◆ **WPA-PSK** — Clients using WPA with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is TKIP.
- ◆ **WPA2-PSK** — Clients using WPA2 with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is AES.
- ◆ **WPA- Auto-PSK** — Clients using WPA or WPA2 with a Preshared Key are accepted for authentication. The default data encryption type is TKIP/AES.
- ◆ **WPA Algorithms** — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)
  - **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.
  - **AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AESCCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.
  - **Auto** — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.
- ◆ **Pass Phrase** — The WPA Preshared Key can be input as an ASCII string (an easy-to-remember form of letters and numbers that can include spaces) or Hexadecimal format. (Range: 8~63 ASCII characters, or exactly 64 Hexadecimal digits)

- ◆ **Key Renewal Interval** — Sets the time period for automatically changing data encryption keys and redistributing them to all connected clients. (Default: 3600 seconds)

## IEEE 802.1X AND RADIUS

IEEE 802.1X is a standard framework for network access control that uses a central RADIUS server for user authentication. This control feature prevents unauthorized access to the network by requiring an 802.1X client application to submit user credentials for authentication. The 802.1X standard uses the Extensible Authentication Protocol (EAP) to pass user credentials (either digital certificates, user names and passwords, or other) from the client to the RADIUS server. Client authentication is then verified on the RADIUS server before the client can access the network. Remote Authentication Dial-in User Service (RADIUS) is an authentication protocol that uses software running on a central server to control access to RADIUS-aware devices on the network. An authentication server contains a database of user credentials for each user that requires network access. The WPA and WPA2 enterprise security modes use 802.1X as the method of user authentication. IEEE 802.1X can also be enabled on its own as a security mode for user authentication. When 802.1X is used, a RADIUS server must be configured and be available on the connected wired network.

The screenshot shows a configuration window titled "Wireless Security and Encryption Settings" with tabs for "Status", "Easy Setup", and "Advanced". The "Advanced" tab is active. Under "secure security mode setup", there is a dropdown menu set to "secure manual". Below that, "SSID Choice" is set to "N5" and "Security Mode" is set to "802.1x". The "Radius Server" section contains three empty input fields for "IP Address", "Port", and "Shared Secret". At the bottom, there are "Apply" and "Cancel" buttons. A "Language" dropdown is set to "English" and a "Help" button is in the top right corner.

**802.1X:** Selects WEP keys for data encryption. When enabled, WEP encryption keys are automatically generated by the RADIUS server and distributed to all connected clients. (Default: Disabled)

**RADIUS Server** — Configures RADIUS server settings.

- ◆ **IP Address** — Specifies the IP address of the RADIUS server.
- ◆ **Port** — The User Datagram Protocol (UDP) port number used by the RADIUS server for authentication messages. (Range: 1024-65535; Default: 1812)
- ◆ **Shared Secret** — A shared text string used to encrypt messages between the access point and the RADIUS server. Be sure that the same text string is specified on the RADIUS server. Do not use blank spaces in the string. (Maximum length: 20

characters)

## WI-FI PROTECTED SETUP (WPS)

Wi-Fi Protected Setup (WPS) is designed to ease installation and activation of security features in wireless networks. WPS has two basic modes of operation, Push-button Configuration (PBC) and Personal Identification Number (PIN). The WPS PIN setup is optional to the PBC setup and provides more security. The WPS button on the 3G Mobile Wireless Router can be pressed at any time to allow a single device to easily join the network. The WPS Settings page includes configuration options for setting WPS device PIN codes and activating the virtual WPS button. Click on "Wireless Settings," followed by "WPS".

The screenshot shows the 'Wireless Security and Encryption Settings' page. At the top, there are tabs for 'Status', 'Easy Setup', and 'Advanced', with 'Advanced' selected. A 'Language' dropdown is set to 'English'. The main heading is 'Wireless Security and Encryption Settings'. Below this, there is a 'secure security mode setup' dropdown menu set to 'WPS'. A 'Help' button is in the top right. The 'WPS Summary' section includes: 'WPS SSID' (N5), 'AP PIN' (12345670), 'wps device name' (N5\_WPS), and 'Security Mode' (WPA-AUTO-PSK). The 'WPA' section includes 'WPA Algorithms' (TKIP, CCMP(AES), Auto) and 'Key Renewal Interval' (60). The 'Pass Phrase' section includes a 'secure wpa preshare key' field and a 'wireless generator' button. 'Apply' and 'Cancel' buttons are at the bottom.

**WPS Summary** — Provides detailed WPS statistical information.

- ◆ **WPS SSID** — The service set identifier for the unit.
- ◆ **AP PIN** — Displays the PIN Code for the 3G Mobile Wireless Router. The default is exclusive for each unit. (Default: 64824901)
- ◆ **WPS Name** — WPS name for connecting to the device.
- ◆ **Security Mode** — Selects between methods of broadcasting the WPS beacon to network clients wanting to join the network:

**WPA Algorithms** — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)

- ◆ **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.
- ◆ **AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AESCCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to

WPA2-compliant hardware.

- ◆ **TKIP/AES** — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.
- ◆ **Key Renewal Interval** — Sets the time period for automatically changing data encryption keys and redistributing them to all connected clients. (Default: 3600 seconds)
- ◆ **Pass Phrase** — The WPA Preshared Key can be input as an ASCII string (an easy-to-remember form of letters and numbers that can include spaces) or Hexadecimal format. (Range: 8~63 ASCII characters, or exactly 64 Hexadecimal digits)

**Warning:**

This Product is only used in industry and N5 for indoor used

**FCC Warning:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.